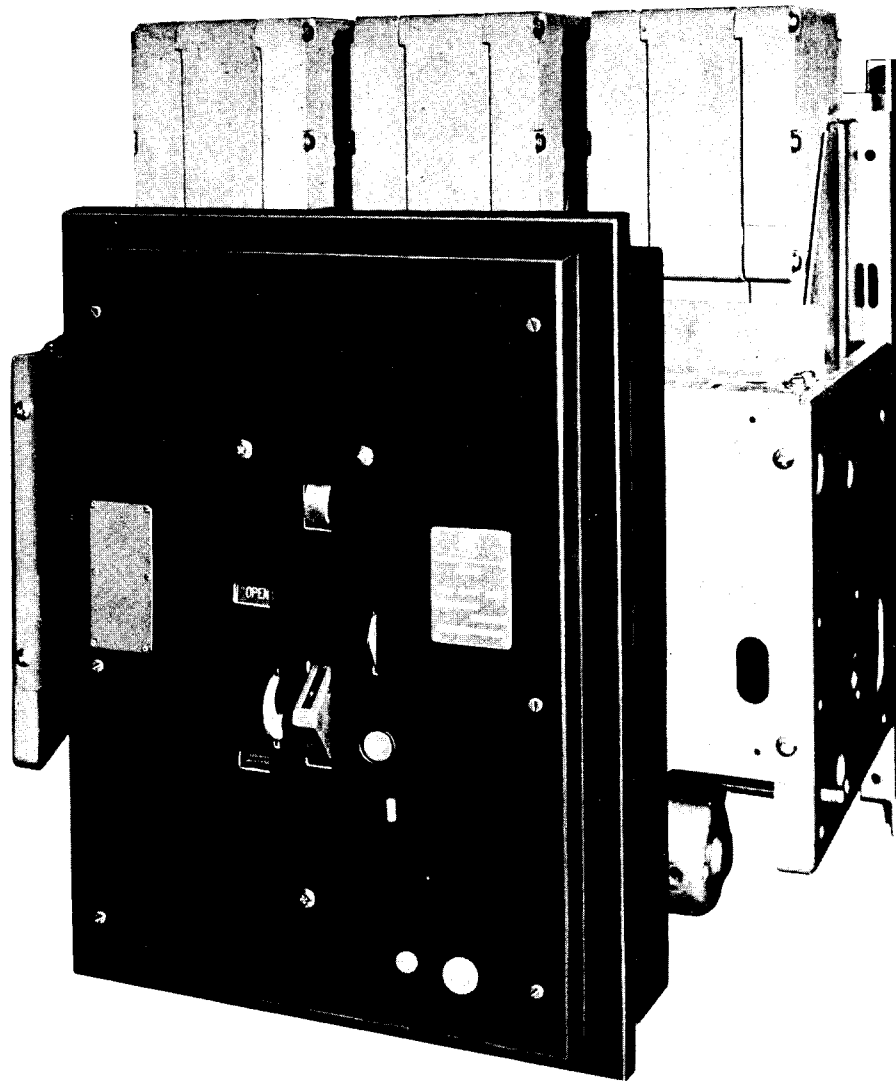 


I-T-E LOW-VOLTAGE POWER CIRCUIT BREAKERS

RENEWAL PARTS

TYPE K-3000, 4000, 3000S, 4000S CIRCUIT BREAKERS
KSP-3000[™], 4000 POWER SERVICE PROTECTORS



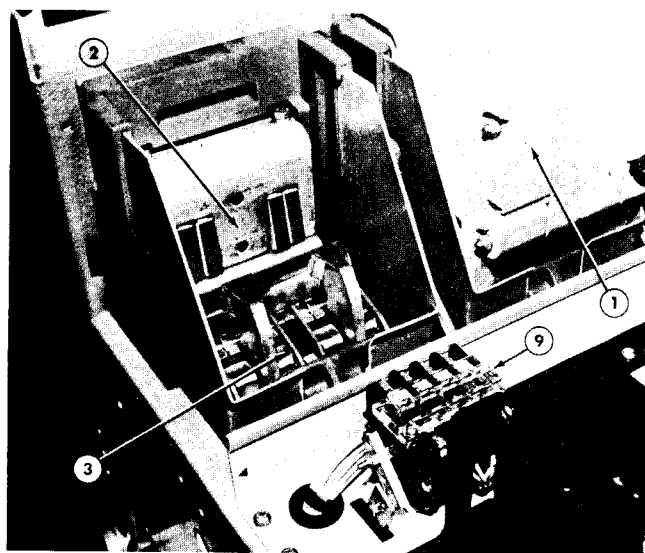 


Fig. 1

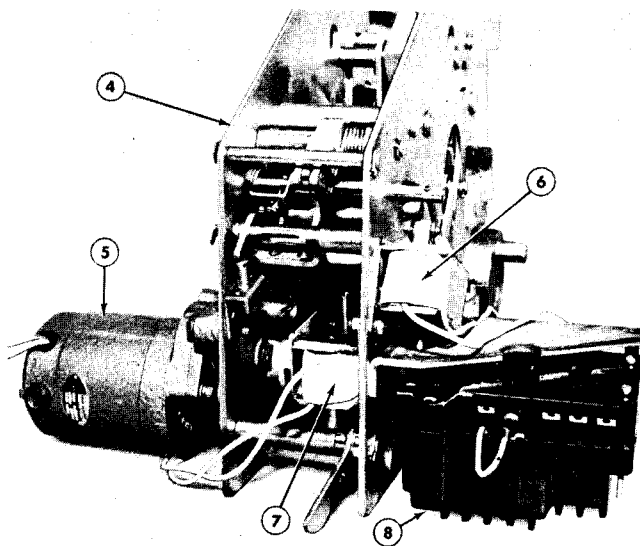 


Fig. 2

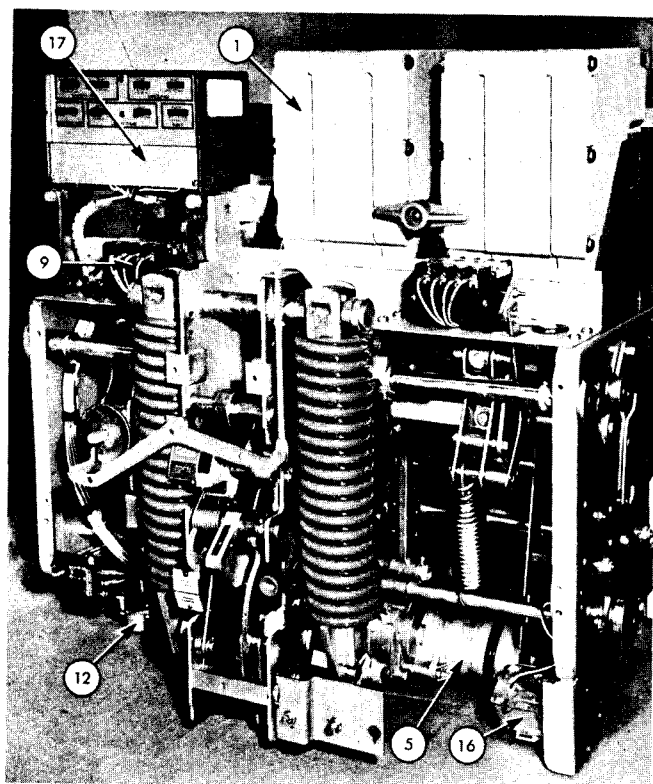 


Fig. 3

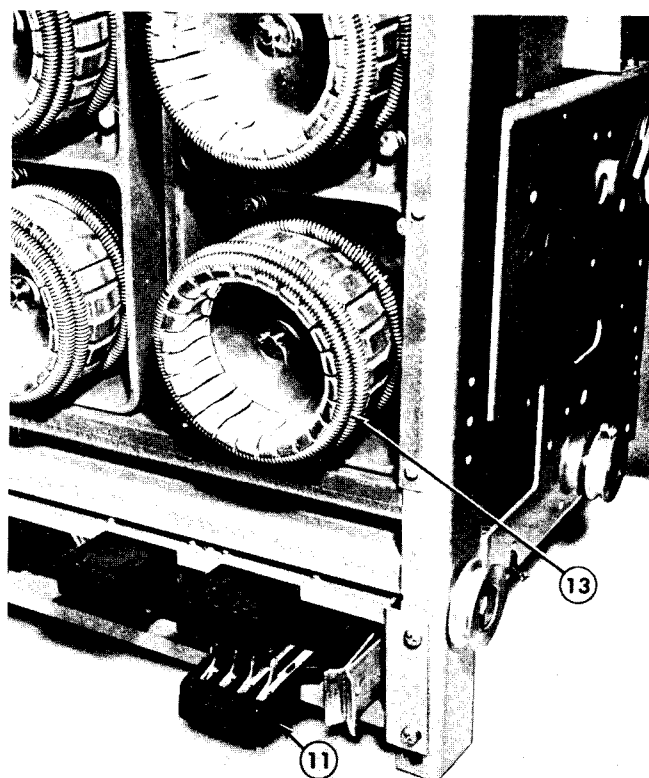 


Fig. 4

The photographs reproduced in this bulletin are furnished only to serve as a guide in the identification of assemblies and parts, and do not purport to cover all details or variations in equipment.

43963
43966

50414
43964

COVER 40231

**RENEWAL PARTS FOR
TYPE K-3000, 4000, 3000S, 4000S CIRCUIT BREAKERS
KSP-3000, 4000 POWER SERVICE PROTECTORS**

Fig. Ref.	Item	Unit Quantity Per 3-Pole		Description of Assembly or Part	Ordering Number
		Breaker	Protector		
1,3	1	3	3	Arc Chute Assembly	706745-T1
				Upper Terminal Assembly	
1	2A	3	3	For Stationary K-3000, K-3000S or KSP-3000	706758-T3
1	2B	3	3	For Stationary K-4000, K-4000S or KSP-4000	706758-T4
1	2C	3	-	For Drawout K-3000, K-3000S	706758-T6
1	2D	3	-	For Drawout K-4000, K-4000S	706758-T7
1	3	3	3	Moving Main and Arcing Contact Assembly	706739-T16
2	4	1	1	Operating Mechanism (Less Coils & Motor)	706736
2,3	▲5	1	1	Charging Motor	197470-*
2	▲6	1	1	Shunt Trip Assembly	706749-*
2	▲7	1	1	Close Coil Assembly	706749-*
2	▲8	1	1	Control Device	706750-*
1,3	9	1	1	Auxiliary Switch (4 Contact)	700034-K1
	10	1	1	Auxiliary Switch (8 Contact)(When Used)	700038-K1
4	11	2	-	Secondary Disconnect Assembly (Drawout)	703153-K1
3	▲12	1	1	Undervoltage (When Used)	708471-*
				Primary Disconnect Assembly	
4	13A	6	-	For Drawout K-3000, K-3000S	706741-T3
4	13B	6	-	For Drawout K-4000, K-4000S	706741-T4
				Current-Limiting Fuses (Not Shown)	
	▲14A	-	3	For KSP-3000	705070-J
	▲14B	-	3	For KSP-4000	705070-A1
	15	-	1	Anti-Single-Phase Device (Not Shown)	708934-T7
3	16	1	-	Magnetic Latch - K-3000S, K-4000S Only	709725-T4
				Power Shield Solid State Logic Assembly Standard Type SS-3	
3	▲17A	1	-	For K-3000S Only	608705-T3
3	▲17B	1	-	For K-4000S Only	608706-T3

*Specify Applicable Voltage and Frequency

GENERAL NOTES

1. Recommended quantities are as follows:

DOMESTIC - One (1) complete set for each ten (10) breakers or fraction thereof installed for each rating.

FOREIGN - One (1) complete set for each five (5) breakers or fraction thereof installed for each rating.

NOTE: Items marked with triangle (▲) are minimum that should be ordered for normal duty applications. For heavy duty applications, all applicable items should be ordered.

2. The parts listed cover an indefinite period of time. With normal duty and maintenance, replacement will be infrequent.

3. Standard hardware (screws, nuts, lockwashers, etc.) is not included with the parts.

4. Where continuity of service is mandatory, a spare breaker is recommended.

ORDERING INSTRUCTIONS

1. Specify serial number from breaker nameplate, original purchase order number and Gould sales order number in addition to part description and ordering number.

2. State control voltage and frequency when ordering electrical assemblies containing coils. Allow for split control applications.

**FOR PRICES AND TECHNICAL INFORMATION, REFER TO
THE NEAREST OFFICE OF GOULD.**

GOULD

 


Gould Inc., Switchgear Division
501 Office Center Drive
Fort Washington, PA 19034

LOW-VOLTAGE POWER CIRCUIT BREAKERS

RENEWAL PARTS

TYPE K-3000, 4000, 3000S, 4000S CIRCUIT BREAKERS
KSP[™]-3000, 4000 POWER SERVICE PROTECTORS

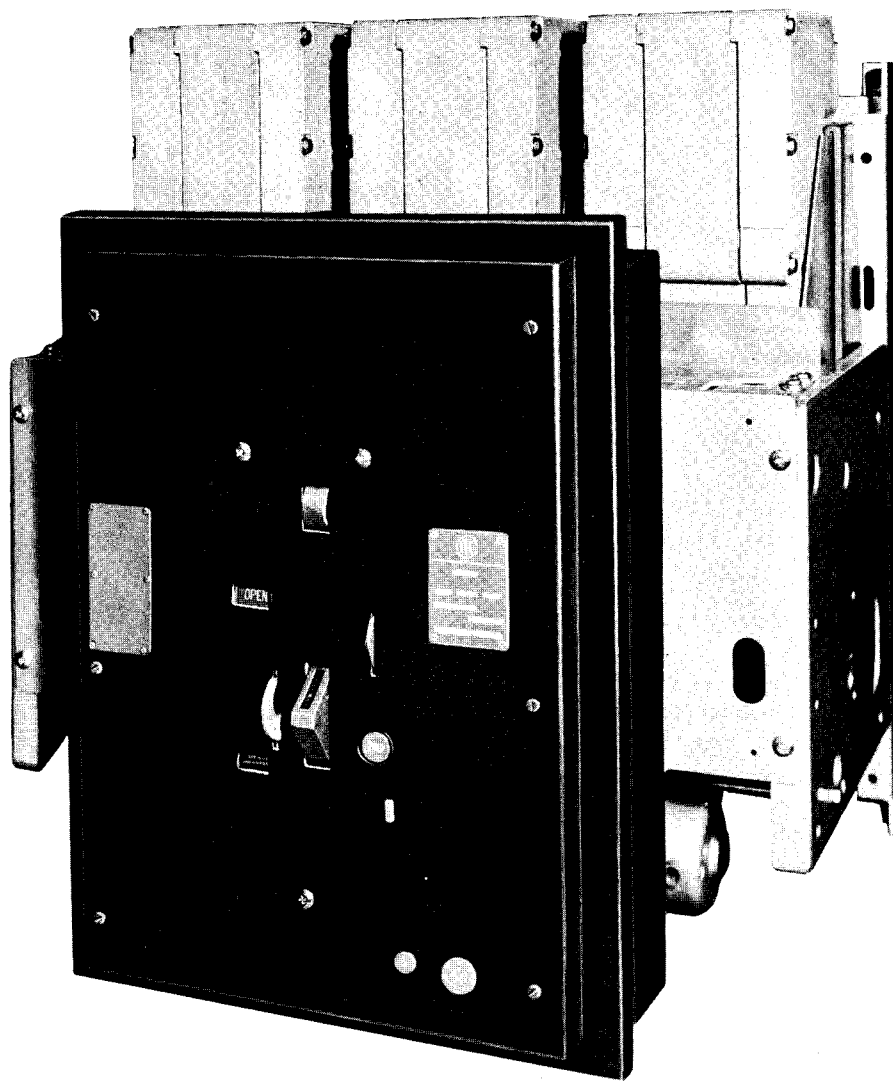

ITE Imperial Corporation

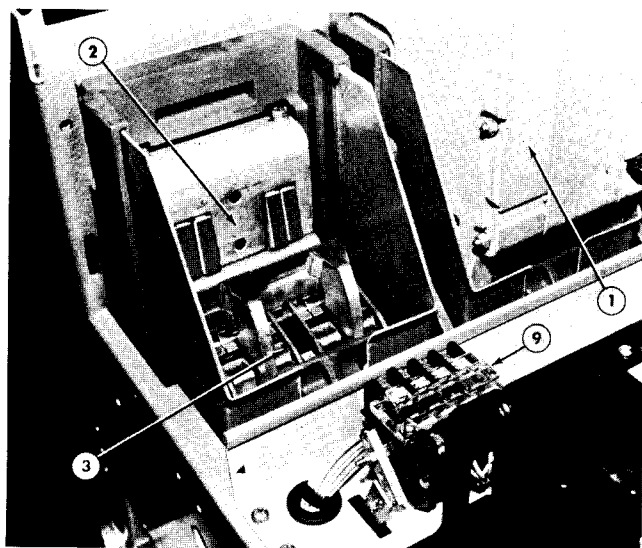 


Fig. 1

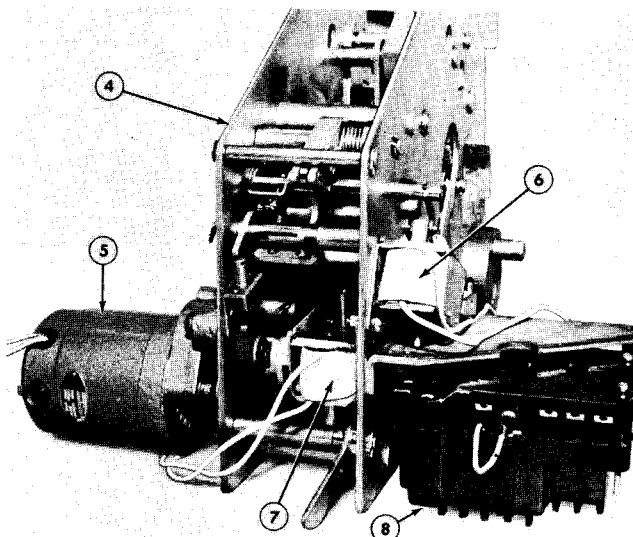 


Fig. 2

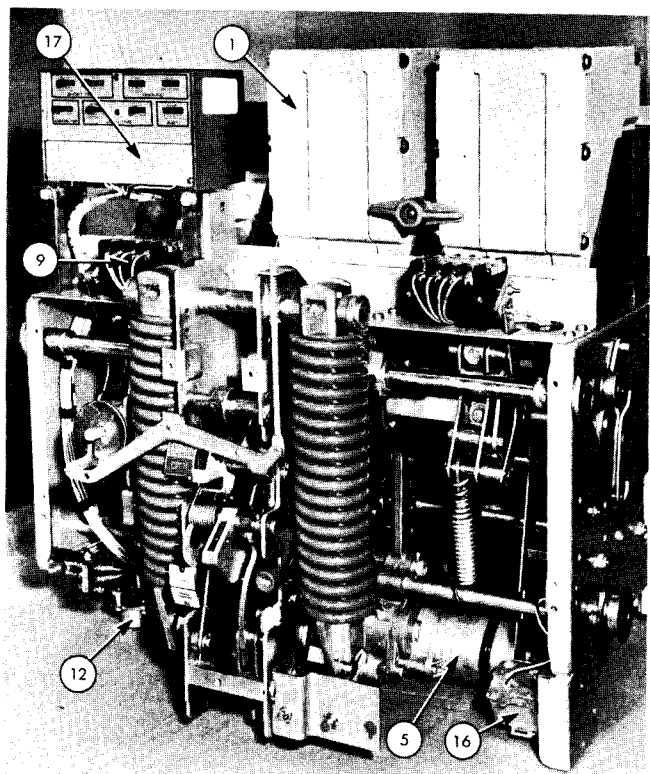 


Fig. 3

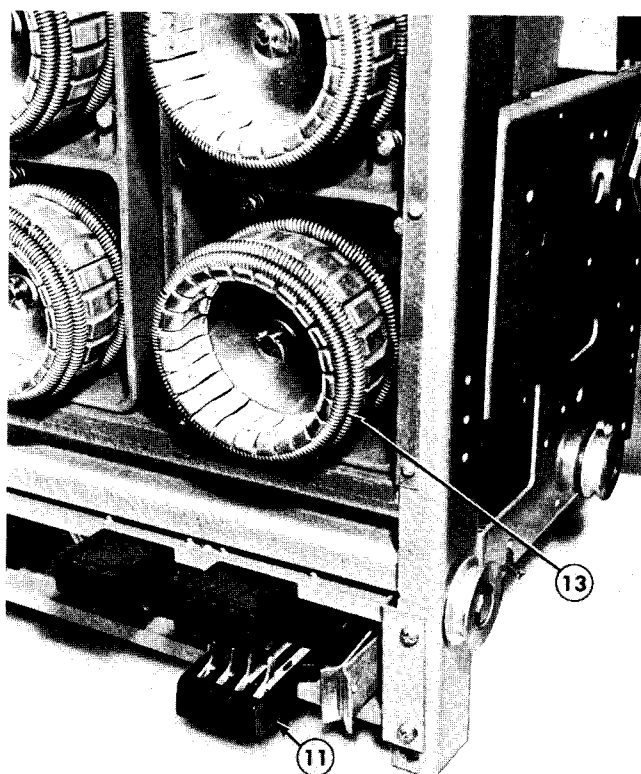 


Fig. 4

The photographs reproduced in this bulletin are furnished only to serve as a guide in the identification of assemblies and parts, and do not purport to cover all details or variations in equipment.

43963
43966

50414
43964

COVER 31



**RENEWAL PARTS FOR
TYPE K-3000, 4000, 3000S, 4000S CIRCUIT BREAKERS
KSP-3000, 4000 POWER SERVICE PROTECTORS**

Fig. Ref.	Item	Unit Quantity Per 3-Pole		Description of Assembly or Part	Ordering Number
		Breaker	Protector		
1,3	1	3	3	Arc Chute Assembly	706745-T1
				Upper Terminal Assembly	
1	2A	3	3	For Stationary K-3000, K-3000S or KSP-3000	706758-T3
1	2B	3	3	For Stationary K-4000, K-4000S or KSP-4000	706758-T4
1	2C	3	-	For Drawout K-3000, K-3000S	706758-T6
1	2D	3	-	For Drawout K-4000, K-4000S	706758-T7
1	3	3	3	Moving Main and Arcing Contact Assembly	706739-T16
2	4	1	1	Operating Mechanism (Less Coils & Motor)	706736
2,3	▲5	1	1	Charging Motor	197470-*
2	▲6	1	1	Shunt Trip Assembly	706749-*
2	▲7	1	1	Close Coil Assembly	706749-*
2	▲8	1	1	Control Device	706750-*
1,3	9	1	1	Auxiliary Switch (4 Contact)	700034-K1
	10	1	1	Auxiliary Switch (8 Contact)(When Used)	700038-K1
4	11	2	-	Secondary Disconnect Assembly (Drawout)	703153-K1
3	▲12	1	1	Undervoltage (When Used)	708471-*
				Primary Disconnect Assembly	
4	13A	6	-	For Drawout K-3000, K-3000S	706741-T3
4	13B	6	-	For Drawout K-4000, K-4000S	706741-T4
				Current-Limiting Fuses (Not Shown)	
	▲14A	-	3	For KSP-3000	705070-J
	▲14B	-	3	For KSP-4000	705070-A1
	15	-	1	Anti-Single-Phase Device (Not Shown)	708934-T7
3	16	1	-	Magnetic Latch - K-3000S, K-4000S Only	709725-T4
				Power Shield Solid State Logic Assembly Standard Type SS-3	
3	▲17A	1	-	For K-3000S Only	608705-T3
3	▲17B	1	-	For K-4000S Only	608706-T3

*Specify Applicable Voltage and Frequency

GENERAL NOTES

- Recommended quantities are as follows:

DOMESTIC - One (1) complete set for each ten (10) breakers or fraction thereof installed for each rating.

FOREIGN - One (1) complete set for each five (5) breakers or fraction thereof installed for each rating.

NOTE: Items marked with triangle (▲) are minimum that should be ordered for normal duty applications. For heavy duty applications, all applicable items should be ordered.

- The parts listed cover an indefinite period of time. With normal duty and maintenance, replacement will be infrequent.

- Standard hardware (screws, nuts, lockwashers, etc.) is not included with the parts.

- Where continuity of service is mandatory, a spare breaker is recommended.

ORDERING INSTRUCTIONS

- Specify serial number from breaker nameplate, original purchase order number and I-T-E sales order number in addition to part description and ordering number.
- State control voltage and frequency when ordering electrical assemblies containing coils. Allow for split control applications.

FOR PRICES AND TECHNICAL INFORMATION, REFER TO
THE NEAREST OFFICE OF I-T-E IMPERIAL CORPORATION.

