



**INSTALLATION, OPERATION  
AND MAINTENANCE MANUAL**

GEI-93862A  
SUPERSEDES GEI-93862

**LOW VOLTAGE  
PLB POWER PROTECTORS**

**Manually Operated**

**800, 1200, 1600, 2000, 2500,  
3000 and 4000 Amperes**

**240 and 600 Volts**

**SWITCHGEAR DEPARTMENT**

**GENERAL  ELECTRIC**

**PHILADELPHIA, PA.**

# INSTALLATION, OPERATION AND MAINTENANCE OF TYPE PLB POWER PROTECTOR

## INTRODUCTION

The PLB power protector is a fully coordinated fused switch with NEMA Class L fuses serving as switch blades and having high pressure bolted contacts. It is designed for service entrance protection and main or feeder applications on high current

capacity circuits. It is available for use on 240 and 600 volts 60 cps. circuits with continuous current ratings ranging from 800 to 4000 amperes, and may be applied to circuits with short circuit currents up to 200,000 symmetrical amperes when

equipped with General Electric CLF\* fuses. The 240 volt switch is not equipped with arc quenchers and must not be used on circuits above 240 volts. The 600 volt switch is equipped with arc quenchers (see Fig. 1) and may be used on circuits up to 600 volts.

## RECEIVING, HANDLING AND STORAGE

Before installing, or operating these power protectors, a careful reading should be made of the sections of these instructions which are pertinent to the work anticipated.

Immediately upon receipt of a power protector and fuses, an examination should be made for any damage or loss sustained in shipment. If injury, loss or rough handling is evident, a damage claim should be filed at once with the transportation company and the nearest General Electric

Sales Office should be promptly notified.

The power protector and fuses should be unpacked as soon as possible after they have been received. Care must be exercised in the unpacking to avoid damage to the power protector parts. Be sure that no loose parts are missing or left in the packaging material. Remove any dirt or loose particles of packaging material remaining on or in the protector.

If the power protector is not to be placed in service at once, it must be stored in a clean, dry location in an upright position and supported to prevent bending of the studs or damage to any of the protector parts. It is also advisable not to cover the protector with any packing or other material which absorbs moisture, that may cause corrosion of protector parts. A covering of kraft or other non-absorbent paper will prevent dust from settling on the protector.

## INSTALLATION

### Location

In choosing a location for the installation of a PLB Power Protector, there are two factors to be considered. The first of these is the effect of the location on the protector itself. Much better performance and longer life may be expected if the area is clean, dry, dust-free, and well ventilated, than if the opposites to these conditions exist. The second consideration is convenience for operation and maintenance. The protector should be easily accessible to the operator, and there should be sufficient space allowed for maintenance work to be done if this becomes necessary.

### MOUNTING

The PLB Power Protectors are available for stationary switchboard mounting as well as in a general purpose enclosure. To facilitate mounting, the protector's front frame may be separated from the back frame as follows:

1. The protector will be shipped in the closed position.

#### NOTE:

On 2500, 3000 and 4000 amp protectors, the operating handle (3) is extendable to reduce the operating torque. To extend handle loosen knurled collar (2) and pull down on the silver colored handle grip (1). With handle in extended position tighten knurled collar and proceed as outlined below.

To open, pull the red colored button (3) (see Fig. 1) and turn operating handle (4) clockwise to the vertical position (see Fig. 1).


2. With the protector in the open position, (see Fig. 1), grasp the white handle (2) located above the front escutcheon and tilt the front frame assembly forward approximately 90°.

3. Lift the front frame assembly off the pivots (5) completely separating the

two frames. The back frame is now ready for mounting.

### STATIONARY MOUNTED PROTECTORS

These protectors are designed for mounting in a switchboard or enclosing case of the customer's design and construction. Minimum cutout dimensions, as

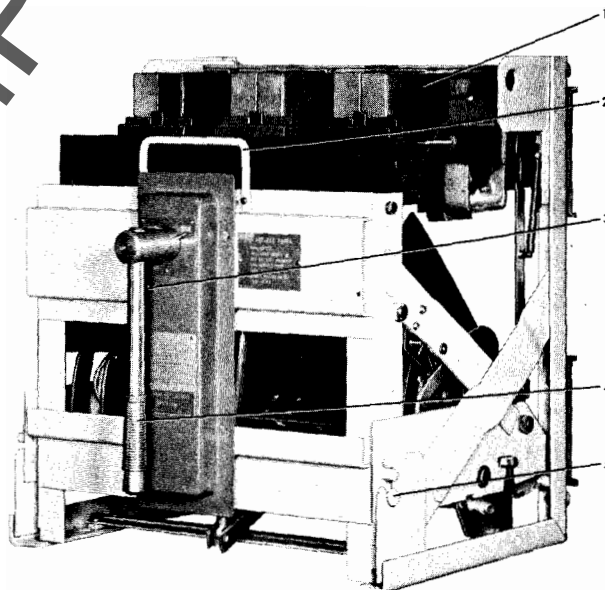

1. Arc Quencher  
2. White Handle

3. Red Knob  
4. Operating Handle

5. Front Frame Pivot

Fig. 1 (8034172) PLB Power Protector, 3 Pole, 600 Volt Shown in Open Position

*These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company.*

given by the appropriate outline drawing (see below) must be maintained to provide adequate electrical clearance. If installed in a switchboard or enclosure, adequate ventilation must be provided. See Table I for recommended minimum enclosure openings.

cable or bus apply a straining action to the protector terminals. Mating surfaces must be parallel, clean, have a smooth surface and be firmly bolted together. The bus or cable must have adequate current-carrying capacity to prevent excessive heating.

**TABLE I**  
**PLB MINIMUM ENCLOSURE**  
**OPENINGS**

PROTECTOR SIZE IN AMPS	OPENINGS	
	TOP & BOTTOM OF ENCLOSURE	TOP & BOTTOM BOTH SIDES
800 - 2000	54 Sq. In.	--
2500 - 3000	168 Sq. In.	76 Sq. In.
4000	210 Sq. In.	76 Sq. In.

The front door of the switchboard or enclosing case of the customer's design should be hinged from the left side and should have an opening to accommodate the protectors front escutcheon. Outline drawings listed below furnish required dimensions for escutcheon opening as well as the other dimensions required for mounting the protector.

The appropriate Class L fuses should now be installed in the front frame assembly as follows:

**NOTE:**

Fuses with ratings lower than shown on the PLB nameplate must employ the correct adapter kit for downfusing.

**Protector**

**Outline**

PLB-1 800 to 1200 Amps 0102C3644 Pt-1  
PLB-1 1600 to 2000 Amps 0102C3644 Pt-2  
PLB-2 800 to 1200 Amps 0108C9643 Pt-1  
PLB-2 1600 to 2000 Amps 0108C9643 Pt-2  
PLB-2 2500 & 3000 Amps 0102C3693  
PLB-2 4000 Amps 0102C3694

Mounting in this instance consists of bolting the protector's back frame to the supporting structure within the switchboard or enclosure, installing the appropriate fuses, connecting the power buses or cables, and remounting the front frame on the backframe.

The mounting surface of the switchboard or enclosure must be true and flat in order to avoid any internal distortion of the protector unit and it must be sufficiently rigid to avoid any possibility of the protector pads supporting the weight of the protector. After completing the mounting of the protector's back frame in a switchboard or enclosure it should be checked for squareness. If out of true, it may be necessary to loosen the two mounting bolts on each side of the lower horizontal brace in the back frame, square up the right or left hand frame sides as required and then retighten the mounting bolts.

With the back frame assembly securely bolted to the supporting structure mount the power buses or cables to the upper and lower switch terminals. Depending on specific mounting arrangements, convenience and economy, power may be fed to either the upper or lower switch terminals. Care should be taken to be sure that all terminal connections are of good conductivity and that neither the connections nor the weight of the

movable contacts (5), (see Fig. 3). A one ounce tube of this grease is supplied with each protector, attached to the horizontal channel of the front frame.

3a. On the 800 to 2000 amp protectors loosen the two slotted hexagon headed screws (2) (see Fig. 5) until the upper fuse holder (4) can be rotated sufficiently to allow the fuse to be inserted in the bottom fuse holder (1). Insert fuses.

b. On 2500, 3000 and 4000 amp protectors it is also necessary to loosen the slotted hexagon headed screw (11) (see Fig. 4) and rotate the connecting link (8) (see Fig. 4) before rotating the upper fuse holder upward sufficiently to allow the fuse to be inserted.


**NOTE:**

On the 2500, 3000, and 4000 Amp protectors, it may be necessary to tap the upper fuse holder with a mallet when rotating the fuse holder to and from the closed position.

c. On the 4000 amp protectors remove the heat sinks (2) (see Fig. 4) from the compound bars by loosening four screws (3) (see Fig. 4). Discard the compound bars. Assemble the 4000 amp fuses to the heat sinks (2) by tightening the screws (4) securely. An Allen Wrench for screws (4) is supplied with each 4000 amp protector, attached to the horizontal channel on the front frame. The heat sinks are stamped to indicate their correct assembly locations.

4a. On the 800 to 2000 amp protectors rotate the upper fuse holder to the original position and tighten the two slotted hexagon headed screws (2) (see Fig. 5).

b. On 2500, 3000 and 4000 amp protectors rotate the connecting link into position and tighten the two slotted hexagon headed screws (1) (see Fig. 4). Then tighten the remaining screw (11) (see Fig. 4) securing the connecting link (8) (see Fig. 4).

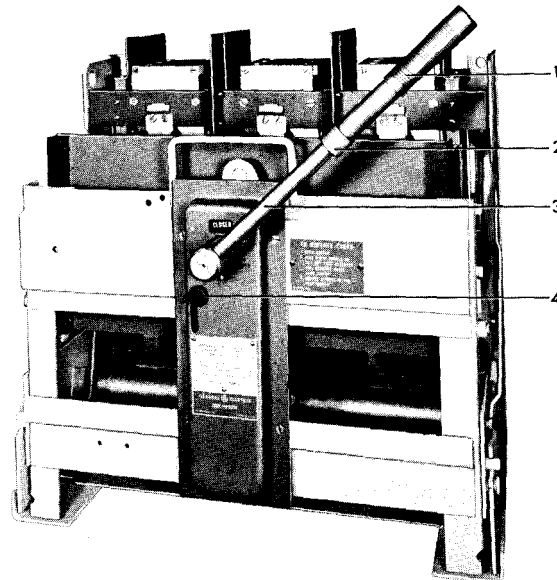

1. Silver Handle Grip  
2. Knurled Collar

3. Operating Handle  
4. Red Knob

Fig. 2 (8036743) PLB Power Protector, 3000 Amp, 3 Pole 240V Shown In Closed Position With Handle Extended.

5. Repeat steps 3 and 4 for each phase.

6. Pull the red knob and turn the handle approximately 135 degrees clockwise to the open position.

To complete the installation of the protector, lift the front frame assembly with fuses installed and place the pivots (5) (see Fig. 1) in the pivot slots of the back frame. Grasp the white handle (2) and push, rotating the front frame into positive engagement with the back frame (see Fig. 1).

### Closing

The closing operation consists of pulling the red colored button and rotating the operating handle counter clockwise from the vertical position thru approximately 135°. During the first part of the closing stroke, the movable contacts move from the open to the closed position. The last part of the closing stroke applies high pressure to the upper and lower fuse tangs.

Provision is incorporated in the design of the high pressure contact mechanism located directly above and below each fuse tang, to automatically insure uniform high pressure on all fuse tangs within the allowable range of thickness. This mechanism is set at the factory before shipment and should require no maintenance or adjustment.

### Opening

The protector may be opened by reversing the sequence of the closing operations, first pulling the red button and then rotating the handle clockwise to the vertical position.

In both closing and opening operations, it is recommended that the operating handle be moved with a fast snapping action in order to prevent unnecessary heating of the protector contacts.

### Non Reversing Mechanism

The movable contact structure as shown in Fig. 3 is equipped with a non-reversing mechanism in the form of spring biased pivoting links located directly inside the front frame. These links engage the movable contact end brackets in such a way as to prevent reversal of the closing operation during the closing stroke. This "controlled" manual closing operation eliminates "kick back" on the handle due to high repulsive forces in the event that the contacts might be closed on a current of high magnitude.

#### NOTE:

BEFORE INSPECTION OR ANY MAINTENANCE WORK WITH THE EXCEPTION OF CHANGING FUSES, BE SURE THAT ALL ELECTRICAL POWER IS DISCONNECTED.

The sequence of operations for changing fuses is shown on the nameplate located on the front frame of the protector and is also described in detail in the Installation Instructions.

### GENERAL PURPOSE ENCLOSURE

A factory built general purpose enclosure is available for mounting the PLB protector. These enclosures are provided with suitable means for mounting on walls or supporting framework. The enclosure has removable cover plates on top, bottom and sides which may be drilled or machined to accommodate the entrance of bus ducts, conduits, cables or buses to the top and bottom terminals of the protector.

After the enclosure has been securely mounted on supporting framework or wall, the same mounting procedure as outlined for switchboard mounted protectors should be followed.

#### Protector

#### Outline

PLB-1 800 to 1200 Amps	0108C9602 Pt-1
PLB-1 1600 to 2000 Amps	0108C9602 Pt-2
PLB-1 2500 & 3000 Amps	0108C9603
PLB-1 4000 Amps	0108C9604

### OPERATION


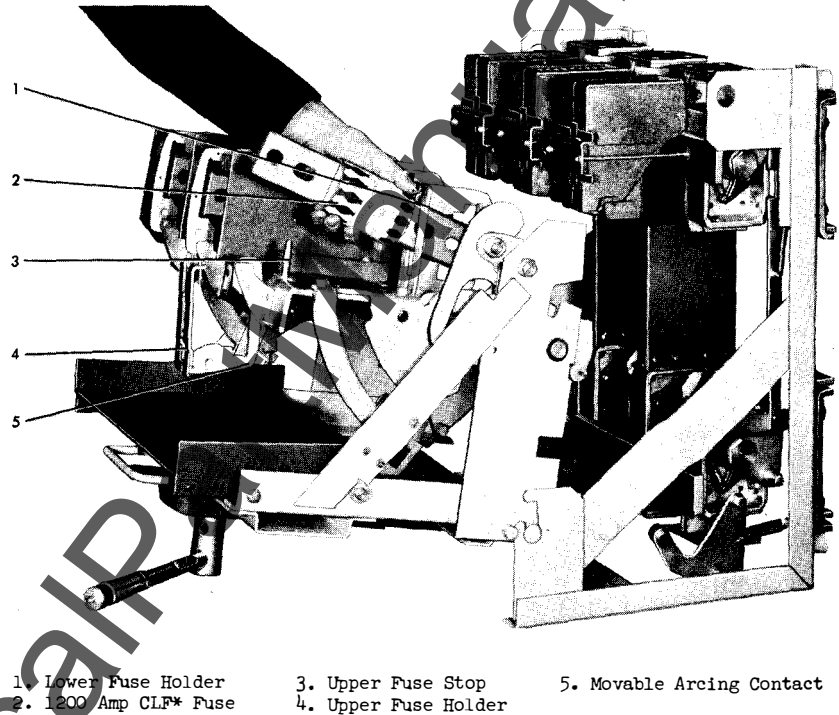


Fig. 3 (8034167) Inserting Fuse In Lower Fuse Holder

### MAINTENANCE

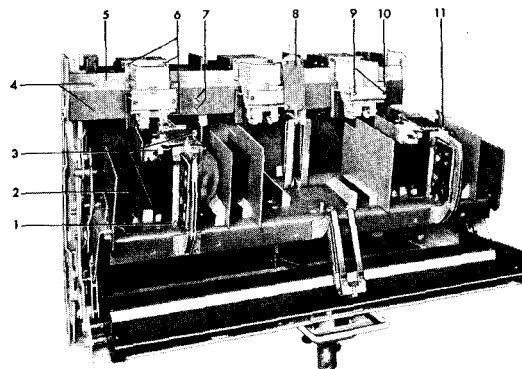

- |              |                              |                   |
|--------------|------------------------------|-------------------|
| 1. Screw     | 5. Horizontal Brace Assembly | 9. Screws         |
| 2. Heat Sink | 6. Screws                    | 10. Retaining Bar |
| 3. Screws    | 7. Screws                    | 11. Screw         |
| 4. Screws    | 8. Connecting Link           |                   |

Fig. 4 (8036749) PLB Power Protector 4000 Amp, 600V Shown In Open Position With Center Fuse And Heat Sink Assembly Removed.

## Inspection

Periodic inspection of the protector is recommended at least once a year. More frequent inspections are recommended if severe load conditions, dust, moisture or other unfavorable conditions exist. A complete inspection of the protector, including contacts and arc quenchers, should always be made after the protector has interrupted a short-circuit.

At regular inspection periods the protector should be operated manually to observe the contact alignment and to make sure all mechanism parts move freely without binding or excessive friction.

If overheating, not caused by over-current is observed, a complete inspection of the protector should be made including connections and contacts.

At all times it is important not to permit pencil lines, paint, oil or other foreign materials to remain on the insulating surfaces of the protector as they may cause low resistance between points of different potential and result in eventual electrical breakdown.

## Lubrication

In general, the protector is adequately lubricated before shipment to withstand normal service requirements. However, in extremely dirty atmospheres or where greater than normal operations are encountered the following lubrication procedure is recommended:

a. Hardened grease and dirt should be removed from bearing surfaces by using kerosene.

b. All bearing points and sliding surfaces should be lubricated at the regular inspection periods with a thin film of GE lubricant D50H15 with the following exceptions:

1. The Non-reversing mechanism should not be lubricated as it is designed to work dry.

2. The high pressure contact mechanisms should not be lubricated or re-adjusted in any way as they are permanently set before shipment.

3. The upper and lower fuse tangs and movable contacts should be coated with a thin film of GE D50H47 grease.

c. All excess lubricant should be removed with a clean cloth to avoid any accumulation of dust or dirt.


## Arc Quencher Replacement

The arc quenchers should be inspected at regular inspection periods. If the molded sides are cracked or the steel plates eroded excessively, they should be replaced as follows:

1. Remove the channel shaped retaining bar by removing the two long screws and lockwashers.

2. Lift the arc quenchers clear of the supporting bracket.


3. Replace arc quencher in reverse order. NOTE: During replacement do not overtighten the screws which secure the channel shaped retaining bar thus preventing overstressing and possibly damage to the arc quencher sides.

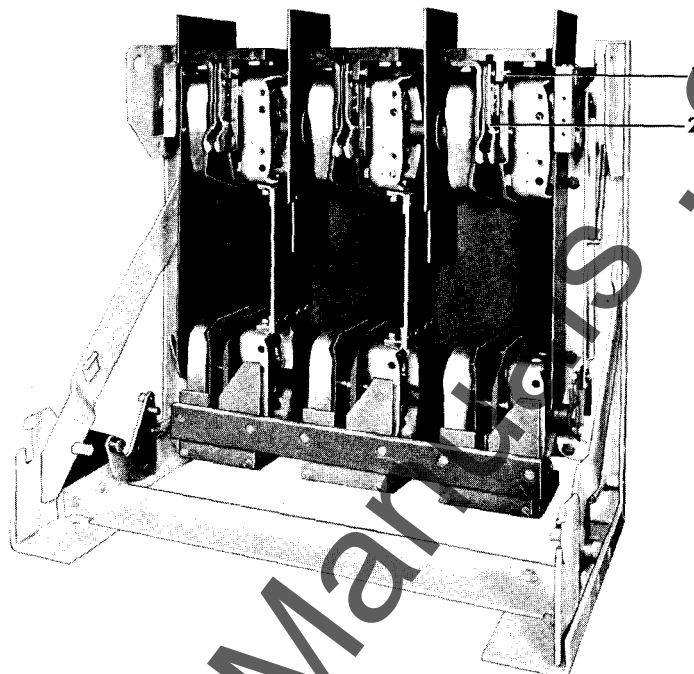

1. Screw

2. Stationary Arcing Contacts

Fig. 6 (8036750) 3000 Amp Back Frame Assembly With Horizontal Brace Assembly Removed.

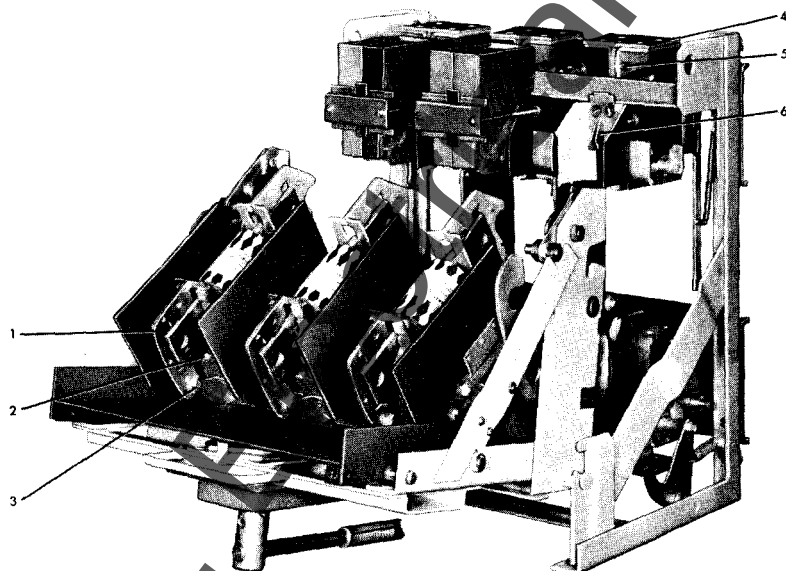

1. Movable Arcing Contact and Upper Fuse Holder

2. Screw

3. Pivot Pin

4. Terminal Pad Assembly

5. Screw

6. Stationary Arcing Contact

Fig. 5 (8034170) 600 Volt PLB Shown With Front Frame in Tilted Out Position

Arcing Contact Replacement (Fig. 5)

The stationary arcing contacts (6) and the movable arcing contacts (1) should be inspected at regular inspection periods. If excessive erosion has occurred on the arcing surfaces, it is recommended that they be replaced as follows:

Stationary Arcing Contact

1. Remove arc quenchers. (See arc quencher Replacement).
2. On the 2500, 3000 and 4000 amp protectors, remove the horizontal brace as-

sembly (5) (see Fig. 4) by removing screws (4, 6 & 7) (see Fig. 4).

3. Remove the hexagon headed screw (5) and lower the stationary arcing contact (6) free from the terminal assembly (4).

4. Replace stationary arcing contact in reverse order.

Movable Arcing Contact

With the protector's front frame in tilted out position proceed as follows:

1. Unscrew the two slotted hexagon

headed screws (2) until the movable arcing contact (1) is free to pivot. (See Fig. 2) On the 2500, 3000 and 4000 amp protectors also unscrew the slotted hexagon headed screw (11) (see Fig. 4).

2. Remove cotter pin from the pivot pin (3) (see Fig. 3) allowing the pivot pin to be pulled free from the movable arcing contact.

3. Remove movable arcing contact.

4. Replace movable arcing contact in reverse order.

# GENERAL ELECTRIC SALES OFFICE

GEZ-2500M

READY TO ASSIST YOU . . . When You Have Electrical Problems . . . Need Further Information . . . Require Ordering Instructions

## KEY TO SALES OPERATIONS

- C—Components Sales
- I—Industrial Sales
- M—Marine & Defense Facilities Sales
- U—Electric Utility Sales

<b>ALABAMA</b>	
C I U	Birmingham 35205. 2151 Highland Ave. Mobile 36602. 704 Government St. Montgomery 36105. 25 S. Haardt Dr.
<b>ARIZONA</b>	
C I U	Phoenix 85012. 3550 N. Central Ave. Tucson 85716. 151 S. Tucson Blvd.
<b>ARKANSAS</b>	
C I	N. Little Rock 72114. 1900 E. Washington Pine Bluff 71602. P.O. Box 1033
<b>CALIFORNIA</b>	
C I	Burlingame 94010. 1675 Rollins Rd. Emeryville 94608. 5000 Shellmound St. Fresno 93728. 1532 N. West Ave. Los Angeles 90015. 1543 W. Olympic Blvd. Los Angeles 90012. 212 N. Vignes St. Sacramento 95816. 2407 "J" St. San Diego 92103. 2560 First Ave. San Francisco 94104. 235 Montgomery St. Santa Clara 95050. 1400 Coleman Ave.
<b>COLORADO</b>	
C I U	Denver 80206. 201 University Blvd.
<b>CONNECTICUT</b>	
C I U	Hamden 06514. 2905 Dixwell Ave. Hartford 06105. 764 Asylum Ave.
<b>DISTRICT OF COLUMBIA</b>	
C I U	Washington 20005. 777-14th St., N.W.
<b>FLORIDA</b>	
C I U	Cocoa Beach 32931. 1325 N. Atlantic Ave. Coral Gables 33146. 250 Bird Rd. Jacksonville 32207. 4040 Woodcock Dr. Miami 33134. 4100 W. Flagler St. Orlando 32801. 211 E. Robinson St. Pensacola 32503. First Bank Bldg. Tampa 33609. 2106 S. Lois Ave.
<b>GEORGIA</b>	
C I U	Atlanta 30309. 1860 Peachtree Rd., N.W. Macon 31201. 682 Cherry St. Savannah 31405. 5002 Paulsen St.
<b>HAWAII</b>	
C I	Honolulu 96801. American Factors, Ltd. P.O. Box 3230
<b>IDAHO</b>	
C I U	Boise 83701. 1524 Idaho St.
<b>ILLINOIS</b>	
C I M U	Chicago 60680. 840 S. Canal St. Peoria 61603. 2008 N.E. Perry Ave. Rockford 61108. 4223 E. State St. Springfield 62701. 607 E. Adams St.
<b>INDIANA</b>	
C I U	Evansville 47714. 2709 Washington Ave. Fort Wayne 46804. 1635 Broadway Fort Wayne 46807. 3606 S. Calhoun St. Indianapolis 46207. 3750 N. Meridian St. South Bend 46601. 430 N. Michigan St.
<b>IOWA</b>	
C I	Cedar Rapids 52401. 210 Second St., S.E. Davenport (1039 State St., Bettendorf 52722) Des Moines 50310. 3839 Merle Hay Rd. Sioux City 51101. 520 Pierce St.
<b>KANSAS</b>	
C I U	Overland Park 66204. 7219 Metcalf St. Wichita 67211. 820 E. Indianapolis Ave.
<b>KENTUCKY</b>	
C I U	Lexington 40508. 465 E. High St. Louisville 40218. 2300 Meadow Dr.

<b>LOUISIANA</b>	
C I U	Alexandria 71302. 2001 MacArthur Dr. Baton Rouge 70815. 633 Oak Villa Blvd. Lake Charles 70601. 1424 Ryan St. New Orleans 70125. 4747 Earhart Blvd. New Orleans 70112. 837 Gravier St. Shreveport 71101. 400 Travis St. West Monroe 71291. 500 Natchitoches St.
<b>MAINE</b>	
C I U	Augusta 04330. 152 State St. Bangor 04402. 77 Central St.
<b>MARYLAND</b>	
C I U	Baltimore 21201. 1 N. Charles St. Hagerstown 21740. 49 E. Franklin St. Salisbury 21801. P.O. Box 424
<b>MASSACHUSETTS</b>	
C I M U	Boston 02117. 31 St. James Ave. Springfield 01103. 120 Maple St. Worcester 01605. 288 Grove St.
<b>MICHIGAN</b>	
C I U	Detroit 48202. 700 Antoinette St. Flint 48503. 316½ W. Court St. Grand Rapids 49508. 2821 Madison Ave., S.E. Jackson 49201. 210 W. Franklin St. Kalamazoo 49003. 927 S. Burdick St. Saginaw 48607. 2nd National Bank Bldg.
<b>MINNESOTA</b>	
C I U	Duluth 55802. 14 W. Superior St. Fergus Falls 56537. 106 E. Washington St. Minneapolis 55424. 4018 W. 65th St. Minneapolis 55402. 72 S. Sixth St.
<b>MISSISSIPPI</b>	
C I U	Gulfport 39502. P.O. Box 33 Jackson 39206. 33 North Mart Plaza Jackson 39201. 210 S. Lamar St.
<b>MISSOURI</b>	
C I U	Joplin 64801. 310 Wall St. Kansas City 64105. 106 W. 14th St. St. Louis 63101. 1015 Locust St.
<b>MONTANA</b>	
C I U	Billings 59101. 303 N. Broadway Butte 59701. 103 N. Wyoming St.
<b>NEBRASKA</b>	
C I U	Omaha 68102. 409 S. 17th St.
<b>NEVADA</b>	
C I U	Las Vegas 89105. 1711 S. 8th St.
<b>NEW HAMPSHIRE</b>	
C I U	Manchester 03104. 46 Bay St.
<b>NEW JERSEY</b>	
C I U	East Orange 07012. 26 Washington St.
<b>NEW MEXICO</b>	
C I U	Albuquerque 87108. 120 Madeira Dr. N.E.
<b>NEW YORK</b>	
C I M U	Albany 12205. 8 Colvin Ave. Binghamton 13902. 40 Front St. Buffalo 14202. 425 Delaware Ave. Elmira 14901. 100 Woodlawn Ave. New York 10022. 641 Lexington Ave. Rochester 14618. 890 Winton Rd. Rochester 14604. 339 East Ave. Syracuse 13206. 2360 James St. Syracuse 13206. 3532 James St. Waverly 14892. P.O. Box 308
<b>NORTH CAROLINA</b>	
C I U	Charlotte 28202. 129 W. Trade St. Greensboro 27405. 801 Summit Ave. Raleigh 27603. 120 N. Boylan Ave.
<b>NORTH DAKOTA</b>	
C I U	Bismarck 58501. 418 Rosser Ave.
<b>OHIO</b>	
C I U	Akron 44313. 2858 W. Market St. Akron 44313 (Agency & Distributor) Butte 2855 W. Market St. Canton 44703. 515 Third St., N.W. Cincinnati 45206. 2621 Victory Pkwy.

<b>CLEVELAND</b>	
C I M U	44116. 20950 Center Ridge Rd. Cleveland 44114. 1020 Lakeside Ave. Columbus 43212. 937 Burrell Ave. Columbus 43215. 395 E. Broad St. Dayton 45402. 11 W. Monument Ave. Dayton 45439. 3430 S. Dixie Hwy. Mansfield 44902. 166 Park Ave., W. Toledo 43606. 3125 Douglas Rd. Youngstown 44507. 272 E. Indiana Ave.
<b>OKLAHOMA</b>	
C I U	Oklahoma City 73106. 2000 Classen Blvd. Tulsa 74114. 2651 E. 21st St. Tulsa 74103. 420 S. Main
<b>OREGON</b>	
C I U	Eugene 97401. 1170 Pearl St. Medford 97501. 107 E. Main St. Portland 97210. 2929 N.W. 29th Ave.
<b>PENNSYLVANIA</b>	
C I U	Allentown 18103. 732 N. 16th St. Erie 16501. 1001 State St. Johnstown 15902. 841 Oak St. Philadelphia 19124. 1020 E. Erie Ave. Philadelphia 19103. 3 Penn Center Plaza Pittsburgh 15224. 300 Mt. Lebanon Blvd. Pittsburgh 15222. Oliver Bldg., Mellon Sq. York 17403. 56 N. Harrison St.
<b>RHODE ISLAND</b>	
C I U	Providence 02904. 1006 Charles St., N.
<b>SOUTH CAROLINA</b>	
C I U	Columbia 29205. 2728 Devine St. Greenville 29607. 1403 Laurens Rd.
<b>TENNESSEE</b>	
C I U	Chattanooga 37402. 832 Georgia Ave. Kingsport 37664. 1170 N. Eastman Rd. Knoxville 37921. 1301 Hannah Ave., N.W. Memphis 38104. 1420 Union Ave. Nashville 37203. 1717 West End Ave. Oak Ridge 37830. 253 Main St., East
<b>TEXAS</b>	
C I U	Abilene 79601. 442 Cedar St. Amarillo 79101. 303 Polk St. Beaumont 77701. 1385 Calver Ave. Corpus Christi 78401. 205 N. Chaparral St. Dallas 75247. 8101 Stemmons Freeway El Paso 79901. 215 N. Stanton St. Fort Worth 76102. 408 W. 7th St. Houston 77027. 4219 Richmond Ave. Lubbock 79404. 500 E. 50th St. Midland 79704. 122 N. "N" St. San Antonio 78204. 419 S. Main Ave.
<b>UTAH</b>	
C I U	Salt Lake City 84101. 431 S. Third E. St.
<b>VERMONT</b>	
C I U	Rutland 05702. 38½ Center St.
<b>VIRGINIA</b>	
C I U	Newport News 23601. 311 Main St. Richmond 23230. 1508 Willow Lane Dr. Roanoke 24016. 920 S. Jefferson St.
<b>WASHINGTON</b>	
C I U	Spokane 99220. E. 1805 Trent St.
<b>WEST VIRGINIA</b>	
C I U	Charleston 25328. 306 MacCorkle Ave., S.E. Fairmont 26555. 310 Jacobs Bldg. Huntington 25701. 1401 Sixth Ave. Wheeling 26002. 40 14th St.
<b>WISCONSIN</b>	
C I U	Appleton 54912. 510 W. College Ave. Madison 53703. 340 W. Washington Ave. Milwaukee 53218. 4701 N. 76th St. Milwaukee 53202. 615 E. Michigan St.
<b>CANADA</b>	
C I U	Canadian General Electric Company, Ltd., Toronto

## GENERAL ELECTRIC SERVICE SHOPS

WHEN YOU NEED SERVICE . . . These G-E service shops will repair, recondition, and rebuild your electric apparatus. The facilities are available day and night, seven days a week, for work in the shops or on your premises. Latest factory methods and genuine G-E renewal parts are used to maintain peak performance of your equipment. For full information about these services, contact your nearest service shop or sales office.

<b>ALABAMA</b>	
C I U	Birmingham 35211. 500 Nims Ave., S.W.
<b>ARIZONA</b>	
C I U	(Phoenix) Glendale 85301. 4911 West Colter St.
<b>CALIFORNIA</b>	
C I U	Los Angeles 90001. 6900 Stanford Ave. Oakland 94608. 3400 Wood St. Sacramento 95814. 99 North 17th St. San Francisco 94103. 1098 Harrison St.
<b>COLORADO</b>	
C I U	Denver 80205. 3353 Lorimer St.
<b>CONNECTICUT</b>	
C I U	(Southington) Plantsville 06479. 370 Atwater St.
<b>FLORIDA</b>	
C I U	Jacksonville 32203. 2020 W. Beaver St. (Miami) Hialeah 33010. 1062 E. 28th St. Tampa 33601. P.O. Box 1245
<b>GEORGIA</b>	
C I U	(Atlanta) Chamblee 30005. 5035 Peachtree Industrial Blvd.
<b>ILLINOIS</b>	
C I U	Chicago 60632. 4360 W. 47th St.
<b>INDIANA</b>	
C I U	Ft. Wayne 46803. 1731 Edsall Ave. Indianapolis 46222. 1740 W. Vermont St.
<b>IOWA</b>	
C I U	(Davenport) Bettendorf 52722. 1025 State St.

<b>KENTUCKY</b>	
C I U	Louisville 40209. 3900 Crittenden Drive
<b>LOUISIANA</b>	
C I U	New Orleans 70114. 1115 De Armas St.
<b>MARYLAND</b>	
C I U	Baltimore 21230. 920 E. Fort Ave.
<b>MASSACHUSETTS</b>	
C I U	(Boston) Medford 02155. 3960 Mystic Valley Parkway
<b>MICHIGAN</b>	
C I U	Detroit 48202. 5950 Third St. Flint 48505. 1506 E. Carpenter Rd.
<b>MINNESOTA</b>	
C I U	Minneapolis 55430. 2025-49th Ave., N.
<b>MISSOURI</b>	
C I U	Kansas City 64120. 3525 Gardner Ave. St. Louis 63110. 1115 East Road
<b>NEW YORK</b>	
C I U	Albany 12205. 1097 Central Ave. Buffalo 14211. 318 Urban St. North Bergen, N. J. 07047. Schenectady 12305. 6001 Tonnelle Ave. (Instrumentation Service) 1 River Road Syracuse 13208. 1015 E. Hiawatha Blvd.
<b>NORTH CAROLINA</b>	
C I U	Charlotte 28208. 2328 Thrift Road
<b>OHIO</b>	
C I U	Cincinnati 45202. 444 W. Third St.

<b>CLEVELAND</b>	
C I U	44125. 4477 East 49th St. Columbus 43223. 2128 Eakin Rd. Toledo 43605. 405 Dearborn Ave. Youngstown 44507. 272 E. Indiana Ave.
<b>OREGON</b>	
C I U	Portland 97210. 2727 N.W. 29th Ave.
<b>PENNSYLVANIA</b>	
C I U	Allentown 18103. 668 E. Highland St. Johnstown 15902. 841 Oak St. Philadelphia 19124. 1040 E. Erie Ave. (Pittsburgh) West Mifflin, Pa. 15122. 4930 Buttermilk Hollow Rd., R.D. #1 York 17403. 54 N. Harrison St.
<b>TEXAS</b>	
C I U	Corpus Christi 78401. 115 Waco St. Dallas 75235. 3202 Manor Way Houston 77020. 5534 Harvey Wilson Dr. Midland 79704. 704 S. Johnston St.
<b>UTAH</b>	
C I U	Salt Lake City 84110. 301 S. 7th West St.
<b>VIRGINIA</b>	
C I U	Richmond 23224. 1403 Ingram Ave. Roanoke 24007. 115 Albermarle Ave., S.E.
<b>WASHINGTON</b>	
C I U	Seattle 98134. 3422 First Ave., S. Spokane 99211. E. 4323 Mission St.
<b>WEST VIRGINIA</b>	
C I U	Charleston 25328. 306 MacCorkle Ave., S.E.
<b>WISCONSIN</b>	
C I U	Appleton 54910. P.O. Box 83 Menasha, Wisc. 664 Valley Rd. Milwaukee 53207. 235 W. Oklahoma Ave.

GENERAL ELECTRIC COMPANY, PHILADELPHIA, PA.