

November, 1989

Manual 9845-3

INSTALLATION & MAINTENANCE MANUAL

VISI/VAC CIRCUIT INTERRUPTER

TYPE B

PRELIMINARY

David L. Smith

work # → (615) 459-8402

VISI/VAC CIRCUIT INTERRUPTER

TYPE B

TABLE OF CONTENTS

Description	Page
1. Introduction	
2. Ratings	
3. Inspection, Receiving, Handling, Storage	
4. Operation	
5. Mechanism Operating Sequence	
6. Interrupter Switch Assembly, Pole Unit Operation	
7. Interlocks	
8. Maintenance	
9. Testing	
10. Interrupter Switch Assembly, Pole Unit Adjustments	
11. Trip Latch Overlap Adjustment	
12. Mechanism Adjustments - Interrupter Switch Assembly and Mechanism (in Enclosure)	
13. Adjustment of Interrupter Switch Assembly and Mechanism Connection (in Enclosure)	
14. Pullrod Adjustment - (In the Enclosure)	
15. Special Adjustments	
16. Spare Part Numbers	

1. INTRODUCTION

These instructions cover the operation and maintenance of Type B Visi/Vac Circuit Interrupters. Type B has the stored energy mechanism mounted separately from the 3-phase switch base interrupter assembly. See Figure 1 for major component identification for Type B Circuit Interrupters.

The mechanism connects to the interrupter assembly with an adjustable pull rod assembly. A strut angle also runs between the mechanism and the interrupter assembly. This angle must be installed for proper operation.

Visi/Vac Circuit Interrupters are available in two different interrupting ratings: 4kA and 12.5kA. The difference between the two types is the vacuum interrupter. Servicing instructions are similar for both interrupting ratings.

Type B Visi/Vac Circuit Interrupters are available with either motor operated or manually operated stored energy mechanisms. Motor operated assemblies allow remote electrical opening and closing operations and can also be operated manually should control power be lost. Figure 2 shows both a motor and manual operation. Both types contain one way clutch bearings on the operator shaft to allow the manual charging handle to be operated in multiple strokes to complete a manual operation.

2. RATINGS

Ratings for unfused Visi/Vac Circuit Interrupters are as follows:

Voltage Class	5KV		15.5KV	
Rating Class	4.0 KA	12.5 KA	4.0 KA	12.5 KA
Maximum Operating Voltage (RMS)	5.5KV	5.5 KV	15.5 KV	15.5 KV
Continuous Current (60 HZ - RMS)	600 Amp	600 Amp	600 Amp	600 Amp
Impulse Withstand (1.2 x 50 Wave)	60KV (\pm)	60KV (\pm)	95KV (\pm) (Note 1)	95KV (\pm) (Note 1)
Dielectric Withstand (60 Hz - One Minute)	19 KV	19 KV	36 KV	36 KV
Interrupting Current Capacity (RMS SYM)	4.0 KA	12.5 KA	4.0 KA	12.5 KA
Momentary & Fault Closing Current (ASYM - RMS)	20 KA (34 PK)	20 KA (34 PK)	20 KA (34 PK)	20 KA (34 PK)
Short Time Current Capacity (SYM-RMS)	12.5 KA (1 Second)	12.5 KA (3 Seconds)	12.5 KA (1 Second)	12.5 KA (3 Seconds)

Note:

1. Interphase barriers must be in place to meet this withstand level

3. INSPECTION, RECEIVING, HANDLING, STORAGE

The equipment should be unpacked, checked against the bill of lading for completeness, and inspected for shipping damage when received and before being accepted. The equipment ratings and catalog numbers given on the name plate and shipping documents should be checked against the purchasing specifications.

If the Visi/Vac Circuit Interrupters are installed in switchgear manufactured by Square D, no adjustments should be required before the interrupters can be operated. Customer's normal pre-energization testing procedure is still recommended.

If the purchaser of these Visi/Vac Circuit Interrupters is an OEM manufacturer, then he will need to install them in his equipment (per Figure 1) and adjust per section 14 of these instructions. See Figure 3 for lifting instructions and weights for the Visi/Vac components.

When Visi/Vac Circuit Interrupters, or indoor switchgear incorporating them, must be stored, they should be stored in a clean, dry location. When incorporated in outdoor switchgear and stored in an unheated location, the heaters in the switchgear should be energized.

4. OPERATION

CAUTION

1. The following instructions are written for Square D manufactured switchgear. The same instructions are valid when an OEM has installed the Visi/Vac Circuit Interrupter into his own equipment or replaces an interrupter module assembly, exception being if OEMs controls and interlocks vary from those standard with Square D.
2. The removable manual charging handle should not be installed during electrical operation.
3. Motor operated Visi/Vac Circuit Interrupters have electrical interlock switches which prevent electrical operation if an associated fuse compartment door is open or the padlock bar is in the outward position. (See Figure 4.)

4. Figure 5 shows typical schematic wiring diagrams for the Visi/Vac Circuit Interrupter. Refer to specific job drawings for actual wiring of the device in your application.
- 4.1 TO CLOSE ELECTRICALLY: Push red button momentarily on front panel of switchgear. Charging motor will energize. Circuit interrupter will close after motor runs approximately 15 seconds.
- 4.2 TO OPEN ELECTRICALLY: Push green button on front panel of switchgear momentarily. Circuit interrupter will open instantly.
- 4.3 TO CLOSE MANUALLY: Install manual charging handle into the handle hub of the operator, through the front panel. Move handle up and down alternately until circuit interrupter closes.
- 4.4 TO OPEN MANUALLY: Install manual charging handle as in step 4.3 above. Move handle up and down. Interrupter will open after approximately one to three strokes.
- 4.5 TO PADLOCK CIRCUIT INTERRUPTER OPEN: Open circuit interrupter manually or electrically. Pull padlock bar away from panel (See Figure 1) and install padlock shackle through the small hole in the padlock bar. The padlock bar cannot be pulled out far enough to install the padlock unless the interrupter is open and all the operating springs are discharged.

WARNING

DO NOT attempt to charge springs manually if the circuit interrupter is padlocked open. In the event this does occur, it may be necessary to force the padlock bar back into the panel when the padlock is removed. Repeated and forced attempts to charge springs when locked open may damage one-way clutch bearings, requiring replacement.

The mechanism cannot be charged electrically when the padlock bar is "out". An optional key interlock can also be mounted on the front of the panel to lock the circuit interrupter open.

5. MECHANISM OPERATING SEQUENCE

Assume at the start of the sequence all springs are discharged, the circuit interrupter is open and the operator output crank is at the bottom of its stroke.

Note: The closing spring (left) is colored red, the openings spring (right) silver.

5.1 Closing - See Figures 6A, 6B, 6C

- a. Operator crank #1 is driven (manually or electrically) counter clock-wise (viewed from right side) and charges the opening spring through the mechanism/operator turnbuckle #2 and drive link #3. At approximately 15° "before top dead center" (BTDC) of the operator output crank, close latch (#4) clears the mating surface on the charging cam (#5) and moves up into its latched position.
- b. As the operator output crank continues toward "top dead center" (TDC), the trip latch (#6) latches behind the notch on the trip shaft (#7). There will be a "click" prior to TDC as the trip latch passes the notch on the trip shaft. At TDC the rear edge of the trip latch (#6) is "flush" with edge of cutout notch on mechanism frame.
- c. The operator output crank goes over center. Both the close latch (#4) and trip latch (#6) snap into place (audibly) as the opening spring is latched in the extended position. The operator crank then continues in the downward stroke toward "bottom dead center" (BDC).
- d. During the down stroke of the operator output crank the closing spring is stretched by means of charging crank #8.
- e. At approximately 15° before bottom dead center (BBDC), the pin on the charging crank (#8) releases the close latch (#4).
- f. Release of the close latch allows the red close spring to exert force down on the top crank (#9).
- g. The force of the closing spring is transmitted from the top crank (#9) to the mechanism output shaft (#11) through the collapsible trip linkages (#10). The trip latch (#6) prevents these linkages from collapsing during the closing stroke.

- h. The mechanism output shaft #11 closes the Visi/Vac Circuit Interrupter through the pull rod assembly (#3 on Figure 1).
- i. The motor is shut off by the motor cut-off switch #16 (or an auxiliary switch contact) when the mechanism output shaft reaches the closed position.

5.2 Opening Operations - See Figures 6A, 6B, & 6C

5.2.1 Electrical Opening

- a. The solenoid (#12) rotates the trip shaft (#7) counter clockwise (CCW) through the solenoid link (#15) and releases the trip latch (#6).
- b. Release of the trip latch (#6) allows trip linkages (#10) to collapse under the force of the opening spring.
- c. Force of the opening spring rotates the mechanism output shaft (#11) clockwise (CW) and opens the Visi/Vac Circuit Interrupter through the pull rod assembly (#3 on Figure 1).

5.2.2 Manual Opening

- a. Multiple strokes of manual charging handle moves operator output crank (#1) upward from bottom dead center (BDC).
- b. This upward motion is transmitted to the trip arm #13 by means of a notch on mechanism input crank (#14).
- c. Trip arm (#13) rotates trip shaft (#7) CCW by engagement of roll pin in trip arm (#13) with roll pin through trip shaft.
- d. Rotation of trip shaft releases trip latch and interrupter trips as described above for electrical tripping.

6. INTERRUPTER SWITCH ASSEMBLY - POLE UNIT OPERATION

Noting Figure 7, each of the three identical pole units consist of a set of visible disconnect blades (#1) in series with a vacuum interrupter module (#2). The connection between the blades and the vacuum interrupter module is made via a flexible connector (#3).

The opening and closing of the two contacts, blade and vacuum module, in series is controlled by sequence cam (#4) attached to the visible disconnect blades such that sequence cam (#4) insures the vacuum interrupter module always makes and breaks the circuit. The disconnect blades provide visible proof the circuit is open. Therefore:

When closing, the vacuum interrupter module contacts (#6) close after the visible blades close.

When opening, the vacuum interrupter module contacts (#6) open before the visible blades open.

When closed, the vacuum interrupter module contact, inside the vacuum module enclosure, is held closed by a force applied from the bias spring (#7). The bias spring is compressed by toggle linkage (#8), mounted on the disconnect blades, the vacuum interrupter module contacts are closed. It is essential that the toggle linkage goes "over toggle" when the circuit interrupter is closed (See Figure #12). Otherwise, the vacuum interrupter module could be damaged when subjected to high short circuit currents and possibly weld because of insufficient contact force. See section 10 for adjustments, if the pole linkages do not "toggle".

7. INTERLOCKS

The fuse door on the cubicle is interlocked mechanically and electrically with the Visi/Vac mechanism. The Visi/Vac Circuit Interrupter must be in the open position before the enclosure door can be opened. The mechanism cannot be operated electrically with the enclosure door open. The latch plate on the door must be positioned carefully to prevent the interlock pin on the mechanism from striking the latch plate and thus preventing the Visi/Vac mechanism going to full stroke and interrupter switch pole unit mechanisms from going "into toggle".

8. MAINTENANCE

WARNING

Prior to performing any service or maintenance work, open the circuit interrupter, disconnect all high voltage sources from it and ground the interrupter terminals. In addition, momentarily ground the disconnect switch blades of the circuit interrupter to eliminate any residual charge on the vacuum module assembly and its molded insulation. Disconnect control voltage source.

Square D Company recommends each user develop his own maintenance schedule, based upon their own individual needs because of the wide variations in operating conditions. Until such an individual schedule is developed, we recommend the Visi/Vac Circuit Interrupter be inspected after one (1) year in service, or after 200 operations, whichever occurs first. It is also recommended the circuit interrupter be inspected for damage following heavy exposure through currents or interruptions near its maximum rating. The contact erosion gaps should be measured.

The following are recommended procedures for routine maintenance of Visi/Vac Circuit Interrupters:

8.1 Vacuum Interrupter Module Contact Erosion Measurement

The circuit interrupter must be in the closed position and the pole mechanism "in toggle" (See Figure 12). To determine the amount of vacuum interrupter module contact erosion, measure accurately dimension "y" (See Figure 7) on the pole assembly. (Measure at right side, inboard corner of the terminal mounting block #11 through the opening in the right side of the mounting bracket #12.) Subtract the dimension measured from the value of "y" recorded on the vacuum interrupter module assembly. The result is the cumulative erosion since initially manufactured. Should this calculated erosion value exceed the values below, the pole unit should be replaced.

<u>Visi/Vac Rating</u>	<u>Maximum Allowable Contact Erosion</u>
4.0 KA	.100 "
12.5 KA	.080 "

Note:

Dimension "Z" (contact erosion gap, Figure 7) will also indicate the contact erosion present but does not indicate the cumulative value if the gap has been re-adjusted since the device was manufactured.

8.2 Insulating Surfaces

Using a clean, dry cloth, remove all dirt and moisture from the outside of all insulating surfaces.

8.3 Loose or Worn Parts

Check the mechanism, operator and switch assembly pole units for loose hardware, worn or broken parts. Replace or repair as required. Use Loctite 262 (red) to lock screws where required. DO NOT use Loctite on flexible connector hardware, since it has insulating qualities which may cause a bad electrical connection.

8.4 Lubrication

It is not normally necessary to disassemble any of the mechanism or the current carrying parts to relubricate them until the circuit interrupter has operated approximately 1000 close-open cycles. The unit should NOT be washed down with high pressure cleaning solution. Square D does NOT recommend this practice and it will void the warranty. Wipe dirt or grime off before relubricating.

Use Mobil synthetic grease type SHC-32 to relubricate gears, bearing and latch surfaces on the mechanism, the operator, and the interrupter pole units. Also use SHC-32 to lubricate the disconnect blade contact surfaces. Clean the disconnect blade contact surfaces with a solvent such as mineral spirits before relubricating.

Unspecified types of greases should not be substituted for SHC-32, as they may NOT be compatible with synthetic greases and may impair the lubricating properties of the grease applied at the factory. (Mobil 28 is the military spec version of SHC-32.)

It is recommended that the Visi/Vac Circuit Interrupter be manually operated several times after lubrication and observed for proper operation.

9. TESTING

The tests listed below have been performed at the factory prior to shipment. The values and procedures are listed here as a guide to re-testing interrupter performance after maintenance.

WARNING

KEEP CLEAR OF MOVING PARTS AS INJURY MAY OCCUR
DUE TO MOVING DISCONNECT BLADES AND SPRING
DISCHARGING MECHANISM. HIGH VOLTAGE BUS MUST BE
DE-ENERGIZED AND GROUNDED BEFORE PERFORMING TESTS
9.1, 9.2, 9.3 AND 9.4

9.1 Operation and Time Limits

- a. The mechanism charges and closes within 18 seconds (max) after the motor is energized at 100% rated control voltage.
- b. The mechanism charges and closes when energized at minimum rated control voltage. Time to close will be longer than at 100% rated voltage.
- c. The vacuum interrupter module contacts open within 3 cycles after trip coil is energized at 100% rated control voltage.

9.2 Contact Overlap Timing Check

Vacuum interrupter module contacts and interrupter switch disconnect blades (which are connected in series) have a time differential between them during closing and opening operations.

During "closing", (blades close first) the differential time is:

<u>Visi/Vac Rating</u>	<u>Differential Time</u>
4 KA	9-12 milliseconds
12.5 KA	11-14 milliseconds

During "opening", (vacuum interrupter module contacts open first) the differential time is:

<u>Visi/Vac Rating</u>	<u>Differential Time</u>
4 KA	12-18 milliseconds
12.5 KA	15-20 milliseconds

Consult the factory on repair instructions if the times you measure are less than those listed.

9.3 Contact Resistance (Circuit Interrupter Closed)

Measure contact resistance from the upper stationary contact pad (upper jaw) to the pad at the bottom of the vacuum interrupter module. Resistance values should not exceed 85 microhms, when new. For reference, the resistance of the vacuum interrupter (alone) normally will not exceed 30 microhms. Resistance values will change after the interrupter is in service.

9.4 Dielectric Tests

WARNING

HIGH VOLTAGE INCOMING LINE CABLES ARE TO BE DE-ENERGIZED AND ISOLATED FROM INTERRUPTER. OUTGOING LOAD CABLES ARE TO BE DE-ENERGIZED AND ISOLATED FROM CIRCUIT INTERRUPTER.

KEEP AREA CLEAR OF PERSONNEL. USE RECOGNIZED SAFETY PRECAUTIONS WHILE PERFORMING DIELECTRIC TEST.

MAINTAIN A DISTANCE OF SIX FEET BETWEEN PERSONNEL AND THE DEVICE BEING TESTED WHILE ENERGIZED.

DO NOT EXCEED SPECIFIED TEST VOLTAGES SINCE INJURIOUS X-RAYS MAY BE EMITTED.

- 9.4.1 Interrupter-Primary Parts: Apply 27kV AC, 60 Hz to each of the following connections for one minute:

(Note: 36kV used for factory and design tests)

a. Circuit Interrupter Closed

Phase to Phase: Energize each phase separately with other phases and interrupter frame grounded.

b. Circuit Interrupter Open

Across Contacts: Energize the top stationary terminals of each phase of the circuit interrupter separately, ground bottom contact of interrupter module frame and both ends of all other phases.

Across Vacuum Interrupter Module Alone: Energize bottom contact of each vacuum interrupter module, ground disconnect switchblade. This test is performed to verify the presence of vacuum within the vacuum interrupter module.

WARNING

DISCHARGE THE VACUUM INTERRUPTER CONTACTS (MOVABLE AND STATIONARY) AND DISCONNECT BLADES TO GROUND BEFORE HANDLING. THESE AREAS CAN RETAIN STATIC CHARGE AFTER A HI-POT TEST.

9.4.2 Control Circuits

NOTE:

Isolate all control circuits from ground. Isolate charging motor and solid state devices from the rest of the control circuits. The solid state devices are not to be tested dielectrically.

- a. Control and secondary wiring to ground. Apply 1500 volts AC for (1) one minute between the isolated control circuits and ground. All switches closed or shorted during test.
- b. Charging Motor. With motor isolated from rest of control circuit, apply 900 volts AC for (1) one minute between motor leads and grounded frame of interrupter.

10. INTERRUPTER SWITCH ASSEMBLY POLE UNIT ADJUSTMENTS (FIGURE 7)

NOTE:

Adjustments of sections 10 through 14 are normally required only when installing new assemblies or for repair. Adjustments of Section 14 are required for new assemblies installed by an OEM.

- a. Install each interrupter pole unit assembly on the switch base frame (with blades at "closed" position). Align disconnect switch blades on each pole with stationary contact jaw assembly so both are straight. Move stationary contact assembly to center blade spacer in jaw. Tighten insulators onto base.
- b. Adjust clamping force on stationary contact jaw by adjusting distance between outside surfaces of spring returning washers to $2.44 \pm .06$ " as shown in Figure #7.
- c. Open the interrupter pole unit by "pushing" push rod #9. Do not pull blades open directly.
- d. Adjust the length of the interrupter bias spring, using bias spring nut (#5), to the following dimensions:

<u>Device Rating</u>	<u>Spring Length</u>
4.0 KA	1.18"
12.5 KA	1.10"

CAUTION: NUT #5 SHOULD ONLY BE ADJUSTED WHEN THE SWITCH AND INTERRUPTER MODULE ARE "OPEN".

- e. Close interrupter pole unit by "pulling" push rod (#9). Insure that toggle linkage (#8) and erosion gap turnbuckle (#10) go "into toggle" as shown on Figure 12.
- f. In closed position, measure and record "Y" (closed) dimension. Initial dimension should be approximately as follows:

<u>Device Rating</u>	<u>"Y" Closed Dimension</u>
4.0 KA	.250"
12.5 KA	.220"

- g. Adjust erosion gap turnbuckle (#10) so that dimension "Z" (erosion gap) is set to the dimensions listed below. The turnbuckle should be adjusted with the switch open thus it may be necessary to "close" and "open" interrupter pole unit several times.

<u>Device Rating</u>	<u>"Z" Dimension</u>
4.0 KA	.100"
12.5 KA	.080"

Lock erosion gap turnbuckle with set screw (#13). Apply Loctite 262 red (or equivalent) to set screw threads.

NOTE:

Turnbuckle should be adjusted with flat side toward front of switch against the flexible connector connection block.

11. TRIP LATCH ENGAGEMENT ADJUSTMENT - ON SPRING MECHANISM SUBASSEMBLY

Adjust trip latch engagement on mechanism to 1/16 inch \pm .01 as shown on Figure 6A before installing close and opening springs. Adjust overlap by moving bracket on which roll pin, through trip shaft, rests.

12. MECHANISM ADJUSTMENTS - (INTERRUPTER SWITCH ASSEMBLY AND MECHANISM IN ENCLOSURE)

NOTE: ALL ADJUSTMENTS ARE MADE BY OPERATING THE MECHANISM "MANUALLY".

CAUTION

1. DO NOT OPERATE MECHANISM UNLESS PULLROD ASSEMBLY (#3, FIGURE 1) IS CONNECTED TO THE INTERRUPTER SWITCH. OPERATION OF THE MECHANISM WITH PULLROD NOT CONNECTED TO THE INTERRUPTER SWITCH COULD DAMAGE MECHANISM PARTS AND AFFECT FACTORY ADJUSTMENTS.
2. STRUT ANGLE (#4, FIGURE 1) BETWEEN THE MECHANISM OPERATOR ASSEMBLY AND THE INTERRUPTER SWITCH MUST BE INSTALLED PRIOR TO MECHANISM OPERATION. STRUT ANGLE SHOULD NOT BE FORCED INTO PLACE SINCE PARTS COULD BE "STRAINED".
 - a. Operate mechanism until operator output crank is approximately 15° BTDC (Before Top Dead Center), Figure 6C.
 - b. Then adjust mechanism/operator turnbuckle (Figure 6C) CW or CCW until charging cam (#5, Figure 6A) is just high enough for closing latch to latch.
 - c. Now arm the mechanism and operator until the operator output crank (#2, Figure 6C) is at top dead center.
 - d. Check to see that the back edge of the trip latch (#6) is flush with the notch in the mechanism housing frame (Figure 9). If not flush, adjust mechanism output shaft stop bolt (either "up" or "down") until the trip latch is flush with the notch (Figure 9).

NOTE:

1. Adjusting the mechanism output shaft stop bolt "up" moves the trip latch toward the "base" of the mechanism housing and "down" moves it toward the "front" of the housing.
2. During trip latch adjustment, if the interrupter switch shaft stop (#2, Figure 10) is against the interrupter switch shaft stop

bolt (#3, Figure 10) adjust the stop bolt "in" until the switch shaft stop is not touching. (Leave approximately .06 clearance).

- e. Operate mechanism until circuit interrupter closes. Operator output crank should be approximately 15° BBDC (Before Bottom Dead Center), Figure 6C.

NOTE: Adjustment Reference: 15° position of operator output crank.

- 1. Lengthening turnbuckle - Close latch latches sooner and switch closes later.
- 2. Shortening turnbuckle - Close latch latches later and switch closes sooner.
- 3. Ideally, the close latch latches at about the same angle "BTDC" as the switch closes "BBDC" (approximately 15°).

- f. Any adjustment of the mechanism/operator turnbuckle will require re-adjustment of the trip latch and output shaft stop bolt (#3, Figure 10). Reference adjustment "d" above.

13. ADJUSTMENT OF INTERRUPTER SWITCH ASSEMBLY AND MECHANISM CONNECTION - (IN THE ENCLOSURE)

NOTE: ALL ADJUSTMENTS ARE MADE BY OPERATING THE MECHANISM "MANUALLY".

CAUTION

TO PREVENT POSSIBLE INJURY, DO NOT DEVIATE FROM ORDER OF SEQUENCE.

- a. Be certain NO power can be supplied to the mechanism trip coil.
- b. Note Figure 11. Remove tension spring #1 from trip arm #2 and position trip arm #2 so it cannot engage with the notch on the mechanism input crank #3 or bind during mechanism operation.
- c. Operate mechanism until interrupter switch just closes. Check links for "over toggle". See Figure 13.

- d. Remove manual charging handle from operator.
- e. Figure 10, Disconnect all three interrupter pole assembly push rods (#6) from interrupter shaft cranks (#4) by removing cotter key and clevis pin (#5).
- f. Figure 9B, Disconnect pullrod assembly (#2), between mechanism and interrupter, from interrupter crank (#1) by removing cotter key and clevis pin (#3). DO NOT disconnect by removing bolts.
- g. Figure 10, Adjust one interrupter switch pole assembly pushrod #6 until approximately three (3) threads extend through the pushrod pivot #7.
- h. Rotate interrupter switch shaft (Figure 10) #1 and reconnect previously adjusted pole assembly pushrod #6 to shaft crank using clevis pin and cotter key (#5).
- i. Figure 9B, Adjust pull rod assembly (#2) until hole in pullrod (#2) lines up with hole in interrupter crank (#1). Reconnect using clevis pin and cotter key (#3). (NOTE: Clevis pin should be loose).
- j. Figure 10, Adjust the two remaining pushrods (#6) until holes in pushrods line up with holes in shaft cranks (#4).
- k. Figure 10, Reconnect pushrods to shaft cranks using clevis pins and cotter keys (#5). (NOTE: Clevis pins should be loose to turn.)
- l. Figure 11, Place trip arm (#2) back in its original position and replace tension spring (#1).
- m. Install manual handle and operate mechanism through complete cycle.
- n. Figure 13, With interrupter switch closed, check that the disconnect blades can be moved "in" and "out" approximately 1/8" at the stationary contact jaw without switch going out of toggle.
- o. Figure 10, With interrupter switch "open", set distance between interrupter switch shaft stop (#2) and switch shaft stop bolt (#3) to approximately .06".
- p. Following the above adjustments, operate the circuit interrupter, using the mechanism (manually or electrically) through 60 closing and opening operations to pre-condition the vacuum interrupter modules.
- q. Following the above 60 operations, re-adjust the erosion gap, if necessary, per Section 10-g & Figure 7).

Check also the stroke of the vacuum interrupter module. The stroke is determined as follows:

1. Measure "Y" (Figure 7) dimension with circuit interrupter in both the "closed" and "open" position.
2. The difference between these dimensions is the vacuum interrupter module stroke.

Stroke dimensions must be within the following ranges:

<u>Device Rating</u>	<u>Stroke Range</u>
4.0 KA	.200 to .280
12.5 KA	.315 to .440

NOTE:

Stroke dimensions outside the above ranges should be handled as indicated in section 15, "SPECIAL ADJUSTMENTS".

14. MAIN PULL ROD ADJUSTMENT - IN ENCLOSURE

NOTE:

OEMs must make only the following adjustments while installing VISI/VAC Circuit Interrupters in their OEM Enclosures. Adjustments in Sections 10, 11, 12 and 13 were made at the factory.

Following mounting of the interrupter switch assembly and the mechanism/operator assembly in the enclosure and connecting the strut angle and pullrod assembly, the following adjustments are required:

- a. Using the manual charging handle, operate the mechanism and operator until the interrupter switch just closes and goes "over toggle" as shown in Figure 12.
- b. Remove manual charging handle from operator.
- c. Figure 9B, Disconnect pullrod assembly (#2) from the interrupter switch crank (#1) by removing cotter key and clevis pin (#3). DO NOT disconnect by removing bolts.

NOTE:

If interrupter switch pole assemblies have not "gone into toggle" (See Figure 13), push into "toggle" by hand by pulling on pole pushrods.

- d. Adjust pull rod assembly until hole in pull rod is aligned with hole in interrupter crank. Re-connect using clevis pin and cotter key. (Note: Clevis pin should be loose enough to turn by hand.)
- e. Operate the circuit interrupter several times using the manual charging handle. If the interrupter switch and mechanism/operator do not operate properly, re-adjust per Sections 12 and 13 above.

15. SPECIAL ADJUSTMENTS

15.1 NON-CONFORMING STROKE DIMENSIONS

The stroke dimensions can be affected by the length tolerances of the vacuum interrupter module parts and also the condition of internal materials when manufactured. These variations can occasionally result in stroke values which do not conform to the ranges indicated in Section 13 (g) after the 60 pre-conditioning operations have been completed. The following procedures should be followed to permit conformance to the stated stroke range values.

a. 4.0 KA Device

1. Stroke between .170 and .199". Adjust bias spring length (compress) to obtain .200 by "turning" bias spring-nut (#5) downward (CW), Figure 7. Reset erosion gap (Section 10-g) to value shown in Section 8.1.
2. Stroke above .280". Add shims between bias spring bushing (#14) and interrupter module terminal stem (See Detail "A", Figure 7) to change stroke to .280" or less. Re-set erosion gap (Section 10.g) to value shown in Section 8.1.
3. Stroke less than .170". Change vacuum interrupter module. Repeat all adjustments of Section 10.

b. 12.5 KA Device

1. Stroke between .285" and .314". Adjust bias spring length (compress) to obtain .315 by "turning" bias spring-nut (#5, Figure 7) downward (CW). Reset erosion gap (Section 10-g) to values shown in Section 8.1.

- =
2. Stroke above .440". Add shims -- between bias spring bushing (#14) and interrupter module terminal stem, (see detail "A", Figure 7), to change stroke to .440" or less. Reset erosion gap (Section 10-g) to value shown in Section 8.1.
 3. Stroke less than .285" change vacuum interrupter module. Repeat all adjustments of Section 10.


16. RECOMMENDED SPARE PARTS AND/OR RENEWAL PARTS

Quantities are not based upon expected fatigue or wear problem, but upon possible field contingencies where moveable assemblies are operated and possibly damaged and may require fast replacement of such parts from stock.

=

**SUGGESTED STOCKING QUANTITIES
OF RECOMMENDED SPARE PARTS**

Quantity of Visi/Vac Units (Stocked or Installed)		1-5	6-50	51-100
Part Description	Part No.			
Vacuum Interrupter Assembly	48119-060-50 4KA	1	2	4
	48119-060-51 12.5KA			
Stationary Contact Assembly (Upper Jaw)	48119-002-02	-	1	2
Charging Mechanism Assembly	48119-144-53	1	2	4
Electrical Charging System (Operator)	48119-202-50	-	1	2
Charging Motor (Only)	48119-200-50	-	1	2
Manual Charging System	48119-427-50	-	-	1
Aluminum Pullrod Assembly	48119-345-50	-	-	1
Pushrod	48119-063-01	1	2	4
Solenoid	26002-14500	1	2	4
Limit Switch	26202-07093	1	2	4

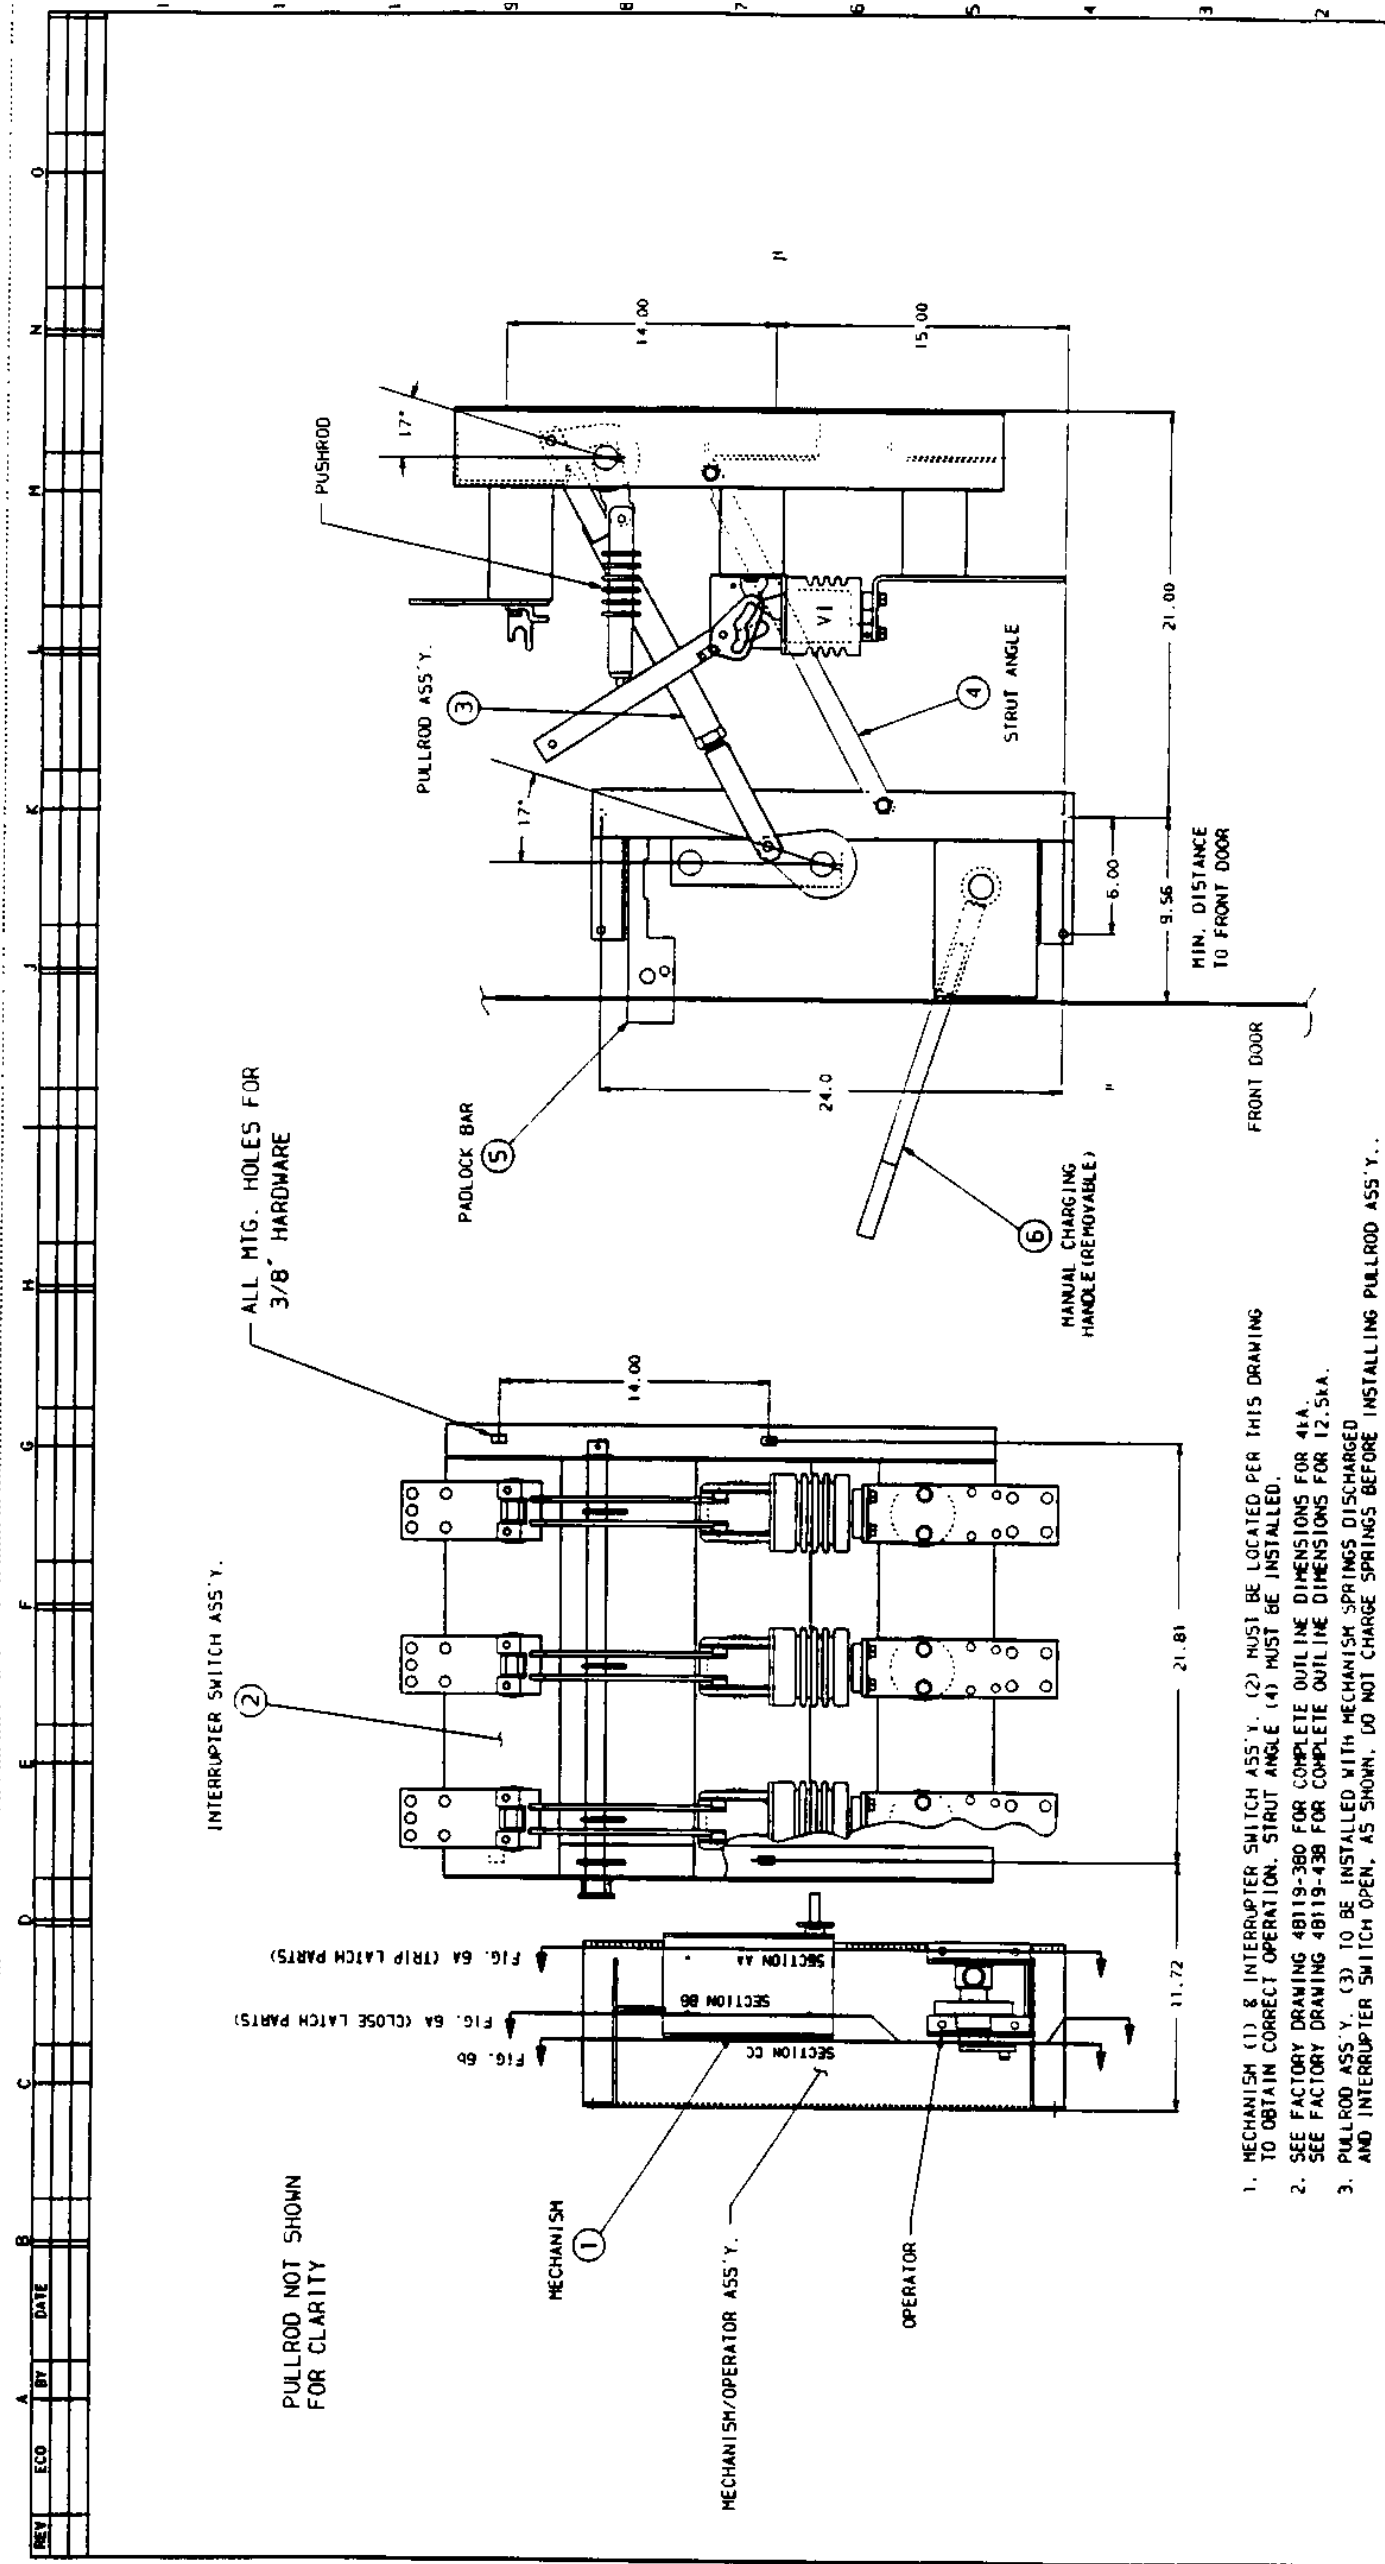

1. MECHANISM (1) & INTERRUPTER SWITCH ASS'Y. (2) MUST BE LOCATED PER THIS DRAWING TO OBTAIN CORRECT OPERATION. STRUT ANGLE (4) MUST BE INSTALLED.
2. SEE FACTORY DRAWING 48119-380 FOR COMPLETE OUTLINE DIMENSIONS FOR 41A. SEE FACTORY DRAWING 48119-438 FOR COMPLETE OUTLINE DIMENSIONS FOR 12.51A.
3. PULLROD ASS'Y. (3) TO BE INSTALLED WITH MECHANISM SPRINGS DISCHARGED AND INTERRUPTER SWITCH OPEN, AS SHOWN. DO NOT CHARGE SPRINGS BEFORE INSTALLING PULLROD ASS'Y.


FIGURE 1 TYPE B MOUNTING

REV	ECO	BY	DATE	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O


STANDARD TOLERANCE UNLESS OTHERWISE SPECIFIED	LINEAR DIMENSIONS	ONE PLACE DECIMAL	± .060	DESIGN LOC.	USED ON	ECO	PRINTS TO	TITLE	PART	REV
		TWO PLACE DECIMAL	± .030							
HOLE DIMENSIONS	THREE PLACE DECIMAL	± .015	DRAWN BY	CLAY	RAWDICK	DATE	SCALE	1/4	D	VYMANUAL 1
		PUNCHED/DRILLED	± .005							
DIMENSIONS	DIMENSIONS	± 1° UNDIMENSIONED	90° ± 2°	ENGINEER	CLAY	FINISH DESCRIPTION				

SQUARE D COMPANY
POWER EQUIPMENT DIVISION

REV	ECO	BY	DATE	A	B	C	D	E	F	G
This engineering drawing (CAD / CAM or otherwise) is the property of Square D Company, not part of the public domain, and is issued with the express understanding and agreement that it is reproduced or copied in whole or in part or used for furnishing information to others, or used directly or indirectly, in any way detrimental to the interest of Square D Company and is to be returned upon request by Square D Company. All Rights Reserved.										
© 1989 Square D Company										

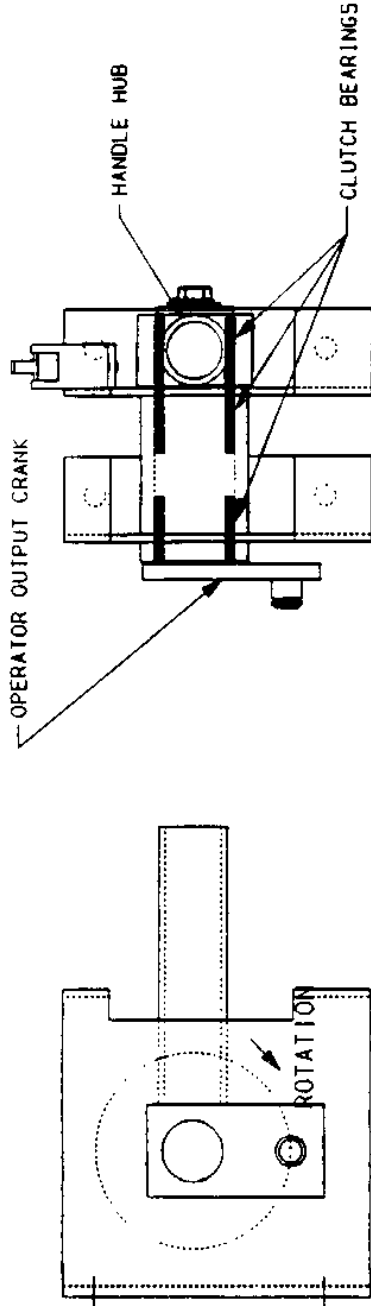


MANUAL OPERATOR

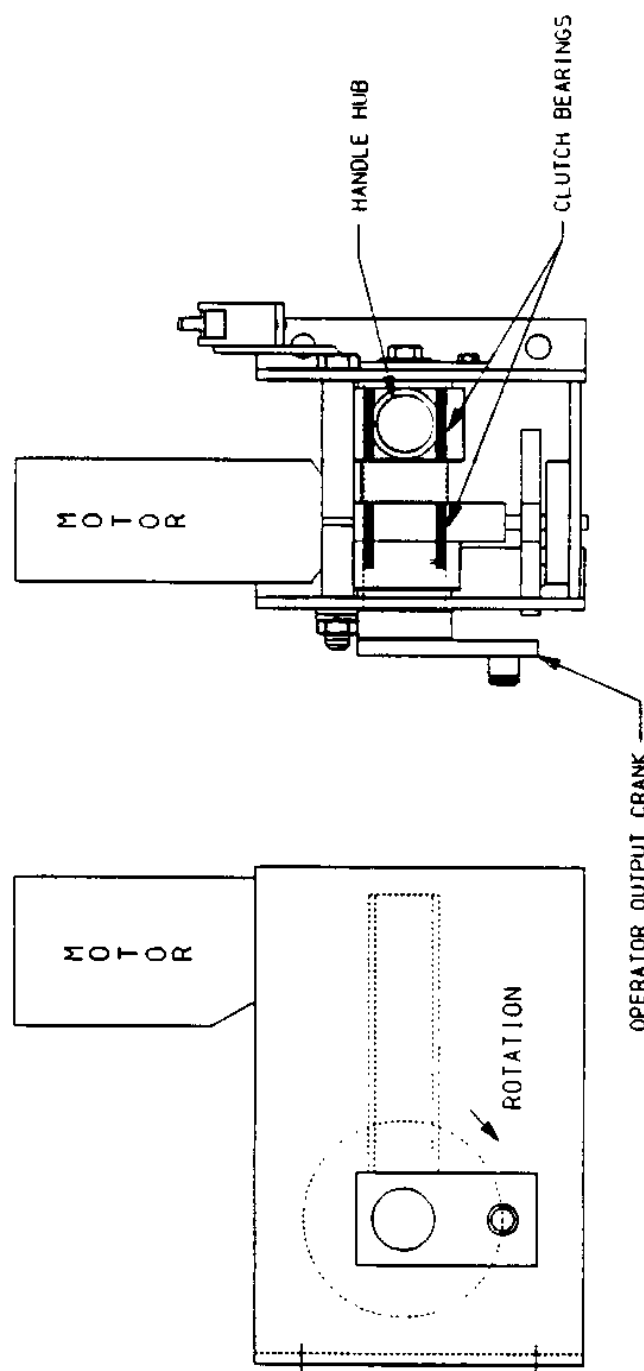

MOTOR OPERATOR


FIGURE 2 OPERATOR SUB-ASS'YS.

STANDARD TOLERANCE UNLESS OTHERWISE SPECIFIED	LINEAR DIMENSIONS	ONE PLACE DECIMAL ± .060	DESIGN LOC, ----	USED ON, ----	ECO, ----	PRINTS TO, -- -- -- -- --	<div>  SQUARE D COMPANY POWER EQUIPMENT </div>			
	HOLE DIMENSIONS	TWO PLACE DECIMAL ± .030	DRAWN BY, ----	RAWSTOCK, ----	DATE, ----	TITLE, ----	B			
		THREE PLACE DECIMAL ± .015	CHKD BY, ----	MATERIAL DESCRIPTION, ----	SCALE, ----	PART #, ----	V/MANUAL 2			
	ANGLES	PUNCHED/DRILLED ± .005	ENGINEER, ----	FINISH DESCRIPTION, ----						
		DIMENSIONED ± 1° UNDIMENSIONED 90° ± 2°								

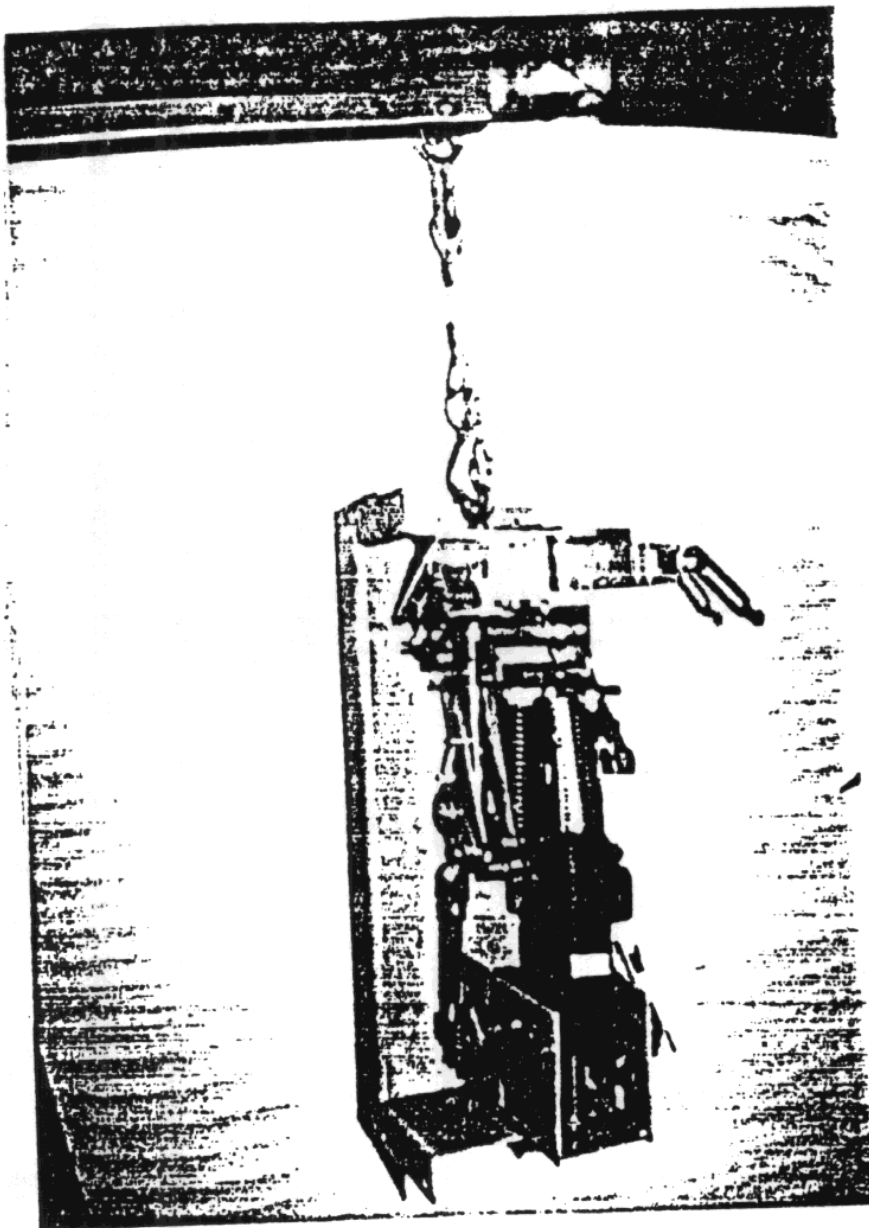

MECHANISM/OPERATOR ASSEMBLY

(Has hole in support for
lifting eye.)

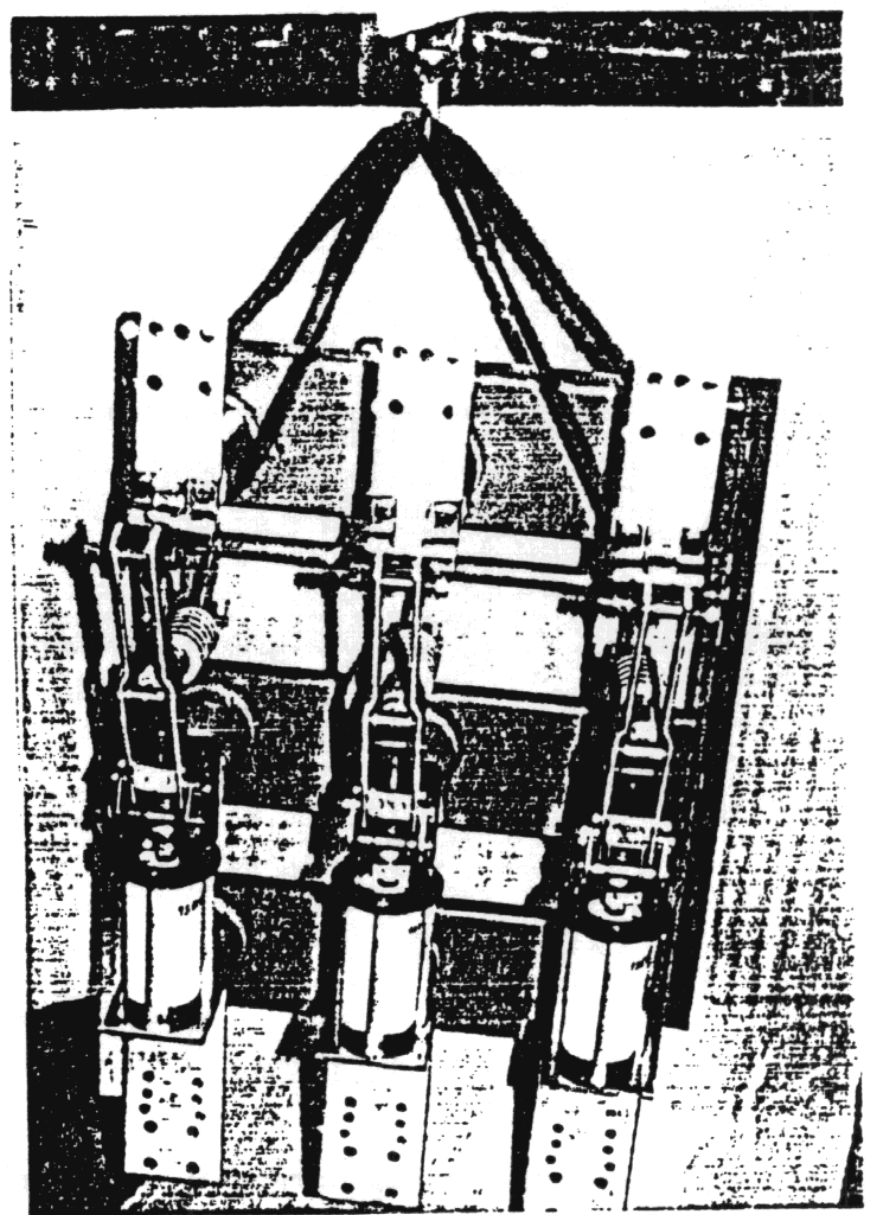


INTERRUPTER SWITCH ASSEMBLY

(Wrap band around two outside
insulators.)

ASSEMBLY WEIGHTS

4.0 KA INTERRUPTER SWITCH ASSEMBLY	- 110 POUNDS
12.5 KA INTERRUPTER SWITCH ASSEMBLY	- 116 POUNDS
MECHANISM / OPERATOR ASSEMBLY - MOTOR OPERATOR	- 60 POUNDS
MECHANISM / OPERATOR ASSEMBLY - MANUAL OPERATOR	- 52 POUNDS

FIGURE 3 - LIFTING PROCEDURE & WEIGHTS

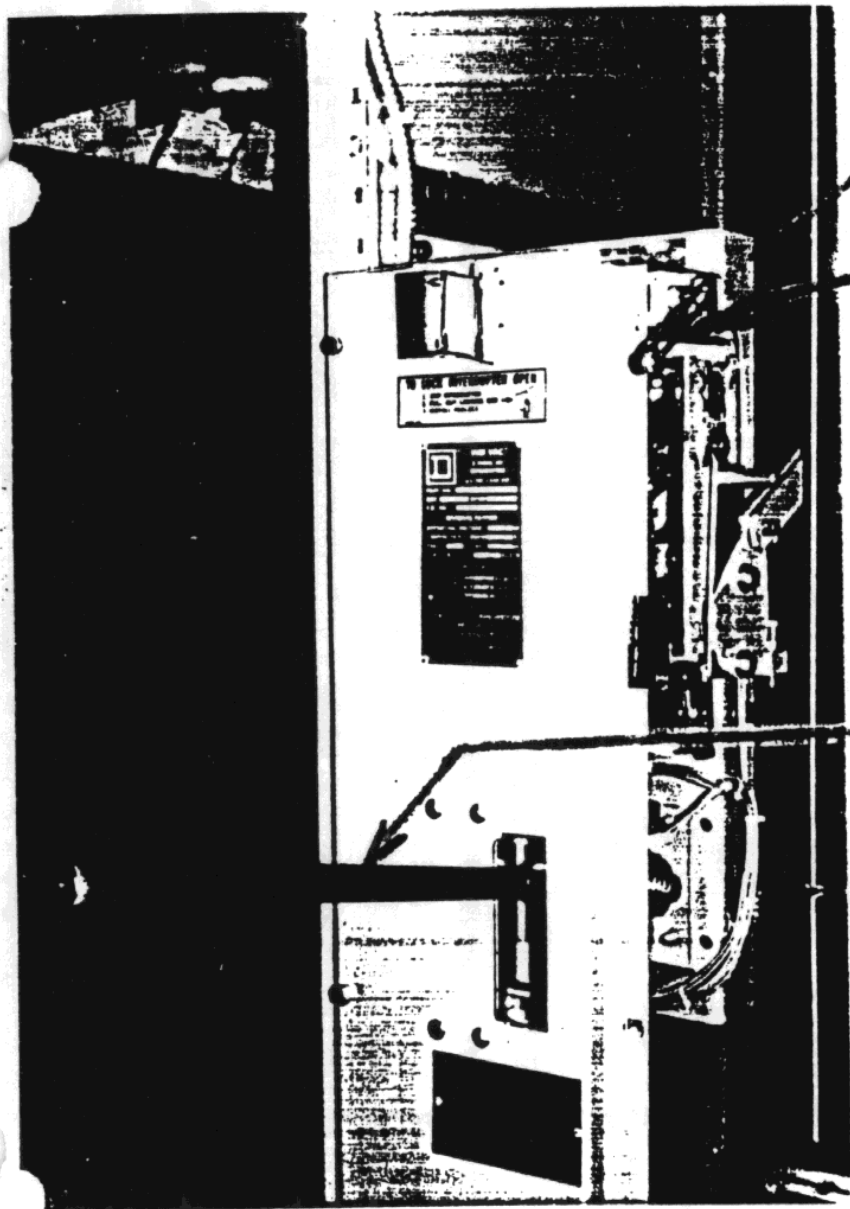


OPERATOR MECHANISM FRAME

DOOR INTERLOCK SWITCH

PADLOCK BAR

MANUAL HANDLE (REMOVABLE)

MECHANISM LOCKED OPEN
INTERLOCK SWITCH

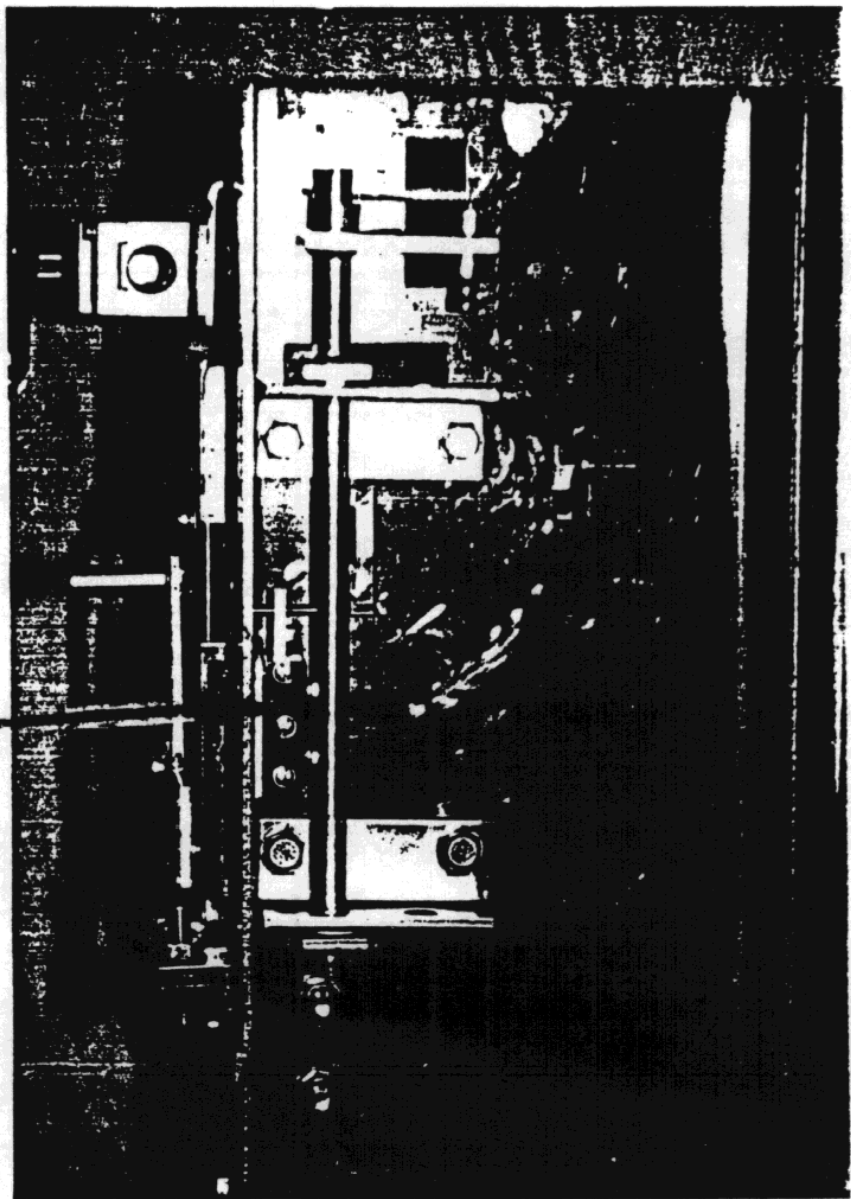


REAR VIEW - MECHANISM SUB-ASSEMBLY

FIGURE 4 - INTERLOCK SWITCHES

NEW

REVISION	BY	DATE	1	2	3	4	5	6
1	A							
2	A							
3	A							
4	A							
5	A							
6	A							

- LEGEND
- AR - GREEN PILOT LIGHT (OPEN)
 - NR - RED PILOT LIGHT (CLOSED)
 - CTU - CAPACITOR TRIP UNIT (51-500)
 - DIS - DOOR INTERLOCK SWITCH
 - NOC - MECHANISM OPERATED CONTACTS
 - NLS - MOTOR LIMIT SWITCH
 - AR - AUXILIARY RELAY
 - NR - SPRINGS CHARGING MOTOR
 - MR - MOTOR RELAY (650/120/120/60)
 - TC - TRIP COIL
 - PS - PUSH BUTTON CONTROL SWITCH
 - TPM - TEST PANEL (WHEN USED)
 - SI - OVERCURRENT RELAY

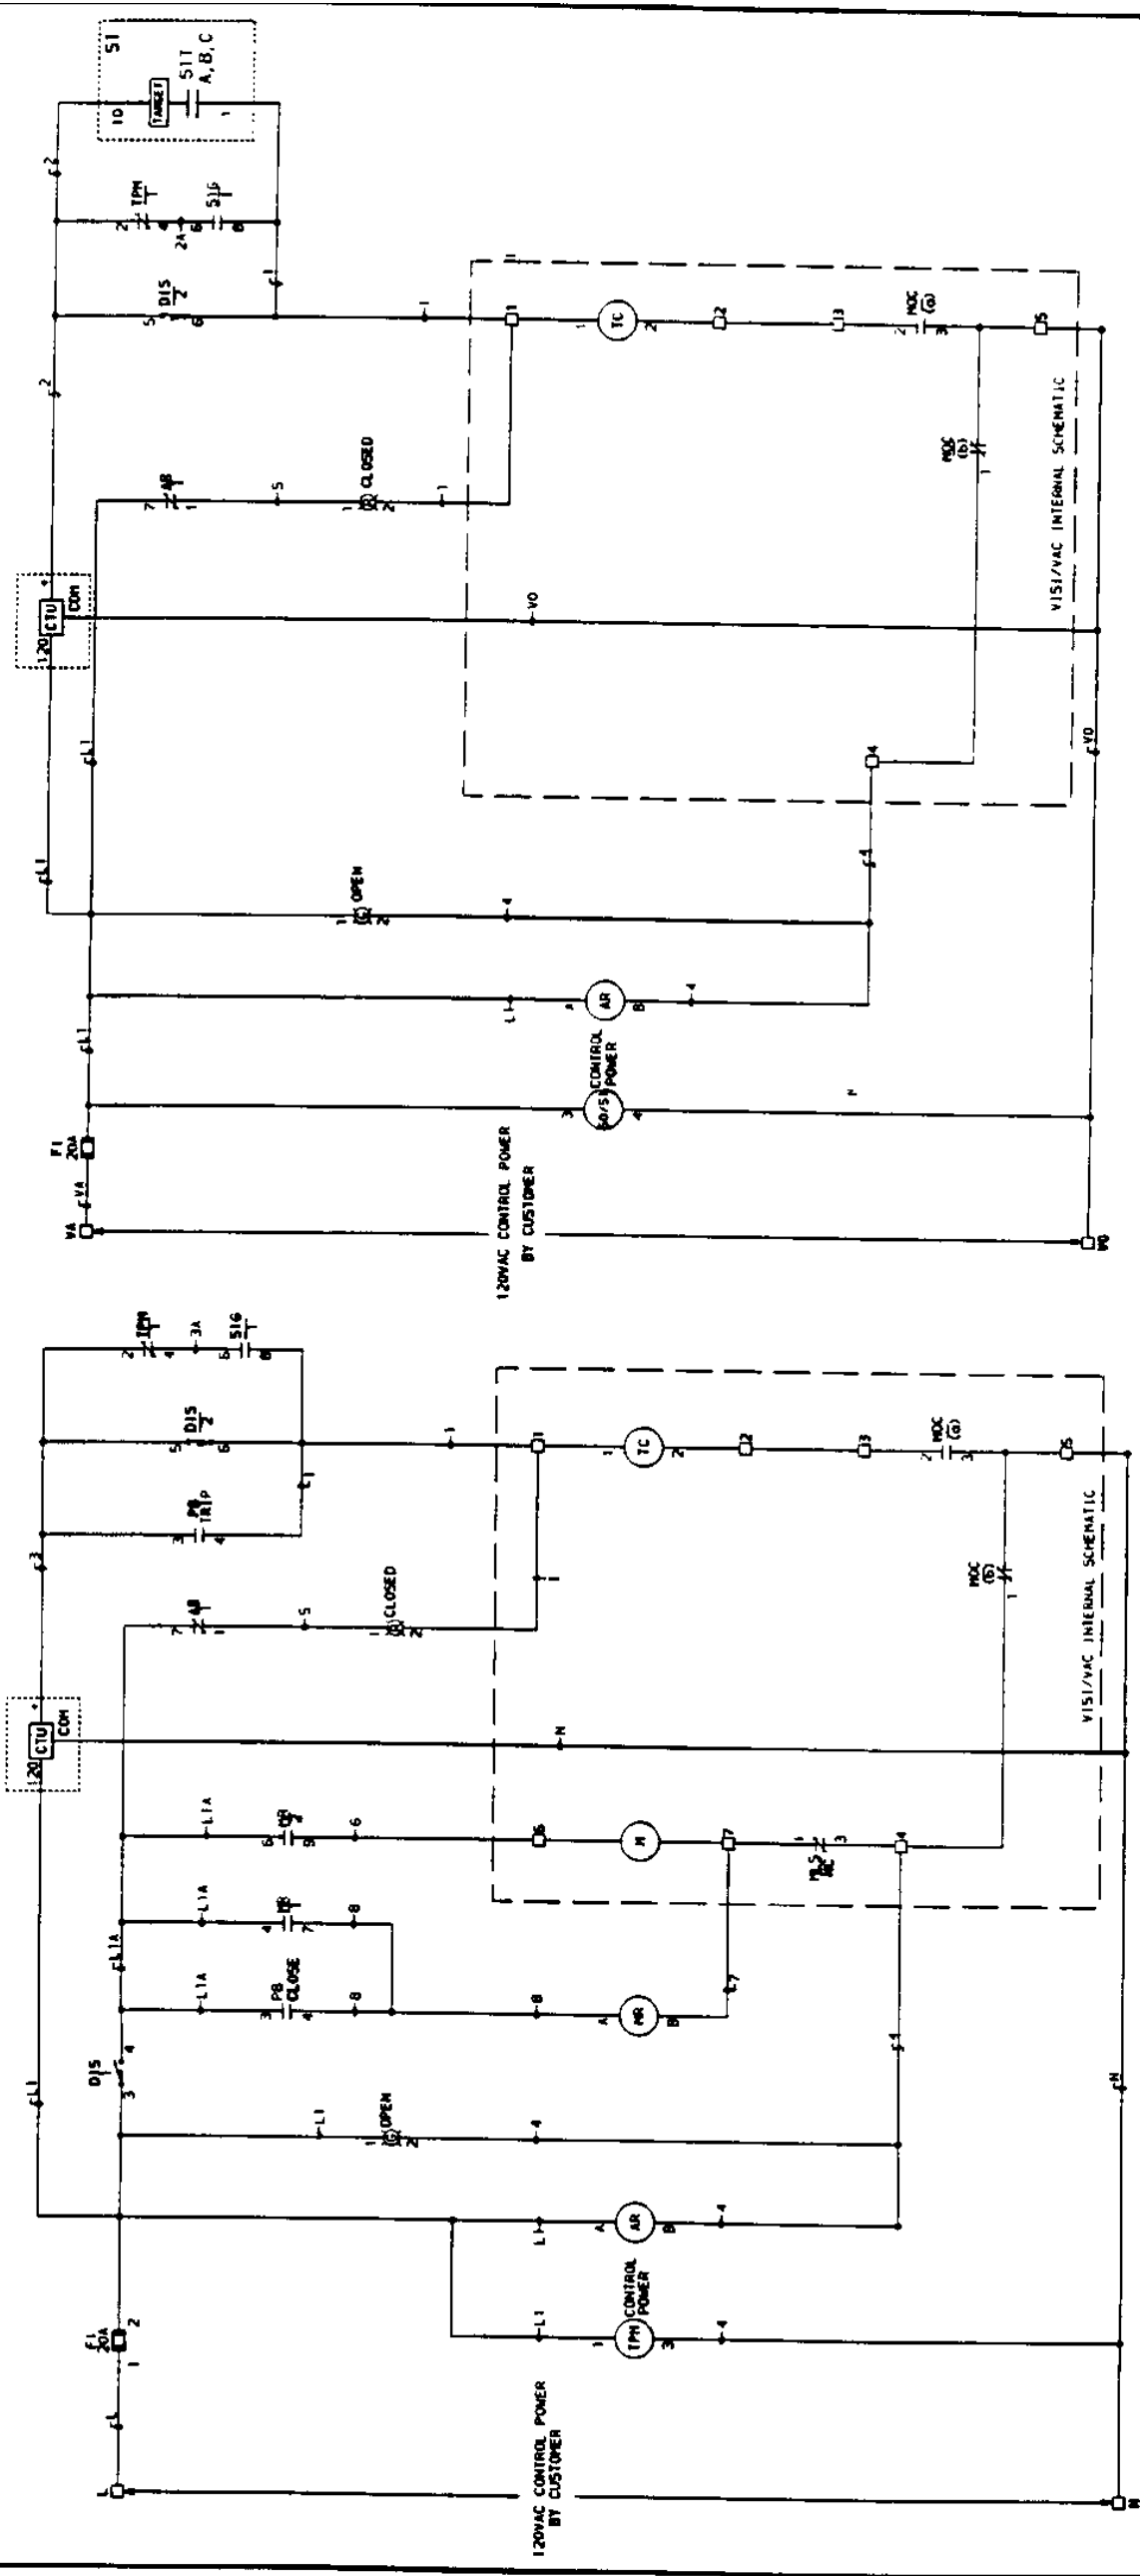

ELECTRICAL CLOSE/ ELECTRICAL TRIP

MANUAL CLOSE/ ELECTRIC TRIP

FIGURE 5 - TYPICAL CONTROL CIRCUITS

THE SQUARE D COMPANY HAS PROPRIETARY RIGHTS TO THE INFORMATION CONTAINED HEREIN. THIS INFORMATION REMAINS THE PROPERTY OF SQUARE D COMPANY AND MAY BE USED ONLY IN CONFORMANCE WITH INSTRUCTIONS ISSUED BY SQUARE D COMPANY. THIS DOCUMENT IS ISSUED IN CONFIDENCE. IT MAY NOT BE REPRODUCED WITHOUT WRITTEN PERMISSION FROM SQUARE D COMPANY, AND MAY BE RECALLED AT ANY TIME.

ARCHITECT: _____
ENGINEER: _____
ELEC. CONTRACTOR: _____
FIELD OFFICER: _____
FACTORY ORDER # _____

CUSTOMER ORDER # _____

DATE: _____

SCALE: _____

FIG. LOC.: _____
DRAWING BY: _____
SQUARE D COMPANY
POWER EQUIPMENT DIVISION

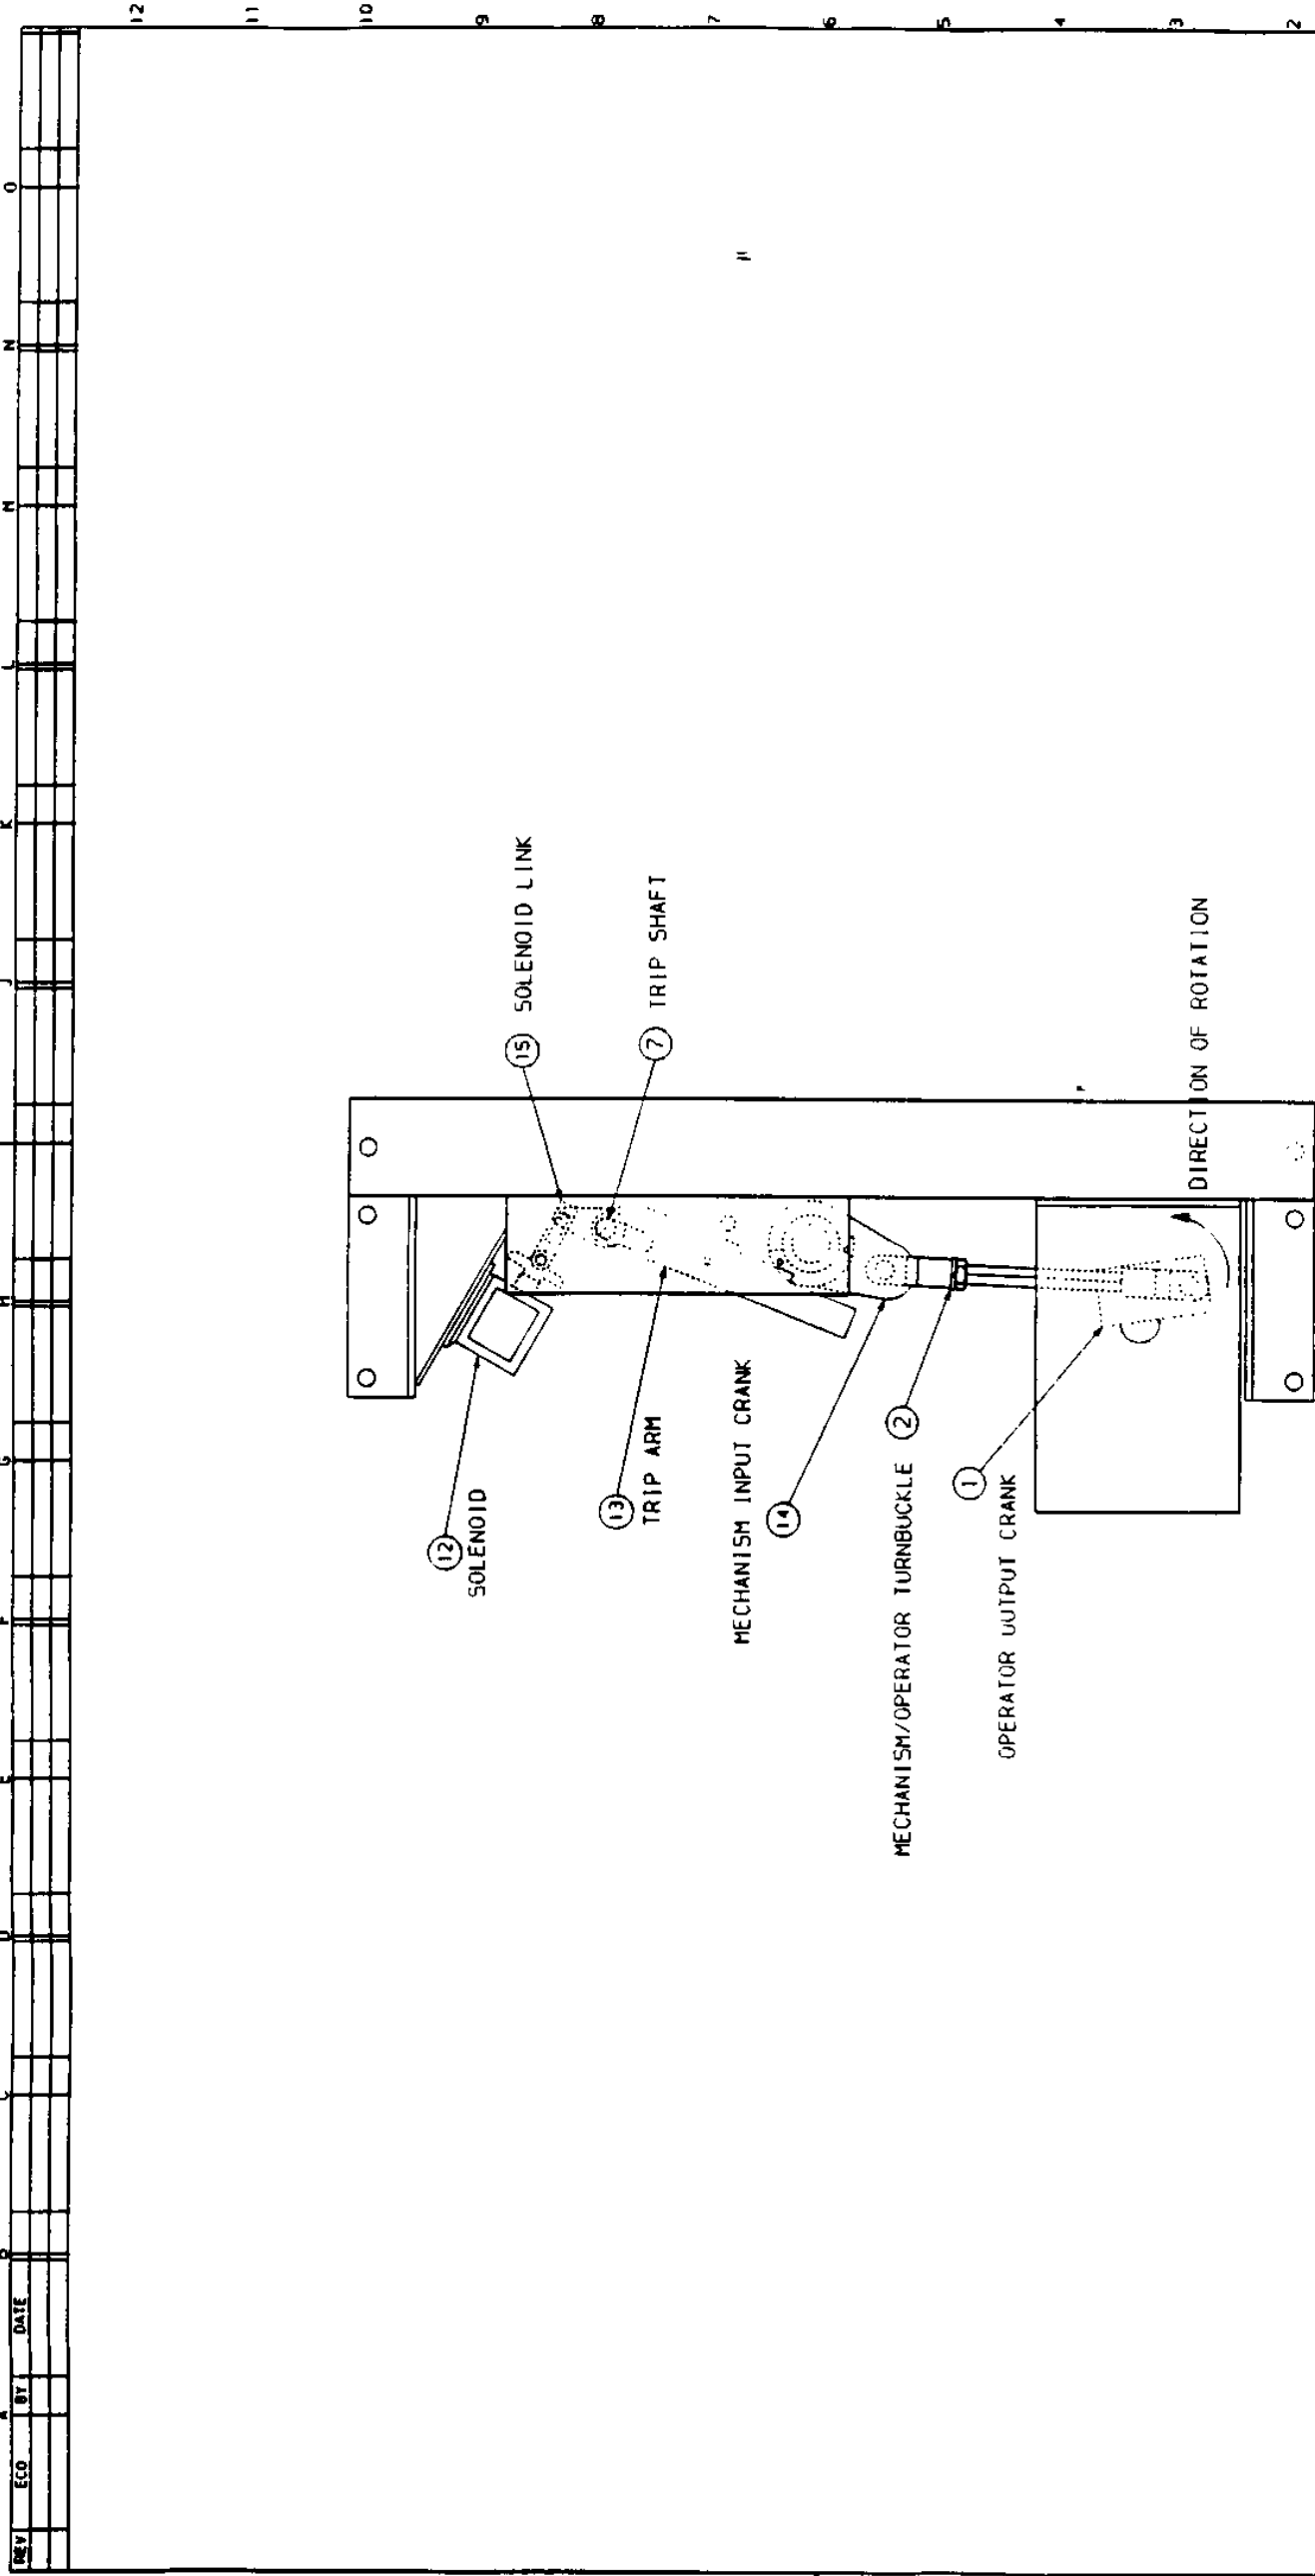


FIGURE 6B RIGHT SIDE VIEW OF TRIP LINKAGE

(SECTION CC FIG. 1)

STANDARD TOLERANCE UNLESS OTHERWISE SPECIFIED		LINEAR DIMENSIONS	ONE PLACE DECIMAL ± .060 TWO PLACE DECIMAL ± .030 THREE PLACE DECIMAL ± .015	DESIGN LOC.	USED ON	ECO.	PRINTS TO										
		HOLE DIMENSIONS	PUNCHED/ORILLED ± .005	DRAWN BY	RAWSTOCK	DATE	TITLE										
		ANGLES	DIMENSIONED ± 1° UNDIMENSIONED 90° ± 2°	CHECKED BY	NATERIAL DESCRIPTION	SCALE: 1/2	PART										
				ENGINEER	FINISH DESCRIPTION												

SQUARE D COMPANY
POWER EQUIPMENT DIVISION

MANUAL 7

REV	ECO	BY	DATE	A	B	C	D	E	F	G
This drawing (drawing, CAD / EIT or otherwise) is the property of Square D Company, not part of the public domain, and is issued with the express understanding and agreement that it is reproduced or copied in whole or in part or used for furnishing information to others, or used directly or indirectly, in any way detrimental to the interest of Square D Company and is to be returned upon request by Square D Company. All Rights Reserved.										
										© 1989 Square D Company


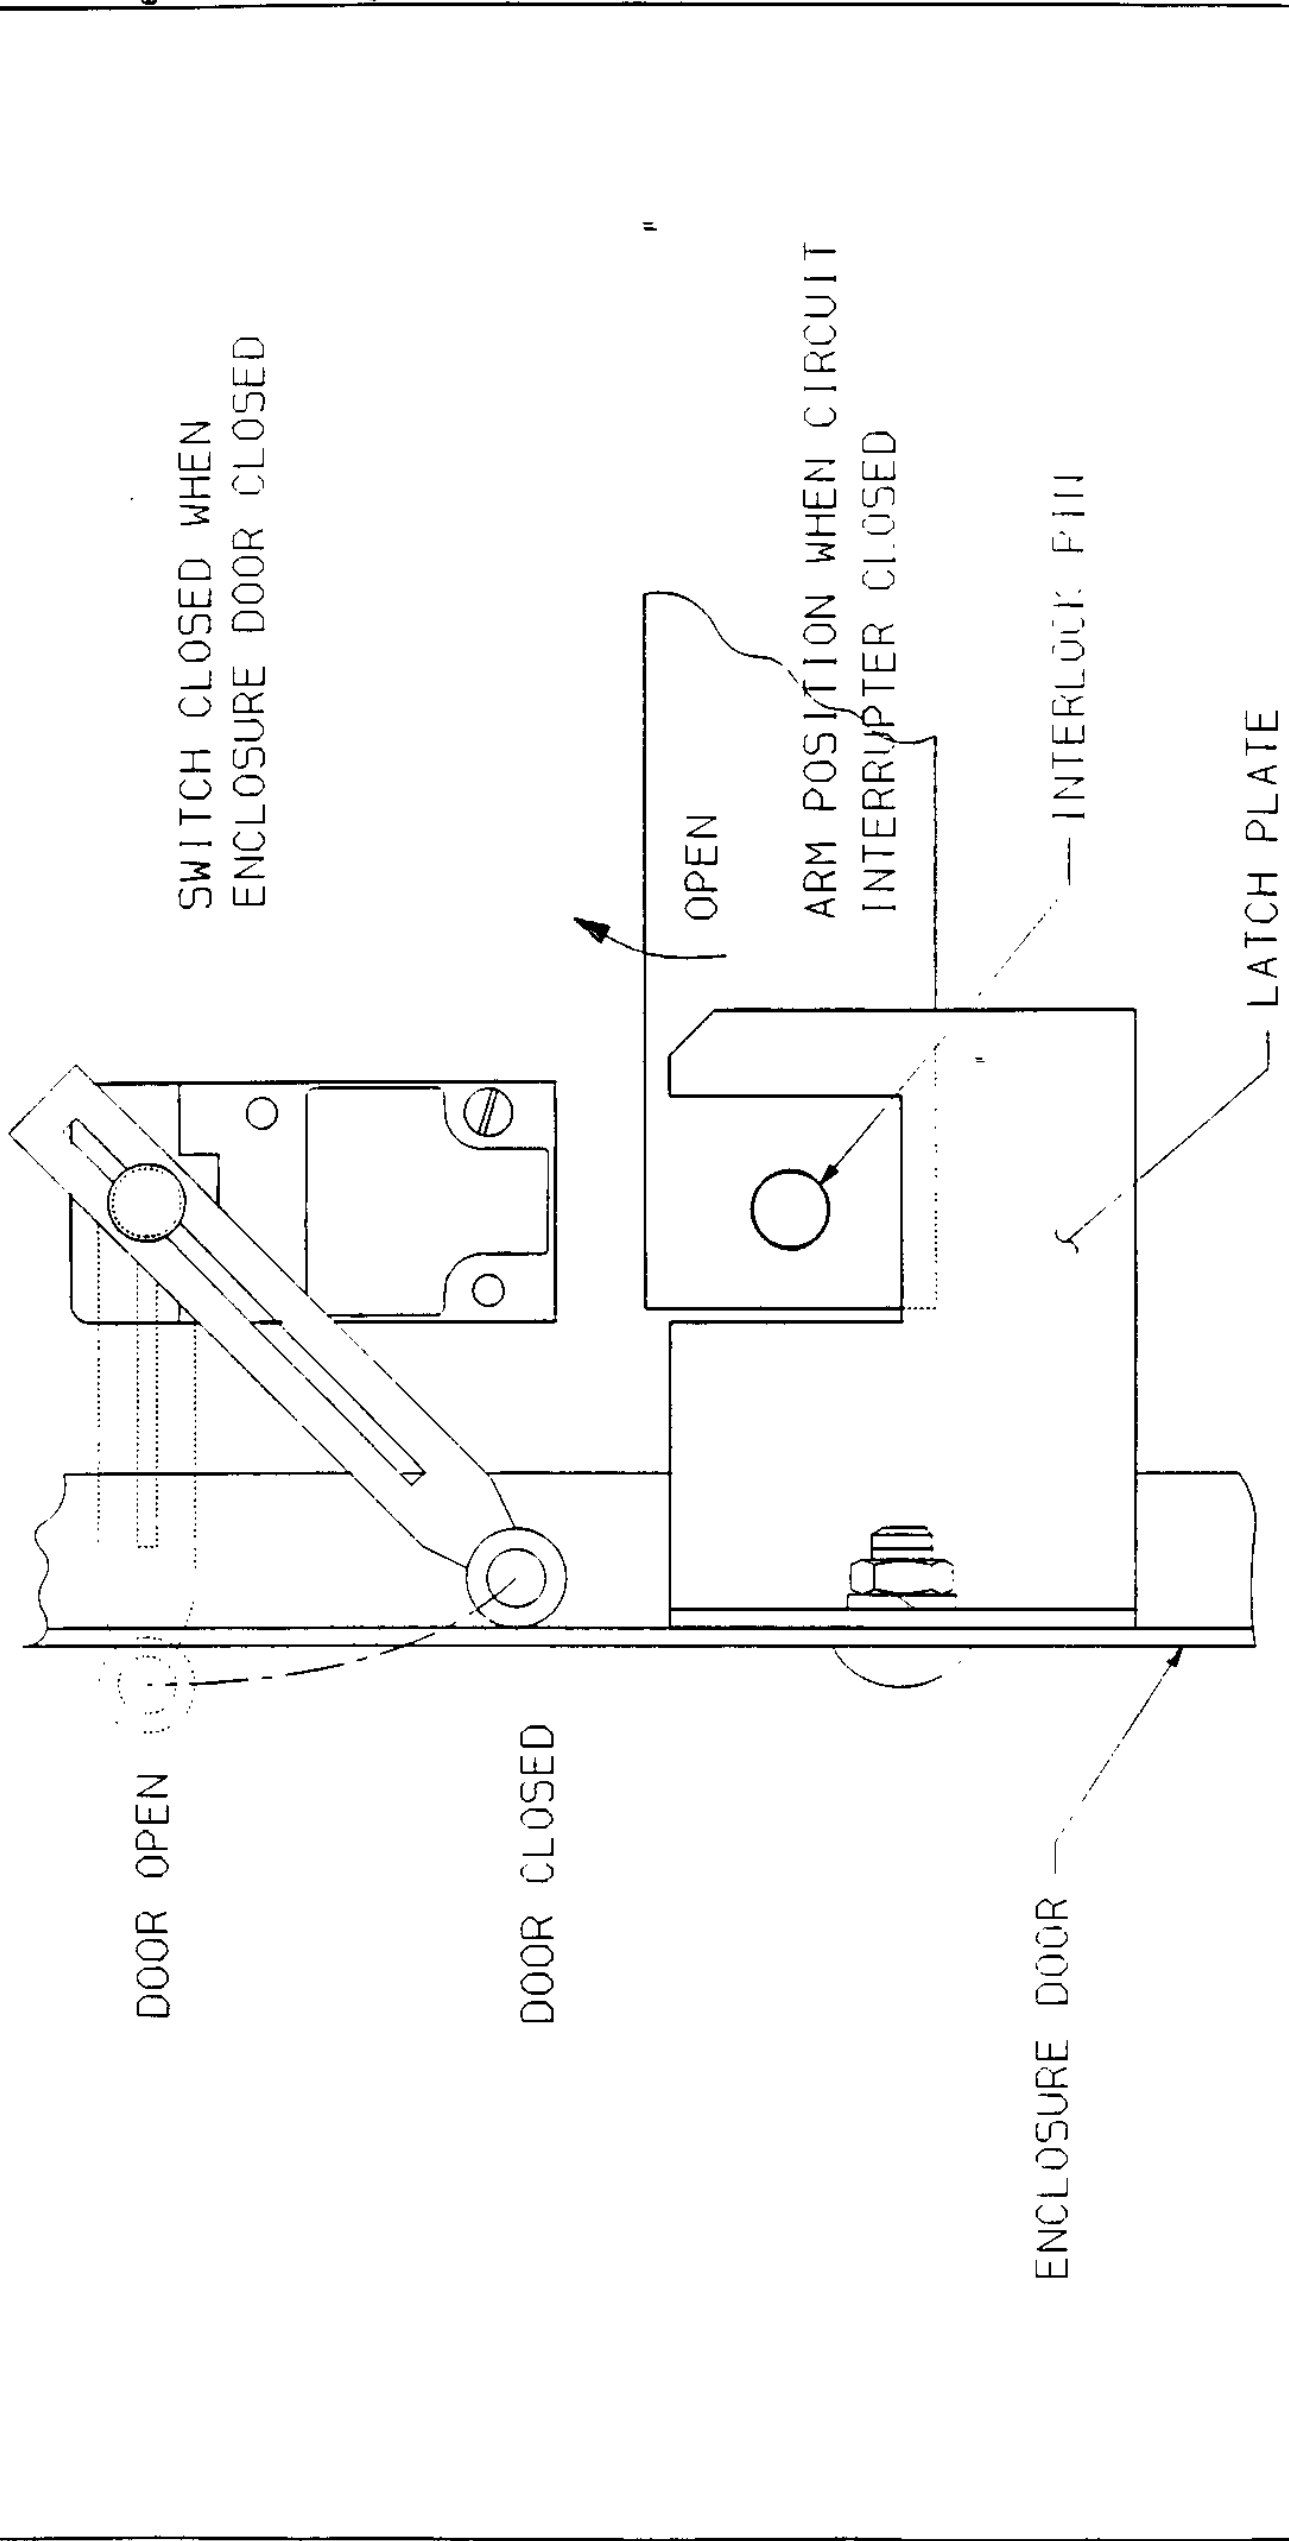


FIGURE 8 DOOR INTERLOCK

STANDARD TOLERANCE UNLESS OTHERWISE SPECIFIED	LINEAR DIMENSIONS	ONE PLACE DECIMAL ± .060	DESIGN LOC. ----	USED ON: ----	ECO: ----	PRINTS TO: ----	<div><div></div></div> <div>SQUARE D COMPANY</div> <div>POWER EQUIPMENT</div> <div>VVMANUAL 9</div>
	TWO PLACE DECIMAL ± .030	DRAWN BY: ----	RAWSTOCK: ----	DATE: ----	TITLE: ----	B	
	THREE PLACE DECIMAL ± .015	CHKD BY: ----	MATERIAL DESCRIPTION: ----	SCALE: ----	PART# ----		
	HOLE DIMENSIONS	PUNCHED/DRILLED ± .005	FINISH DESCRIPTION: ----	ENGINEER: ----	DIMENSIONED ± 1° UNDIMENSIONED 90° ± 2°		

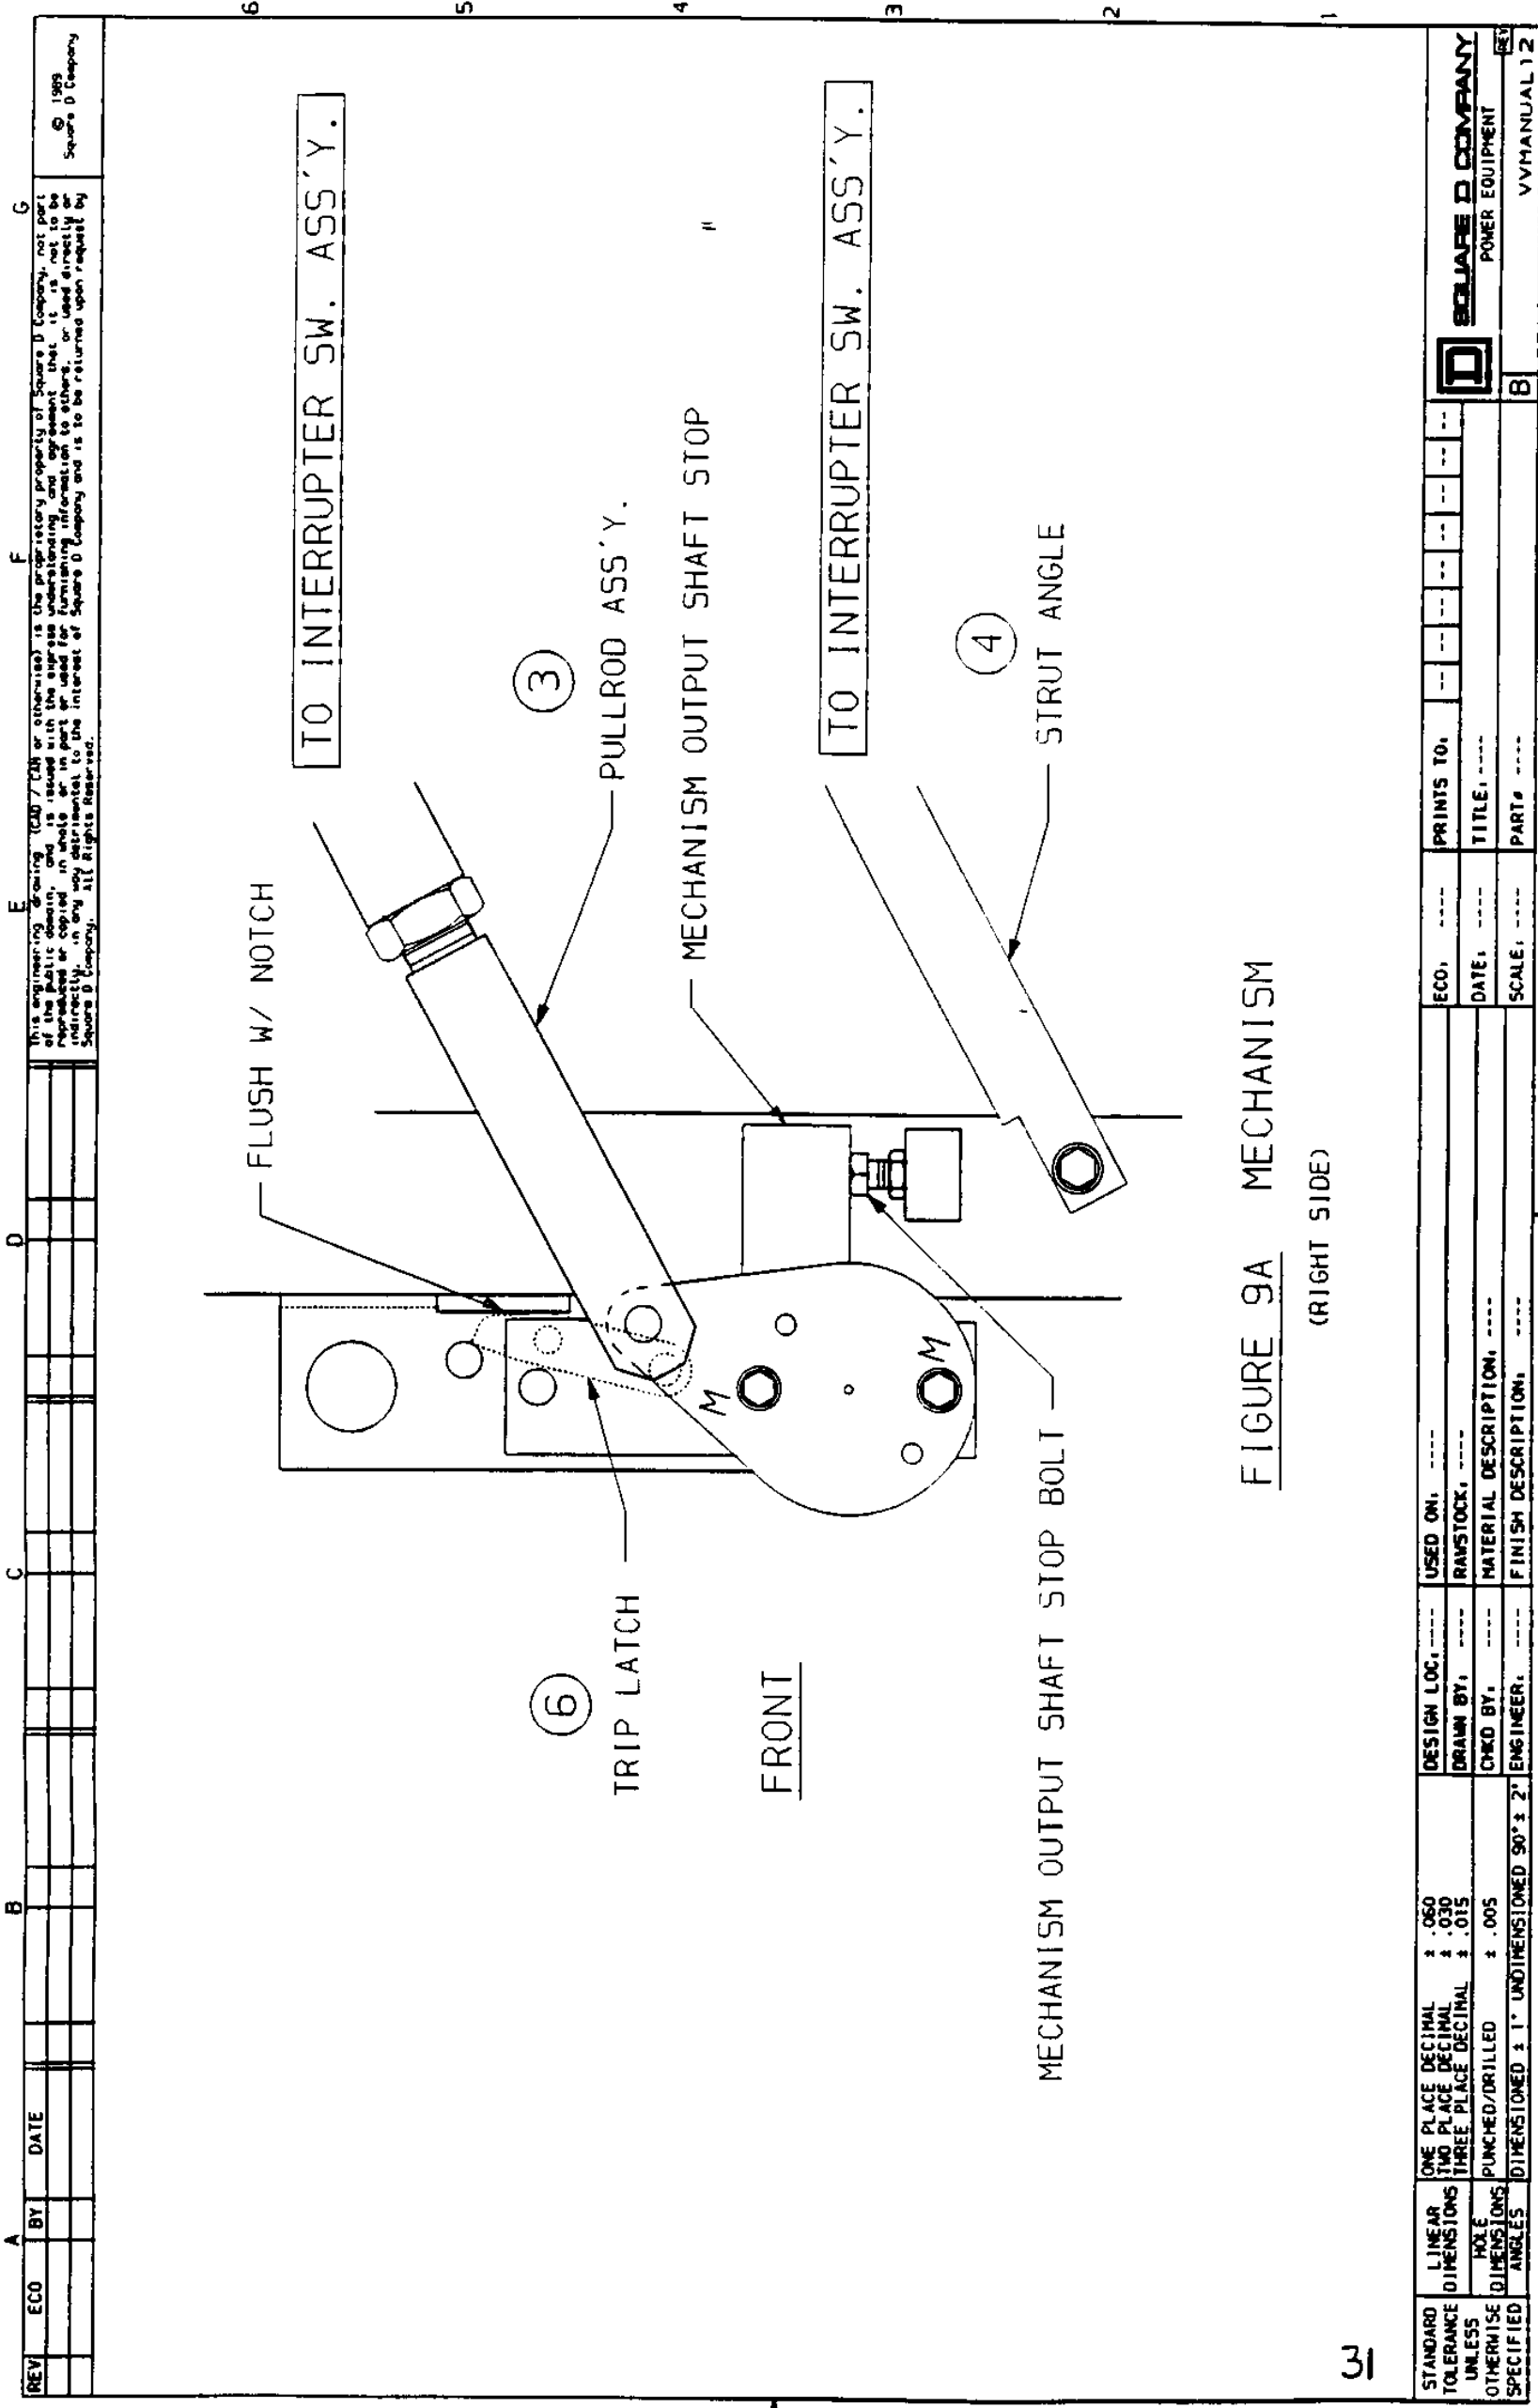

① TENSION SPRING

② TRIP ARM

③ MECHANISM INPUT CRANK

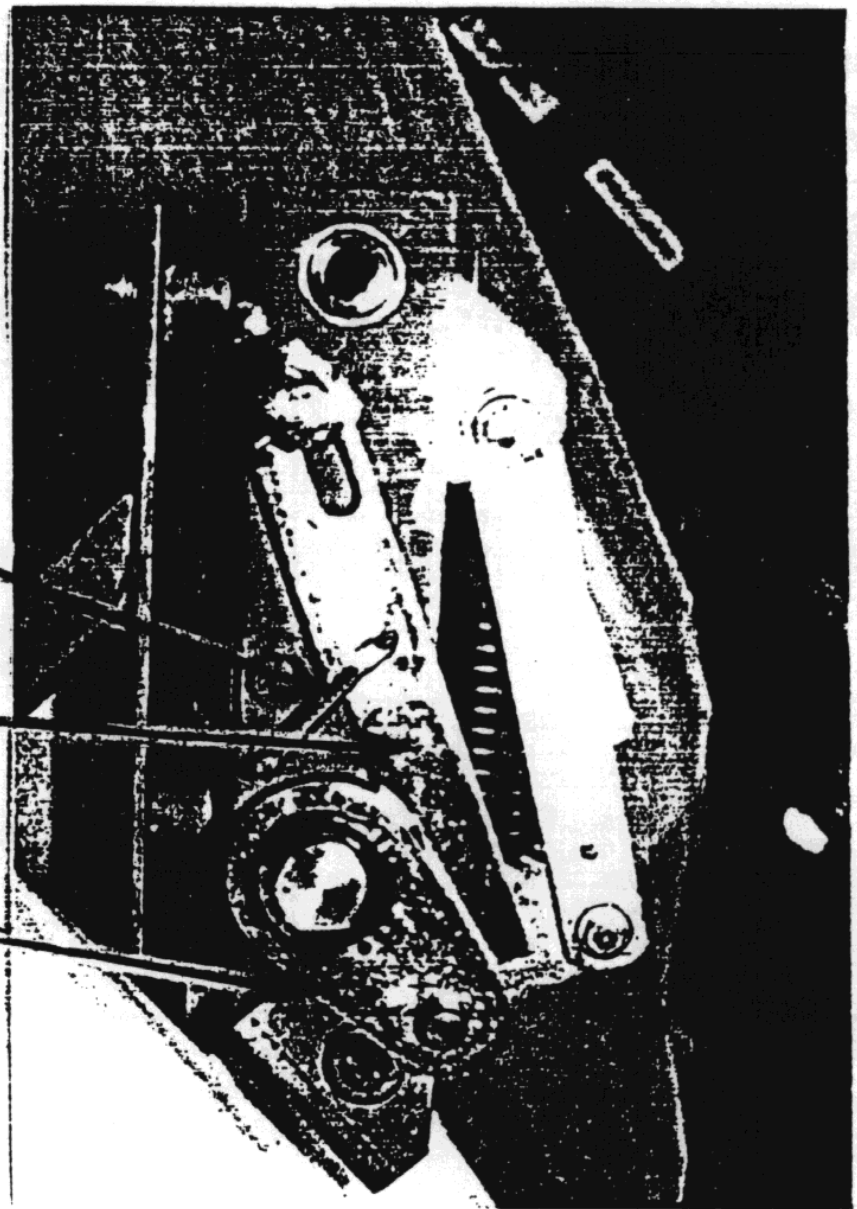


FIGURE 11

REV	ECO	BY	DATE	B			C			D			E			F			G
																			© 1988 Square D Company

This engineering drawing (CAD or otherwise) is the proprietary property of Square D Company, not part of the public domain, and is loaned with the express understanding and agreement that it will not be reproduced or copied in whole or in part or used for furnishing information to others, or for resale or indirectly in any way may detrimental to the interest of Square D Company and is to be returned upon request by Square D Company. All Rights Reserved.

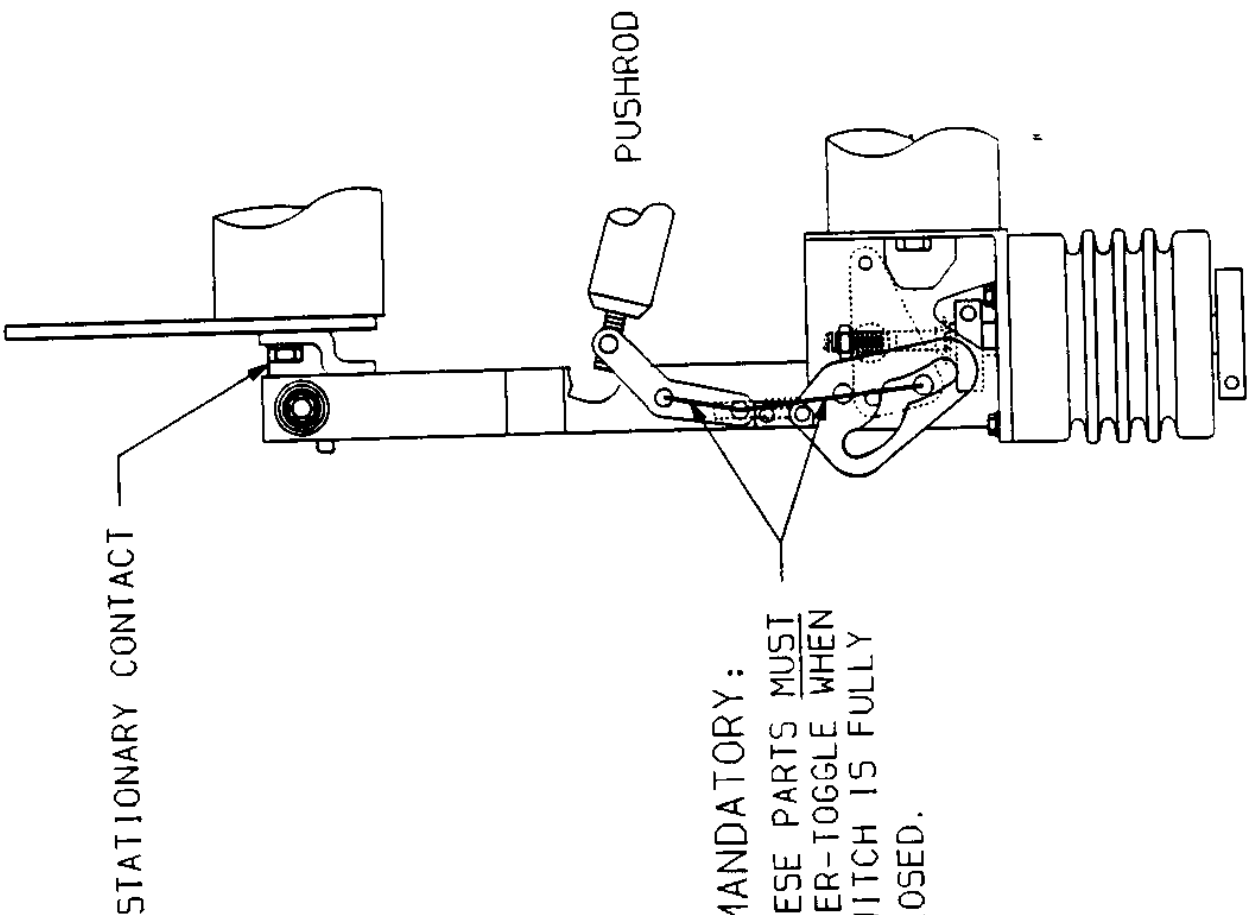


FIGURE 12

STANDARD TOLERANCE UNLESS OTHERWISE SPECIFIED		LINEAR DIMENSIONS	ONE PLACE DECIMAL ± .060 TWO PLACE DECIMAL ± .030 THREE PLACE DECIMAL ± .015	DESIGN LOC.	USED ON:	ECO:	PRINTS TO:	SQUARE D COMPANY POWER EQUIPMENT											
HOLE DIMENSIONS		PUNCHED/DRILLED	± .005	DRAWN BY:	RAMSTOCK	DATE:	TITLE:	B											
ANGLES		DIMENSIONED ± 1° UNDIMENSIONED 90° ± 2°		CHKD BY:		SCALE:	PART#	VVMANUAL 15											
				ENGINEER:															