



DESCRIPTION • OPERATION • MAINTENANCE

INSTRUCTIONS

I.L. 12480-A

File no. 11-200

DESIGN N

CAT.
NO.
STYLE

Life-Line® **STARTER**

SIZE 2, 2-3 or 4 POLE STYLE

COIL

V CY

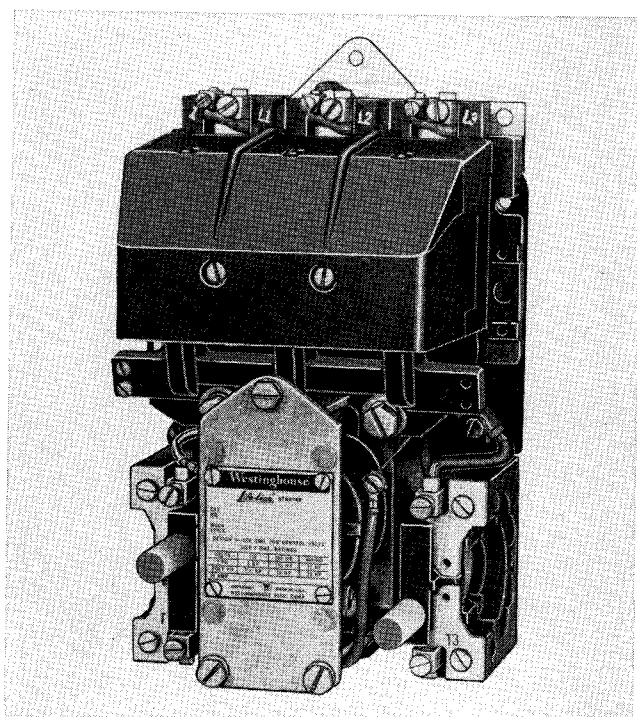


FIG. 1. Size 2, Design N Starter

DESIGN N LIFE-LINE STARTER will give protection against overloads (but not against short circuit currents) when wired in accordance with Fig. 3 and provided with overload heaters selected from the Heater Application Tables.

The starter should be protected against short circuits by fuses not exceeding four times the rated motor current, or a time limit circuit breaker set at not more than four times the full load motor current.

STARTER IDENTIFICATION

The LIFE-LINE Starter complete is identified by CAT. NO. (shown on leaflet, carton and in catalog) or by style no. (shown on leaflet and carton) and consists of two basic parts: (1) The starter unit without coil, and (2) the coil.

The CAT. NO. and style no. of the starter unit (without coil) appear on the metal nameplate attached to the magnet.

The coil style no. is marked on the coil itself along with its voltage and frequency rating.

OVERLOAD RELAY

The overload relay is furnished set for Hand reset operation. The relay may be set for Automatic reset, Hand reset, or Hand reset with no manual means of opening the contacts. The type of operation is determined by the position of the control spring

® Registered Trade-Mark

in the notched pushrod; the respective positions (as illustrated in Fig. 2) are indicated by "Auto", "Hand" and "No Stop". The positions are indicated as follows: "Hand", "No Stop" by alignment of spring arm with the ribs on the base, the "Auto" by the spring arm against the upper shoulder of the base. Automatic reset should not be used with 2-wire master switch.

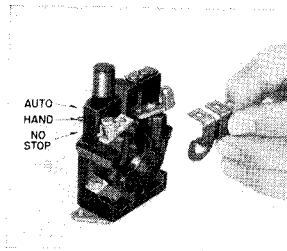


FIG. 2. Thermal Overload Relay, Showing Heater and Installation Method

The overload heaters are shipped in a separate carton. First check the heater code marking (adjacent to mounting holes) against the Heater Application Table. If the room temperature surrounding the motor is the same as that at the starter, the full load current marking of the motor nameplate should come within the current range of the heater.

If the room temperature surrounding the motor exceeds that at the starter, assume a decreased motor current of 1% for each degree C difference in temperature and select heaters accordingly. If the room temperature at the starter exceeds that at the motor, assume an increased motor current of 1% for each degree C difference in temperature and select heaters accordingly. Install heater as shown in Fig. 2, making sure that heater mounting screws are tight.

ELECTRICAL INTERLOCKS

This starter comes equipped with one normally open interlock mounted on the lefthand side. A second interlock may be obtained by ordering either style 453D976G09 normally open, or style 453D976G10 normally closed. A third or fourth interlock may be obtained by ordering either style 453D976G11 normally open, or style 453D976G12 normally closed. The normally open interlocks may be readily converted to normally closed interlocks per Instruction Leaflet I.L. 11956.

A universal electrical interlock (L55) is available as an accessory. This interlock provides either NO or NC operation, or may be employed as a SPDT device by jumpering the terminals on one end for a common line connection. The style number for the Type L55 interlock kit when used as a first or second interlock is style 453D502G05; when added as the third or fourth interlock specify style 453D502G06.

SEPARATE CONTROL CIRCUIT

If it is desired to operate the coil from a separate control circuit, remove control lead (Jumper D) Fig. 3. Connect one side of separate control circuit to relay terminal where lead was removed and the other side to isolated insert terminal (8-32 Thread) at upper left corner of molded base. To this point connect terminal "1" of PB station or master switch, in other respects connect per Fig. 3.

On starters wired for separate control at the factory, connect separate control leads to the terminals marked "1" and "X2".

DESIGN N LIFE-LINE STARTER

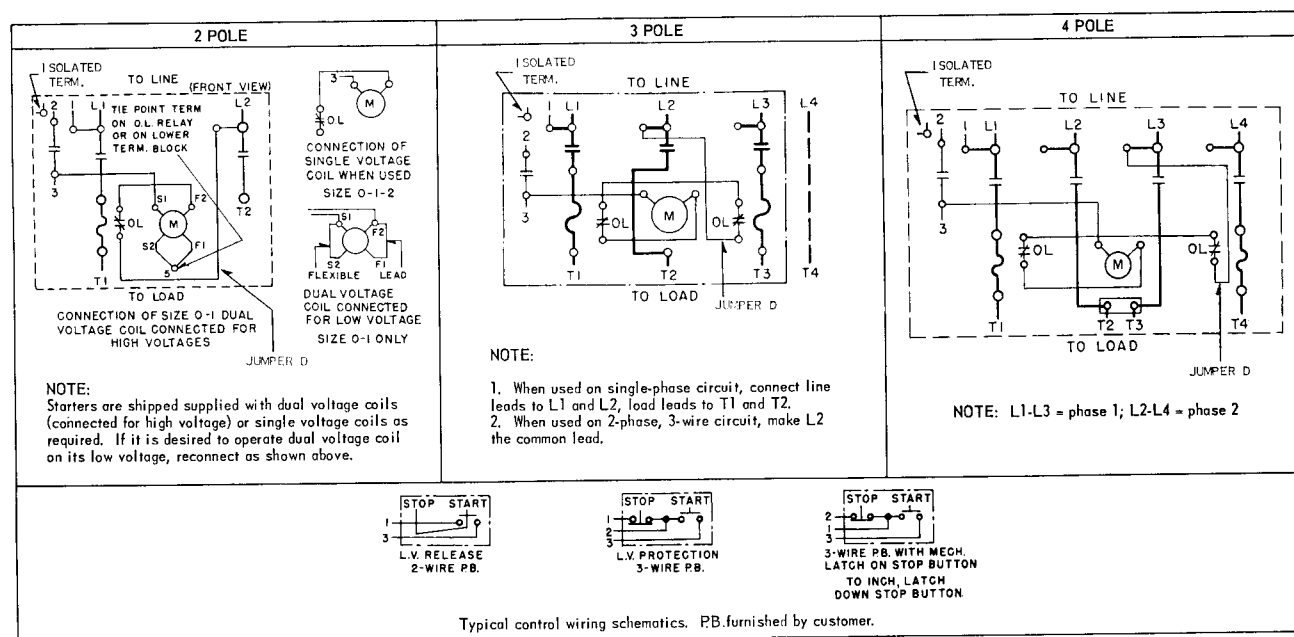


FIG. 3. Wiring Diagram

MAINTENANCE

The sealing surfaces on the magnet frame and armature should be kept clean.

Do not lubricate the contacts or bearings. Fine silver contacts need no dressing throughout their life.

To remove contactor coil, remove the three round head magnet mounting screws and withdraw the coil and magnet.

When installing contactor coil, make sure that round head magnet mounting screws are securely tightened.

The bimetallic disc trip unit of the overload relay has been carefully calibrated at the factory and should not be disturbed. In case of damage, remove complete relay unit and replace with complete unit.

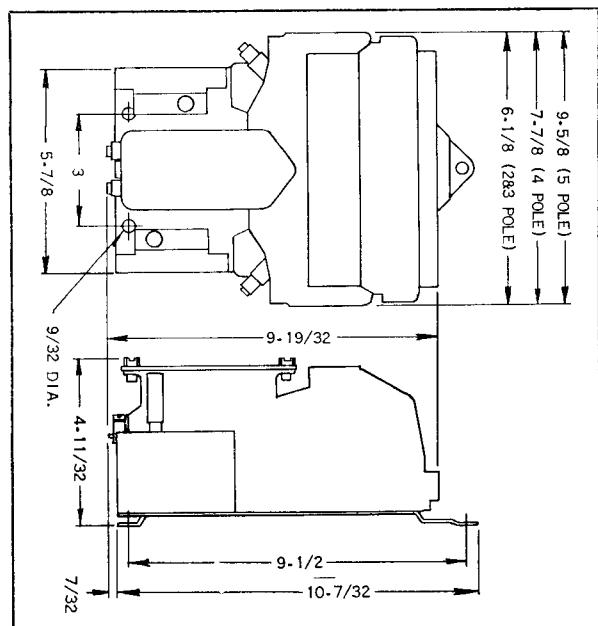


FIG. 4. Outline—Size 2

PRINCIPAL RENEWAL PARTS

2 Pole Contact Kit.....	S# 1605 201
3 Pole Contact Kit.....	S# 1605 202
4 Pole Contact Kit.....	2 of S# 1605 201
Overload relay complete.....	S# 48A3455G3

HEATER APPLICATION TABLES FOR SIZE 2 LINESTARTERS

HEATER STYLE NUMBER	HEATER CODE MARKING	TABLE F	
		OPEN CLASSES 11200, 11210	
		125% Overload Protection Full Load Current of Motor (Amperes) @ 40°C	Heater Current Rating (Amperes) @ 40°C
966 478	AO 3.0	2.61 to 2.86	3.26
966 479	AP 3.4	2.87 to 3.24	3.58
966 480	AR 3.8	3.25 to 3.67	4.06
966 481	AS 4.3	3.68 to 4.10	4.60
966 482	AT 4.8	4.11 to 4.60	5.14
966 483	AU 5.4	4.61 to 5.24	5.77
966 484	AW 6.1	5.25 to 5.91	6.55
966 485	AX 6.8	5.92 to 6.77	7.40
966 486	AY 7.7	6.78 to 7.79	8.47
966 487	AZ 8.5	7.80 to 8.55	9.75
966 488	BA 9.6	8.56 to 9.67	10.7
966 489	BB 11	9.68 to 10.7	12.1
966 490	BC 12	10.8 to 11.9	13.4
966 491	BD 13	12.0 to 13.6	15.0
966 493	BF 16	13.7 to 15.1	17.1
966 494	BG 18	15.2 to 16.5	19.0
966 495	BH 19	16.6 to 17.9	20.7
966 496	BI 21	18.0 to 19.6	22.5
966 497	BK 23	19.7 to 21.2	24.6
966 498	BL 25	21.3 to 23.0	26.6
966 499	BM 27	23.1 to 25.8	28.8
974 084	BO 31	25.9 to 28.6	32.3
301P138G01	BP 32	28.7 to 32.3	35.8
301P139G01	BQ 35	32.4 to 37.1	40.5
1040 589	BR 36	37.2 to 42.0	46.5
1040 590	BS 40	42.1 to 48.7	52.7
1265 538	BX 61	48.8 to 56.1	61.0
FOR SIZE 2 USE ABOVE HEATERS, CODE AO THROUGH BX			
1265 539	BY 65	56.2 to 65.1	70.2
1265 540	BZ 71	65.2 to 72.5	81.5

Note: Use Next Lower Code No. Heater for 115% Protection.



WESTINGHOUSE ELECTRIC CORPORATION
BEAVER PLANT • STANDARD CONTROL DIVISION • BEAVER, PA.

(Rep. 6-59) Printed in U.S.A.