



control accessories


magnetic contactor
type F • alternating current

frame 66F5H • double pole
style numbers 1358 099 and 1361 058

renewal
parts data

15-825D1

page 1

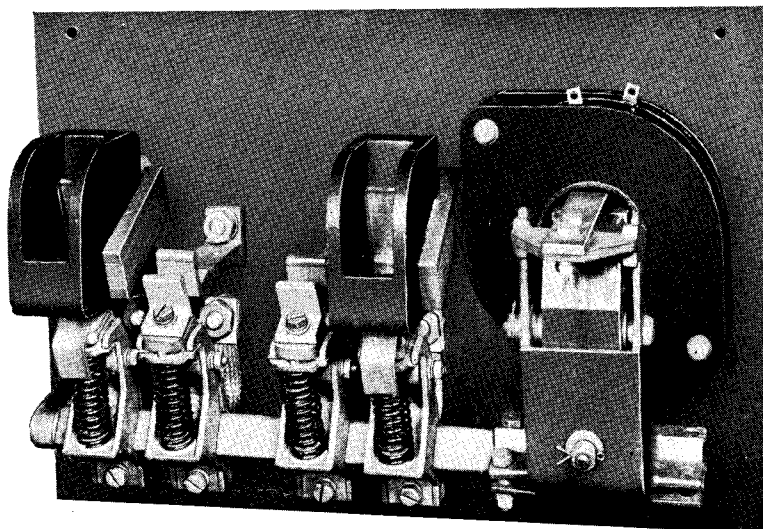

operating coils


voltage	style number of coil		
	25 cycle	50 cycle	60 cycle
110	822 158	822 157	822 153
220	822 159	822 158	822 154
440	822 161	822 159	822 155
550	822 162	822 160	822 156

ordering information

- Name the part and give its style number.
- Give the complete nameplate reading.
- State method of shipment desired.
- Send all orders or correspondence to nearest sales office of the company.
- Combine orders to total at least two dollars as this is minimum charge.

October, 1953

new information
mailed to: E41-6A, C, E; D61-6A, C, S; C-453

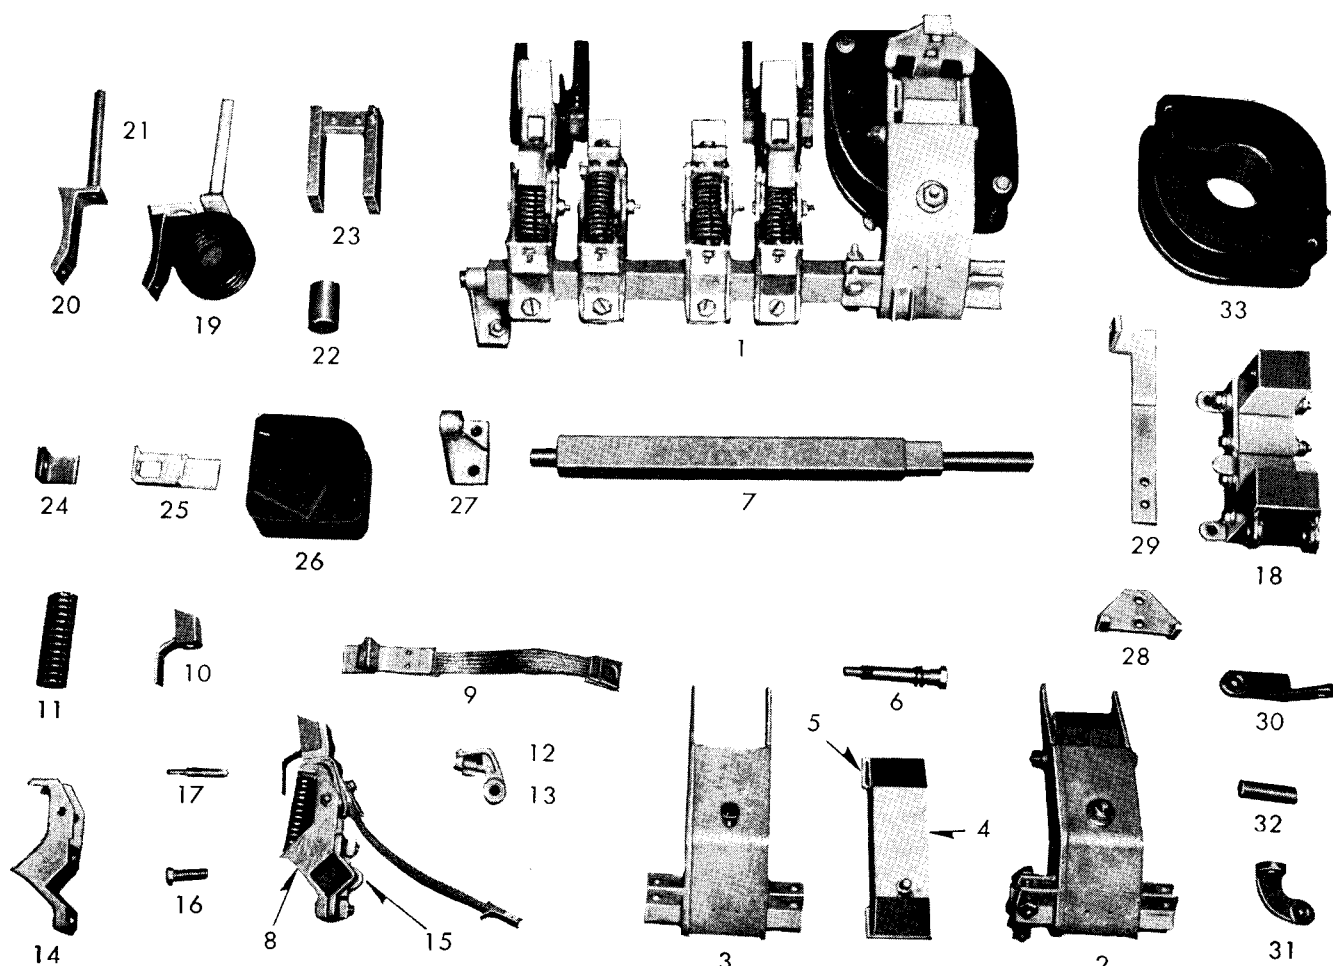

reference number	description of part	style number of part	number per unit
1	contactor—type 66FSH.....		1
2	moving magnet armature.....	809 488	1
3	bare armature.....	807 895	1
4	moving core.....	678 216	1
5	shading coil.....	807 893	2
6	hinge pin.....	807 894	1
7	insulation tube.....	808 118	1
8	armature shaft with insulation.....	807 889	1
9	moving contact element.....		1
10	moving contact with shunt.....	1399 206	4
11	arc horn.....	709 144	2
12	contact spring.....	1657 291	4
13	contact support for contacts with blowout.....	829 473	2
14	contact support for contacts without blowout.....	1620 083	2
15	support bracket.....	844 318	4
16	clamp for support bracket.....	844 319	4
17	clamp-screw.....	55 303	8
18	hinge pin for contact support.....	829 467	4
19	stationary magnet core.....	678 215	1
20	stationary contact support with blowout.....	1502 213	2
21	stationary contact support without blowout.....	1017 837	2
22	stud for stationary contact support.....	361 726	1
23	insulation tube.....	844 115	2
24	core for blowout coil.....	678 219	2
25	stationary contact.....	1310 486	4
26	stationary arc horn.....	709 145	2
27	arc shield.....	593 980	2
28	bearing bracket for shaft.....	808 117	1
29	armature stop.....	844 113	1
30	armature stop support.....	844 112	1
31	operating coil support—left hand.....	844 110	1
32	operating coil support—right hand.....	844 111	1
33	coil support (insulation tube).....	850 230	2
	operating coil.....		1

parts indented are included in the part under which they are indented

*not illustrated

*when ordering specify identification number on coil