

5 KW TURBINE GENERATOR UNIT

With this turbine, the following extra equipment is supplied.

- (a) One steam strainer
- (b) One lubricator

These parts should be installed in the steam inlet line, adjacent to the turbine, as shown in the accompanying illustration.

The steam strainer is of the cartridge type and should be installed so that the steam flows from the outside to the inside of the cartridge. The strainer proper can easily be removed for cleaning by removing the pipe plug in the body.

The lubricator is of the "Detroit" hydrostatic type and is connected to the steam line with only one connection. It should be kept filled with a good grade of engine cylinder oil.

