



## INSTRUCTIONS

GEI-39023B  
Supersedes GEI-39023A  
Insert Booklet GEH-1783

### RELAYS

#### PHASE SEQUENCE AND UNDERVOLTAGE RELAY

##### TYPE ICR53C AND ICR53D

### INTRODUCTION

These instructions are a supplement to instruction book GEH-1783 which is included in this book. The combination of the two form instructions for the Type ICR53C and ICR53D relays.

### DESCRIPTION

The Type ICR53C relay is similar to the Type ICR53A relay except that the Type ICR53C relay has a target seal-in unit for each contact circuit. The ICR53D is similar to the ICR53B relay, except the relay has an extra long time-delay calibration.

### INSTALLATION

### CONNECTIONS

The internal connection diagram is shown in Fig. 1 of this supplement.

### MOUNTING

The outline and panel drilling dimensions are shown in Fig. 14 of the included instructions.

*These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company.*

*To the extent required the products described herein meet applicable ANSI, IEEE and NEMA standards; but no such assurance is given with respect to local codes and ordinances because they vary greatly.*

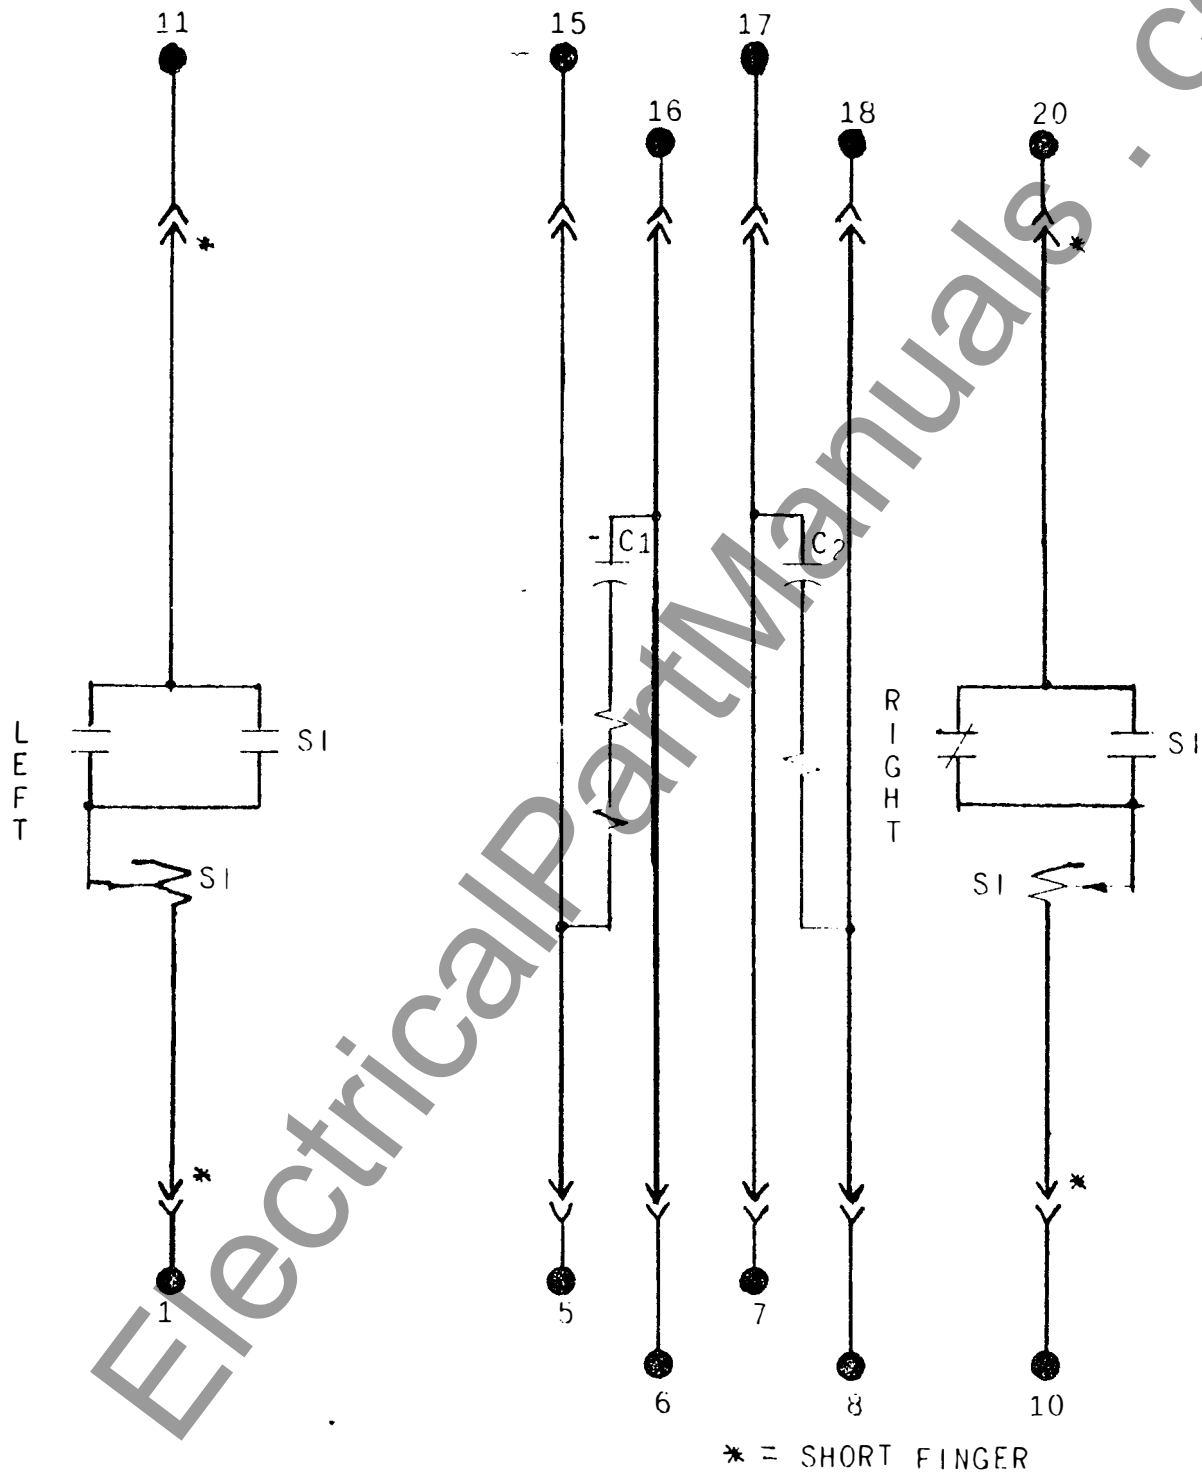


Fig. 1 (0377A0191-2) Internal Connections for Type ICR53C Relay