

INSTALLATION . OPERATION . MAINTENANCE

INSTRUCTIONS

TYPE COM OVERCURRENT RELAY

CAUTION Before putting relays into service, remove all blocking which may have been inserted for the purpose of securing the parts during shipment, make sure that all moving parts operate freely, inspect the contacts to see that they are clean and close properly, and operate the relay to check the settings and electrical connections.

APPLICATION

COM relays may be applied wherever two instantaneous overcurrent units are required in addition to the time overcurrent unit. For example Fig. 20 shows how the COM-5 (long time) relay is used for motor protection, with the CO-5 unit alarming just above motor full load and tripping at higher overloads through the low set instantaneous unit; the high set instantaneous unit is set above locked rotor current to provide high speed tripping of heavy faults. Fig. 21 shows how another variation of COM-5 provides improved fault protection for a motor by delaying ITH tripping by 5 to 6 cycles to override the asymmetrical current following fast transfer.

The relay with auxiliary time-delay unit is also available with the IT Unit (clapper type) rather than the ITH (plunger type). The highest range available in the ITH design is 16-32 amperes.

The COM without the auxiliary time-delay unit may also be utilized for distribution line protection, with the low set instantaneous locked-out by the reclosing relay, and with the high set unit left in service to provide high speed clearing of close-in faults. See Fig. 14 for the connections of this application.

CONTENTS

This instruction leaflet applies to the following types of relays:

Type COM- 2 Short Time Relay

COM- 5 Long Time Relay

COM- 6 Definite Minimum Time Relay
COM- 7 Moderately Inverse Time Relay

COM- 8 Inverse Time Relay

COM- 9 Very Inverse Time Relay

COM-11 Extremely Inverse Time Relay

Each of these is available with or without a 5-6 cycle (85 to 100 millisecond) time-delay unit.

CONSTRUCTION AND OPERATION

The type COM relays consist of a time-overcurrent unit (CO), two indicating contactor switches (ICS), a indicating instantaneous trip unit (IIT) and a high drop out instantaneous unit (ITH). The principal component parts of the relay are shown in Figures 1-6.

Electromagnet

The electromagnets for the types COM-5, COM-6, COM-7, COM-8 and COM-9 relays have a main tapped coil located on the center leg of an "E" type laminated structure that produces a flux which divides and returns through the outer legs. A shading coil causes the flux through the left leg to lag the main pole flux. The out-of-phase fluxes thus produced in the air gap cause a contact closing torque.

The electromagnets for the types COM-2 and COM-11 relays have a main coil consisting of a tapped primary winding and a secondary winding. Two identical coils on the outer legs of the lamination structure are connected to the main coil secondary in a manner so that the combination of all the fluxes produced by the electromagnet result in out-of-phase fluxes in the air gap. The out-of-phase air gap fluxes produced cause a contact closing torque.

All possible contingencies which may arise during installation, operation, or maintenance, and all details and variations of this equipment do not purport to be covered by these instructions. If further information is desired by purchaser regarding his particular installation, operation or maintenance of his equipment, the local Westinghouse Electric Corporation representative should be contacted.

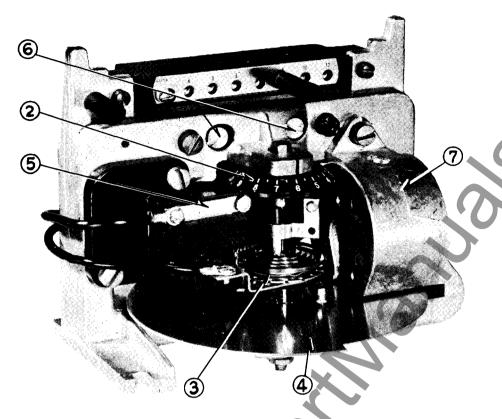


Fig. 1. Time Overcurrent Unit (Front View). 1-Tap Block. 2-Time Dial. 3-Control Spring Assembly. 4-Disc. 5-Stationary Contact Assembly. 6-Magnetic Plugs. 7-Permanent Magnet.

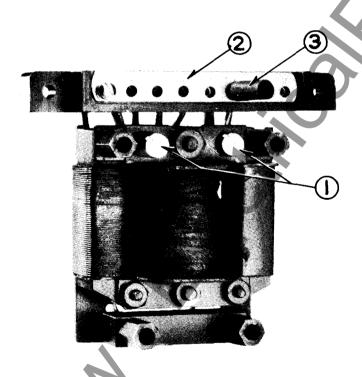


Fig. 2. ''E'' Type Electromagnet. 1-Magnetic Plugs. 2-Tap Block. 3-Tap Screw.



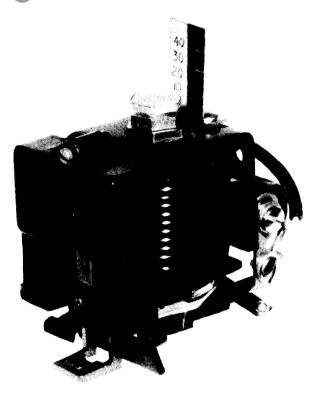


Fig. 3. Indicating Instantaneous Trip Unit (IIT).

Fig. 4. High Drop-Out Instantaneous Trip Unit (ITH).

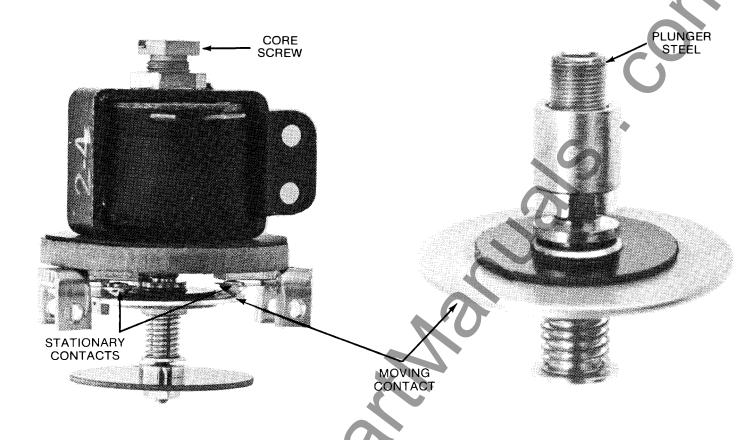

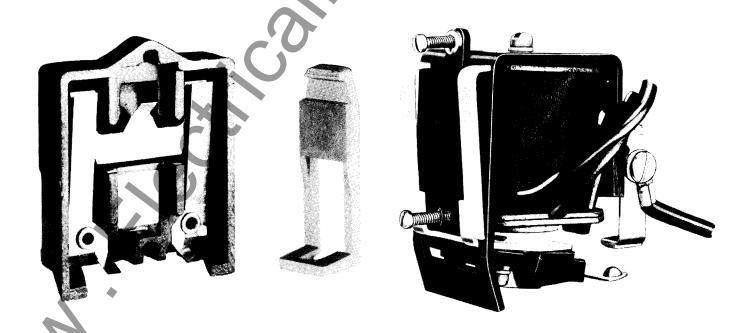

O Fig. 5. Plunger Assembly for ITH Unit.

Fig. 6. Indicating Contactor Switch (ICS).

Indicating Contactor Switch Unit (ICS)

The d-c indicating contactor switch is a small clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes the moving contacts bridge two stationary contacts, completing the trip circuit. Also during this operation two fingers on the armature deflect a spring located on the front of the switch, which allows the operation indicator target to drop.

The front spring, in addition to holding the target, provides restraint for the armature and thus controls the pickup value of the switch.

Indicating Instantaneous Trip Unit (IIT)

The instantaneous trip unit is a small a-c operated clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes, the moving contacts bridge two stationary contacts completing the trip circuit. Also, during the operation, two fingers on the armature deflect a spring located on the front of the switch which allows the operation indicator target to drop.

A core screw accessible from the top of the switch provides the adjustable pickup range. The minimum and maximum pick-up points are indicated on the scale which is located to the rear of the core screw.

High Drop-Out Instantaneous Trip Unit (LTH)

The high drop-out instantaneous trip unit is a small solenoid type device (Fig. 4). A plunger assembly (Fig. 5) rides up and down on a vertical guide rod in the center of the solenoid coil. The plunger assembly consists of a bushing which is threaded on the moving plunger and locked in place by a nut, and a silver disc which rests on a helical compression spring at the lower end of the plunger. The guide rod is fastened to the stationary core which in turn is held in place by the insulating plate on which the stationary contacts are mounted. The stationary core consists of two steel sections separated by a nonmagnetic ring. This non-magnetic ring provides an air gap in which the plunger steel floats. When the coil is energized, the plunger assembly moves upward • carrying the silver disc which bridges three spring type conical-shaped stationary contacts. In this position the helical spring is compressed and the plunger is free to move while the contact disc remains stationary. Thus, ac vibrations of the plunger assembly are prevented from causing contact chattering. A Micarta disc which acts as a shield for the contact plate, screws on the bottom of the guide rod and is locked in position by a small nut. The adjustable core screw in the top of the frame provides the principal means for adjusting the current operating values.

The ITH unit is a current operated device which will pick-up within the range stamped on the side of the frame and drop-out at 90% of the pick-up current value. The position of the core screw determines the pick-up value for a particular contact gap. The 90% drop-out ratio is accomplished through the right combination of plunger steel setting, electrical pull and spring strength. The most important factor in the adjustment of the unit is the correct positioning of the plunger steel with respect to the stationary core air gap.

Auxiliary Time-Delay Unit (T) - Where Used

This slugged telephone type unit, in conjunction with a tapped resistor, provides a 5-6 cycle delay on pickup. The resistor in the rear of the relay is tapped for use with 24, 48, 125 or 250 volt d-c supply, as shown in the internal schematics of Figs. 17 and 18.

CHARACTERISTICS

The relays are generally available in the following current ranges:

Ro	inge				Тар	s		
0.5 -	2.5	0.5	0.6	0.8	1.0	1.5	2.0	2.5
2 -	6	2	2.5	3	3.5	4	5	6
4 -	12	4	5	6	7	8	10	12

The time vs. current characteristics are shown in Figs. 7 to 13. These characteristics give the contact closing time for the various time dial settings when the indicated multiples of tap value current are applied to the relay.

IIT Unit

Current ranges available for this unit are: 2-8, 4-16, 10-40, 20-80, and 40-160.

ITH Unit

The unit has a 2 to 1 range of pick-up adjustment with a 90% or greater drop-out ratio. Current ranges available are 2-4, 4-8, 16-32. The only adjustment necessary when making settings within the nominal range is the positioning of the core screw. At the

TYPE COM-2 RELAY

					VOLT AMPERES**					
AMPERE RANGE	TAP	CONTINUOUS RATING (AMPERES)	ONE SECOND RATING* (AMPERES)	POWER FACTOR ANGLE ϕ	AT TAP VALUE CURRENT	AT 3 TIMES TAP VALUE CURRENT	AT 10 TIMES TAP VALUE CURRENT	AT 20 TIMES TAP VALUE CURRENT		
	0.5	0.91	28	58	4.8	39.6	256	790		
	0.6	0.96	28	5 7	4.9	39.8	270	851		
	0.8	1.18	28	53	5.0	42.7	308	1024		
0.5/2.5	1.0	1.37	28	50	5.3	45.4	348	1220		
	1.5	1.95	28	40	6.2	54.4	435	1740		
	2.0	2.24	28	36	7.2	65.4	580	2280		
	2.5	2.50	28	29	7.9	73.6	700	2850		
	2.0	3.1	110	59	5.04	38.7	262	800		
	2.5	4.0	110	55	5.13	39.8	280	920		
	3.0	4.4	110	51	5.37	42.8	312	1008		
2/6	3.5	4.8	110	47	5.53	42.8	329	1120		
	4.0	5.2	110	45	5.72	46.0	360	1216		
	5.0	5.6	110	41	5.90	50.3	420	1500		
	6.0	6.0	110	37	6.54	54.9	474	1800		
	4.0	7.3	230	65	4.92	39.1	268	848		
	5.0	8.0	230	50	5.20	42.0	305	1020		
	6.0	8.8	230	47	5.34	44.1	330	1128		
4/12	7.0	9.6	230	46	5.35	45.8	364	1260		
	8.0	10.4	230	43	5.86	49.9	400	1408		
	10.0	11.2	230	37	6.6	55.5	470	1720		
	12.0	12.0	230	34	7.00	62.3	528	2064		

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

φ Degrees current lags voltage at tap value current.

^{**} Voltages taken with Rectox type voltmeter.

COM-5 LONG TIME AND COM-6 DEFINITE MINIMUM TIME RELAYS

					VOLT AMPERES**				
AMPERE RANGE	TAP	CONTINUOUS RATING (AMPERES)	ONE SECOND RATING* (AMPERES)	POWER FACTOR ANGLE #	AT TAP VALUE CURRENT	AT 3 TIMES TAP VALUE CURRENT	AT 10 TIMES TAP VALUE CURRENT	AT 20 TIMES TAP VALUE CURRENT	
	(0.5	2	56	69	3.92	20.6	103	270	
	(0.6	2.2	56	68	3.96	20.7	106	288	
	8.0)	2.5	56	67	3.96	21	114	325	
0.5/2.5	(1.0	2.8	56	66	4.07	21.4	122	360	
	(1.5	3.4	56	62	4.19	23.2	147	462	
	(2.0	4.0	56	60	4.30	24.9	168	548	
	(2.5	4.4	56	58	4.37	26.2	180	630	
	(2	8	230	67	3.88	21	110	308	
	(2.5	8.8	230	66	3.87	21.6	118	342	
	(3	9.7	230	64	3.93	22.1	126	381	
2/6	(3.5	10.4	230	63	4.09	23.1	136	417	
	(4	11.2	230	62	4.08	23.5	144	448	
	(5	12.5	230	59	4.20	24.8	162	540	
	(6	13.7	230	57	4.38	26.5	183	624	
	(4	16	460	65	4.00	22.4	126	376	
	(5	18.8	460	63	4.15	23.7	143	450	
	(6	19.3	460	61	4.32	25.3	162	531	
4/12	(7	20.8	460	59	4.27	26.4	183	611	
	(8	22.5	460	56	4.40	27.8	204	699	
	(10	25	460	53	4.60	30.1	247	880	
	(12	28	460	47	4.92	35.6	288	1056	

COM-7 MODERATELY INVERSE TIME RELAY

						VOLT A	AMPERES**	
		CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAPVALUE	TAP VALUE	TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
				VAL				
	(0.5	2	56	68	3.88	20.7	103	278
	(0.6	2.2	56	67	3.93	20.9	107	288
	(0.8	2.5	56	66	3.93	21.1	114	320
0.5/2.5	(1.0	2.8	56	64	4.00	21.6	122	356
	(1.5	3.4	56	61	4.08	22.9	148	459
	(2.0	4.0	56	58	4.24	24.8	174	552
	(2.5	4.4	56	56	4.38	25.9	185	640
	(2	8	230	66	4.06	21.3	111	306
	(2.5	8.8	230	63	4.07	21.8	120	342
	(3	9.7	230	63	4.14	22.5	129	366
2/6	(3.5	10.4	230	62	4.34	23.4	141	413
	(4	11.2	230	61	4.34	23.8	149	448
	(5	12.5	230	59	4.40	25.2	163	530
	(6	13.7	230	58	4.62	27	183	624
	(4	16	460	64	4.24	22.8	129	392
	(5	18.8	4 60	61	4.30	24.2	149	460
4/12	(6	19.3	460	60	4.62	25.9	168	540
	(7	20.8	460	58	4.69	27.3	187	626
	(8	22.5	460	55	4.80	29.8	211	688
	(10	25	460	51	5.20	33	260	860
	(12	28	460	46	5.40	37.5	308	1032

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

φ Degrees current lags voltage at tap value current.

^{••} Voltages taken with Rectox type voltmeter.

COM-8 INVERSE TIME AND COM-9 VERY INVERSE TIME RELAYS

						VOLT A	MPERES**	
		CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ⊄	CURRENT	CURRENT	CURRENT	CURRENT
	(0.5	2	56	72	2.38	21	132	350
	(0.6	2.2	56	71	2.38	21	134	365
	8.0)	2.5	56	69	2.40	21.1	142	400
0.5/2.5	(1.0	2.8	56	67	2.42	21.2	150	440
	(1.5	3.4	56	62	2.51	22	170	530
	(2.0	4.0	56	57	2.65	23.5	200	675
	(2.5	4.4	56	53	2.74	24.8	228	800
						A 70		
	(2	8	230	70	2.38	21	136	360
	(2.5	8.8	230	66	2.40	21.1	142	395
	(3	9.7	230	64	2.42	21.5	149	430
2/6	(3.5	10.4	230	62	2.48	22	157	470
	(4	11.2	230	60	2.53	22.7	164	500
	(5	12.5	230	58	2.64	24	180	580
	(6	13.7	230	56	2.75	25.2	198	660
	(4	16	460	68	2.38	21,3	146	420
	(5	18.8	460	63	2.46	21.8	158	480
	(6	19.3	460	60	2.54	22.6	172	550
4/12	(7	20.8	460	57	2.62	23.6	190	620
	(8)	22.5	460	54	2.73	24.8	207	700
	(10	25	460	48	3.00	27.8	248	850
	(12	28	460	45	3.46	31.4	292	1020
					7			

TYPE COM-11 RELAY

						AMPERES**	ERES**		
		CONTINUOUS	ONE SECOND	POWER	АТ	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES	
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE	
RANGE	TAP	(AMPERES)	(AMPERES)	$ANGLE\phi$	CURRENT	CURRENT	CURRENT	CURRENT	
			. ()						
	0.5	1.7	-56	36	0.72	6.54	71.8	25 0	
	0.6	1.9	56	34	0.75	6.80	75.0	267	
	0.8	2.2	56	30	0.81	7.46	84.0	298	
0.5/2.5	1.0	3.5	56	27	0.89	8.30	93.1	330	
	1.5	3.0	56	22	1.13	10.04	115.5	411	
	2.0	3.5	56	17	1.30	11.95	136.3	502	
	2.5	3.8	56	16	1.48	13.95	160.0	610	
	2.0	7.0	230	32	0.73	6.30	74.0	264	
	2.5	7.8	230	30	0.78	7.00	78.5	285	
	3.0	8.3	230	27	0.83	7.74	84.0	309	
2/6	3.5	9.0	230	24	0.88	8.20	89.0	340	
	4.0	10.0	230	23	0.96	9.12	102.0	372	
	5.0	11.0	230	20	1.07	9.80	109.0	430	
	6.0	12.0	230	20	1.23	11.34	129.0	504	
	4.0	14	460	29	0.79	7.08	78.4	296	
	5.0	16	460	25	0.89	8.00	90.0	340	
*	6.0	17	460	22	1.02	9.18	101.4	378	
4/12	7.0	18	460	20	1.10	10.00	110.0	454	
•	8.0	20	460	18	1.23	11.1	124.8	480	
	10.0	22	460	17	1.32	14.9	131.6	600	
	12.0	26	460	16	1.8	16.3	180.0	720	

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

Degrees current lags voltage at tap value current.

^{**} Voltages taken with Rector type voltmeter.

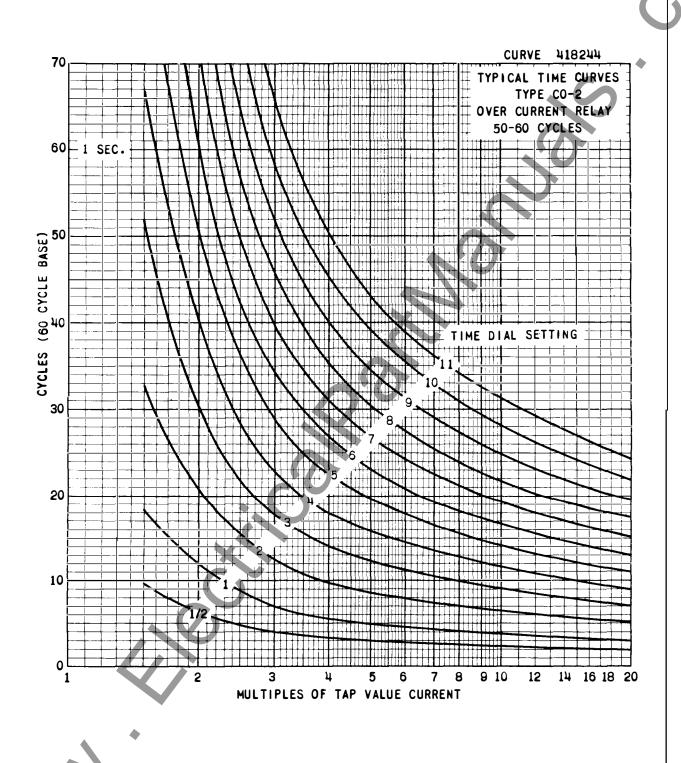


Fig. 7. Typical Time Curves of the Type COM-2 Relay.

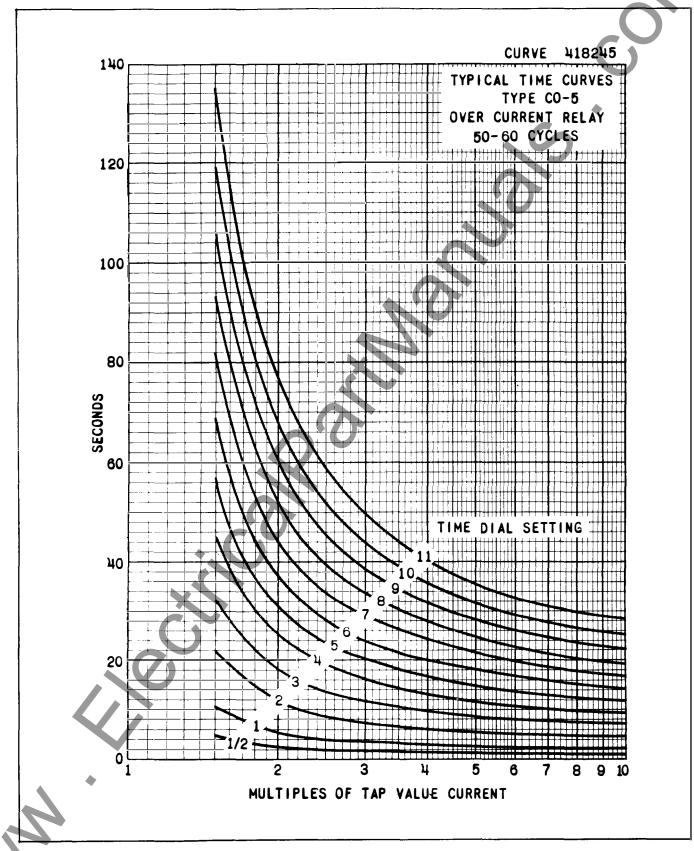


Fig. 8. Typical Time Curves of the Type COM-5 Relay.

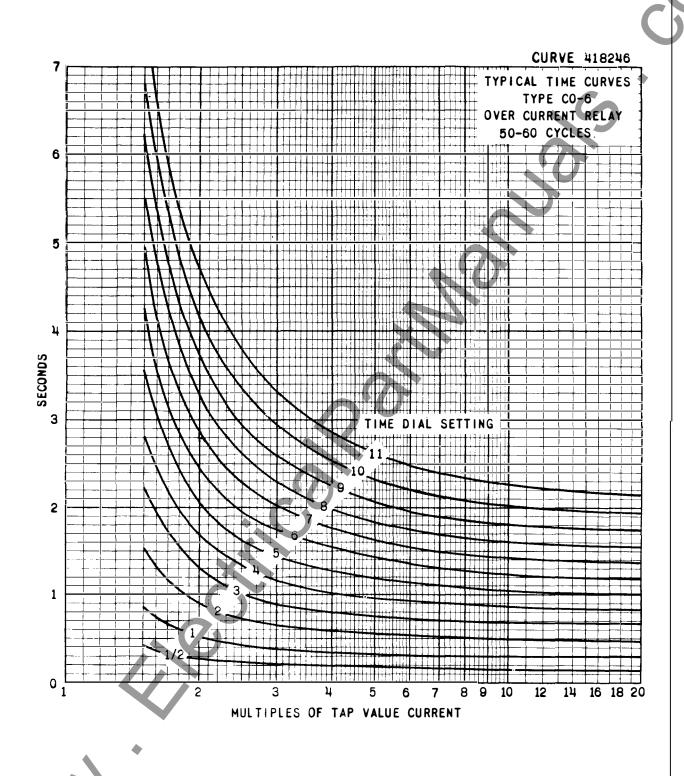


Fig. 9. Typical Time Curves of the Type COM-6 Relay.

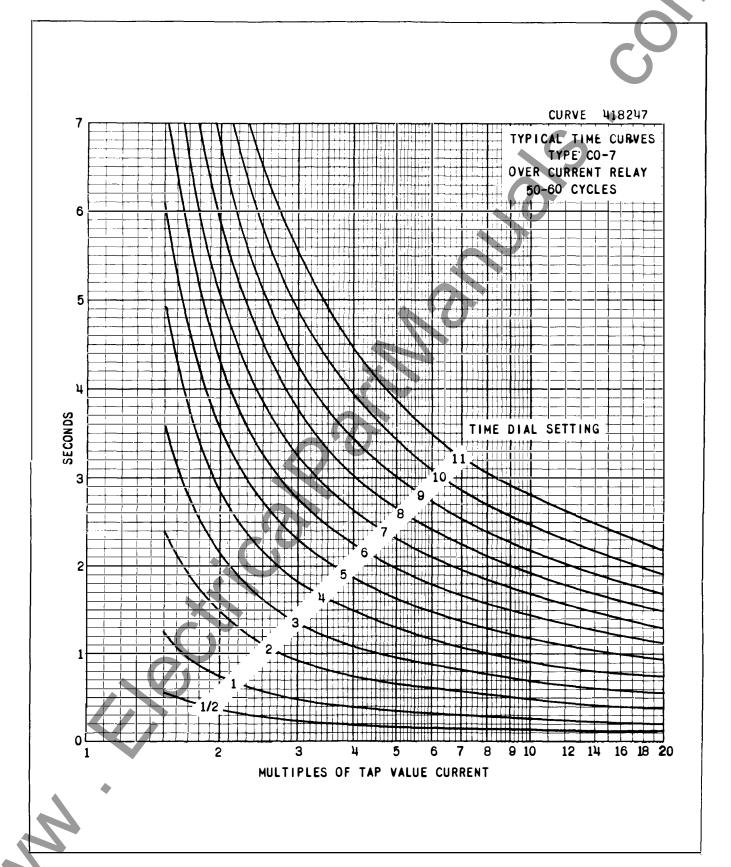


Fig. 10. Typical Time Curves of the Type COM-7 Relay.

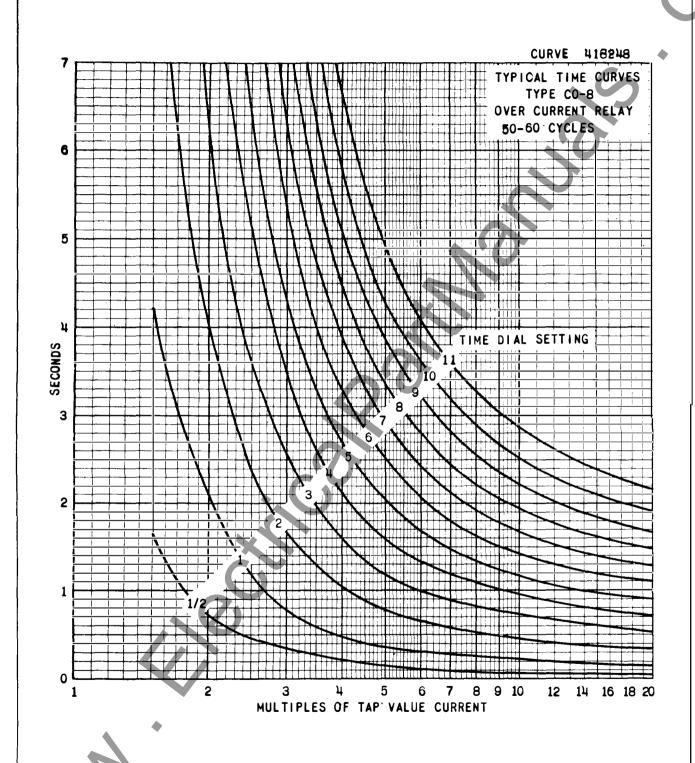


Fig. 11. Typical Time Curves of the Type COM-8 Relay.

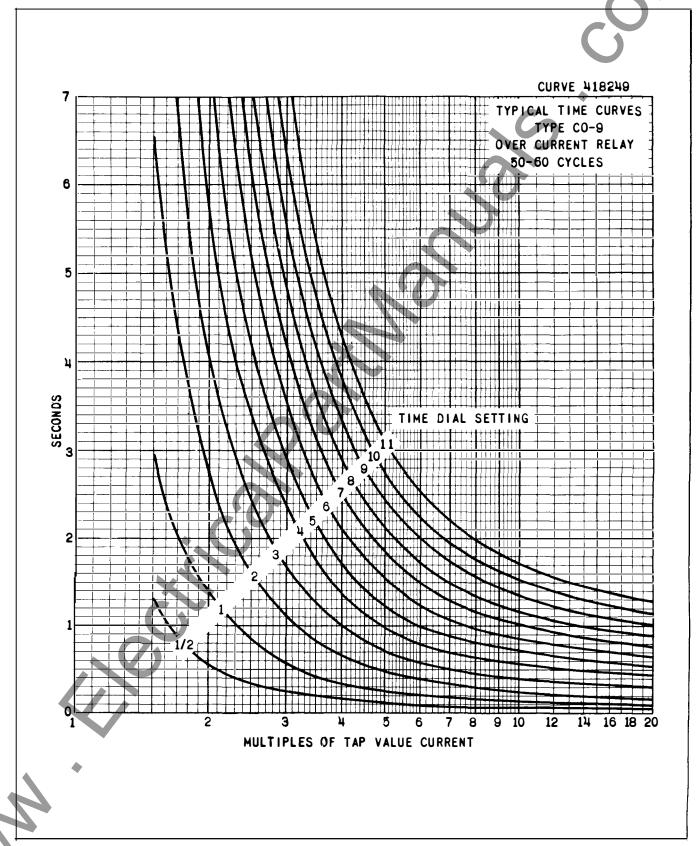


Fig. 12. Typical Time Curves of the Type COM-9 Relay.

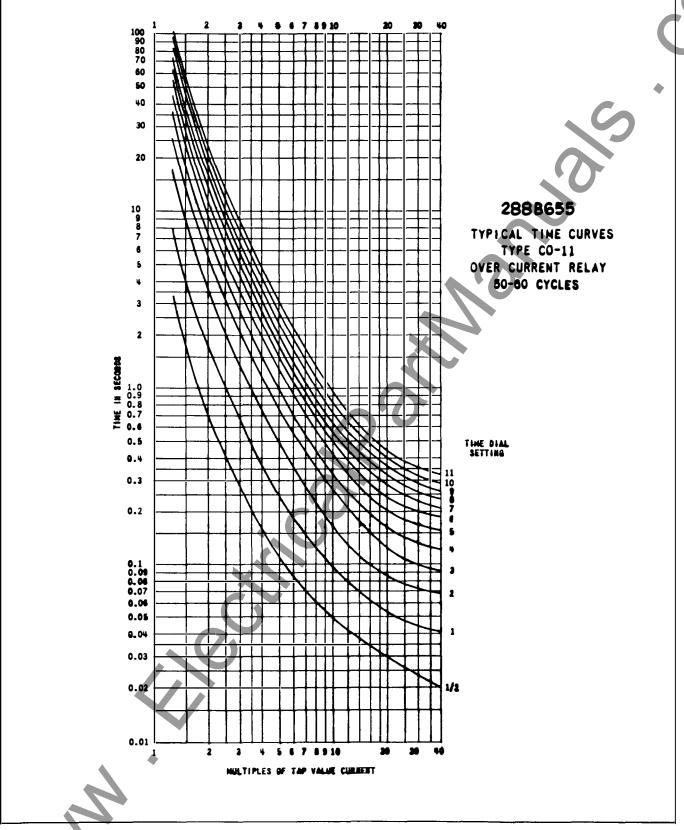


Fig. 13. Typical Time Curves of the Type COM-11 Relay.

maximum end of the range the drop-out ratio will be greater than 90% and it may be desirable to lower the contact shield to increase the contact gap and follow. The range may be increased by lowering the plunger after the core screw has been set at its maximum rated position. If the plunger is lowered to increase the pick-up current value, then at 300% of minimum trip the drop-out ratio is 60% of the pick-up current. At 400% of minimum trip the drop-out ratio is 45% of the pick-up current.

The burden of this unit at minimum pick-up is 0.44 V.A. at 60 cycles.

Continuous current rating of the coil is 2 times minimum pickup value.

One second rating is approximately 30 times minimum pick-up.

Characteristic operating times for the unit over its nominal range are:

Less than 1 cycle at 200% of trip value 1/2 cycle at 500% of trip value 1/4 cycle at 1000% of trip value

Trip Circuit

The main contacts will safely close 30 amperes at 250 volts d-c and the seal-in contacts of the indicating contactor switch will safely carry this current long enough to trip a circuit breaker.

The IIT and ITH contacts will safely close 30 amperes at 250 volts d-c, and will carry this current long enough to trip a breaker.

The indicating contactor switch has two taps provide a pickup setting of 0.2 or 2 amperes. To change taps requires connecting the lead located in front of the tap block to the desired setting by means of a screw connection.

Trip Circuit Constants

Contactor Switch -

 $0.2 \ \text{ampere tap} - 6.5 \ \text{ohms d-c resistance}$

2.0 ampere tap - 0.15 ohms d-c resistance

SETTINGS

CO Unit

The overcurrent unit settings can be defined either by tap setting and time dial position or by tap

setting and a specific time of operation at some current multiple of the tap setting (e.g. 4 tap setting, 2 time dial position or 4 tap setting, 0.6 seconds at 6 times tap value current).

To provide selective circuit breaker operation, a minimum coordinating time of 0.3 seconds plus circuit breaker time is recommended between the relay being set and the relays with which coordination is to be effected.

The connector screw on the terminal plate above the time dial makes connections to various turns on the operating coil. By placing this screw in the various terminal plate holes, the relay will respond to multiples of tap value currents in accordance with the various typical time-current curves.

Caution

Since the tap block connector screw carries operating current, be sure that the screw is turned tight. In order to avoid opening the current transformer curcuits when changing taps under load, connect the spare connector screw in the desired tap position before removing the other tap screw from the original tap position.

Instantaneous Reclosing


The factory adjustment of the CO unit contact provides a contact follow. Where instantaneous circuit breaker reclosing will be initiated upon the closure of the CO contact, this contact follow must be eliminated by loosening the stationary contact mounting screw, removing the contact plate and then replacing the plate with the bent end resting against the contact spring. With this change and the contact mounting screw tightened, the stationary contact will rest solidly against its backstop.

Indicating Contactor Switch (ICS)

No setting is required on the ICS unit except the selection of the 0.2 or 2.0 ampere tap setting. This selection is made by connecting the lead located in front of the tap block to the desired setting by means of the connecting screw. When the relay energizes a 125 or 250 volt d-c type WL relay switch, or equivalent, use the 0.2 ampere tap; for 48 volt d-c applications set in 2 tap and use Type WL relay coil S#304C209G01 or equivalent.

Indicating Instantaneous Trip (IIT)

The core screw must be adjusted to the value of

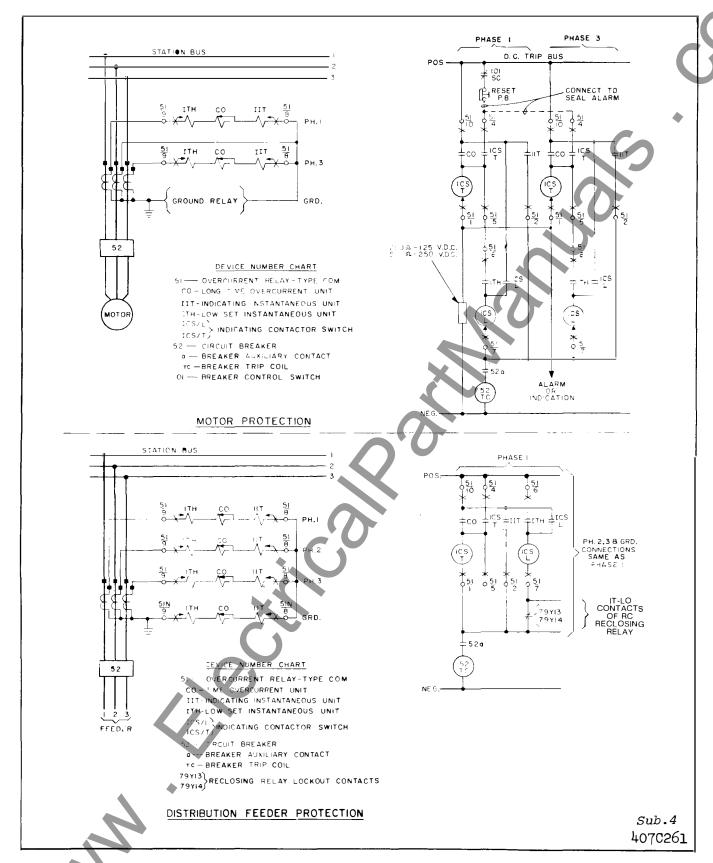

⊙ Fig. 14. External Schematic of COM Relays without Auxiliary Time-Delay Unit.

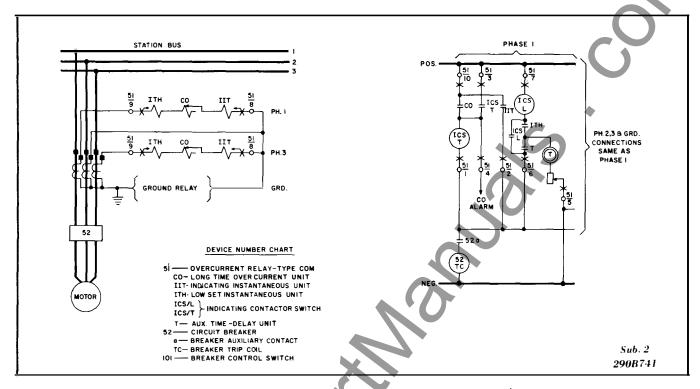


Fig. 15. External Schematic of COM Relays with Auxiliary Time-Delay Unit and ITH Unit.

pick-up current desired.

The nameplate data will furnish the actual current range that may be obtained from the IIT unit.

ITH Unit

The unit, prior to shipment is adjusted for minimum pick-up value, that is, the lower value marked on the side of the frame. The following procedure is used when changing this setting over the indicated range where a 90% or higher drop-out ratio is desired. Connect the coil of the unit in series with an ammeter and adjustable load. Apply the desired pick-up current, then adjust the core screw until the plunger just picks up. Lock core screw securely in place.

If it is desired to set the unit for either a different drop-out ratio over the nominal range or for pickup values above the nominal range, then the following procedure should be followed.

With the unit in series with an ammeter and adjustable load, apply the desired drop-out current. Adjust the core screw until the plunger assembly just drops out. Then apply the desired pick-up current and adjust the Micarta contact shield till the plunger assembly just picks up. It is recommended that the contact gap should not be made less than 0.13 of an

inch. The contact gap may be determined by turning up the contact shield from the setting position until the contacts just close. One turn of the shield is equal to .018 of an inch contact gap.

Tapped Resistor (When Used)

The relay is shipped with the resistor tapped for 125 volt d-c service. See Fig. 17 or 18 for the proper positions for other d-c ratings. When viewed from the rear of the relay the red dot on terminal 1 of the resistor is on the extreme left.

INSTALLATION

The relays should be mounted on switchboard panels or their equivalent in a location free from dirt, moisture, excessive vibration and heat. Mount the relay vertically by means of the rear mounting stud or studs for the type FT projection case or by means of the four mounting holes on the flange for the semi-flush type FT case. Either the stud or the mounting screws may be utilized for grounding the relay. External toothed washers are provided for use in the locations shown on the outline and drilling plan to facilitate making a good electrical connection between the relay case, its mounting screws or studs, and the relay panel. Ground Wires are affixed to the mounting screws or studs as required for poorly grounded or insulating panels. Other electrical connections may be made directly to the terminals by

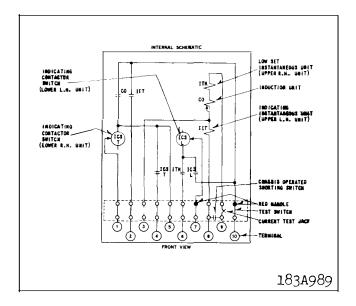


Fig. 16. Internal Schematic of the Type COM Relay, <u>without</u>
Auxiliary Time-Delay Unit, in FT21 Case. (For S#289B355A — Series of COM-5 Relays).

means of screws for steel panel mounting or to the terminal stud furnished with the relay for thick panel mounting. The terminal stud may be easily removed or inserted by locking two nuts on the stud and then turning the proper nut with a wrench.

For detail information on the FT case refer to I.L. 41-076.

ADJUSTMENTS AND MAINTENANCE

The proper adjustments to insure correct operation of this relay have been made at the factory. Upon receipt of the relay no customer adjustments, other than those covered under "SETTINGS" should be required.

The indicating Instantaneous Trip unit (IIT) used in some relays requires a much higher current for tripping than is required by the other units. For this reason, the junction of the CO unit coil and the IIT unit coil is brought out to switch jaw no. 3 (whenever it is available) to permit the testing of these units separately.

CAUTION: When applying current in excess of 50 amperes to test the IIT, the current should not be left on while adjusting it to the trip level. Instead, apply the current in short burst, not more than 2 seconds long, to check for tripping. Make adjustments in the current control while the current is off.

High currents left on for excessive time periods can

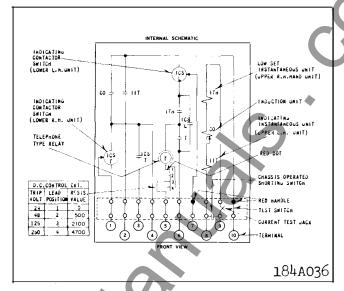


Fig. 17. Internal Schematic of the Type COM Relay with Auxiliary Time-Delay Unit and ITH Unit, in FT21 Case (For S#289B456A – Series of COM-5 Relays).

result in the softening and possible melting of insulation on the interconnecting wires.

Acceptance Check

The following check is recommended to insure that the relay is in proper working order:

1. Contact

- a) By turning the time dial, move the moving contacts until they deflect the stationary contact to a position where the stationary contact is resting against its backstop. The index mark located on the movement frame should coincide with the "O" mark on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".
- b) For relays indentified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020". The placement of the various time dial positions in line with the index mark will give operating times as shown on the respective time-current curves. For double trip relays, the follow on the stationary contacts should be approximately 1/32".

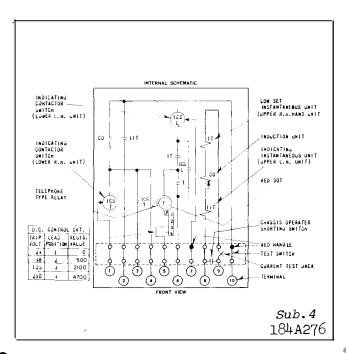


Fig. 18. Internal Schematic of the Type COM Relay, with
Auxiliary Time-Delay Unit and IT Unit, in FT21
Case. (For S#289B511A — Series of COM-5 Relays).

- 2. Minimum Trip Current Set the time dial to position 6. Using lowest tap setting, alternately apply tap value current plus 3% and tap value current minus 3%. The moving contact should leave the backstop at tap value current plus 3% and should return to the backstop at tap value current minus 3%.
- 3. <u>Time Curve</u> Table I shows the time curve calibration points for the various types of relays. With the time dial set to the indicated position and on the lowest top setting, apply the currents specified by Table I, (e.g. for the COM-2, 3 and 20 times tap value current) and measure the operating time of the relay. The operating times should equal those of Table I plus or minus 5 percent.

For type COM-11 relay only, the 1.30 times tap value operating time from the number 6 time dial position is 54.9 ± 5% seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the nominal operating time by approximately 4%.

4. Indicating Instantaneous Trip Unit (IIT) — The core screw which is adjustable from the top of the trip unit determines the pickup value. The trip unit has a nominal ratio of adjustment of 1 to 4 and

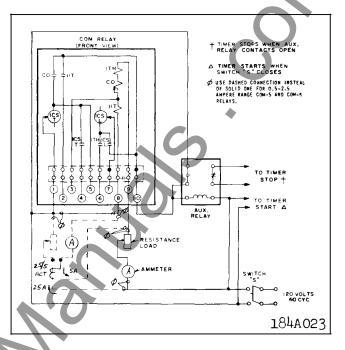


Fig. 19. Diagram of Test Connections for CO Unit of COM Relays.

an accuracy within the limits of 10%.

The making of the contacts and target indication should occur at approximately the same instant. Position the stationary contact for a minimum of 1/32" wipe. The bridging moving contact should touch both stationary contacts simultaneously.

Apply sufficient current to operate the IIT. The operation indicator target should drop freely.

5. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operation indicator target should drop freely.

The contact gap should be approximately .047" between the bridging moving contact and the adjustable stationary contacts. The bridging moving contact should touch both stationary contacts simultaneously.

6. High Drop-out Instantaneous Unit (ITH) —

The plunger assembly should pickup and seal within ±5% and dropout at 90% or higher of the minimum pickup current value stamped on the frame. The unit should maintain at least a 90% drop out ratio over the nominal range.

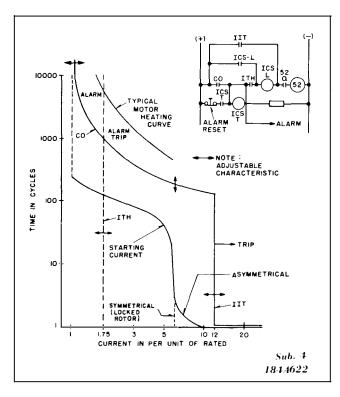


Fig. 20. Setting Example for Motor Protection Using S#289B355A — Relays <u>without</u> Auxiliary Time-Delay Unit.

The contact gap should not be less than .013 of an inch. Contact gap is determined as described under settings.

7. Auxiliary Time-Delay Unit (T) — For relays wired per Fig. 17 or 18, apply 100 volts d-c to terminals 5 and 7. Manually close the contacts of the ITH or IT unit in the top right-hand corner of the relay. The T unit should operate.

Routine Maintenance

All relays should be inspected and checked periodically to assure proper operation. Generally a visual inspection should call attention to any noticeable changes. A minimum suggested check on the relay system is to close the contacts manually to assure that the breaker trips and the target drops. Then release the contacts and observe that the reset is smooth and positive.

If an additional time check is desired, pass secondary current through the relay and check the time of operation. It is preferable to make this at several times pick-up current at an expected operating point for the particular application. For the 0.5 ampere

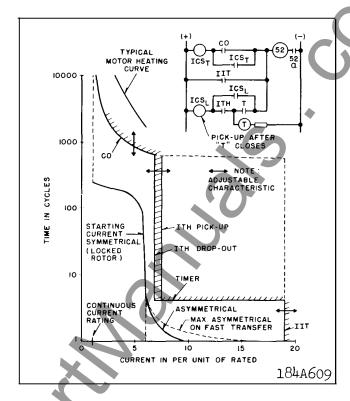


Fig. 21. Setting Example for Motor Protection Using S#289B456A — or S#289B511A — Relays with Auxiliary Time-Delay Unit.

range COM-5 and COM-6 induction units use the dashed test circuit in Fig. 19 as these relays are affected by a distorted wave form. With this connection the 25/5 ampere current transformers should be worked well below the knee of the excitation curve. (i.e. Use a 10L50 or better)

All contacts should be periodically cleaned. A contact burnisher #182A836H01 is recommended for this purpose. The use of abrasive material for cleaning contacts is not recommended, because of the danger of embedding small particles in the face of the soft silver and thus impairing the contact.

CALIBRATION

Use the following procedure for calibrating the relay if the relay has been taken apart for repairs or the adjustments disturbed. This procedure should not be used until it is apparent that the relay is not in proper working order. (See "Acceptance Check")

CO Unit

- 1. Contact
- a) By turning the time dial, move the moving

contacts until they deflect the stationary contact to a position where the stationary contact is resting against its backstop. The index mark located on the movement frame should coincide with the "O" mark on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".

- b) For relays identified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020".
- 2. <u>Minimum Trip Current</u> The adjustment of the spring tension in setting the minimum trip current value of the relay is most conveniently made with the damping magnet removed.

With the time dial set on "O", wind up the spiral spring by means of the spring adjuster until approximately 6-3/4 convolutions show.

Set the relay on the lowest tap setting, the time dial to position 6.

Adjust the control spring tension so that the moving contact will leave the backstop at tap value current +1.0% and will return to the backstop at tap value current -1.0%.

3. <u>Time Curve Calibration</u> - Install the permanent magnet.

Apply the indicated current per Table I for permanent magnet adjustment (e.g. COM-8, 2 times tap value) and measure the operating time. Adjust the permanent magnet keeper until the operating time corresponds to the value of Table I.

For Type COM-11 Relay only, the 1.3 times tap value operating time from the number 6 time dial position is $54.9 \pm 5\%$ seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the

nominal operating time by approximately 4%. If the operating time at 1.3 times tap value is not within these limits, a minor adjustment of the control spring will give the correct operating time without any undue effect on the minimum pick-up of the relay. This check is to be made after the 2 times tap value adjustment has been completed.

Apply the indicated current per Table I for the electromagnet plug adjustment (e.g. COM-8, 20 times tap value) and measure the operating time. Adjust the proper plug until the operating time corresponds to the value in Table I. (Withdrawing the left hand plug, front view, increases the operating time and withdrawing the right hand plug, front view, decreases the time.) In adjusting the plugs, one plug should be screwed in completely and the other plug run in or out until the proper operating time has been obtained.

Recheck the permanent magnet adjustment. If the operating time for this calibration point has changed, readjust the permanent magnet and then recheck the electromagnet plug adjustment.

4. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operating indicator target should drop freely.

5. Indicating Instantaneous Trip Unit (IIT)

The core screw must be adjusted to the value of pick-up current desired.

The nameplate date will furnish the actual current range that may be obtained from the IIT unit.

6. High Drop-out Instantaneous Unit (ITH) — The factory adjustment of the position of the plunger steel provides a drop-out ratio of 90% over the nominal range. But, in the event a considerable amount of material is removed from the contacts, due to repeated operations, burnishing, etc., the drop-out ratio may fall below 90%. If this occurs, then the plunger steel should be turned down to compensate. If the plunger steel setting is changed for the above or any other reasons, the following procedure should be used to recalibrate the relay.

Set the corescrew at ten turns up from its bottom position. Adjust the plunger steel position on the plunger until the current value at which the plunger drops-out is 90% of the maximum rated current. Then set the contact gap at 3/4 of a turn down, and adjust the core screw for pick-up. Drop-out value will normally be above 90% of this setting. If desired, the contact gap and follow may be increased by lowering the contact shield and readjusting the core screw for pick-up.

RENEWAL PARTS

Repair work can be done most satisfactorily at the factory. However, interchangeable parts can be furnished to the customers who are equipped for doing repair work. When ordering parts, always give, the complete nameplate data.

TABLE 1

TIME CURVE CALIBRATION DATA - 50 & 60 CYCLES

	PERMANENT	MAGNET ADJUSTN	MENT	ELECTROMAGNET PLUGS			
RELAY TYPE	TIME DIAL POSITION	CURRENT (MULTIPLES OF TAP VALUE)	OPERATING TIME SECONDS	CURRENT (MULTIPLES OF TAP VALUE)	OPERATING TIME SECONDS		
COM-2	6	3	0.57	20	0.22		
COM-5	6	2	37.80	10	14.30		
COM6	6	2	2.46	20	1.19		
COM-7	6	2	4.27	20	1.11		
COM-8	6	2	13.35	20	1.11		
COM-9	6	2	8.87	20	0.65		
COM-11	6	2	11.27	20	0.24 \triangle		

 \triangle For 50 cycle CO-11 relay 20 times operating time limits are 0.24 + 10%, -5%.

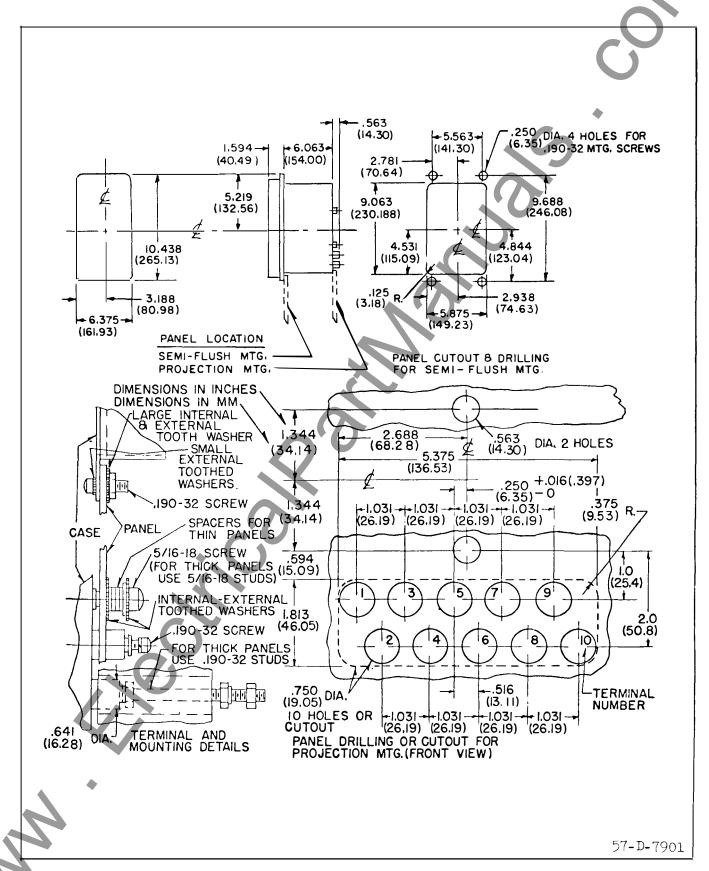


Fig. 22. Outline & Drilling Plan for the Type COM Relay in the FT21 Case.



WESTINGHOUSE ELECTRIC CORPORATION RELAY-INSTRUMENT DIVISION CORAL SPRINGS, FL.

Printed in U.S.A.



INSTALLATION . OPERATION . MAINTENANCE

INSTRUCTIONS

TYPE COM OVERCURRENT RELAY

CAUTION Before putting relays into service, remove all blocking which may have been inserted for the purpose of securing the parts during shipment, make sure that all moving parts operate freely, inspect the contacts to see that they are clean and close properly, and operate the relay to check the settings and electrical connections.

APPLICATION

COM relays may be applied wherever two instantaneous overcurrent units are required in addition to the time overcurrent unit. For example Fig. 20 shows how the COM-5 (long time) relay is used for motor protection, with the CO-5 unit alarming just above motor full load and tripping at higher overloads through the low set instantaneous unit; the high set instantaneous unit is set above locked rotor current to provide high speed tripping of heavy faults. Fig. 21 shows how another variation of COM-5 provides improved fault protection for a motor by delaying ITH tripping by 5 to 6 cycles to override the assymetrical starting current.

The relay with auxiliary time-delay unit is also available with the IT Unit (clapper type) rather than the ITH (plunger type). The highest range available in the ITH design is 16-32 amperes.

The COM without the auxiliary time-delay unit may also be utilized for distribution line protection, with the low set instantaneous locked-out by the reclosing relay, and with the high set unit left in service to provide high speed clearing of close-in faults. See Fig. 14 for the connections of this application.

CONTENTS

This instruction leaflet applies to the following types of relaxs:

Type COM- 2 Short Time Relay

COM- 5 Long Time Relay

COM- 6 Definite Minimum Time Relay

COM- 7 Moderately Inverse Time Relay

COM- 8 Inverse Time Relay

COM- 9 Very Inverse Time Relay

COM-11 Extremely Inverse Time Relay

Each of these is available with or without a 5-6 * cycle (85 to 100 millisecond) time-delay unit.

CONSTRUCTION AND OPERATION

The type COM relays consist of a time-overcurrent unit (CO), two indicating contactor switches (ICS), a indicating instantaneous trip unit (IIT) and a high drop out instantaneous unit (ITH). The principal component parts of the relay are shown in Figures 1-6.

Electromagnet

The electromagnets for the types COM-5, COM-6, COM-7, COM-8 and COM-9 relays have a main tapped coil located on the center leg of an "E" type laminated structure that produces a flux which divides and returns through the outer legs. A shading coil causes the flux through the left leg to lag the main pole flux. The out-of-phase fluxes thus produced in the air gap cause a contact closing torque.

The electromagnets for the types COM-2 and COM-11 relays have a main coil consisting of a tapped primary winding and a secondary winding. Two identical coils on the outer legs of the lamination structure are connected to the main coil secondary in a manner so that the combination of all the fluxes produced by the electromagnet result in out-of-phase fluxes in the air gap. The out-of-phase air gap fluxes produced cause a contact closing torque.

All possible contingencies which may arise during installation, operation, or maintenance, and all details and variations of this equipment do not purport to be covered by these instructions. If further information is desired by purchaser regarding his particular installation, operation or maintenance of his equipment, the local Westinghouse Electric Corporation representative should be contacted.

MAN CORE

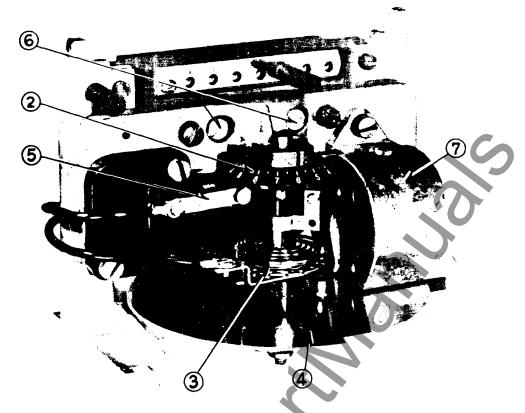


Fig. 1. Time Overcurrent Unit (Front View). 1-Tap Block. 2-Time Dial. 3-Control Spring Assembly. 4-Disc. 5-Stationary Contact Assembly. 6-Magnetic Plugs. 7-Permanent Magnet.

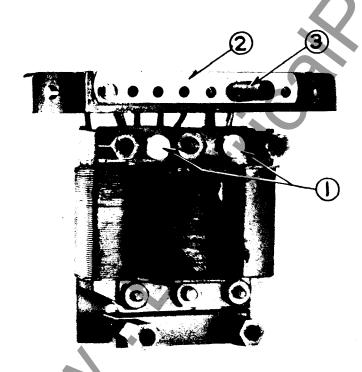


Fig. 2. "E" Type Electromagnet. 1-Magnetic Plugs. 2-Tap Block. 3-Tap Screw.

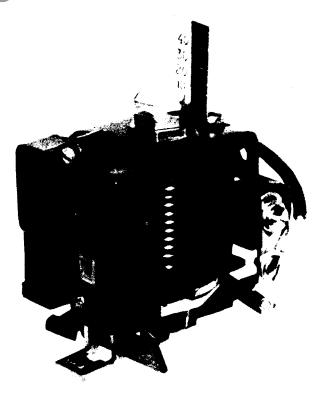


Fig. 3. Indicating Instantaneous Trip Unit (IIT).

MAN COR STANDARD CORE

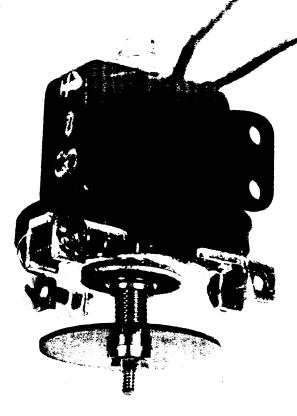


Fig. 4. High Drop-Out Instantaneous Trip Unit (ITH).

Fig. 5. Plunger Assembly for ITH Unit.

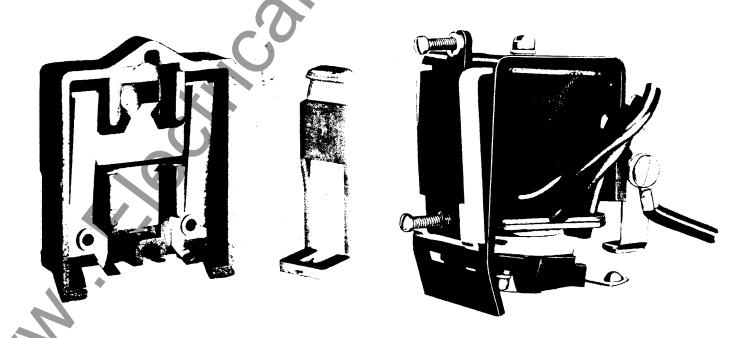


Fig. 6. Indicating Contactor Switch (ICS).

MAN CORE CORE

Increating Contactor Switch Unit (ICS)

The d-c indicating confactor switch is a small clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energication of the switch. When the switch closes the magning contacts bridge two stationary contacts, completing the trip circuit. Also during this operation two fingers on the armature deflect a spring located on the front of the switch, which allows the operation indicator target to drop.

The front spring, in addition to holding the target, provides restraint for the armature and thus controls the pickup value of the switch.

Indicating Instantaneous Trip Unit (IIT)

The instantaneous trip unit is a small a-c operated clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes, the moving contacts bridge two stationary contacts completing the trip circuit. Also, during the operation, two fingers on the armature deflect a spring located on the front of the switch which allows the operation indicator target to drop.

A core screw accessible from the top of the switch provides the adjustable pickup range. The minimum and maximum pick-up points are indicated on the scale which is located to the rear of the core screw.

High Drop-Out Instantaneous Trip Unit (ITH)

The high drop-out instantaneous trip unit is a small solenoid type device (Fig. 4). A plunger assembly (Fig. 5) rides up and down on a vertical guide rod in the center of the solenoid coil. The plunger assembly consists of a bushing which is threaded on the moving plunger and locked in place by a nut, and a silver disc which rests on a helical compression spring at the lower end of the plunger. The guide rod is fastened to the stationary core which in turn is held in place by the insulating plate on which the stationary contacts are mounted. The stationary core consists of two steel sections separated by a nonmagnetic ring. This non-magnetic ring provides an air gap in which the plunger steel floats. When the coil is energized, the plunger assembly moves upward carrying the silver disc which bridges three conicalshaped stationary contacts. In this position the helical spring is compressed and the plunger is free to move while the centret disc remains stationary. This are vibrations of the plunger assembly are prevented from causing contact chattering. A Micarta disc which acts as a shield for the contact plate, screws on the bottom of the guide rod and is locked in position by a small nut. The adjustable core screw in the top of the frame provides the principal means for adjusting the current operating values.

The ITH unit is a current operated device which will pick-up within the range stamped on the side of the frame and drop-out at 90% of the pick-up current value. The position of the core screw determines the pick-up value for a particular contact gap. The 90% drop-out ratio is accomplished through the right combination of plunger steel setting, electrical pull and spring strength. The most important factor in the adjustment of the unit is the correct positioning of the plunger steel with respect to the stationary core air gap.

Auxiliary Time-Delay Unit (T) - Where Used

This slugged telephone type unit, in conjunction with a tapped resistor, provides a 5-6 cycle delay on pickup. The resistor in the rear of the relay is tapped for use with 24, 48, 125 or 250 volt d-c supply, as shown in the internal schematics of Figs. 17 and 18.

CHARACTERISTICS

The relays are generally available in the following current ranges:

Range				Top	o s		
.5 - 2.5	0.5	0.6	0.8	1.0	1.5	2.0	2.5
2 - 6	2	2.5	3	3.5	4	5	6
4 - 12	4	5	6	7	8	10	12

The time vs. current characteristics are shown in Figs. 7 to 13. These characteristics give the contact closing time for the various time dial settings when the indicated multiples of tap value current are applied to the relay.

ITH Unit

The unit has a 2 to 1 range of pick-up adjustment with a 90% or greater drop-out ratio. The only adjustment necessary when making settings within the nominal range is the positioning of the core screw. At the maximum end of the range the drop-out ratio

MAN CORE

TYPE COM-2 RELAY

					VOLT AMPERES**				
AMPERE RANGE	TAP	CONTINUOUS RATING (AMPERES)	ONE SECOND RATING* (AMPERES)	POWER FACTOR ANGLE ϕ	AT TAP VALUE CURRENT	AT 3 TIMES TAP VALUE CURRENT	AT 10 TIMES TAP VALUE CURRENT	AT 20 TIMES TAP VALUE CURRENT	
	0.5	0.91	28	58	4.8	39.6	256	7 90	
	0.6	0.96	28	5 7	4.9	39.8	270	851	
	0.8	1.18	28	53	5.0	42.7	308	1024	
0.5/2.5	1.0	1.37	28	50	5.3	45.4	348	1220	
	1.5	1.95	28	40	6.2	54.4	435	1740	
	2.0	2.24	28	36	7.2	65.4	580	2280	
	2.5	2.50	28	29	7.9	73.6	7 00	2850	
	2.0	3.1	110	59	5.04	38.7	262	800	
	2.5	4.0	110	55	5.13	39.8	280	920	
	3.0	4.4	110	51	5.37	42.8	312	1008	
2/6	3.5	4.8	110	47	5.53	42.8	329	1120	
	4.0	5.2	110	45	5.72	46.0	360	1216	
	5.0	5.6	110	41	5.90	50.3	420	1500	
	6.0	6.0	110	37	6.54	54.9	474	1800	
	4.0	7.3	230	65	4.92	39.1	268	848	
	5.0	8.0	230	50	5.20	42.0	305	1020	
	6.0	8.8	230	47	5.34	44.1	330	1128	
4/12	7.0	9.6	230	46	5.35	45.8	364	1260	
	8.0	10.4	230	43	5.86	49.9	400	1408	
	10.0	11.2	230	37	6.6	55.5	47 0	1720	
	12.0	12.0	230	34	7 .00	62.3	528	2064	

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

 $[\]phi$ Degrees current lags voltage at tap value current.

^{**} Voltages taken with Rector type voltmeter.

MAN CORE CORE

COM-5 LONG TIME AND COM-6 DEFINITE MINIMUM TIME RELAYS

VOI	T AL	STAGE	L' 5 * !

AMPERS RANGE	TAI'	CONTINUOUS RATING (AMPERES)	ONE SECOND RATING* (AMPERES)	FOWER FACTOR ANGLE C	AT TAP VALUE CURRENT	AT 3 TIMES TAP VALUE CURRENT	AT 10 TIMES TAP VALUE CURRENT	AT 20 TAMES TAP VALUE CURRENT
	(0.5	2	56	69	3.92	20.6	103	270
	0.6	2.2	56	68	3.96	20.7	106	28 8
	(0.8	2.5	56	67	3.96	21	114	325
0.5/2.5	(1.0	2.8	56	66	4.07	21.4	122	360
	(1.5	3 .4	56	62	4.19	23.2	147	462
	(2.0	4.0	56	60	4.30	24.9	168	548
	(2.5	4.4	56	58	4.37	26.2	180	630
	(2	8	230	67	3.88	21	110	308
	(2.5	8.8	230	6 6	3.87	21.6	118	342
	(3	9.7	230	64	3.93	22.1	126	381
2/6	(3.5	10.4	230	63	4.09	23.1	136	417
	(4	11.2	230	62	4.08	23.5	144	448
	(5	12.5	23 0	59	4.20	24.8	162	540
	(6	13.7	23 0	5 7	4.38	26.5	183	624
	(4	16	46 0	6 5	4.00	22.4	126	376
	(5	18.8	460	63	4.15	23.7	143	4 50
	(6	19.3	46 0	61	4.32	25.3	162	531
4/12	(7	20.8	460	59	4.27	26.4	183	611
	(8	22.5	460	56	4.40	27.8	204	699
	(10	2 5	46 0	53	4.60	30.1	247	880
	(12	28	4 60	47	4.92	3 5.6	2 88	1056

COM-7 MODERATELY INVERSE TIME RELAY

VOLT AMPERES**

							AMI EKES	
		CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ¢	CURRENT	CURRENT	CURRENT	CURRENT
	(0.5	2	56	68	3.8 8	20.7	103	278
	(0.6	2.2	56	67	3.93	20.9	107	288
	8.0)	2.5	56	66	3.93	21.1	114	320
0.5/2.5	(1.0	2.8	56	64	4.00	21.6	122	356
	(1.5	3.4	56	61	4.08	22.9	148	459
	(2.0	4.0	56	5 8	4.24	24.8	174	552
	(2.5	4.4	56	56	4.38	25.9	185	640
	(2	8	230	66	4.06	21.3	111	306
	(2.5	8.8	230	63	4.07	21.8	120	342
	(3	9.7	230	63	4.14	22.5	129	366
2/6	(3.5	10.4	230	62	4.34	23.4	141	413
	(4	11.2	230	61	4.34	23.8	149	448
	(5	12.5	230	59	4.40	25.2	163	5 30
	(6	13.7	230	5 8	4.62	27	183	624
	(4	16	460	64	4.24	22.8	12 9	3 92
	(5	18.8	460	61	4.30	24.2	149	460
4/12	(6	19.3	46 0	60	4.62	2 5.9	168	5 4 0
	(7	20.8	460	58	4.69	27.3	187	62 6
	(8	22.5	4 60	55	4.80	29.8	211	6 88
	(10	25	460	51	5.20	33	260	860
	(12	2 8	46 0	46	5.40	37.5	308	1032

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

 $[\]phi$ Degrees current lags voltage at tap value current.

^{••} Voltages taken with Rectox type voltmeter.

MAN COR STANDARD CORE

ENERGY REQUIREMENTS

COM-8 INVERSE TIME AND COM-9 VERY INVERSE TIME RELAYS

						VOLT A	MPERES		
AMPERE RANGE	<u>194</u>	CONTINUOUS RATING (AMPERES	ONL SECOND RATING* (AMEE(ES)	POWEE. FACTOR ANGLE 4	AT TAP VALUE CURRENT	AT 3 TIMES TAP VALUE CURRENT	AT 10 TIME'S TAP VALUE CURRENT	AT 10 TIMES TAL VALUE CUPRENT	
0.5/2.5	(0.5) (0.6) (0.8) (1.0) (1.5) (2.0) (2.5)	2 2.2 2.5 2.8 3.4 4.0 4.4	56 56 56 56 56 56	72 71 69 67 62 57 53	2.38 2.38 2.40 2.42 2.51 2.65 2.74	21 21 21.1 21.2 22 23.5 24.8	132 134 142 150 170 200 228	350 365 400 440 530 675 800	
2/6	(2 (2:5 (3 (3.5 (4 (5 (6	8 8.8 9.7 10.4 11.2 12.5 13.7	230 230 230 230 230 230 230 230	70 66 64 62 60 58 56	2.38 2.40 2.42 2.48 2.53 2.64 2.75	21 21.1 21.5 22 22.7 24 25.2	136 142 149 157 164 180	360 395 430 470 500 580 660	
4/12	(4 (5 (6 (7 (8 (10 (12	16 18.8 19.3 20.8 22.5 25	460 460 460 460 460 460	68 63 60 57 54 48 45	2.38 2.46 2.54 2.62 2.73 3.00 3.46	21.3 21.8 22.6 23.6 24.8 27.8 31.4	146 158 172 190 207 24 8 292	420 480 550 620 700 850 1020	

TYPE COM-11 RELAY

					VOLT AMPERES**			
		CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
	0.5	1.7	56	36	0.72	6.54	71.8	250
	0.6	1.9	56	34	0.75	6.80	75.0	267
	0.8	2.2	56	30	0.81	7.46	84.0	298
0.5/2.5	1.0	3.5	56	27	0.89	8.30	93.1	330
	1.5	3.0	56	22	1.13	10.04	115.5	411
	2.0	3.5	56	17	1.30	11.95	136.3	502
	2.5	3.8	56	16	1.48	13.95	160.0	610
	2.0	7.0	230	32	0.73	6.30	74.0	264
	2 5	7.8	230	30	0.78	7.00	78.5	285
	3.0	8.3	230	27	0.83	7.74	84.0	309
2/6	3.5	9.0	230	24	0.88	8.20	89.0	340
	4.0	10.0	230	. 23	0.96	9.12	102.0	37 2
	5.0	11.0	230	20	1.07	9.80	109.0	430
	6.0	12.0	230	20	1.23	11.34	129.0	504
	4.0	14	460	29	0.79	7.08	78.4	296
	5.0	16	460	25	0.89	00.8	90.0	340
X /	6.0	17	460	22	1.02	9.18	101.4	378
4/12	7.0	18	460	20	1.10	10.00	110.0	454
~	8.0	20	460	18	1.23	11.1	124.8	480
	10.0	22	460	17	1.32	14.9	131.6	600
\	12.0	26	460	16	1.8	16.3	180.0	720

Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

Φ Degrees current lags voltage at tap value current.

Voltages taken with Rector type voltmeter.

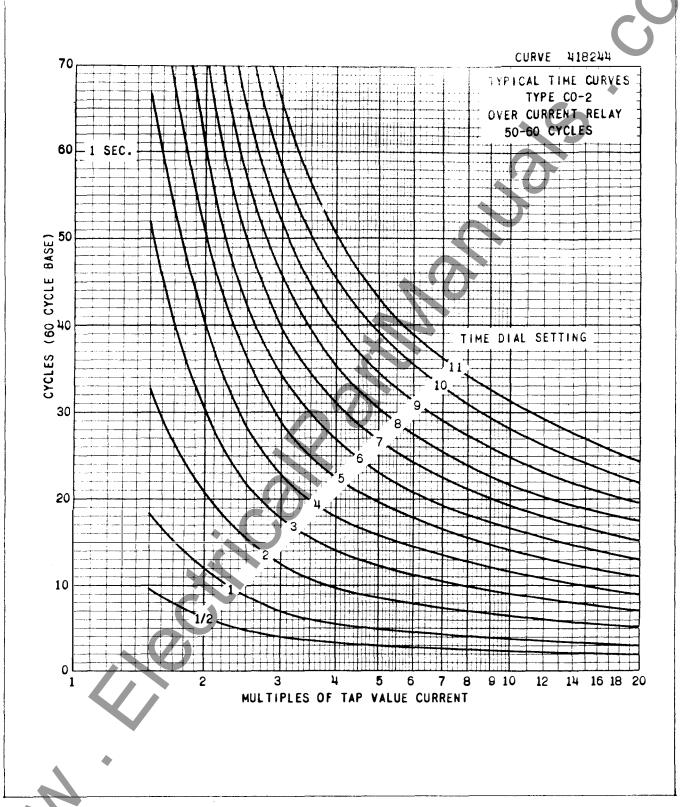


Fig. 7. Typical Time Curves of the Type COM-2 Relay.

INTA CORE

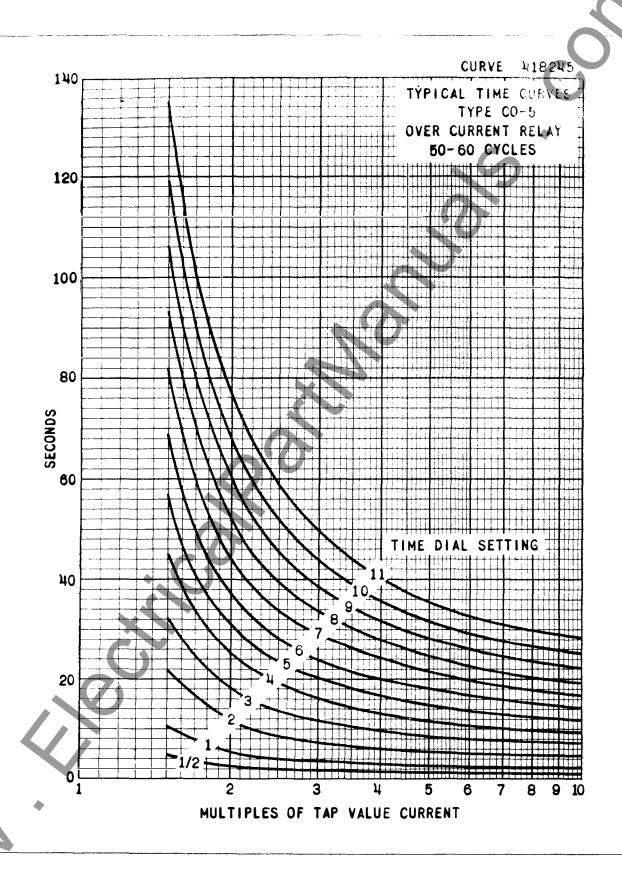


Fig. 8. Typical Time Curves of the Type COM-5 Relay.

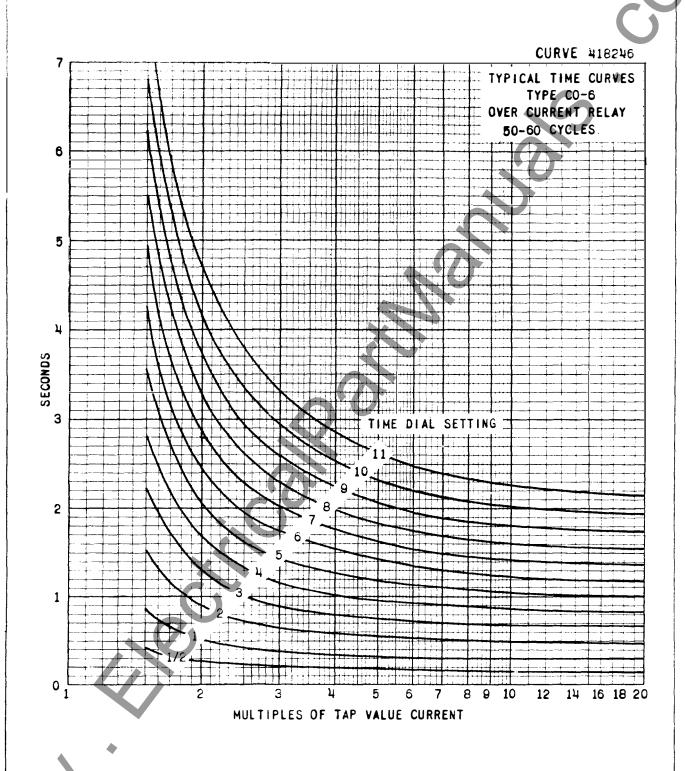


Fig. 9. Typical Time Curves of the Type COM-6 Relay.

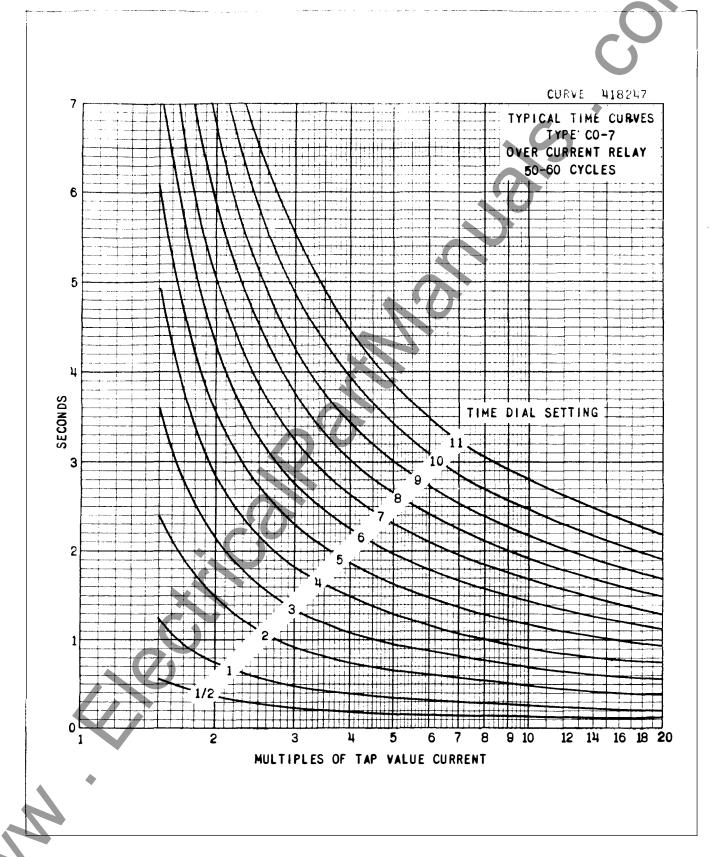


Fig. 10. Typical Time Curves of the Type COM-7 Relay.

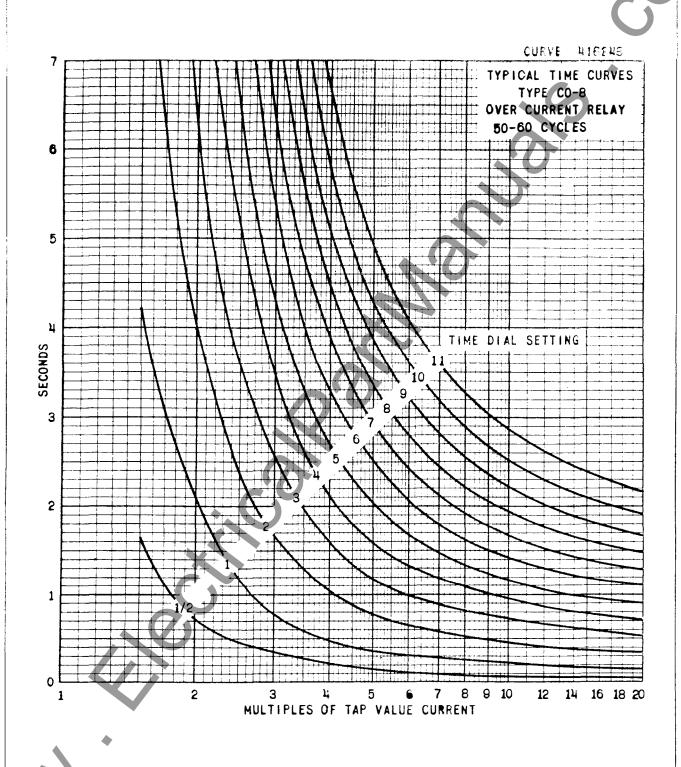


Fig. 11. Typical Time Curves of the Type COM-8 Relay.

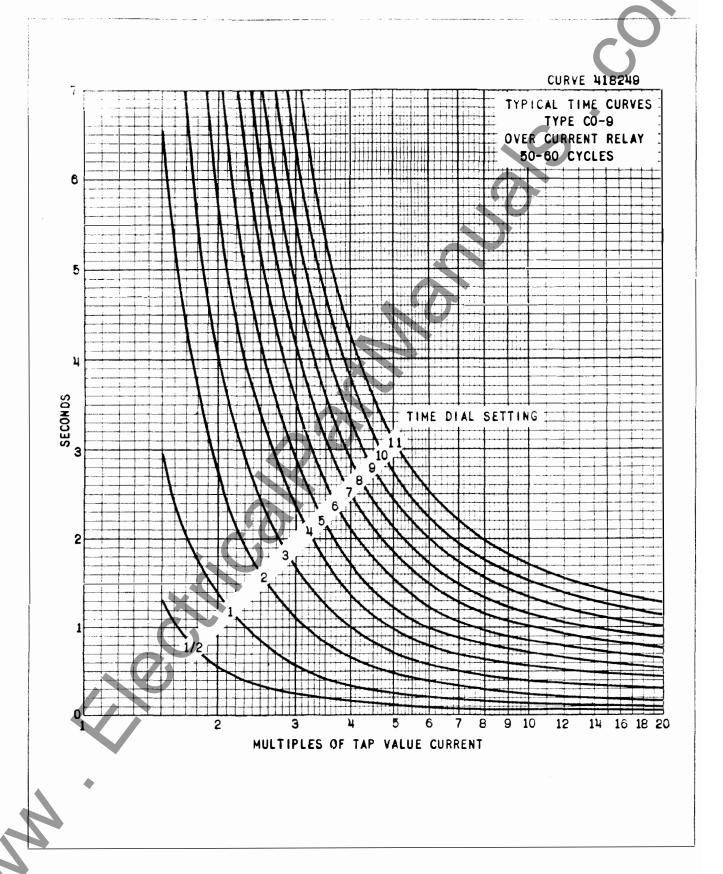


Fig. 12. Typical Time Curves of the Type COM-9 Relay.

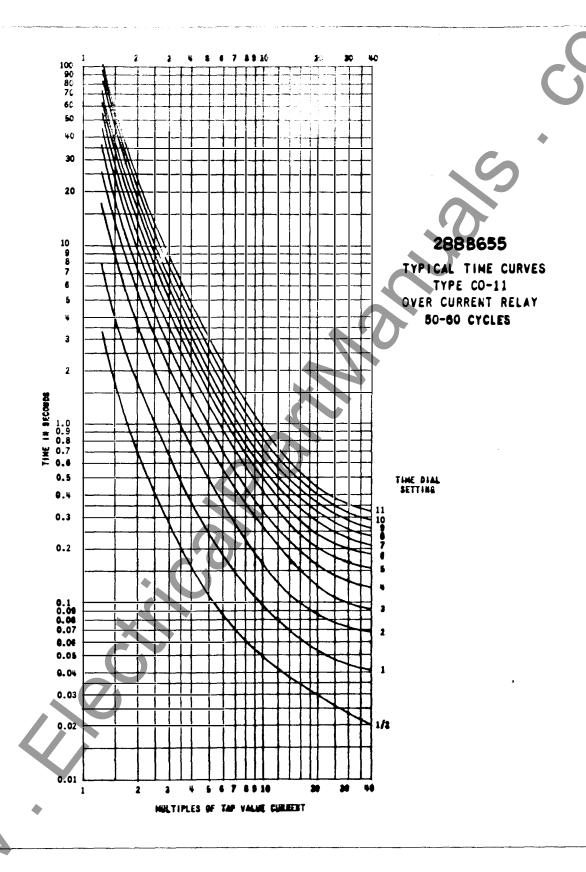


Fig. 13. Typical Time Curves of the Type COM-11 Relay.

MAN COR STANDARD CORE

will be areafer than 90% are nones be desirable to lower the contact shield to increase the contact gap and fellow. The range may be increased by lowering the plunger after the core screw has been set at its maximum rated position. If the plunger is lowered to increase the pick-up current value, then at 300% of minimum trip the drop-out ratio is 60% of the pick-up current. At 400% of minimum trip the drop-out ratio is 45% of the pick-up current.

The burden of this unit at minimum pick-up is 0.44 V.A. at 60 cycles.

Continuous current rating of the coil is 2 times minimum pickup value.

One second rating is approximately 45 times minimum pick-up.

Characteristic operating times for the unit over its nominal range are:

Less than 1 cycle at 200% of trip value 1/2 cycle at 500% of trip value 1/4 cycle at 1000% of trip value

Trip Circuit

The main contacts will safely close 30 amperes at 250 volts d-c and the seal-in contacts of the indicating contactor switch will safely carry this current long enough to trip a circuit breaker.

The IIT and ITH contacts will safely close 30 amperes at 250 volts d-c, and will carry this current long enough to trip a breaker.

The indicating contactor switch has two taps provide a pickup setting of 0.2 or 2 amperes. To change taps requires connecting the lead located in front of the tap block to the desired setting by means of a screw connection.

Trip Circuit Constants

Contactor Switch -

0.2 ampere tap - 6.5 ohms d-c resistance

2.0 ampere tap – 0.15 ohms d-c resistance

SETTINGS

CO Unit

The overcurrent unit settings can be defined either by tap setting and time dial position or by tap

rettire and a specific time of operation at such our remarkable of the tay setting (e.g. 4 tap of the time dial position or 4 tap setting, 0.6 seconds at times tay value currents.

To provide selective circuit breaker operation, a minimum coordinating time of 0.3 seconds plus circuit breaker time is recommended between the relay being set and the relays with which coordination is to be effected.

The connector screw on the terminal plate above the time dial makes connections to various turns on the •perating coil. By placing this screw in the various terminal plate holes, the relay will respond to multiples of tap value currents in accordance with the various typical time-current curves.

Caution

Since the tap block connector screw carries •perating current, be sure that the screw is turned tight. In order to avoid opening the current transformer circuits when changing taps under load, connect the spare connector screw in the desired tap position before removing the other tap screw from the original tap position.

Instantaneous Reclosing


The factory adjustment of the CO unit contact provides a contact follow. Where instantaneous circuit breaker reclosing will be initiated upon the closure of the CO contact, this contact follow must be eliminated by loosening the stationary contact mounting screw, removing the contact plate and then replacing the plate with the bent end resting against the contact spring. With this change and the contact mounting screw tightened, the stationary contact will rest solidly against its backstop.

Indicating Contactor Switch (ICS)

No setting is required on the ICS unit except the selection of the 0.2 or 2.0 ampere tap setting. This selection is made by connecting the lead located in front of the tap block to the desired setting by means of the connecting screw. When the relay energizes a 125 or 250 volt d-c type WL relay switch, or equivalent, use the 0.2 ampere tap; for 48 volt d-c applications set in 2 tap and use Type WL relay coil $8^{\#}304C209G01$ or equivalent.

Indicating Instantaneous Trip (IIT)

The core screw must be adjusted to the value of

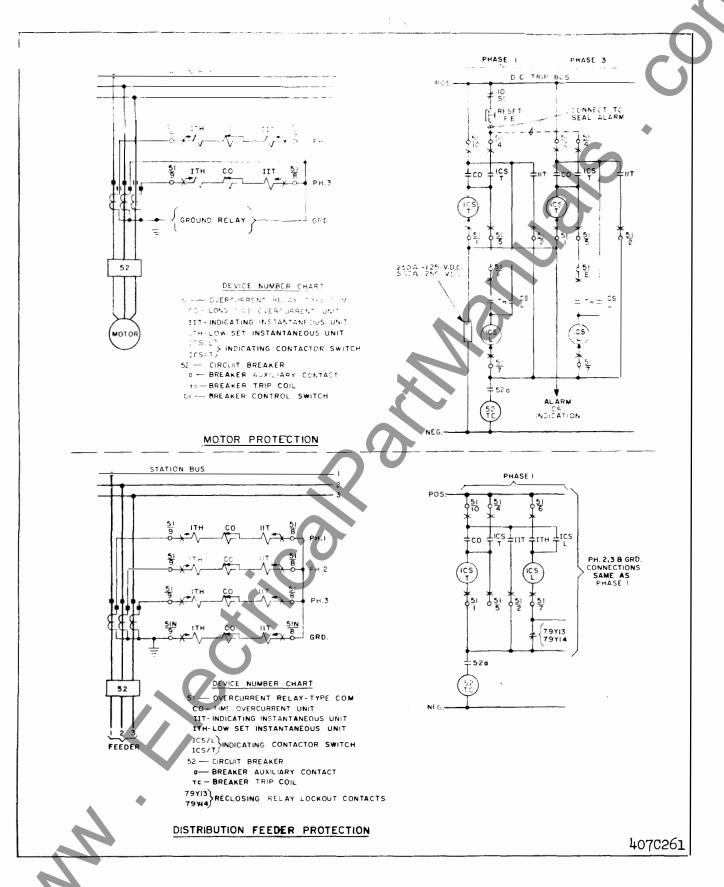

* Fig. 14. External Schematic of COM Relays without Auxiliary Time-Delay Unit.

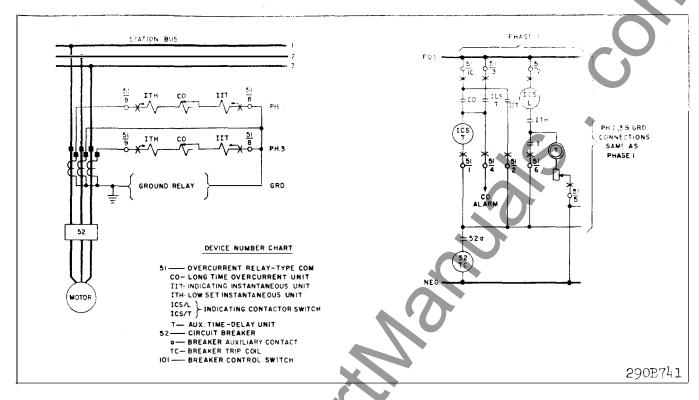


Fig. 15. External Schematic of COM Relays with Auxiliary Time-Delay Unit and ITH Unit.

pick-up current desired.

The nameplate data will furnish the actual current range that may be obtained from the IIT unit.

ITH Unit

The unit, prior to shipment is adjusted for minimum pick-up value, that is, the lower value marked on the side of the frame. The following procedure is used when changing this setting over the indicated range where a 90% or higher drop-out ratio is desired. Connect the coil of the unit in series with an ammeter and adjustable load. Apply the desired pick-up current, then adjust the core screw until the plunger just picks up. Lock core screw securely in place.

If it is desired to set the unit for either a different drop-out ratio over the nominal range or for pickup values above the nominal range, then the following procedure should be followed.

With the unit in series with an ammeter and adjustable load, apply the desired drop-out current. Adjust the core screw until the plunger assembly just drops out. Then apply the desired pick-up current and adjust the Micarta contact shield till the plunger

assembly just picks up. It is recommended that the contact gap should not be made less than 0.13 of an inch. The contact gap may be determined by turning up the contact shield from the setting position until the contacts just close. One turn of the shield is equal to .018 of an inch contact gap.

Tapped Resistor (When Used)

The relay is shipped with the resistor tapped for 125 volt d-c service. See Fig. 17 or 18 for the proper positions for other d-c ratings. When viewed from the rear of the relay the red dot on terminal 1 of the resistor is on the extreme left.

INSTALLATION

The relays should be mounted on switchboard panels or their equivalent in a location free from dirt, mositure, excessive vibration and heat. Mount the relay vertically by means of the mounting stud for the type FT projection case or by means of the four mounting holes on the flange for the semi-flush type FT case. Either the stud or the mounting screws may be utilized for grounding the relay. The electrical connections may be made directly to the ter-

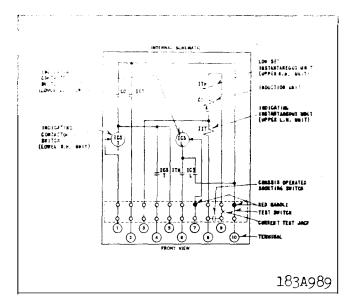


Fig. 16. Internal Schematic of the Type COM Relay, <u>without</u>
Auxiliary Time-Delay Unit, in FT21 Case. (For S≈289B355A — Series of COM-5 Relays).

minals by means of screws for steel panel mounting or to the terminal stud furnished with the relay for thick panel mounting. The terminal stud may be easily removed or inserted by locking two nuts on the stud and then turning the proper nut with a wrench.

For detail information on the FT case refer to $I.L.\ 41-076$.

ADJUSTMENTS AND MAINTENANCE

The proper adjustments to insure correct operation of this relay have been made at the factory. Upon receipt of the relay no customer adjustments, other than those covered under "SETTINGS" should be required.

For relays which include an indicating instantaneous trip unit (IIT), the junction of the induction and indicating instantaneous trip coils is brought out to switch jaw #3. With this arrangement the overcurrent units can be tested separately.

Acceptance Check

The following check is recommended to insure that the relay is in proper working order:

1. Contact

a) By turning the time dial, move the moving

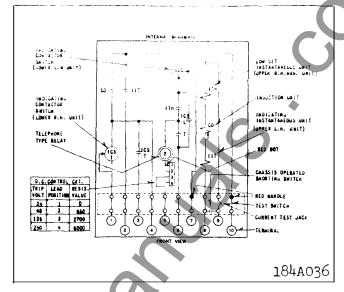


Fig. 17. Internal Schematic of the Type COM Relay with Auxiliary Time-Delay Unit and ITH Unit, in FT21 Case. (For S#289B456A — Series of COM-5 Relays).

contacts until they deflect the stationary contact to a position where the stationary contact is resting against its backstop. The index mark located on the movement frame should coincide with the "O" mark on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".

- b) For relays indentified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020". The placement of the various time dial positions in line with the index mark will give operating times as shown on the respective time-current curves. For double trip relays, the follow on the stationary contacts should be approximately 1/32".
- 2. Minimum Trip Current Set the time dial to position 6. Using lowest tap setting, alternately apply tap value current plus 3% and tap value current minus 3%. The moving contact should leave the backstop at tap value current plus 3% and should return to the backstop at tap value current minus 3%.


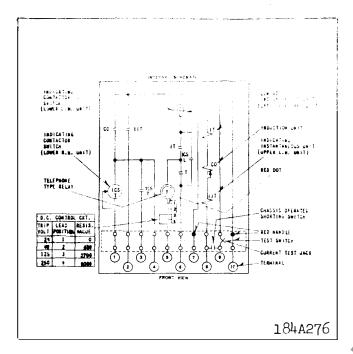


Fig. 18. Internal Schematic of the Type COM Relay, with Auxiliary Time-Delay Unit and IT Unit, in FT21 Case. (For S#289B511A - Series of COM-5 Relays).

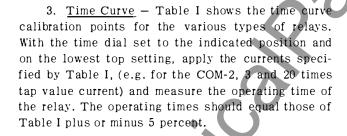

For type COM-11 relay only, the 1.30 times tap value operating time from the number 6 time dial position is $54.9 \pm 5\%$ seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the nominal operating time by approximately 4%.

4. Indicating Instantaneous Trip Unit (IIT) — The core screw which is adjustable from the top of the trip unit determines the pickup value. The trip unit has a nominal ratio of adjustment of 1 to 4 and an accuracy within the limits of 10%.

The making of the contacts and target indication

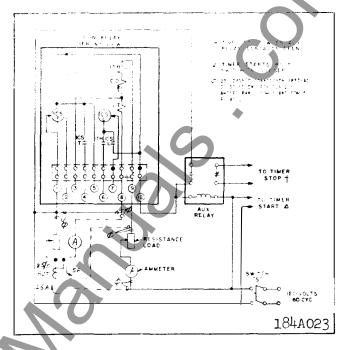


Fig. 19. Diagram of Test Connections for CO Unit of COM Relays.

should occur at approximately the same instant. Position the stationary contact for a minimum of 1/32" wipe. The bridging moving contact should touch both stationary contacts simultaneously.

Apply sufficient current to operate the IIT. The operation indicator target should drop freely.

5. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operation indicator target should drop freely.

The contact gap should be approximately .047" between the bridging moving contact and the adjustable stationary contacts. The bridging moving contact should touch both stationary contacts simultaneously.

6. High Drop-out Instantaneous Unit (ITH) — The plunger assembly should pickup and seal in at the minimum pickup current value stamped on the frame and drop out at least 90% of this value. The unit should maintain at least a 9€% drop out ratio over the nominal range.

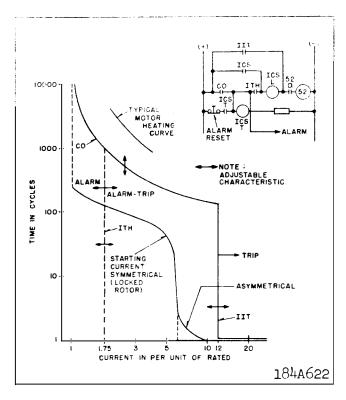


Fig. 20. Setting Example for Motor Protection Using S#289B355A — Relays without Auxiliary Time-Delay Unit.

The contact gap should not be less than .013 of an inch. Contact gap is determined as described under settings.

7. Auxiliary Time-Delay Unit (T) — For relays wired per Fig. 17 or 18, apply 100 volts d-c to terminals 5 and 7. Manually close the contacts of the ITH or IT unit in the top right-hand corner of the relay. The T unit should operate.

Routine Maintenance

All relays should be inspected and checked periodically to assure proper operation. Generally a visual inspection should call attention to any noticeable changes. A minimum suggested check on the relay system is to close the contacts manually to assure that the breaker trips and the target drops. Then release the contacts and observe that the reset is smooth and positive.

If an additional time check is desired, pass secondary current through the relay and check the time of operation. It is preferable to make this at several times pick-up current at an expected operating point for the particular application. For the 0.5 ampere

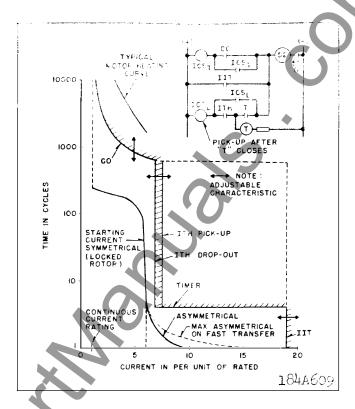


Fig. 21. Setting Example for Motor Protection Using S#289B456A — or S#289B511A — Relays with Auxiliary Time-Delay Unit.

range COM-5 and COM-6 induction units use the dashed test circuit in Fig. 19 as these relays are affected by a distorted wave form. With this connection the 25/5 ampere current transformers should be worked well below the knee of the excitation curve. (i.e. Use a 10L50 or better)

All contacts should be periodically cleaned. A contact burnisher #182A836H01 is recommended for this purpose. The use of abrasive material for cleaning contacts is not recommended, because of the danger of embedding small particles in the face of the soft silver and thus impairing the contact.

CALIBRATION

Use the following procedure for calibrating the relay if the relay has been taken apart for repairs or the adjustments disturbed. This procedure should not be used until it is apparent that the relay is not in proper working order. (See "Acceptance Check")

CO Unit

- 1. Contact
- a) By turning the time dial, move the moving

contacts until they deflect the atminutery contact to a positional bare the start contact is resting against its backstop. The index took located on the newment frame should a starde with the "Go" mank on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".

- b) For relays identified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020".
- 2. Minimum Trip Current The adjustment of the spring tension in setting the minimum trip current value of the relay is most conveniently made with the damping magnet removed.

With the time dial set on "O", wind up the spiral spring by means of the spring adjuster until approximately 6-3/4 convolutions show.

Set the relay on the lowest tap setting, the time dial to position 6.

Adjust the control spring tension so that the moving contact will leave the backstop at tap value current +1.0% and will return to the backstop at tap value current -1.0%.

3. <u>Time Curve Calibration</u> - Install the permanent magnet.

Apply the indicated current per Table I for permanent magnet adjustment (e.g. COM-8, 2 times tap value) and measure the operating time. Adjust the permanent magnet keeper until the operating time corresponds to the value of Table I.

For Type COM-11 Relay only, the 1.3 times tap value operating time from the number 6 time dial position is $54.9 \pm 5\%$ seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the

nominal operating time by approximately 42. If the operating time at 1.3 times tap valve is the within these limits, a minor adjustment of the correct spring will give the correct operating time with a long unduce effect on the minimum pick-up of the releast. This check is to be made after the 2 times tap value adjustment has been completed.

Apply the indicated current per Table I for the electromagnet plug adjustment (e.g. COM-8, 20 times tap value) and measure the operating time. Adjust the proper plug until the operating time corresponds to the value in Table I. (Withdrawing the left hand plug, front view, increases the operating time and withdrawing the right hand plug, front view, decreases the time.) In adjusting the plugs, one plug should be screwed in completely and the other plug run in or out until the proper operating time has been obtained.

Recheck the permanent magnet adjustment. If the operating time for this calibration point has changed, readjust the permanent magnet and then recheck the electromagnet plug adjustment.

4. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operating indicator target should drop freely.

5. Indicating Instantaneous Trip Unit (IIT)

The core screw must be adjusted to the value of pick-up current desired.

The nameplate date will furnish the actual current range that may be obtained from the IIT unit.

6. High Drop-out Instantaneous Unit (ITH) — The factory adjustment of the position of the plunger steel provides a drop-out ratio of 90% over the nominal range. But, in the event a considerable amount of material is removed from the contacts, due to repeated operations, burnishing, etc., the drop-out ratio may fall below 90%. If this occurs, then the plunger steel should be turned down to compensate. If the plunger steel setting is changed for the above or any other reasons, the following procedure should be used to recalibrate the relay.

Set the corescrew at ten turns up from its bottom position. Adjust the plunger steel position on the plunger until the current value at which the plunger

so the contact gap at 3/4 of a turn down, and adjust the core serew for pick-up. Drop-out value will normally be above 90% of this setting. If desired, the contact gap and follow may be increased by lowering the contact shield and readjusting the core screw for pick-up.

RENEWAL PARTS

Repair work can be done most satisfactorily at the factory. However, interchangeable parts can be faithished to the customers who are equipped for deing repair work. When ordering parts, always give, the complete nameplate data.

TABLE 1

TIME CURVE CALIBRATION DATA - 50 & 60 CYCLES

	PERMANENT	MAGNET ADJUSTM	ELECTROMAGNET PLUGS		
RELAY	TIME DIAL	CURRENT (MULTIPLES OF	OPERATING TIME	CURRENT (MULTIPLES OF	OPERATING TIME
TYPE	POSITION	TAP VALUE)	SECONDS	TAP VALUE)	SECONDS
COM-2	6	3	0.57	20	0.22
COM-5	6	2	37.80	10	14.30
COM-6	6	2	2.46	20	1. 19
COM-7	6	2	4. 27	20	1.11
COM-8	6	2	13.35	20	1.11
COM-9	6	2	8.87	20	0.65
COM-11	6	2	11.27	20	0.24 △

 Δ For 50 cycle CO-11 relay 20 times operating time limits are 0.24 + 10%, -5%.

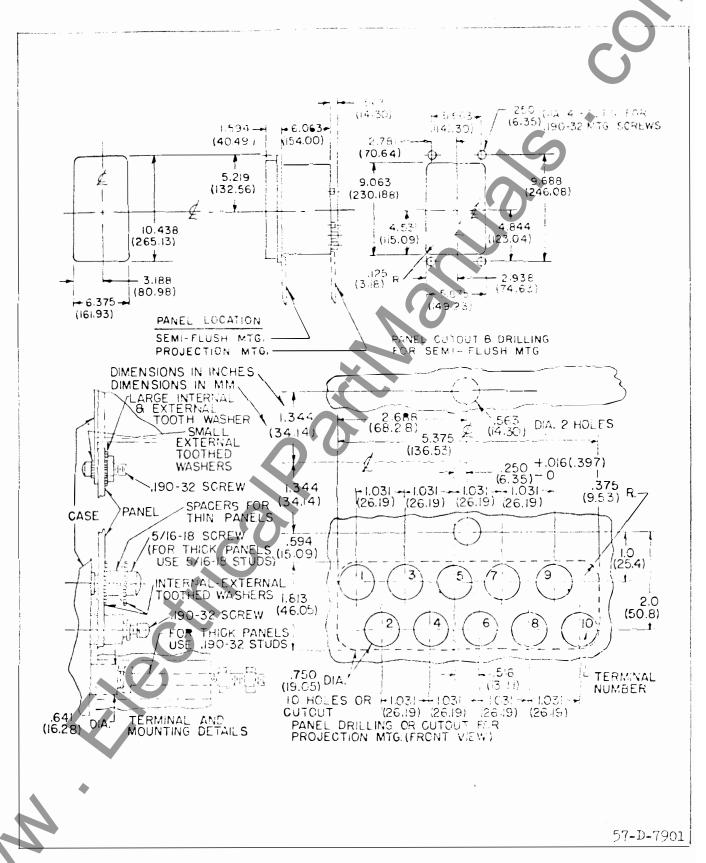


Fig. 22. Outline & Drilling Plan for the Type COM Relay in the FT21 Case.



WESTINGHOUSE ELECTRIC CORPORATION RELAY-INSTRUMENT DIVISION NEWARK, N. J.

Printed in U.S.A.



INSTALLATION . OPERATION . MAINTENANCE

INSTRUCTIONS

TYPE COM OVERCURRENT RELAY

CAUTION Before putting relays into service, remove all blocking which may have been inserted for the purpose of securing the parts during shipment, make sure that all moving parts operate freely, inspect the contacts to see that they are clean and close properly, and operate the relay to check the settings and electrical connections.

APPLICATION

COM relays may be applied wherever two instantaneous overcurrent units are required in addition to the time overcurrent unit. For example Fig. 20 shows how the COM-5 (long time) relay is used for motor protection, with the CO-5 unit alarming just above motor full load and tripping at higher overloads through the low set instantaneous unit; the high set instantaneous unit is set above locked rotor current to provide high speed tripping of heavy faults. Fig. 21 shows how another variation of COM-5 provides * improved fault protection for a motor by delaying ITH tripping by 5 to 6 cycles to override the assymetrical starting current.

The relay with auxiliary time-delay unit is also available with the IT Unit (clapper type) rather than the ITH (plunger type). The highest range available in the ITH design is 16-32 amperes.

The COM without the auxiliary time-delay unit may also be utilized for distribution line protection, with the low set instantaneous locked-out by the reclosing relay, and with the high set unit left in service to provide high speed clearing of close-in faults. See Fig. 14 for the connections of this application.

CONTENTS

This instruction leaflet applies to the following types of relays:

Type COM- 2 Short Time Relay

COM- 5 Long Time Relay

COM- 6 Definite Minimum Time Relay

COM- 7 Moderately Inverse Time Relay

COM- 8 Inverse Time Relay

COM- 9 Very Inverse Time Relay

COM-11 Extremely Inverse Time Relay

Each of these is available with or without a 5-6 cycle time-delay unit.

CONSTRUCTION AND OPERATION

The type COM relays consist of a time-overcurrent unit (CO), two indicating contactor switches (ICS), a indicating instantaneous trip unit (IIT) and a high drop out instantaneous unit (ITH). The principal component parts of the relay are shown in Figures 1-6.

Electromagnet

The electromagnets for the types COM-5, COM-6, COM-7, COM-8 and COM-9 relays have a main tapped coil located on the center leg of an "E" type laminated structure that produces a flux which divides and returns through the outer legs. A shading coil causes the flux through the left leg to lag the main pole flux. The out-of-phase fluxes thus produced in the air gap cause a contact closing torque.

The electromagnets for the types COM-2 and COM-11 relays have a main coil consisting of a tapped primary winding and a secondary winding. Two identical coils on the outer legs of the lamination structure are connected to the main coil secondary in a manner so that the combination of all the fluxes produced by the electromagnet result in out-of-phase fluxes in the air gap. The out-of-phase air gap fluxes produced cause a contact closing torque.

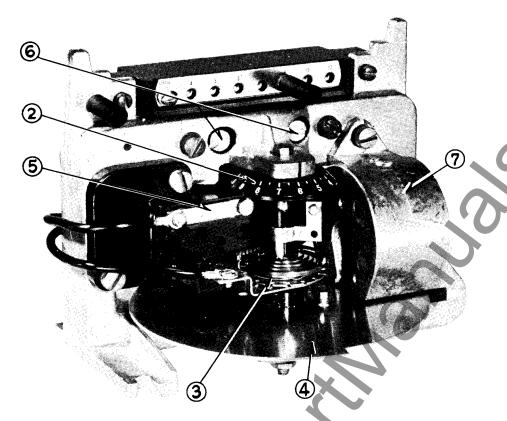


Fig. 1. Time Overcurrent Unit (Front View). 1-Tap Block. 2-Time Dial. 3-Control Spring Assembly. 4-Disc. 5-Stationary Contact Assembly. 6-Magnetic Plugs. 7-Permanent Magnet.

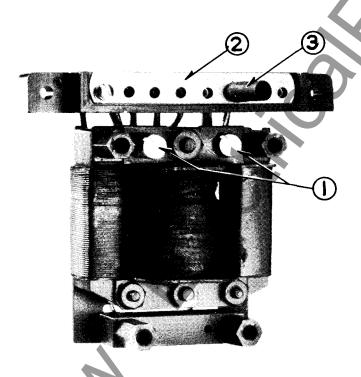
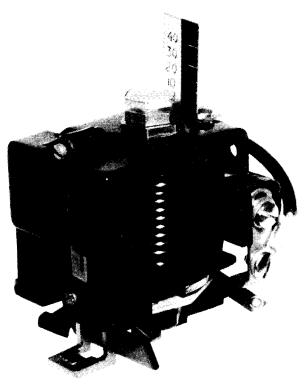


Fig. 2. "E" Type Electromagnet. 1-Magnetic Plugs. 2-Tap Block. 3-Tap Screw.



*Fig. 3. Indicating Instantaneous Trip Unit (IIT).

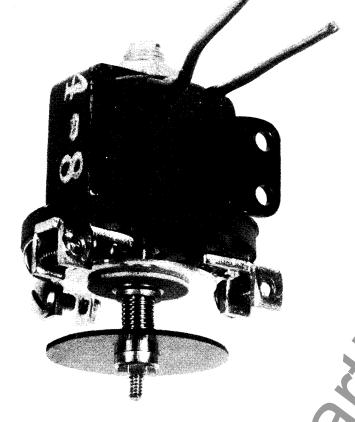




Fig. 4. High Drop-Out Instantaneous Trip Unit (ITH).

Fig. 5. Plunger Assembly for ITH Unit.

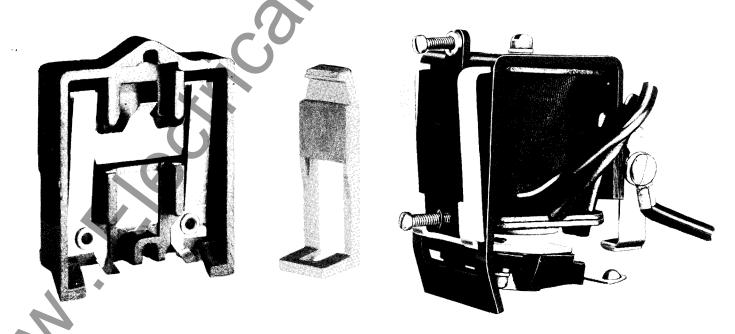


Fig. 6. Indicating Contactor Switch (ICS).

Indicating Contactor Switch Unit (ICS)

The d-c indicating contactor switch is a small clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes the moving contacts bridge two stationary contacts, completing the trip circuit. Also during this operation two fingers on the armature deflect a spring located on the front of the switch, which allows the operation indicator target to drop.

The front spring, in addition to holding the target, provides restraint for the armature and thus controls the pickup value of the switch.

Indicating Instantaneous Trip Unit (IIT)

The instantaneous trip unit is a small a-c operated clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes, the moving contacts bridge two stationary contacts completing the trip circuit. Also, during the operation, two fingers on the armature deflect a spring located on the front of the switch which allows the operation indicator target to drop.

A core screw accessible from the top of the switch provides the adjustable pickup range. The minimum and maximum pick-up points are indicated on the scale which is located to the rear of the core screw.

High Drop-Out Instantaneous Trip Unit (ITH)

The high drop-out instantaneous trip unit is a small solenoid type device (Fig. 4). A plunger assembly (Fig. 5) rides up and down on a vertical guide rod in the center of the solenoid coil. The plunger assembly consists of a bushing which is threaded on the moving plunger and locked in place by a nut, and a silver disc which rests on a helical compression spring at the lower end of the plunger. The guide rod is fastened to the stationary core which in turn is held in place by the insulating plate on which the stationary contacts are mounted. The stationary core consists of two steel sections separated by a nonmagnetic ring. This non-magnetic ring provides an air gap in which the plunger steel floats. When the coil is energized, the plunger assembly moves upward carrying the silver disc which bridges three conicalshaped stationary contacts. In this position the helical spring is compressed and the plunger is free to

move while the contact disc remains stationary. Thus, a-c vibrations of the plunger assembly are prevented from causing contact chattering. A Micarta disc which acts as a shield for the contact plate, screws on the bottom of the guide rod and is locked in position by a small nut. The adjustable core screw in the top of the frame provides the principal means for adjusting the current operating values.

The ITH unit is a current operated device which will pick-up within the range stamped on the side of the frame and drop-out at 90% of the pick-up current value. The position of the core screw determines the pick-up value for a particular contact gap. The 90% drop-out ratio is accomplished through the right combination of plunger steel setting, electrical pull and spring strength. The most important factor in the adjustment of the unit is the correct positioning of the plunger steel with respect to the stationary core air gap.

Auxiliary Time-Delay Unit (T) - Where Used

This slugged telephone type unit, in conjunction with a tapped resistor, provides a 5-6 cycle delay on pickup. The resistor in the rear of the relay is tapped for use with 24, 48, 125 or 250 volt d-c supply, as shown in the internal schematics of Figs. 17 and 18.

CHARACTERISTICS

The relays are generally available in the following current ranges:

Range			Taps				
.5 - 2	2.5 0.5	0.6	0.8	1.0	1.5	2.0	2.5
2 - 6	3 2	2.5	3	3.5	4	5	6
4 - 12	2 4	5	6	7	8	10	12

The time vs. current characteristics are shown in Figs. 7 to 13. These characteristics give the contact closing time for the various time dial settings when the indicated multiples of tap value current are applied to the relay.

ITH Unit

The unit has a 2 to 1 range of pick-up adjustment with a 90% or greater drop-out ratio. The only adjustment necessary when making settings within the nominal range is the positioning of the core screw. At the maximum end of the range the drop-out ratio

TYPE COM-2 RELAY

					VOLT AMPERES**				
AMPERE RANGE	TAP	CONTINUOUS RATING (AMPERES)	ONE SECOND RATING* (AMPERES)	POWER FACTOR ANGLE ϕ	AT TAP VALUE CURRENT	AT 3 TIMES TAP VALUE CURRENT	AT 10 TIMES TAP VALUE CURRENT	AT 20 TIMES TAP VALUE CURRENT	
	0.5	0.91	28	58	4.8	39.6	256	790	
	0.6	0.96	28	57	4.9	39.8	270	851	
	0.8	1.18	28	53	5.0	42.7	308	1024	
0.5/2.5	1.0	1.37	28	50	5.3	45.4	348	1220	
	1.5	1.95	28	40	6.2	54.4	435	1740	
	2.0	2.24	28	36	7.2	65.4	580	2280	
	2.5	2.50	28	29	7.9	73.6	700	2850	
	2.0	3.1	110	59	5.04	38.7	262	800	
	2.5	4.0	110	55	5.13	39.8	280	920	
	3.0	4.4	110	51	5.37	42.8	312	1008	
2/6	3.5	4.8	110	47	5.53	42.8	329	1120	
	4.0	5.2	110	45	5.72	46.0	360	1216	
	5.0	5.6	110	41	5.90	50.3	420	1500	
	6.0	6.0	110	37	6.54	54.9	474	1800	
	4.0	7.3	230	65	4.92	39.1	268	848	
	5.0	8.0	230	50	5.20	42.0	305	1020	
	6.0	8.8	230	47	5.34	44.1	330	1128	
4/12	7.0	9.6	230	46	5.35	45.8	364	1260	
	8.0	10.4	230	43	5.86	49.9	400	1408	
	10.0	11.2	230	37	6.6	55.5	470	1720	
	12.0	12.0	230	34	7.00	62.3	528	2064	

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

 $[\]phi$ Degrees current lags voltage at tap value current.

^{**} Voltages taken with Rectox type voltmeter.

COM-5 LONG TIME AND COM-6 DEFINITE MINIMUM TIME RELAYS

VOLT AMPERES**

					VOLI AMPERES				
		CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES	
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE	
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT	
	(0.5	2	56	69	3.92	20.6	103	270	
	(0.6	2.2	56	68	3.96	20.7	106	288	
	(0.8	2.5	56	67	3.96	21	114	325	
0.5/2.5	(1.0	2.8	56	66	4.07	21.4	122	360	
	(1.5	3.4	56	62	4.19	23.2	147	462	
	(2.0	4.0	56	60	4.30	24.9	168	548	
	(2.5	4.4	56	58	4.37	26.2	180	630	
	(2	8	230	67	3.88	21	110	308	
	(2.5	8.8	230	66	3.87	21.6	118	342	
	(3	9.7	230	64	3.93	22.1	126	381	
2/6	(3.5	10.4	230	63	4.09	23.1	136	417	
	(4	11.2	230	62	4.08	23.5	144	448	
	(5	12.5	230	59	4.20	24.8	162	540	
	(6	13.7	230	57	4.38	26.5	183	624	
	(4	16	460	65	4.00	22.4	126	376	
	(5	18.8	460	63	4.15	23.7	143	450	
	(6	19.3	460	61	4.32	25.3	162	531	
4/12	(7	20.8	460	59	4.27	26.4	183	611	
	(8)	22.5	460	56	4.40	27.8	204	699	
	(10	25	460	53	4.60	30.1	247	880	
	(12	28	460	47	4.92	35.6	288	1056	
	·	==	•••				200	1000	

COM-7 MODERATELY INVERSE TIME RELAY

VOLT AMPERES**

						VOL1 Z	MMLEKED	
AMPERE		CONTINUOUS RATING	ONE SECOND RATING*	POWER FACTOR	AT TAP VALUE	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
TUINGE		(IIII EILES)	(TIMI EIGES)	THE P	COMMENT			COMMENT
	(0.5	2	56	68	3.88	20.7	103	278
	(0.6	2.2	56	67	3.93	20.9	107	288
	(0.8	2.5	56	66	3.93	21.1	114	320
0.5/2.5	(1.0	2.8	56	64	4.00	21.6	122	356
	(1.5	3.4	56	61	4.08	22.9	148	459
	(2.0	4.0	56	58	4.24	24.8	174	552
	(2.5	4.4	56	56	4.38	25.9	185	640
	(2	8	230	66	4.06	21.3	111	306
	(2.5	8.8	230	63	4.07	21.8	120	342
	(3	9.7	230	63	4.14	22.5	129	366
2/6	(3.5	10.4	230	62	4.34	23.4	141	413
	(4	11.2	230	61	4.34	23.8	149	448
	(5	12.5	230	59	4.40	25.2	163	530
	(6	13.7	230	58	4.62	27	183	624
	(4	16	460	64	4.24	22.8	129	392
	(5	18.8	460	61	4.30	24.2	149	460
4/12	(6	19.3	460	60	4.62	25.9	168	540
-,	(7	20.8	460	58	4.69	27.3	187	626
	(8	22.5	460	55	4.80	29.8	211	688
	(10	25	460	51	5.20	33	260	860
	(12	28	460	46	5.40	37.5	308	1032
	• -					•		

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

φ Degrees current lags voltage at tap value current.

^{••} Voltages taken with Rectox type voltmeter.

COM-8 INVERSE TIME AND COM-9 VERY INVERSE TIME RELAYS

						VOLT A	MPERES**	
		CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
								•
	(0.5	2	56	72	2.38	21	132	350
	(0.6	2.2	56	71	2.38	21	134	365
	(0.8	2.5	56	69	2.40	21.1	142	400
0.5/2.5	(1.0	2.8	56	67	2.42	21.2	150	440
	(1.5	3.4	56	62	2.51	22	170	530
	(2.0	4.0	56	57	2.65	23.5	200	675
	(2.5	4.4	56	53	2.74	24.8	228	800
						, i		
	(2	8	230	70	2.38	21	136	360
	(2.5	8.8	230	66	2.40	21.1	142	395
	(3	9.7	230	64	2.42	21.5	149	430
2/6	(3.5	10.4	230	62	2.48	22	157	470
	(4	11.2	230	60	2.53	22.7	164	500
	(5	12.5	230	58	2.64	24	180	580
	(6	13.7	230	56	2.75	25.2	198	660
					A \ /			
	(4	16	460	68	2.38	21.3	146	420
	(5	18.8	460	63	2.46	21.8	158	480
	(6	19.3	460	60	2.54	22.6	172	550
4/12	(7	20.8	460	57	2.62	23.6	190	620
	(8	22.5	460	54	2.73	24.8	207	700
	(10	25	460	48	3.00	27.8	248	850
	(12	28	460	45	3.46	31.4	292	1020

TYPE COM-11 RELAY

					VOLT AMPERES**					
		CONTINUOUS	ONE SECOND	POWER	АТ	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES		
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE		
RANGE	TAP	(AMPERES)	(AMPERES)	$ANGLE \phi$	CURRENT	CURRENT	CURRENT	CURRENT		
				<u></u>						
	0.5	1.7	56	36	0.72	6.54	71.8	250		
	0.6	1.9	56 56	34	0.75	6.80	7 5.0	26 7		
	0.8	2.2	56	30	0.81	7.46	84.0	298		
0.5/2.5	1.0	3.5	56	27	0.89	8.30	93.1	330		
	1.5	3.0	56	22	1.13	10.04	115.5	411		
	2.0	3.5	56	17	1.30	11.95	136.3	502		
	2.5	3.8	56	16	1.48	13.95	160.0	610		
		X								
	2.0	7.0	230	32	0.73	6.30	74.0	264		
	2.5	7.8	230	30	0.78	7.00	78.5	285		
	3.0	8,3	230	27	0.83	7.74	84.0	309		
2/6	3.5	9.0	230	24	0.88	8.20	89.0	340		
	4.0	10.0	230	23	0.96	9.12	102.0	372		
	5.0	11.0	230	20	1.07	9.80	109.0	430		
	6.0	12.0	230	20	1.23	11.34	129.0	504		
	4.0	14	460	29	0.79	7.08	78.4	296		
	5.0	16	460	25	0.89	8.00	90.0	340		
	6.0	17	460	22	1.02	9.18	101.4	3 7 8		
4/12	7.0	18	460	20	1.10	10.00	110.0	454		
	8.0	20	460	18	1.23	11.1	124.8	480		
	10.0	22	460	17	1.32	14.9	131.6	600		
	12.0	26	460	16	1.8	16.3	180.0	720		

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

φ Degrees current lags voltage at tap value current.

Voltages taken with Rectox type voltmeter.

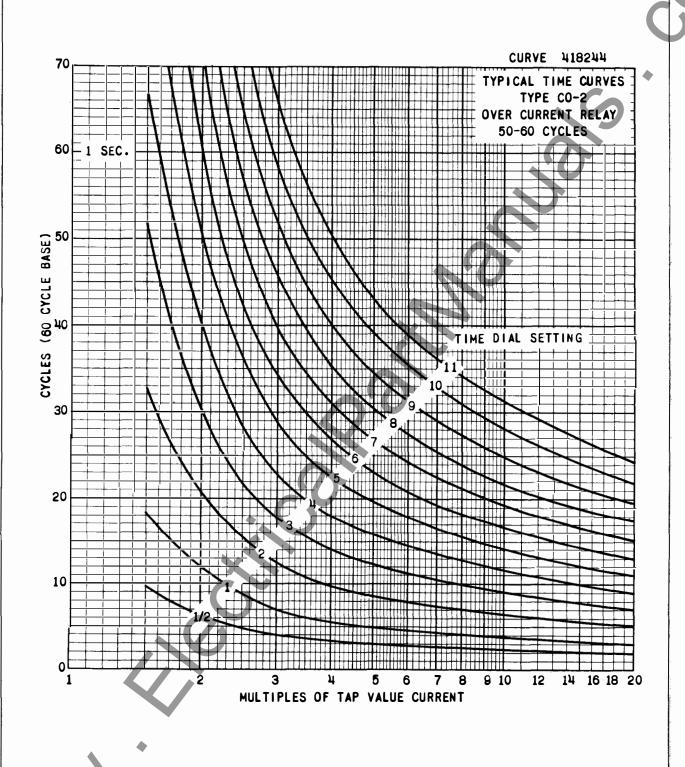


Fig. 7. Typical Time Curves of the Type COM-2 Relay.

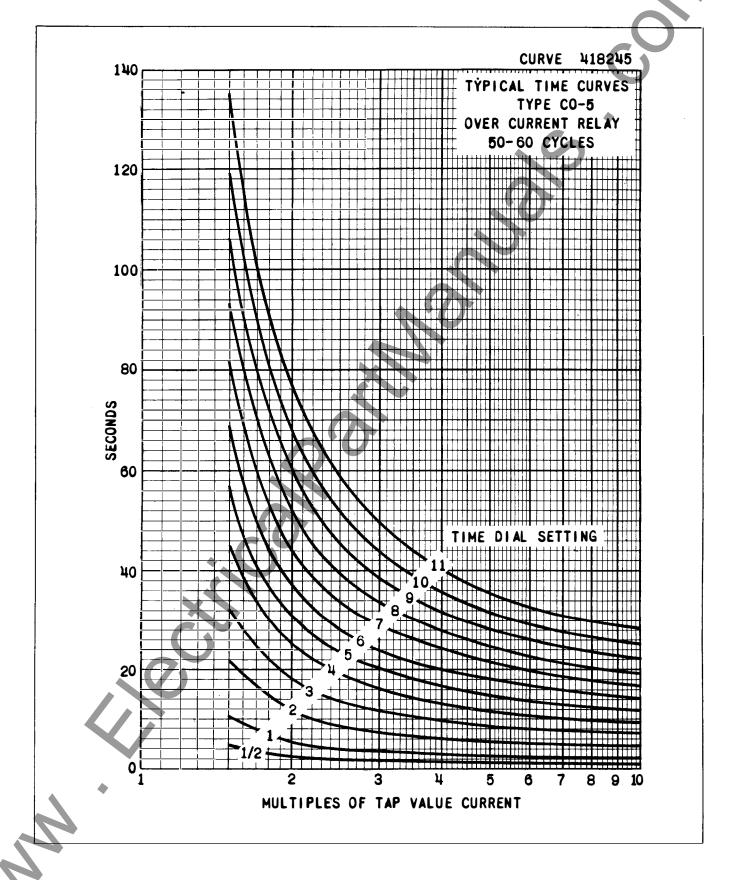


Fig. 8. Typical Time Curves of the Type COM-5 Relay.

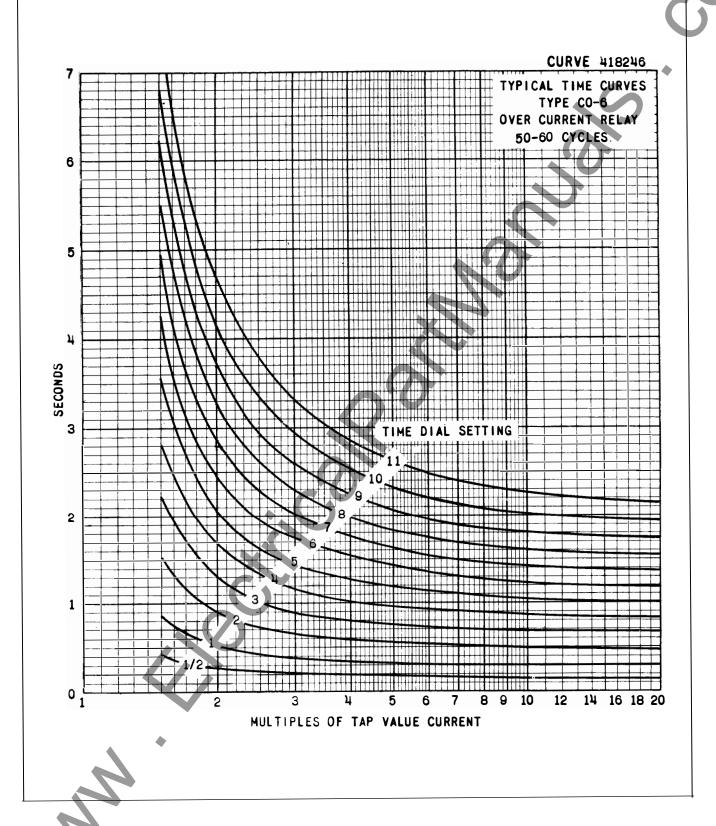


Fig. 9. Typical Time Curves of the Type COM-6 Relay.

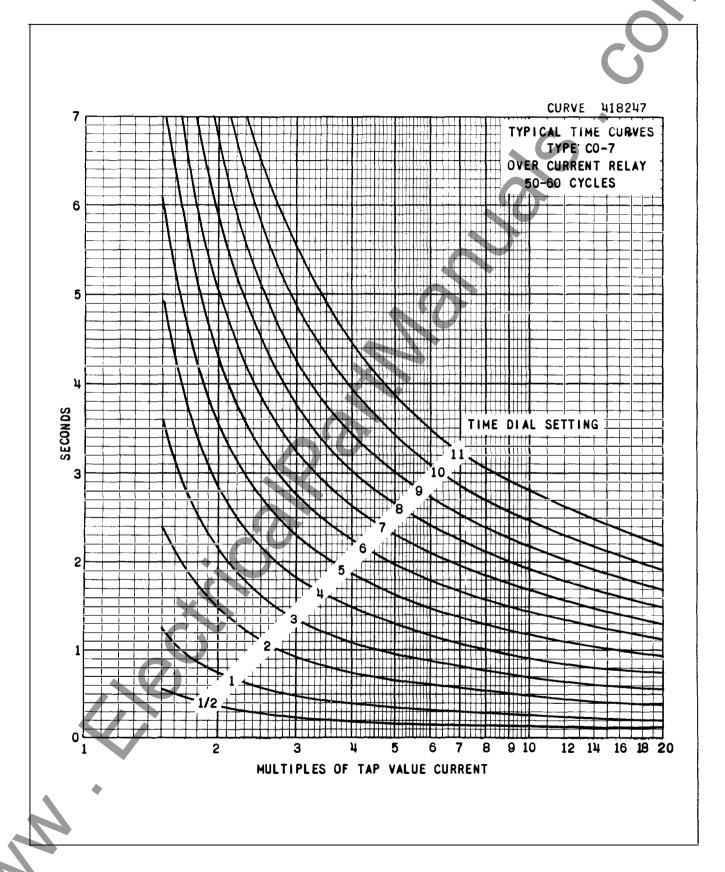


Fig. 10. Typical Time Curves of the Type COM-7 Relay.

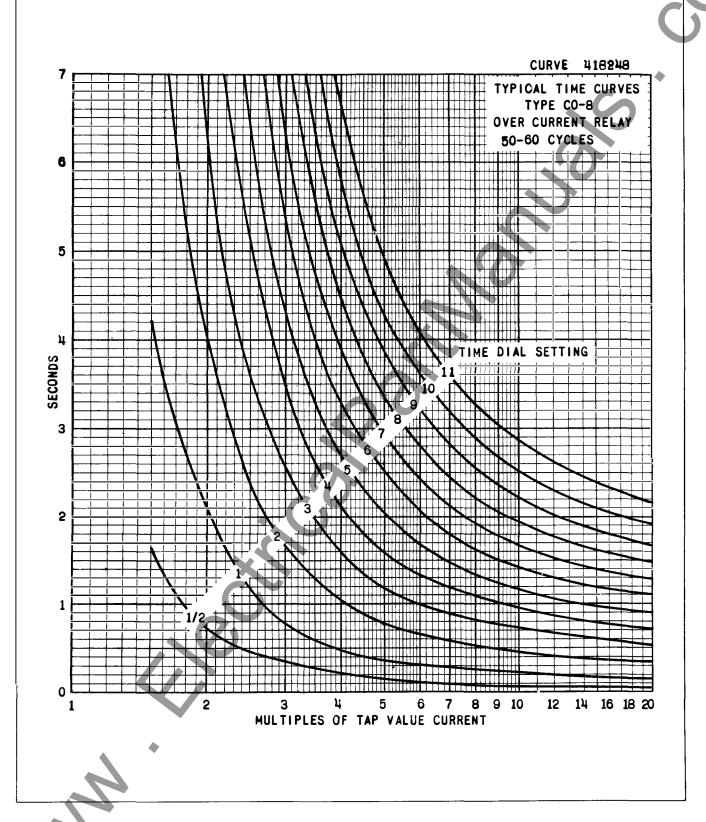


Fig. 11. Typical Time Curves of the Type COM-8 Relay.

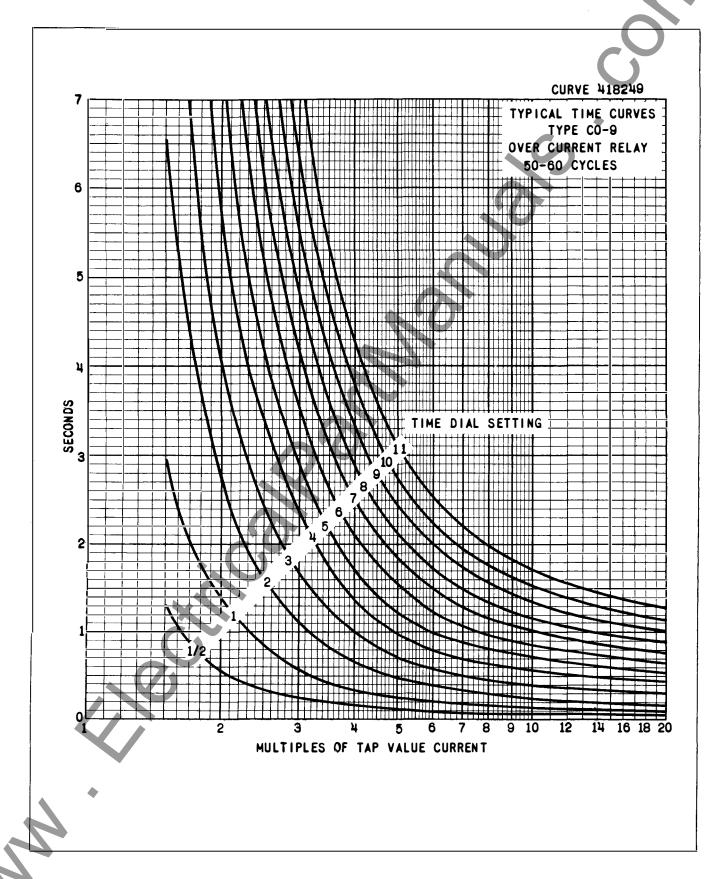


Fig. 12. Typical Time Curves of the Type COM-9 Relay.

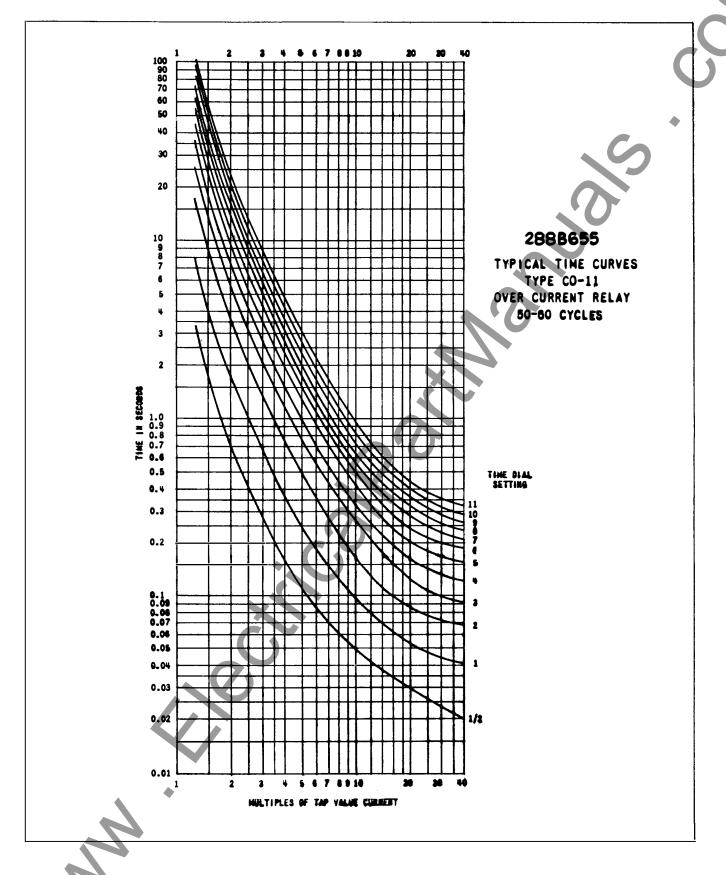


Fig. 13. Typical Time Curves of the Type COM-11 Relay.

will be greater than 90% and it may be desirable to lower the contact shield to increase the contact gap and follow. The range may be increased by lowering the plunger after the core screw has been set at its maximum rated position. If the plunger is lowered to increase the pick-up current value, then at 300% of minimum trip the drop-out ratio is 60% of the pick-up current. At 400% of minimum trip the drop-out ratio is 45% of the pick-up current.

The burden of this unit at minimum pick-up is 0.44 V.A. at 60 cycles.

Continuous current rating of the coil is 2 times minimum pickup value.

One second rating is approximately 45 times minimum pick-up.

Characteristic operating times for the unit over its nominal range are:

Less than 1 cycle at 200% of trip value 1/2 cycle at 500% of trip value 1/4 cycle at 1000% of trip value

Trip Circuit

The main contacts will safely close 30 amperes at 250 volts d-c and the seal-in contacts of the indicating contactor switch will safely carry this current long enough to trip a circuit breaker.

The IIT and ITH contacts will safely close 30 amperes at 250 volts d-c, and will carry this current long enough to trip a breaker.

The indicating contactor switch has two taps provide a pickup setting of 0.2 or 2 amperes. To change taps requires connecting the lead located in front of the tap block to the desired setting by means of a screw connection.

Trip Circuit Constants

Contactor Switch -

0.2 ampere tap - 6.5 ohms d-c resistance

2.0 ampere tap - 0.15 ohms d-c resistance

SETTINGS

CO Unit

The overcurrent unit settings can be defined either by tap setting and time dial position or by tap

setting and a specific time of operation at some current multiple of the tap setting (e.g. 4 tap setting, 2 time dial position or 4 tap setting, 0.6 seconds at 6 times tap value current).

To provide selective circuit breaker operation, a minimum coordinating time of 0.3 seconds plus circuit breaker time is recommended between the relay being set and the relays with which coordination is to be effected.

The connector screw on the terminal plate above the time dial makes connections to various turns on the operating coil. By placing this screw in the various terminal plate holes, the relay will respond to multiples of tap value currents in accordance with the various typical time-current curves.

Caution

Since the tap block connector screw carries operating current, be sure that the screw is turned tight. In order to avoid opening the current transformer circuits when changing taps under load, connect the spare connector screw in the desired tap position before removing the other tap screw from the original tap position.

Instantaneous Reclosing

The factory adjustment of the CO unit contact provides a contact follow. Where instantaneous circuit breaker reclosing will be initiated upon the closure of the CO contact, this contact follow must be eliminated by loosening the stationary contact mounting screw, removing the contact plate and then replacing the plate with the bent end resting against the contact spring. With this change and the contact mounting screw tightened, the stationary contact will rest solidly against its backstop.

Indicating Contactor Switch (ICS)

No setting is required on the ICS unit except the selection of the 0.2 or 2.0 ampere tap setting. This selection is made by connecting the lead located in front of the tap block to the desired setting by means of the connecting screw. When the relay energizes a 125 or 250 volt d-c type WL relay switch, or equivalent, use the 0.2 ampere tap; for 48 volt d-c applications set in 2 tap and use Type WL relay coil S#304C209G01 or equivalent.

Indicating Instantaneous Trip (IIT)

The core screw must be adjusted to the value of

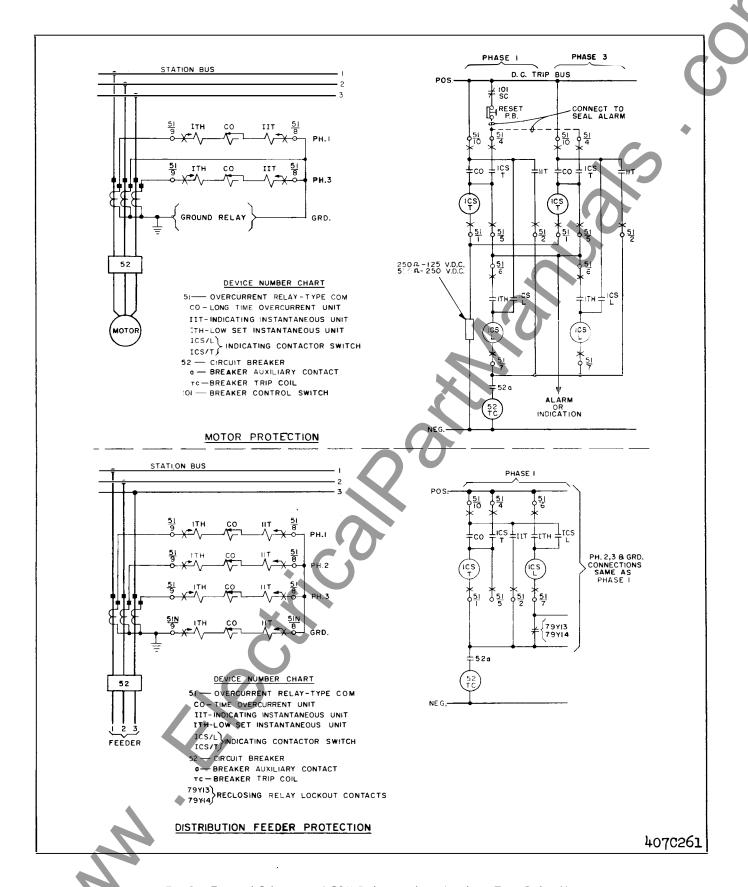


Fig. 14. External Schematic of COM Relays without Auxiliary Time-Delay Unit.

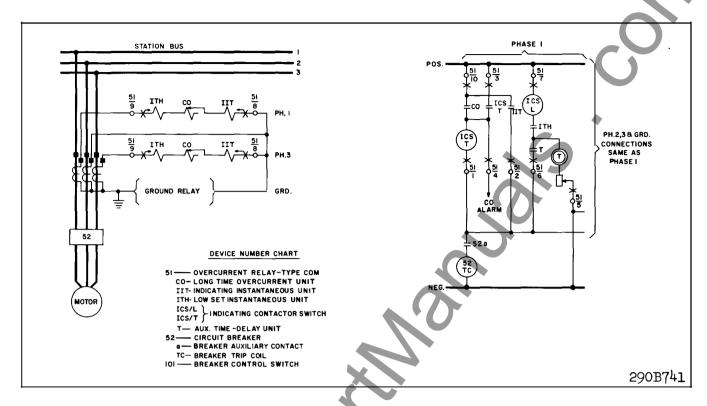


Fig. 15. External Schematic of COM Relays with Auxiliary Time-Delay Unit and ITH Unit.

pick-up current desired.

The nameplate data will furnish the actual current range that may be obtained from the HT unit.

ITH Unit

The unit, prior to shipment is adjusted for minimum pick-up value, that is, the lower value marked on the side of the frame. The following procedure is used when changing this setting over the indicated range where a 90% or higher drop-out ratio is desired. Connect the coil of the unit in series with an ammeter and adjustable load. Apply the desired pick-up current, then adjust the core screw until the plunger just picks up. Lock core screw securely in place.

If it is desired to set the unit for either a different drop-out ratio over the nominal range or for pickup values above the nominal range, then the following procedure should be followed.

With the unit in series with an ammeter and adjustable load, apply the desired drop-out current. Adjust the core screw until the plunger assembly just drops out. Then apply the desired pick-up current and adjust the Micarta contact shield till the plunger

assembly just picks up. It is recommended that the contact gap should not be made less than .013 of an inch. The contact gap may be determined by turning up the contact shield from the setting position until the contacts just close. One turn of the shield is equal to .018 of an inch contact gap.

Tapped Resistor (When Used)

The relay is shipped with the resistor tapped for 125 volt d-c service. See Fig. 17 or 18 for the proper positions for other d-c ratings. When viewed from the rear of the relay the red dot on terminal 1 of the resistor is on the extreme left.

INSTALLATION

The relays should be mounted on switchboard panels or their equivalent in a location free from dirt, mositure, excessive vibration and heat. Mount the relay vertically by means of the mounting stud for the type FT projection case or by means of the four mounting holes on the flange for the semi-flush type FT case. Either the stud or the mounting screws may be utilized for grounding the relay. The electrical connections may be made directly to the ter-

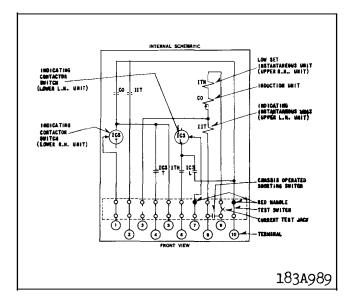


Fig. 16. Internal Schematic of the Type COM Relay, <u>without</u>
Auxiliary Time-Delay Unit, in FT21 Case. (For S#289B355A — Series of COM-5 Relays).

minals by means of screws for steel panel mounting or to the terminal stud furnished with the relay for thick panel mounting. The terminal stud may be easily removed or inserted by locking two nuts on the stud and then turning the proper nut with a wrench.

For detail information on the FT case refer to I.L. 41-076.

ADJUSTMENTS AND MAINTENANCE

The proper adjustments to insure correct operation of this relay have been made at the factory. Upon receipt of the relay no customer adjustments, other than those covered under "SETTINGS" should be required.

For relays which include an indicating instantaneous trip unit (IIT), the junction of the induction and indicating instantaneous trip coils is brought out to switch jaw #3. With this arrangement the overcurrent units can be tested separately.

Acceptance Check

The following check is recommended to insure that the relay is in proper working order:

1.Contact

a) By turning the time dial, move the moving

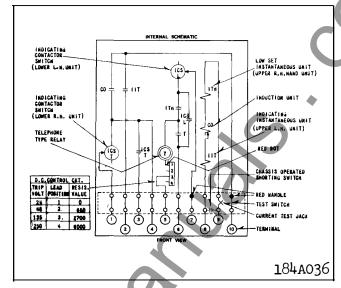


Fig. 17. Internal Schematic of the Type COM Relay with Auxiliary Time-Delay Unit and ITH Unit, in FT21 Case. (For S#289B456A — Series of COM-5 Relays).

contacts until they deflect the stationary contact to a position where the stationary contact is resting against its backstop. The index mark located on the movement frame should coincide with the "O" mark on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".

- b) For relays indentified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020". The placement of the various time dial positions in line with the index mark will give operating times as shown on the respective time-current curves. For double trip relays, the follow on the stationary contacts should be approximately 1/32".
- 2. Minimum Trip Current Set the time dial to position 6. Using lowest tap setting, alternately apply tap value current plus 3% and tap value current minus 3%. The moving contact should leave the backstop at tap value current plus 3% and should return to the backstop at tap value current minus 3%.

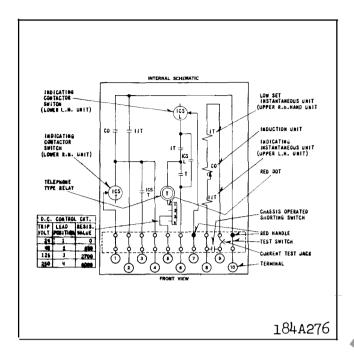


Fig. 18. Internal Schematic of the Type COM Relay, with Auxiliary Time-Delay Unit and IT Unit, in FT21

Case. (For S#289B511A – Series of COM-5 Relays).

3. <u>Time Curve</u> — Table I shows the time curve calibration points for the various types of relays. With the time dial set to the indicated position and on the lowest top setting, apply the currents specified by Table I, (e.g. for the COM-2, 3 and 20 times tap value current) and measure the operating time of the relay. The operating times should equal those of Table I plus or minus 5 percent.

For type COM-11 relay only, the 1.30 times tap value operating time from the number 6 time dial position is $54.9 \pm 5\%$ seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the nominal operating time by approximately 4%.

4. <u>Indicating Instantaneous Trip Unit (IIT)</u> — The core screw which is adjustable from the top of the trip unit determines the pickup value. The trip unit has a nominal ratio of adjustment of 1 to 4 and an accuracy within the limits of 10%.

The making of the contacts and target indication

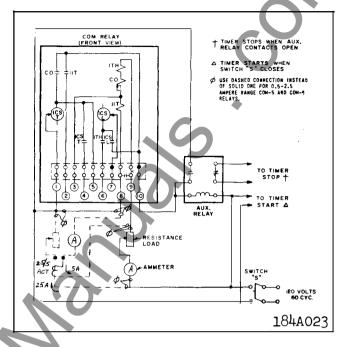


Fig. 19. Diagram of Test Connections for CO Unit of COM Relays.

should occur at approximately the same instant. Position the stationary contact for a minimum of 1/32" wipe. The bridging moving contact should touch both stationary contacts simultaneously.

Apply sufficient current to operate the IIT. The operation indicator target should drop freely.

5. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operation indicator target should drop freely.

The contact gap should be approximately .047" between the bridging moving contact and the adjustable stationary contacts. The bridging moving contact should touch both stationary contacts simultaneously.

6. High Drop-out Instantaneous Unit (ITH) — The plunger assembly should pickup and seal in at the minimum pickup current value stamped on the frame and drop out at least 90% of this value. The unit should maintain at least a 90% drop out ratio over the nominal range.

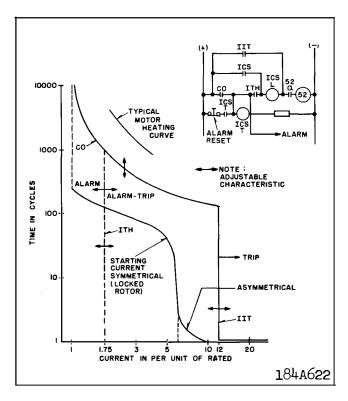


Fig. 20. Setting Example for Motor Protection Using S#289B355A — Relays without Auxiliary Time-Delay Unit.

The contact gap should not be less than .013 of an inch. Contact gap is determined as described under settings.

7. Auxiliary Time-Delay Unit (T) — For relays wired per Fig. 17 or 18, apply 100 volts d-c to terminals 5 and 7. Manually close the contacts of the ITH or IT unit in the top right-hand corner of the relay. The T unit should operate.

Routine Maintenance

All relays should be inspected and checked periodically to assure proper operation. Generally a visual inspection should call attention to any noticeable changes. A minimum suggested check on the relay system is to close the contacts manually to assure that the breaker trips and the target drops. Then release the contacts and observe that the reset is smooth and positive.

If an additional time check is desired, pass secondary current through the relay and check the time of operation. It is preferable to make this at several times pick-up current at an expected operating point for the particular application. For the 0.5 ampere

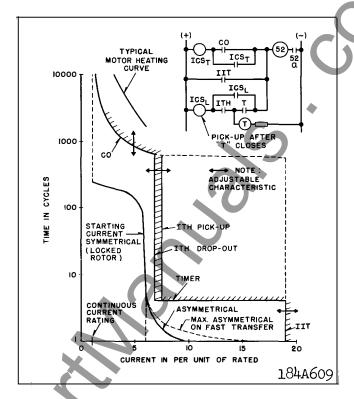


Fig. 21. Setting Example for Motor Protection Using S#289B456A — or S#289B511A — Relays <u>with</u> Auxiliary Time-Delay Unit.

range COM-5 and COM-6 induction units use the dashed test circuit in Fig. 19 as these relays are affected by a distorted wave form. With this connection the 25/5 ampere current transformers should be worked well below the knee of the excitation curve. (i.e. Use a 10L50 or better)

All contacts should be periodically cleaned. A contact burnisher #182A836H01 is recommended for this purpose. The use of abrasive material for cleaning contacts is not recommended, because of the danger of embedding small particles in the face of the soft silver and thus impairing the contact.

CALIBRATION

Use the following procedure for calibrating the relay if the relay has been taken apart for repairs or the adjustments disturbed. This procedure should not be used until it is apparent that the relay is not in proper working order. (See "Acceptance Check")

CO Unit

- 1. Contact
- a) By turning the time dial, move the moving

contacts until they deflect the stationary contact to a position where the stationary contact is resting against its backstop. The index mark located on the movement frame should coincide with the "O" mark on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".

- b) For relays identified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020".
- 2. Minimum Trip Current The adjustment of the spring tension in setting the minimum trip current value of the relay is most conveniently made with the damping magnet removed.

With the time dial set on "O", wind up the spiral spring by means of the spring adjuster until approximately 6-3/4 convolutions show.

Set the relay on the lowest tap setting, the time dial to position 6.

Adjust the control spring tension so that the moving contact will leave the backstop at tap value current +1.0% and will return to the backstop at tap value current -1.0%.

3. <u>Time Curve Calibration</u> - Install the permanent magnet.

Apply the indicated current per Table I for permanent magnet adjustment (e.g. COM-8, 2 times tap value) and measure the operating time. Adjust the permanent magnet keeper until the operating time corresponds to the value of Table I.

For Type COM-11 Relay only, the 1.3 times tap value operating time from the number 6 time dial position is $54.9 \pm 5\%$ seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the

nominal operating time by approximately 4%. If the operating time at 1.3 times tap value is not within these limits, a minor adjustment of the control spring will give the correct operating time without any undue effect on the minimum pick-up of the relay. This check is to be made after the 2 times tap value adjustment has been completed.

Apply the indicated current per Table I for the electromagnet plug adjustment (e.g. COM-8, 20 times tap value) and measure the operating time. Adjust the proper plug until the operating time corresponds to the value in Table I. (Withdrawing the left hand plug, front view, increases the operating time and withdrawing the right hand plug, front view, decreases the time.) In adjusting the plugs, one plug should be screwed in completely and the other plug run in or out until the proper operating time has been obtained.

Recheck the permanent magnet adjustment. If the operating time for this calibration point has changed, readjust the permanent magnet and then recheck the electromagnet plug adjustment.

4. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operating indicator target should drop freely.

5. Indicating Instantaneous Trip Unit (IIT)

The core screw must be adjusted to the value of pick-up current desired.

The nameplate date will furnish the actual current range that may be obtained from the IIT unit.

6. High Drop-out Instantaneous Unit (ITH) — The factory adjustment of the position of the plunger steel provides a drop-out ratio of 90% over the nominal range. But, in the event a considerable amount of material is removed from the contacts, due to repeated operations, burnishing, etc., the drop-out ratio may fall below 90%. If this occurs, then the plunger steel should be turned down to compensate. If the plunger steel setting is changed for the above or any other reasons, the following procedure should be used to recalibrate the relay.

Set the corescrew at ten turns up from its bottom position. Adjust the plunger steel position on the plunger until the current value at which the plunger drops-out is 90% of the maximum rated current. Then set the contact gap at 3/4 of a turn down, and adjust the core screw for pick-up. Drop-out value will normally be above 90% of this setting. If desired, the contact gap and follow may be increased by lowering the contact shield and readjusting the core screw for pick-up.

RENEWAL PARTS

Repair work can be done most satisfactorily at the factory. However, interchangeable parts can be furnished to the customers who are equipped for doing repair work. When ordering parts, always give, the complete nameplate data.

TABLE 1

TIME CURVE CALIBRATION DATA - 50 & 60 CYCLES

	PERMANENT	Γ MAGNET ADJUSTN	ELECTROMAGI	ELECTROMAGNET PLUGS		
RELAY	TIME DIAL	CURRENT (MULTIPLES OF	OPERATING TIME	CURRENT (MULTIPLES OF	OPERATING TIME	
TYPE	POSITION	TAP VALUE)	SECONDS	TAP VALUE)	SECONDS	
COM-2	6	3	0.57	20	0.22	
COM-5	6	2	37.80	10	14.30	
COM-6	6	2	2.46	20	1.19	
COM-7	6	2	4.27	20	1.11	
COM-8	6	2	13.35	20	1.11	
COM-9	6	2	8.87	20	0.65	
COM-11	6	2	11.27	20	0. 24 \(\triangle \)	

 \triangle For 50 cycle CO-11 relay 20 times operating time limits are 0.24 + 10%, -5%.

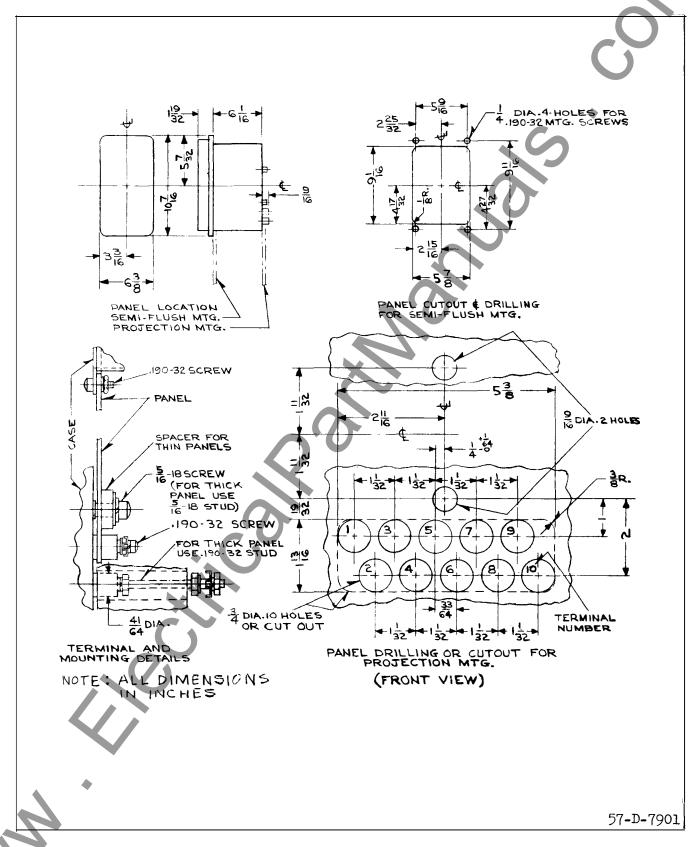


Fig. 22. Outline & Drilling Plan for the Type COM Relay in the FT21 Case.

WESTINGHOUSE ELECTRIC CORPORATION RELAY-INSTRUMENT DIVISION NEWARK, N. J.

Printed in U.S.A.



INSTALLATION . OPERATION . MAINTENANCE

INSTRUCTIONS

TYPE COM OVERCURRENT RELAY

CAUTION Before putting relays into service, remove all blocking which may have been inserted for the purpose of securing the parts during shipment, make sure that all moving parts operate freely, inspect the contacts to see that they are clean and close properly, and operate the relay to check the settings and electrical connections.

APPLICATION

COM relays may be applied wherever two instantaneous overcurrent units are required in addition to the time overcurrent unit. For example Fig. 20 shows how the COM-5 (long time) relay is used for motor protection, with the CO-5 unit alarming just above motor full load and tripping at higher overloads through the low set instantaneous unit; the high set instantaneous unit is set above locked rotor current to provide high speed tripping of heavy faults. Fig. 21 shows how another variation of COM-5 provides improved fault protection for a motor by delaying ITH tripping by 5 to 6 cycles to override the assymetrical starting current.

The relay with auxiliary time-delay unit is also available with the IT Unit (clapper type) rather than the ITH (plunger type). The highest range available in the ITH design is 16-32 amperes.

The COM without the auxiliary time-delay unit may also be utilized for distribution line protection, with the low set instantaneous locked-out by the reclosing relay, and with the high set unit left in service to provide high speed clearing of close-infaults. See Fig. 14 for the connections of this application.

CONTENTS

This instruction leaflet applies to the following types of relays:

Type COM- 2 Short Time Relay

COM- 5 Long Time Relay

COM- 6 Definite Minimum Time Relay

COM- 7 Moderately Inverse Time Relay

COM- 8 Inverse Time Relay

COM- 9 Very Inverse Time Relay

COM-11 Extremely Inverse Time Relay

Each of these is available with or without a 5-6 * cycle (85 to 100 millisecond) time-delay unit.

CONSTRUCTION AND OPERATION

The type COM relays consist of a time-overcurrent unit (CO), two indicating contactor switches (ICS), a indicating instantaneous trip unit (IIT) and a high drop out instantaneous unit (ITH). The principal component parts of the relay are shown in Figures 1-6.

Electromagnet

The electromagnets for the types COM-5, COM-6, COM-7, COM-8 and COM-9 relays have a main tapped coil located on the center leg of an "E" type laminated structure that produces a flux which divides and returns through the outer legs. A shading coil causes the flux through the left leg to lag the main pole flux. The out-of-phase fluxes thus produced in the air gap cause a contact closing torque.

The electromagnets for the types COM-2 and COM-11 relays have a main coil consisting of a tapped primary winding and a secondary winding. Two identical coils on the outer legs of the lamination structure are connected to the main coil secondary in a manner so that the combination of all the fluxes produced by the electromagnet result in out-of-phase fluxes in the air gap. The out-of-phase air gap fluxes produced cause a contact closing torque.

All possible contingencies which may arise during installation, operation, or maintenance, and all details and variations of this equipment do not purport to be covered by these instructions. If further information is desired by purchaser regarding his particular installation, operation or maintenance of his equipment, the local Westinghouse Electric Corporation representative should be contacted.

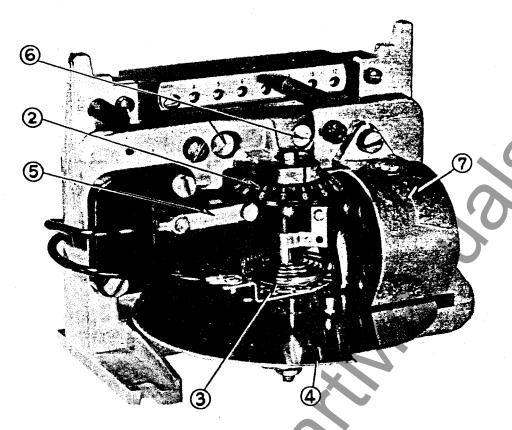


Fig. 1. Time Overcurrent Unit (Front View). 1-Tap Block. 2-Time Dial. 3-Control Spring Assembly. 4-Disc. 5-Stationary Contact Assembly. 6-Magnetic Plugs. 7-Permanent Magnet.

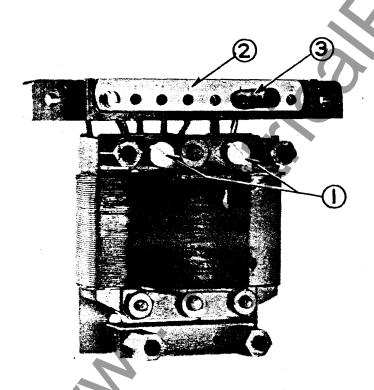


Fig. 2. "E" Type Electromagnet. 1-Magnetic Plugs. 2-Tap Block. 3-Tap Screw.

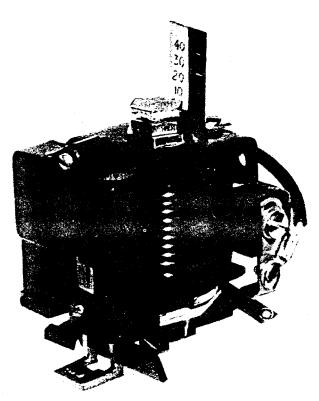


Fig. 3. Indicating Instantaneous Trip Unit (IIT).

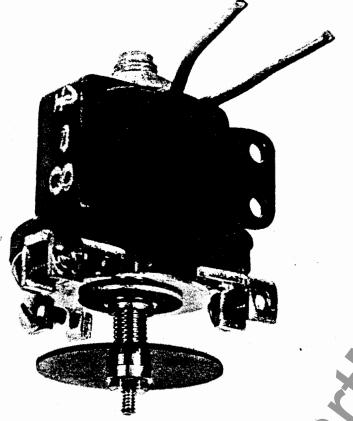
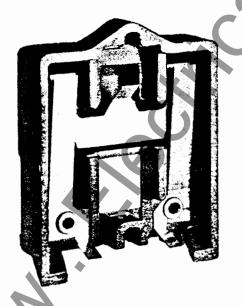




Fig. 4. High Drop-Out Instantaneous Trip Unit (ITH).

Fig. 5. Plunger Assembly for ITH Unit.





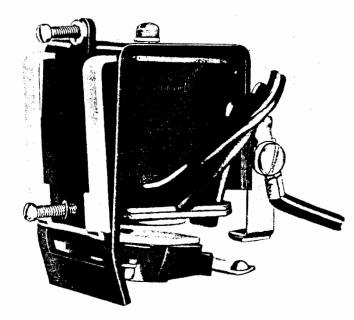


Fig. 6. Indicating Contactor Switch (ICS).

Indicating Contactor Switch Unit (ICS)

The d-c indicating contactor switch is a small clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes the moving contacts bridge two stationary contacts, completing the trip circuit. Also during this operation two fingers on the armature deflect a spring located on the front of the switch, which allows the operation indicator target to drop.

The front spring, in addition to holding the target, provides restraint for the armature and thus controls the pickup value of the switch.

Indicating Instantaneous Trip Unit (IIT)

The instantaneous trip unit is a small a-c operated clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes, the moving contacts bridge two stationary contacts completing the trip circuit. Also, during the operation, two fingers on the armature deflect a spring located on the front of the switch which allows the operation indicator target to drop.

A core screw accessible from the top of the switch provides the adjustable pickup range. The minimum and maximum pick-up points are indicated on the scale which is located to the rear of the core screw.

High Drop-Out Instantaneous Trip Unit (ITH)

The high drop-out instantaneous trip unit is a small solenoid type device (Fig. 4). A plunger assembly (Fig. 5) rides up and down on a vertical guide rod in the center of the solenoid coil. The plunger assembly consists of a bushing which is threaded on the moving plunger and locked in place by a nut, and a silver disc which rests on a helical compression spring at the lower end of the plunger. The guide rod is fastened to the stationary core which in turn is held in place by the insulating plate on which the stationary contacts are mounted. The stationary core consists of two steel sections separated by a nonmagnetic ring. This non-magnetic ring provides an air gap in which the plunger steel floats. When the coil is energized, the plunger assembly moves upward carrying the silver disc which bridges three conicalshaped stationary contacts. In this position the helical spring is compressed and the plunger is free to

move while the contact disc remains stationary. Thus, a-c vibrations of the plunger assembly are prevented from causing contact chattering. A Micarta disc which acts as a shield for the contact plate, screws on the bottom of the guide rod and is locked in position by a small nut. The adjustable core screw in the top of the frame provides the principal means for adjusting the current operating values.

The ITH unit is a current operated device which will pick-up within the range stamped on the side of the frame and drop-out at 90% of the pick-up current value. The position of the core screw determines the pick-up value for a particular contact gap. The 90% drop-out ratio is accomplished through the right combination of plunger steel setting, electrical pull and spring strength. The most important factor in the adjustment of the unit is the correct positioning of the plunger steel with respect to the stationary core air gap.

Auxiliary Time-Delay Unit (T) - Where Used

This slugged telephone type unit, in conjunction with a tapped resistor, provides a 5-6 cycle delay on pickup. The resistor in the rear of the relay is tapped for use with 24, 48, 125 or 250 volt d-c supply, as shown in the internal schematics of Figs. 17 and 18.

CHARACTERISTICS

The relays are generally available in the following current ranges:

R	ange		Taps					
. :	5 - 2.5	0.5	0.6	0.8	1.0	1.5	2.0	2.5
2	- 6	2	2.5	3	3.5	4	5	6
4	- 12	4	5	6	7	8	10	12

The time vs. current characteristics are shown in Figs. 7 to 13. These characteristics give the contact closing time for the various time dial settings when the indicated multiples of tap value current are applied to the relay.

ITH Unit

The unit has a 2 to 1 range of pick-up adjustment with a 90% or greater drop-out ratio. The only adjustment necessary when making settings within the nominal range is the positioning of the core screw. At the maximum end of the range the drop-out ratio

TYPE COM-2 RELAY

						VOLT A	MPERES**	
AMPERE RANGE	TAP	CONTINUOUS RATING (AMPERES)	ONE SECOND RATING* (AMPERES)	POWER FACTOR ANGLE ϕ	AT TAP VALUE CURRENT	AT 3 TIMES TAP VALUE CURRENT	AT 10 TIMES TAP VALUE CURRENT	AT 20 TIMES TAP VALUE CURRENT
	0.5	0.91	28	58	4.8	39.6	256	790
	0.6	0.96	28	57	4.9	39.8	270	851
	0.8	1.18	28	53	5.0	42.7	308	1024
0.5/2.5	1.0	1.37	28	50	5.3	45.4	348	1220
	1.5	1.95	28	40	6.2	54.4	435	1740
	2.0	2.24	28	. 36	7.2	65.4	580	2280
	2.5	2.50	28	29	7.9	73.6	700	2850
	2.0	3.1	110	59	5.04	38.7	262	800
	2.5	4.0	110	55	5.13	39.8	280	9 20
	3.0	4.4	110	51	5.37	42.8	312	1008
2/6	3.5	4.8	110	47	5.53	42.8	329	1120
	4.0	5.2	110	45	5.72	46.0	360	1216
	5.0	5.6	110	41	5.90	50.3	420	1500
	6.0	6.0	110	37	6.54	54.9	474	1800
	4.0	7.3	230	65	4.92	39.1	268	848
	5.0	8.0	230	50	5.20	42.0	305	1020
	6.0	8.8	230	47	5.34	44.1	330	1128
4/12	7.0	9.6	230	46	5.35	45.8	364	1260
	8.0	10.4	230	43	5.86	49.9	400	1408
	10.0	11.2	230	37	6.6	55.5	470	1720
	12.0	12.0	230	34	7.00	62.3	528	2064

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

 $[\]phi$ Degrees current lags voltage at tap value current.

^{**} Voltages taken with Rector type voltmeter.

COM-5 LONG TIME AND COM-6 DEFINITE MINIMUM TIME RELAYS

	4445	
VOLT	AMPER	FS

AMPERE		CONTINUOUS RATING	ONE SECOND RATING*	POWER FACTOR	AT TAP VALUE	AT 3 TIMES	AT 10 TIMES TAP VALUE	AT 20 TIMES TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
								
	(0.5	2	56	69	3.92	20.6	103	270
	(0.6	2.2	56	68	3.96	20.7	106	288
	(0.8	2.5	56	67	3.96	21	114	325
0.5/2.5	(1.0	2.8	56	66	4.07	21.4	122	360
	(1.5	3.4	56	62	4.19	23.2	147	462
	(2.0	4.0	56	60	4.30	24.9	168	548
	(2.5	4.4	56	58	4.37	26.2	180	630
r	(2	8	230	67	3.88	21	110	308
•	(2.5	8.8	230	66	3.87	21.6	118	342
	(3	9.7	230	64	3.93	22.1	126	381
2/6	(3.5	10.4	230	63	4.09	23.1	136	417
	(4	11.2	230	62	4.08	23.5	144	448
	(5	12.5	230	5 9	4.20	24.8	162	540
	(6	13.7	230	57	4.38	26.5	183	624
	(4	16	460	65	4.00	22.4	126	376
	(5	18.8	460	63	4.15	23.7	143	450
	(6	19.3	460	61	4.32	25.3	162	531
4/12	(7	20.8	460	59	4.27	26.4	183	611
	(8	22.5	460	56	4.40	27.8	204	699
	(10	25	460	53	4.60	30.1	247	880
	(12	28	460	47	4.92	35.6	288	1056

COM-7 MODERATELY INVERSE TIME RELAY

VOLT AMPERES**

				_,				
		CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
	(0.5	2	56	68	3.88	20.7	103	278
	(0.6	2.2	56	67	3.93	20.9	107	288
	(0.8	2.5	56	66·	3.93	21.1	114	32 0
0.5/2.5	(1.0	2.8	56	64	4.00	21.6	122	356
	(1.5	3.4	56	61	4.08	22.9	148	459
	(2.0	4.0	56	58	4.24	24.8	174	552
	(2.5	4.4	56	56	4.38	25.9	185	640
	(2	8	230	66	4.06	21.3	111	306
	(2.5	8.8	230	63	4.07	21.8	120	342
	(3	9.7	230	63	4.14	22.5	129	366
2/6	(3.5	10.4	230	62	4.34	23.4	141	413
	(4	11.2	230	61	4.34	23.8	149	448
	(5	12.5	230	5 9	4.40	25.2	163	530
	(6	13.7	230	58	4.62	27	183	624
	(4	16	460	64	4.24	22.8	129	392
	(5	18.8	460	61	4.30	24.2	149	460
4/12	(6	19.3	460	60	4.62	25. 9	168	540
	(7	20.8	460	58	4.69	27.3	187	626
	(8	22.5	460	55	4.80	29.8	211	688
	(10	25	460	51	5.20	33	260	860
	(12	28	460	46	5.40	37.5	308	1032

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

φ Degrees current lags voltage at tap value current.

^{**} Voltages taken with Rectox type voltmeter.

COM-8 INVERSE TIME AND COM-9 VERY INVERSE TIME RELAYS

					VOLT AMPERES**			
		CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
0.5/2.5	(0.5	2	56	72	2.38	21	132	350
	(0.6	2.2	56	71	2.38	21	134	365
	(0.8	2.5 ⁻	56 56	69	2.40	21.1	142	400
				67		21.2		
	(1.0	2.8	56		2.42		150	440
	(1.5	3.4	56	62	2.51	22	170	530
	(2.0	4.0	56	57	2.65	23.5	200	675
	(2.5	4.4	56	53	2.74	24.8	228	800
						· · ·		
2/6	(2	8	230	70	2.38	21	136	360
	(2:5	8.8	230	66	2.40	21.1	142	395
	(3	9.7	230	64	2.42	21.5	149	430
	(3.5	10.4	230	62	2.48	22	157	470
	(4	11.2	230	60	2.53	22.7	164	500
	(5	12.5	230	58	2.64	24	180	580
	(6	13.7	230	56	2.75	25.2	198	660
4/12	(4	16	460	68	2.38	21.3	146	420
	(5	18.8	460	63	2.46	21.8	158	480
	(6	19.3	460	. 60	2.54	22.6	172	550
	(7	20.8	460	57	2.62	23.6	190	620
	(8	22.5	460	54	2.73	24.8	207	700
	(10	25	460	48	3.00	27.8	248	850
	(12	28	460	45	3.46	31.4	- 292	1020
	122	20	100	40	3,10	31.4	232	1020

TYPE COM-11 RELAY

					VOLT AMPERES**				
		CONTINUOUS	ONE SECOND	POWER	АT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES	
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE	
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE	CURRENT	CURRENT	CURRENT	CURRENT	
									
	0.5	1.7	56	36	0.72	6.54	71.8	250	
	0.6	1.9	56	- 34	0.75	6.80	75.0	267	
	0.8	2.2	56 .	30	0.81	7.46	84.0	298	
0.5/2.5	1.0	3.5	56	27	0.89	8.30	93.1	3 30	
	1.5	3.0	56	22	1.13	10.04	115.5	411	
-	2.0	3.5	56	17	1.30	11.95	136.3	502	
	2.5	3.8	56	16	1.48	13.95	160.0	610	
	2.0	7.0	230	32	0.73	6.30	74.0	264	
	2.5	7.8	230	30	0.78	7.00	78.5	285	
	3.0	8.3	230	27	0.83	7.74	84.0	309	
2/6	3.5	9.0	230	24	0.88	8.20	89.0	340	
	4.0	10.0	230	23	0.96	9.12	102.0	372	
	5.0	11.0	230	20	1.07	9.80	109.0	430	
	6.0	12.0	230	20	1.23	11.34	129.0	504	
		•							
	4.0	14	460	29	0.79	7.08	78.4	296	
	5.0	16	460	25	0.89	8.00	90.0	340	
	6.0	17	460	22	1.02	9.18	101.4	378	
4/12	7.0	18	460	20	1.10	10.00	110.0	454	
	8.0	20	460	18	1.23	11.1	124.8	480	
	10.0	22	460	17	1.32	14.9	131.6	600	
	12.0	26	460	16	1.8	16.3	180.0	720	

[•] Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

φ Degrees current lags voltage at tap value current.

Voltages taken with Rector type voltmeter.

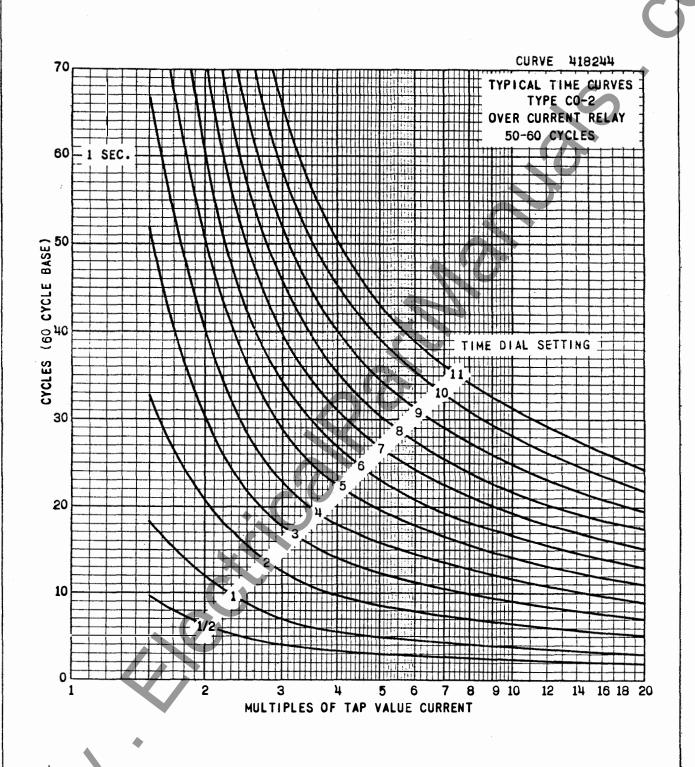


Fig. 7. Typical Time Curves of the Type COM-2 Relay.

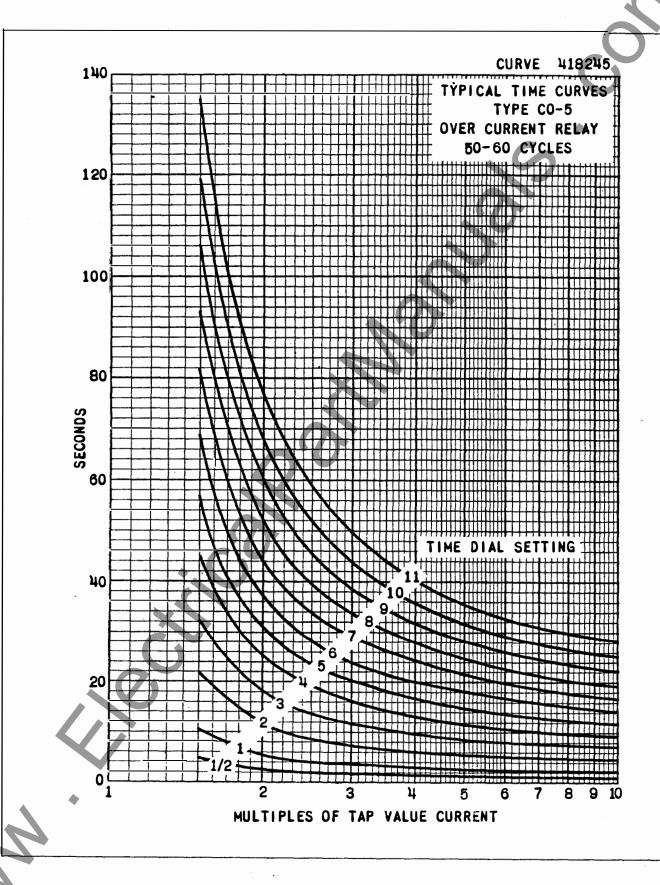


Fig. 8. Typical Time Curves of the Type COM-5 Relay.

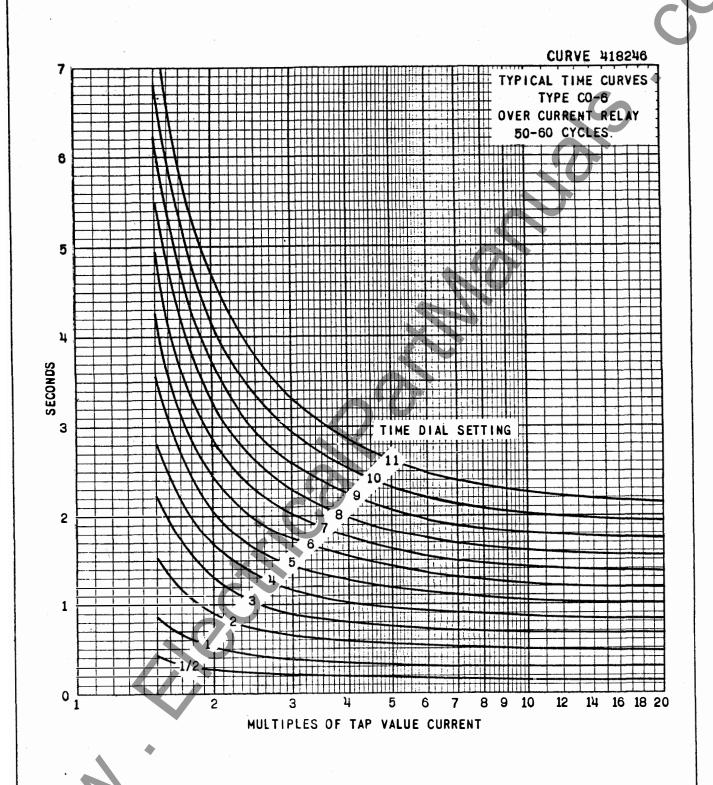


Fig. 9. Typical Time Curves of the Type COM-6 Relay.

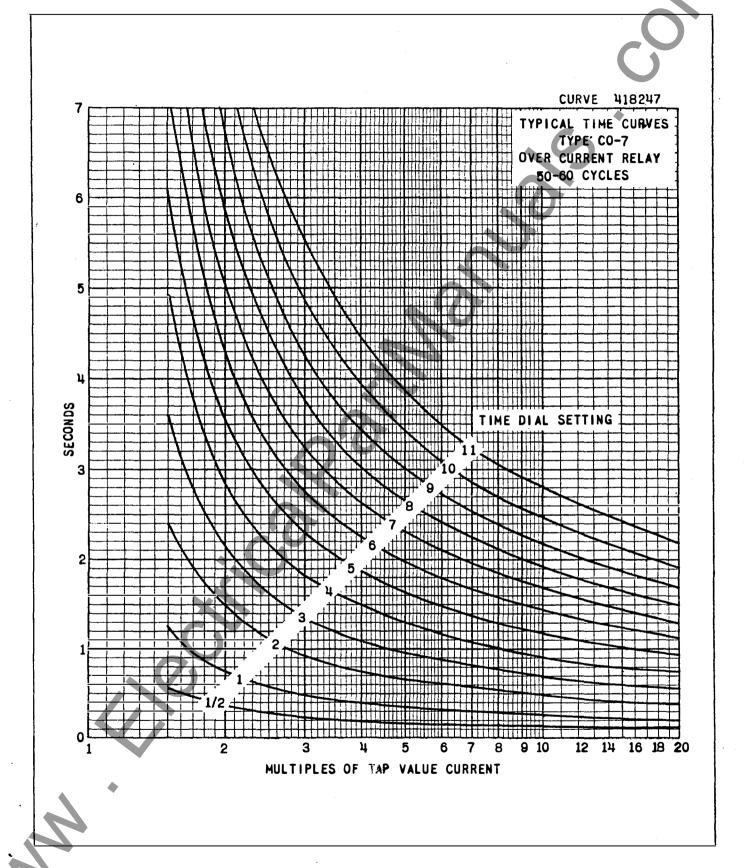


Fig. 10. Typical Time Curves of the Type COM-7 Relay.

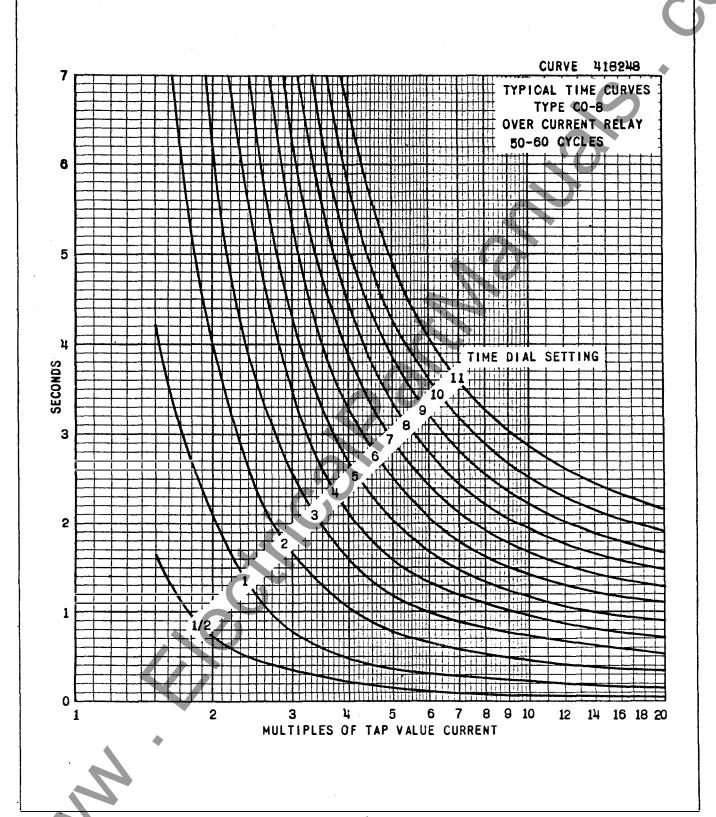


Fig. 11. Typical Time Curves of the Type COM-8 Relay.

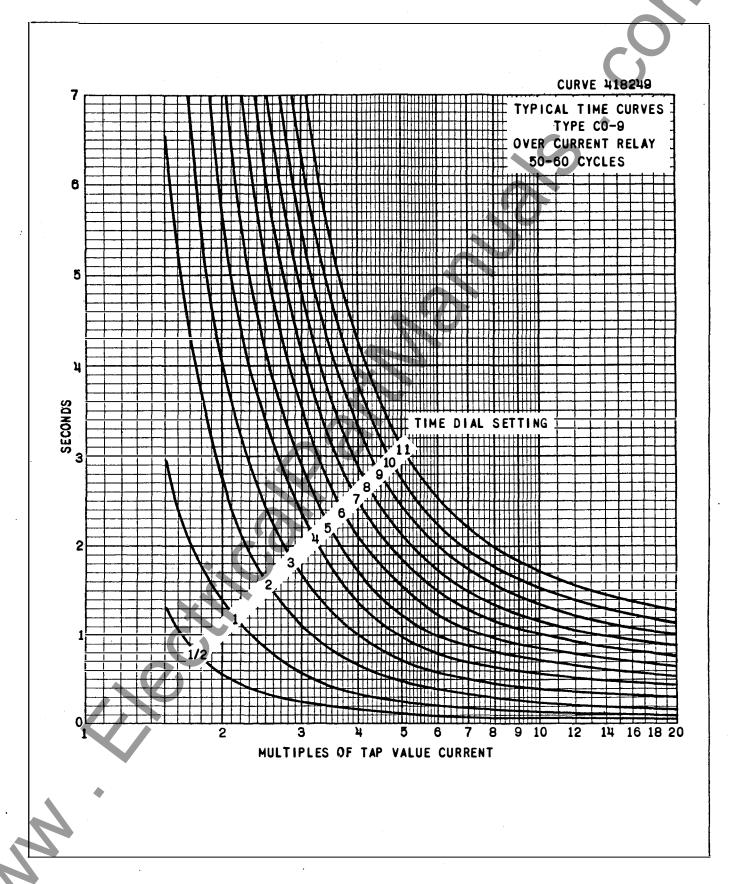


Fig. 12. Typical Time Curves of the Type COM-9 Relay.

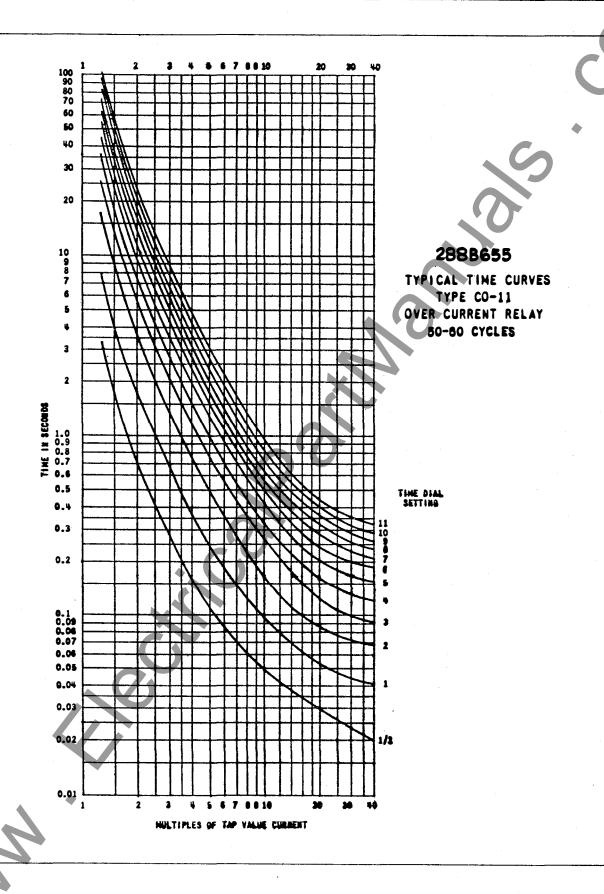


Fig. 13. Typical Time Curves of the Type COM-11 Relay.

will be greater than 90% and it may be desirable to lower the contact shield to increase the contact gap and follow. The range may be increased by lowering the plunger after the core screw has been set at its maximum rated position. If the plunger is lowered to increase the pick-up current value, then at 300% of minimum trip the drop-out ratio is 60% of the pick-up current. At 400% of minimum trip the drop-out ratio is 45% of the pick-up current.

The burden of this unit at minimum pick-up is 0.44 V.A. at 60 cycles.

Continuous current rating of the coil is 2 times minimum pickup value.

One second rating is approximately 45 times minimum pick-up.

Characteristic operating times for the unit, over its nominal range are:

Less than 1 cycle at 200% of trip value 1/2 cycle at 500% of trip value 1/4 cycle at 1000% of trip value

Trip Circuit

The main contacts will safely close 30 amperes at 250 volts d-c and the seal-in contacts of the indicating contactor switch will safely carry this current long enough to trip a circuit breaker.

The IIT and ITH contacts will safely close 30 amperes at 250 volts d-c, and will carry this current long enough to trip a breaker.

The indicating contactor switch has two taps provide a pickup setting of 0.2 or 2 amperes. To change taps requires connecting the lead located in front of the tap block to the desired setting by means of a screw connection.

Trip Circuit Constants

Contactor Switch -

0.2 ampere tap - 6.5 ohms d-c resistance

2.0 ampere tap - 0.15 ohms d-c resistance

SETTINGS

CO Unit

The overcurrent unit settings can be defined either by tap setting and time dial position or by tap

setting and a specific time of operation at some current multiple of the tap setting (e.g. 4 tap setting, 2 time dial position or 4 tap setting, 0.6 seconds at 6 times tap value current).

To provide selective circuit breaker operation, a minimum coordinating time of 0.3 seconds plus circuit breaker time is recommended between the relay being set and the relays with which coordination is to be effected.

The connector screw on the terminal plate above the time dial makes connections to various turns on the operating coil. By placing this screw in the various terminal plate holes, the relay will respond to multiples of tap value currents in accordance with the various typical time-current curves.

Caution

Since the tap block connector screw carries operating current, be sure that the screw is turned tight. In order to avoid opening the current transformer circuits when changing taps under load, connect the spare connector screw in the desired tap position before removing the other tap screw from the original tap position.

Instantaneous Reclosing


The factory adjustment of the CO unit contact provides a contact follow. Where instantaneous circuit breaker reclosing will be initiated upon the closure of the CO contact, this contact follow must be eliminated by loosening the stationary contact mounting screw, removing the contact plate and then replacing the plate with the bent end resting against the contact spring. With this change and the contact mounting screw tightened, the stationary contact will rest solidly against its backstop.

Indicating Contactor Switch (ICS)

No setting is required on the ICS unit except the selection of the 0.2 or 2.0 ampere tap setting. This selection is made by connecting the lead located in front of the tap block to the desired setting by means of the connecting screw. When the relay energizes a 125 or 250 volt d-c type WL relay switch, or equivalent, use the 0.2 ampere tap; for 48 volt d-c applications set in 2 tap and use Type WL relay coil S#304C209G01 or equivalent.

Indicating Instantaneous Trip (IIT)

The core screw must be adjusted to the value of

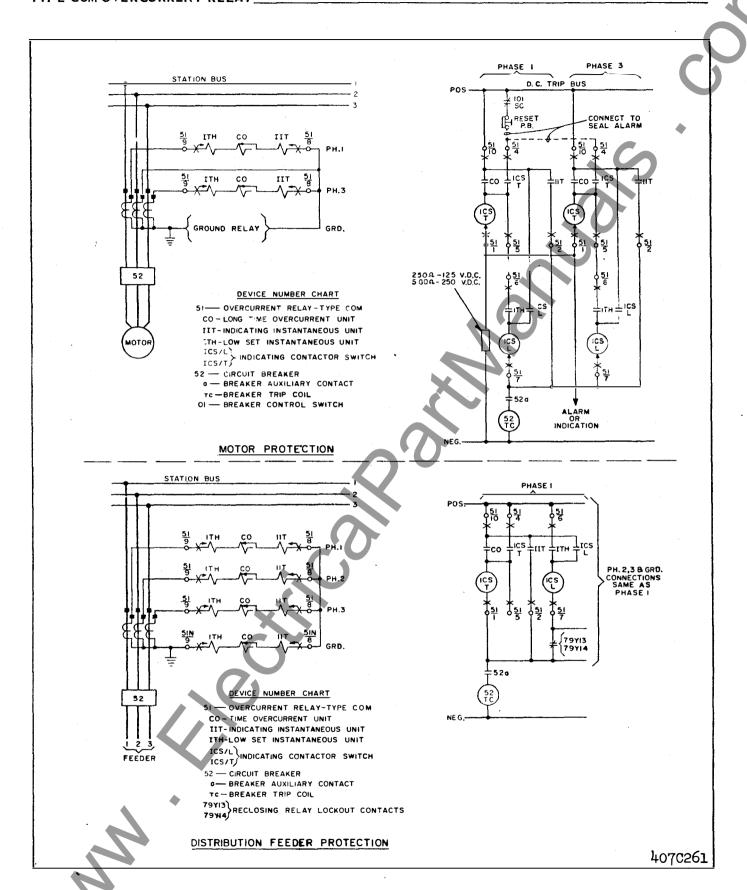

* Fig. 14. External Schematic of COM Relays without Auxiliary Time-Delay Unit.

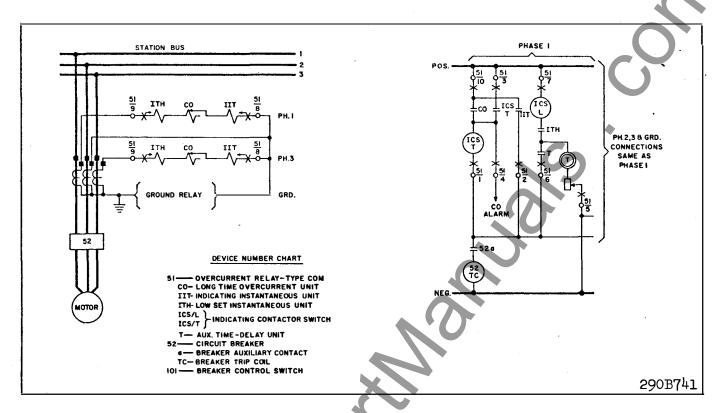


Fig. 15. External Schematic of COM Relays with Auxiliary Time-Delay Unit and ITH Unit.

pick-up current desired.

The nameplate data will furnish the actual current range that may be obtained from the IIT unit.

ITH Unit

The unit, prior to shipment is adjusted for minimum pick-up value, that is, the lower value marked on the side of the frame. The following procedure is used when changing this setting over the indicated range where a 90% or higher drop-out ratio is desired. Connect the coil of the unit in series with an ammeter and adjustable load. Apply the desired pick-up current, then adjust the core screw until the plunger just picks up. Lock core screw securely in place.

If it is desired to set the unit for either a different drop-out ratio over the nominal range or for pickup values above the nominal range, then the following procedure should be followed.

With the unit in series with an ammeter and adjustable load, apply the desired drop-out current. Adjust the core screw until the plunger assembly just drops out. Then apply the desired pick-up current and adjust the Micarta contact shield till the plunger

assembly just picks up. It is recommended that the contact gap should not be made less than 0.13 of an inch. The contact gap may be determined by turning up the contact shield from the setting position until the contacts just close. One turn of the shield is equal to .018 of an inch contact gap.

Tapped Resistor (When Used)

The relay is shipped with the resistor tapped for 125 volt d-c service. See Fig. 17 or 18 for the proper positions for other d-c ratings. When viewed from the rear of the relay the red dot on terminal 1 of the resistor is on the extreme left.

INSTALLATION

The relays should be mounted on switchboard panels or their equivalent in a location free from dirt, mositure, excessive vibration and heat. Mount the relay vertically by means of the mounting stud for the type FT projection case or by means of the four mounting holes on the flange for the semi-flush type FT case. Either the stud or the mounting screws may be utilized for grounding the relay. The electrical connections may be made directly to the ter-

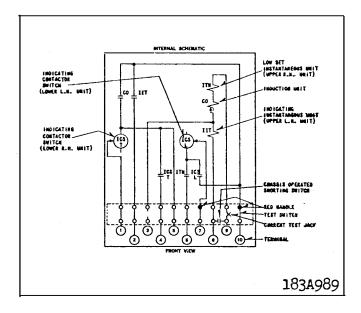


Fig. 16. Internal Schematic of the Type COM Relay, <u>without</u>
Auxiliary Time-Delay Unit, in FT21 Case. (For S#289B355A — Series of COM-5 Relays).

minals by means of screws for steel panel mounting or to the terminal stud furnished with the relay for thick panel mounting. The terminal stud may be easily removed or inserted by locking two nuts on the stud and then turning the proper nut with a wrench.

For detail information on the FT case refer to I.L. 41-076.

ADJUSTMENTS AND MAINTENANCE

The proper adjustments to insure correct operation of this relay have been made at the factory. Upon receipt of the relay no customer adjustments, other than those covered under "SETTINGS" should be required.

For relays which include an indicating instantaneous trip unit (IIT), the junction of the induction and indicating instantaneous trip coils is brought out to switch jaw #3. With this arrangement the overcurrent units can be tested separately.

Acceptance Check

The following check is recommended to insure that the relay is in proper working order:

1.Contact

a) By turning the time dial, move the moving

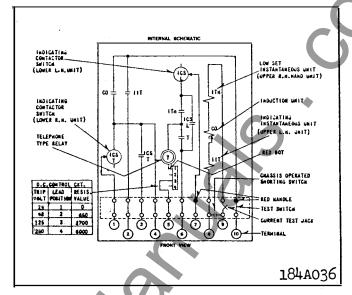


Fig. 17. Internal Schematic of the Type COM Relay <u>with</u>
Auxiliary Time-Delay Unit and <u>ITH Unit</u>, in FT21
Case (For S#289B456A — Series of COM-5 Relays).

contacts until they deflect the stationary contact to a position where the stationary contact is resting against its backstop. The index mark located on the movement frame should coincide with the "O" mark on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".

- b) For relays indentified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020". The placement of the various time dial positions in line with the index mark will give operating times as shown on the respective time-current curves. For double trip relays, the follow on the stationary contacts should be approximately 1/32".
- 2. Minimum Trip Current Set the time dial to position 6. Using lowest tap setting, alternately apply tap value current plus 3% and tap value current minus 3%. The moving contact should leave the backstop at tap value current plus 3% and should return to the backstop at tap value current minus 3%.


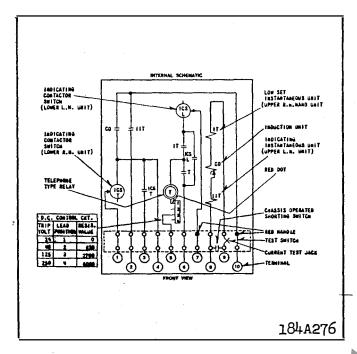


Fig. 18. Internal Schematic of the Type COM Relay, with Auxiliary Time-Delay Unit and IT Unit, in FT21 Case. (For S#289B511A - Series of COM-5 Relays).

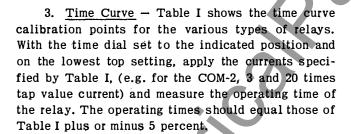

For type COM-11 relay only, the 1.30 times tap value operating time from the number 6 time dial position is $54.9 \pm 5\%$ seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the nominal operating time by approximately 4%.

4. Indicating Instantaneous Trip Unit (IIT) — The core screw which is adjustable from the top of the trip unit determines the pickup value. The trip unit has a nominal ratio of adjustment of 1 to 4 and an accuracy within the limits of 10%.

The making of the contacts and target indication

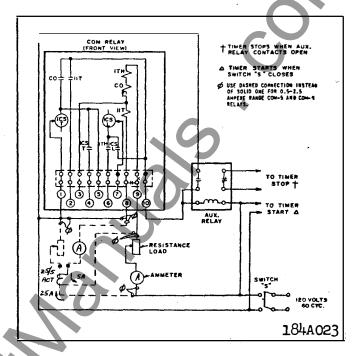


Fig. 19. Diagram of Test Connections for CO Unit of COM Relays.

should occur at approximately the same instant. Position the stationary contact for a minimum of 1/32" wipe. The bridging moving contact should touch both stationary contacts simultaneously.

Apply sufficient current to operate the IIT. The operation indicator target should drop freely.

5. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operation indicator target should drop freely.

The contact gap should be approximately .047" between the bridging moving contact and the adjustable stationary contacts. The bridging moving contact should touch both stationary contacts simultaneously.

6. High Drop-out Instantaneous Unit (ITH) — The plunger assembly should pickup and seal in at the minimum pickup current value stamped on the frame and drop out at least 90% of this value. The unit should maintain at least a 90% drop out ratio over the nominal range.

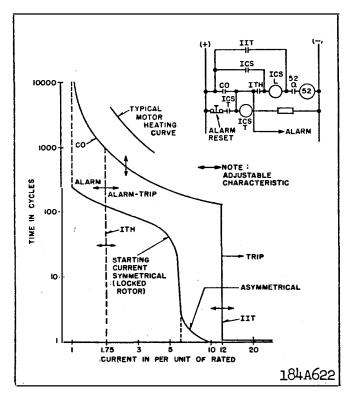


Fig. 20. Setting Example for Motor Protection Using S#289B355A — Relays <u>without</u> Auxiliary Time-Delay Unit.

The contact gap should not be less than .013 of an inch. Contact gap is determined as described under settings.

7. Auxiliary Time-Delay Unit (T) — For relays wired per Fig. 17 or 18, apply 100 volts d-c to terminals 5 and 7. Manually close the contacts of the ITH or IT unit in the top right-hand corner of the relay. The T unit should operate.

Routine Maintenance

All relays should be inspected and checked periodically to assure proper operation. Generally a visual inspection should call attention to any noticeable changes. A minimum suggested check on the relay system is to close the contacts manually to assure that the breaker trips and the target drops. Then release the contacts and observe that the reset is smooth and positive.

If an additional time check is desired, pass secondary current through the relay and check the time of operation. It is preferable to make this at several times pick-up current at an expected operating point for the particular application. For the 0.5 ampere

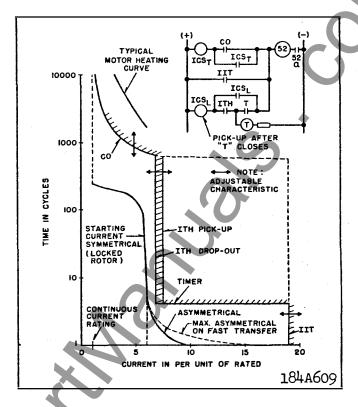


Fig. 21. Setting Example for Motor Protection Using S#289B456A — or S#289B511A — Relays with Auxiliary Time-Delay Unit.

range COM-5 and COM-6 induction units use the dashed test circuit in Fig. 19 as these relays are affected by a distorted wave form. With this connection the 25/5 ampere current transformers should be worked well below the knee of the excitation curve. (i.e. Use a 10L50 or better)

All contacts should be periodically cleaned. A contact burnisher #182A836H01 is recommended for this purpose. The use of abrasive material for cleaning contacts is not recommended, because of the danger of embedding small particles in the face of the soft silver and thus impairing the contact.

CALIBRATION

Use the following procedure for calibrating the relay if the relay has been taken apart for repairs or the adjustments disturbed. This procedure should not be used until it is apparent that the relay is not in proper working order. (See "Acceptance Check")

CO Unit

- 1. Contact
- a) By turning the time dial, move the moving

contacts until they deflect the stationary contact to a position where the stationary contact is resting against its backstop. The index mark located on the movement frame should coincide with the "O" mark on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".

- b) For relays identified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020".
- 2. Minimum Trip Current The adjustment of the spring tension in setting the minimum trip current value of the relay is most conveniently made with the damping magnet removed.

With the time dial set on "O", wind up the spiral spring by means of the spring adjuster until approximately 6-3/4 convolutions show.

Set the relay on the lowest tap setting, the time dial to position 6.

Adjust the control spring tension so that the moving contact will leave the backstop at tap value current +1.0% and will return to the backstop at tap value current -1.0%.

3. Time Curve Calibration - Install the permanent magnet.

Apply the indicated current per Table I for permanent magnet adjustment (e.g. COM-8, 2 times tap value) and measure the operating time. Adjust the permanent magnet keeper until the operating time corresponds to the value of Table I.

For Type COM-11 Relay only, the 1.3 times tap value operating time from the number 6 time dial position is $54.9 \pm 5\%$ seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the

nominal operating time by approximately 4%. If the operating time at 1.3 times tap value is not within these limits, a minor adjustment of the control spring will give the correct operating time without any undue effect on the minimum pick-up of the relay. This check is to be made after the 2 times tap value adjustment has been completed.

Apply the indicated current per Table I for the electromagnet plug adjustment (e.g. COM-8, 20 times tap value) and measure the operating time. Adjust the proper plug until the operating time corresponds to the value in Table I. (Withdrawing the left hand plug, front view, increases the operating time and withdrawing the right hand plug, front view, decreases the time.) In adjusting the plugs, one plug should be screwed in completely and the other plug run in or out until the proper operating time has been obtained.

Recheck the permanent magnet adjustment. If the operating time for this calibration point has changed, readjust the permanent magnet and then recheck the electromagnet plug adjustment.

4. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operating indicator target should drop freely.

5. Indicating Instantaneous Trip Unit (IIT)

The core screw must be adjusted to the value of pick-up current desired.

The nameplate date will furnish the actual current range that may be obtained from the IIT unit.

6. High Drop-out Instantaneous Unit (ITH) — The factory adjustment of the position of the plunger steel provides a drop-out ratio of 90% over the nominal range. But, in the event a considerable amount of material is removed from the contacts, due to repeated operations, burnishing, etc., the drop-out ratio may fall below 90%. If this occurs, then the plunger steel should be turned down to compensate. If the plunger steel setting is changed for the above or any other reasons, the following procedure should be used to recalibrate the relay.

Set the core screw at ten turns up from its bottom position. Adjust the plunger steel position on the plunger until the current value at which the plunger drops-out is 90% of the maximum rated current. Then set the contact gap at 3/4 of a turn down, and adjust the core screw for pick-up. Drop-out value will normally be above 90% of this setting. If desired, the contact gap and follow may be increased by lowering the contact shield and readjusting the core screw for pick-up.

RENEWAL PARTS

Repair work can be done most satisfactorily at the factory. However, interchangeable parts can be furnished to the customers who are equipped for doing repair work. When ordering parts, always give, the complete nameplate data.

TABLE 1

TIME CURVE CALIBRATION DATA - 50 & 60 CYCLES

	PERMANENT	Г MAGNET ADJUSTM	ELECTROMAGI	NET PLUGS	
	TIME	CURRENT	OPERATING	CURRENT	OPERATING
RELAY TYPE	DIAL POSITION	(MULTIPLES OF TAP VALUE)	TIME SECONDS	(MULTIPLES OF TAP VALUE)	TIME SECONDS
<u> </u>	TOBITION	TAL VALUE)	BECONDS	TAI VALUE)	BECONDS
COM-2	6 .	3	0.57	20	0.22
COM-5	6	2	37.80	10	14.30
COM-6	6	2	2.46	20	1.19
COM-7	6	2	4.27	20	1.11
COM-8	6	2	13.35	. 20	1.11
COM-9	6	2	8.87	20	0.65
COM-11	. 6	2	11.27	20	0.24 \triangle

 Δ For 50 cycle CO-11 relay 20 times operating time limits are 0.24 + 10%, -5%.

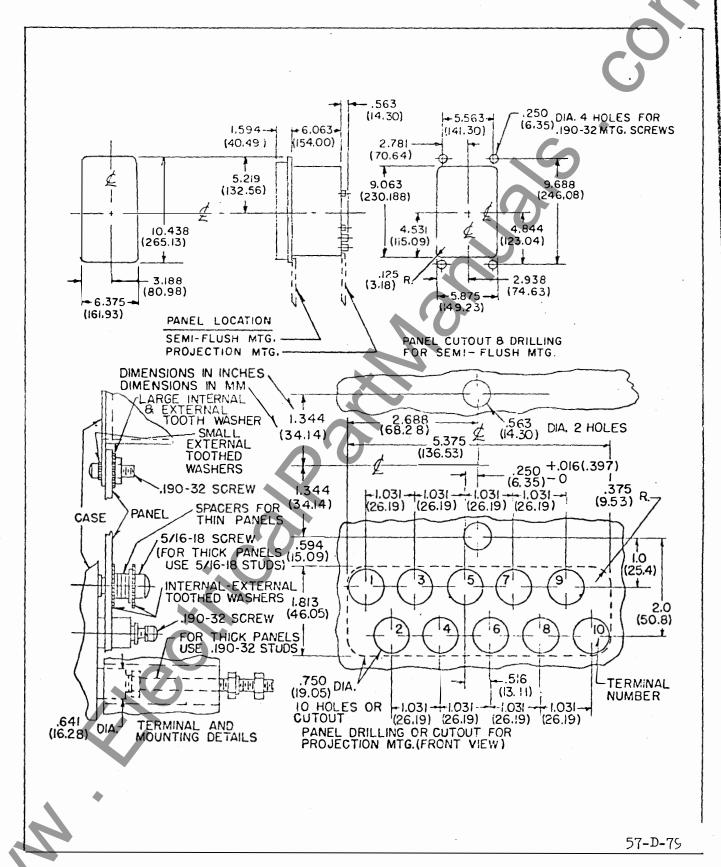


Fig. 22. Outline & Drilling Plan for the Type COM Relay in the FT21 Case.

MAN CORE CORE



INSTALLATION . OPERATION . MAINTENANCE

INSTRUCTIONS

TYPE COM OVERCURRENT RELAY

CAUTION Before putting relays into service, remove all blocking which may have been inserted for the purpose of securing the parts during shipment, make sure that all moving parts operate freely, inspect the contacts to see that they are clean and close properly, and operate the relay to check the settings and electrical connections.

APPLICATION

COM relays may be applied wherever two instantaneous overcurrent units are required in addition to the time overcurrent unit. For example Fig. 20 shows how the COM-5 (long time) relay is used for motor protection, with the CO-5 unit alarming just above motor full load and tripping at higher overloads through the low set instantaneous unit; the high set instantaneous unit is set above locked rotor current to provide high speed tripping of heavy faults. Fig. 21 shows how another variation of COM-5 provides improved fault protection for a motor by delaying ITH tripping by 5 to 6 cycles to override the assymetrical starting current.

The relay with auxiliary time-delay unit is also available with the IT Unit (clapper type) rather than the ITH (plunger type). The highest range available in the ITH design is 16-32 ampères.

The COM without the auxiliary time-delay unit may also be utilized for distribution line protection, with the low set instantaneous locked-out by the reclosing relay, and with the high set unit left in service to provide high speed clearing of close-in faults. See Fig. 14 for the connections of this application.

CONTENTS

This instruction leaflet applies to the following types of relays:

Type COM- 2 Short Time Relay

COM- 5 Long Time Relay

COM- 6 Definite Minimum Time Relay

COM- 7 Moderately Inverse Time Relay

COM- 8 Inverse Time Relay

COM- 9 Very Inverse Time Relay

COM-11 Extremely Inverse Time Relay

Each of these is available with or without a 5-6 cycle (85 to 100 millisecond) time-delay unit.

CONSTRUCTION AND OPERATION

The type COM relays consist of a time-overcurrent unit (CO), two indicating contactor switches (ICS), a indicating instantaneous trip unit (IIT) and a high drop out instantaneous unit (ITH). The principal component parts of the relay are shown in Figures 1-6.

Electromagnet

The electromagnets for the types COM-5, COM-6, COM-7, COM-8 and COM-9 relays have a main tapped coil located on the center leg of an "E" type laminated structure that produces a flux which divides and returns through the outer legs. A shading coil causes the flux through the left leg to lag the main pole flux. The out-of-phase fluxes thus produced in the air gap cause a contact closing torque.

The electromagnets for the types COM-2 and COM-11 relays have a main coil consisting of a tapped primary winding and a secondary winding. Two identical coils on the outer legs of the lamination structure are connected to the main coil secondary in a manner so that the combination of all the fluxes produced by the electromagnet result in out-of-phase fluxes in the air gap. The out-of-phase air gap fluxes produced cause a contact closing torque.

All possible contingencies which may arise during installation, operation, or maintenance, and all details and variations of this equipment do not purport to be covered by these instructions. If further information is desired by purchaser regarding his particular installation, operation or maintenance of his equipment, the local Westinghouse Electric Corporation representative should be contacted.

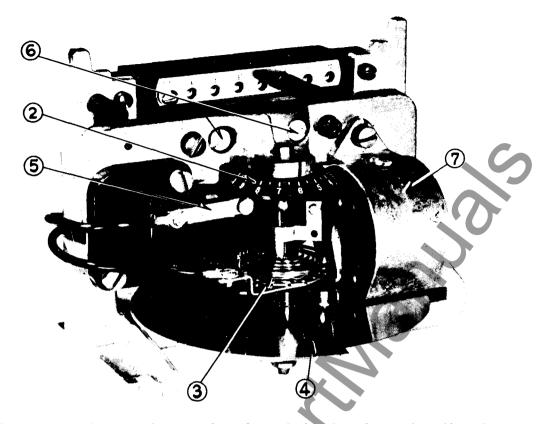


Fig. 1. Time Overcurrent Unit (Front View). 1-Tap Block. 2-Time Dial. 3-Control Spring Assembly. 4-Disc. 5-Stationary Contact Assembly. 6-Magnetic Plugs. 7-Permanent Magnet.

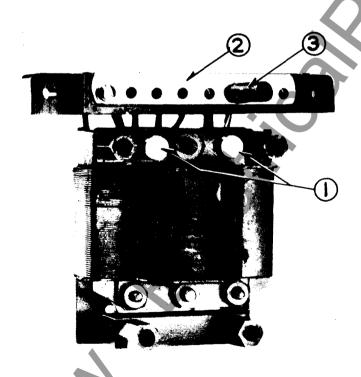


Fig. 2. "E" Type Electromagnet. 1-Magnetic Plugs. 2-Tap Block. 3-Tap Screw.

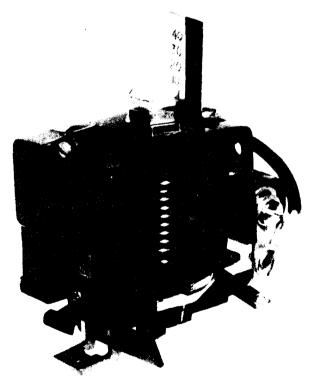


Fig. 3. Indicating Instantaneous Trip Unit (II**T**).

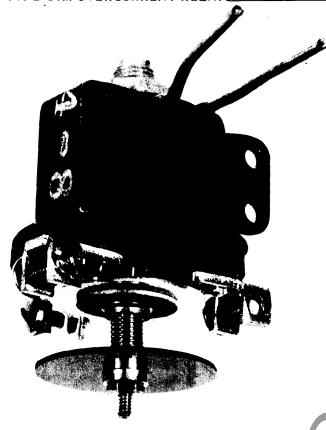




Fig. 4. High Drop-Out Instantaneous Trip Unit (17H).

Fig. 5. Plunger Assembly for ITH Unit.

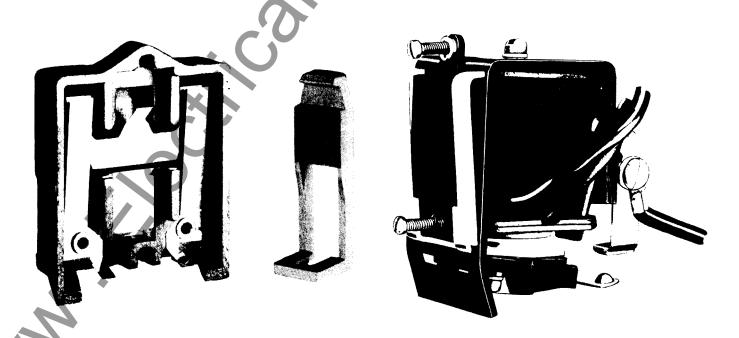


Fig. 6. Indicating Contactor Switch (ICS).

Indicating Contactor Switch Unit (ICS)

The d-c indicating contactor switch is a small clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes the moving contacts bridge two stationary contacts, completing the trip circuit. Also during this operation two fingers on the armature deflect a spring located on the front of the switch, which allows the operation indicator target to drop.

The front spring, in addition to holding the target, provides restraint for the armature and thus controls the pickup value of the switch.

Indicating Instantaneous Trip Unit (IIT)

The instantaneous trip unit is a small a-c operated clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes, the moving contacts bridge two stationary contacts completing the trip circuit. Also, during the operation, two fingers on the armature deflect a spring located on the front of the switch which allows the operation indicator target to drop.

A core screw accessible from the top of the switch provides the adjustable pickup range. The minimum and maximum pick-up points are indicated on the scale which is located to the rear of the core screw.

High Drop-Out Instantaneous Trip Unit (ITH)

The high drop-out instantaneous trip unit is a small solenoid type device (Fig. 4). A plunger assembly (Fig. 5) rides up and down on a vertical guide rod in the center of the solenoid coil. The plunger assembly consists of a bushing which is threaded on the moving plunger and locked in place by a nut, and a silver disc which rests on a helical compression spring at the lower end of the plunger. The guide rod is fastened to the stationary core which in turn is held in place by the insulating plate on which the stationary contacts are mounted. The stationary core consists of two steel sections separated by a nonmagnetic ring. This non-magnetic ring provides an air gap in which the plunger steel floats. When the coil is energized, the plunger assembly moves upward carrying the silver disc which bridges three conicalshaped stationary contacts. In this position the helical spring is compressed and the plunger is free to move while the contact disc remains stationary. Thus,

a-c vibrations of the plunger assembly are prevented from causing contact chattering. A Micarta disc which acts as a shield for the contact plate, screws on the bottom of the guide rod and is locked in position by a small nut. The adjustable core screw in the top of the frame provides the principal means for adjusting the current operating values.

The ITH unit is a current operated device which will pick-up within the range stamped on the side of the frame and drop-out at 90% of the pick-up current value. The position of the core screw determines the pick-up value for a particular contact gap. The 90% drop-out ratio is accomplished through the right combination of plunger steel setting, electrical pull and spring strength. The most important factor in the adjustment of the unit is the correct positioning of the plunger steel with respect to the stationary core air gap.

Auxiliary Time-Delay Unit (T) - Where Used

This slugged telephone type unit, in conjunction with a tapped resistor, provides a 5-6 cycle delay on pickup. The resistor in the rear of the relay is tapped for use with 24, 48, 125 or 250 volt d-c supply, as shown in the internal schematics of Figs. 17 and 18.

CHARACTERISTICS

The relays are generally available in the following current ranges:

Range		Taps							
0.5	-	2.5	0.5	0.6	0.8	1.0	1.5	2.0	2.5
2	-	6	2	2.5	3	3.5	4	5	6
4	-	12	4	5 ,	6	7	8	10	12

The time vs. current characteristics are shown in Figs. 7 to 13. These characteristics give the contact closing time for the various time dial settings when the indicated multiples of tap value current are applied to the relay.

O IIT Unit

Current ranges available for this unit are: 2-8, 4-16, 10-40, 20-80, and 40-160.

ITH Unit

The unit has a 2 to 1 range of pick-up adjustment with a 90% or greater drop-out ratio current ranges available are 2-4, 4-8, 16-32. The only adjustment necessary when making settings within the nominal range is the positioning of the core screw. At the maximum end of the

0

ENERGY REQUIREMENTS

TYPE COM-2 RELAY

						VOLT A	MPERES**	
AMPERE RANGE	TAP	CONTINUOUS RATING (AMPERES)	ONE SECOND RATING* (AMPERES)	POWER FACTOR ANGLE ϕ	AT TAP VALUE CURRENT	AT 3 TIMES TAP VALUE CURRENT	AT 10 TIMES TAP VALUE CURRENT	AT 20 TIMES TAP VALUE CURRENT
	0.5	0.91	28	58	4.8	39.6	256	790
	0.6	0.96	28	5 7	4.9	39.8	270	851
	0.8	1.18	28	53	5.0	42.7	308	1024
0.5/2.5	1.0	1.37	28	50	5.3	45.4	348	1220
•	1.5	1.95	28	40	6.2	54.4	435	1740
	2.0	2.24	28	36	7.2	65.4	580	2280
	2.5	2.50	28	29	7.9	73.6	700	2850
					K /			
	2.0	3.1	110	59	5.04	38.7	262	800
	2.5	4.0	110	55	5.13	39.8	280	920
	3.0	4.4	110	51	5.37	42.8	312	1008
2/6	3.5	4.8	110	47	5.53	42.8	329	1120
	4.0	5.2	110	45	5.72	46.0	360	1216
	5.0	5.6	110	41	5.90	50.3	420	1500
	6.0	6.0	110	37	6.54	54.9	474	1800
	4.0	7.3	230	65	4.92	39.1	268	848
	5.0	8.0	230	50	5.20	42.0	305	1020
	6.0	8.8	230	47	5.34	44.1	330	1128
4/12	7.0	9.6	230	46	5.35	45.8	364	1260
	8.0	10.4	230	43	5.86	49.9	400	1408
	10.0	11.2	230	37	6.6	55.5	470	1720
	12.0	12.0	230	34	7.00	62.3	528	2064

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

 $[\]phi$ Degrees current lags voltage at tap value current.

^{**} Voltages taken with Rector type voltmeter.

ENERGY REQUIREMENTS

COM-5 LONG TIME AND COM-6 DEFINITE MINIMUM TIME RELAYS

VOLT AMPERES**

AMPERE RANGE	TAP	CONTINUOUS RATING (AMPERES)	ONE SECOND RATING* (AMPERES)	POWER FACTOR ANGLE ϕ	AT TAP VALUE CURRENT	AT 3 TIMES TAP VALUE CURRENT	AT 10 TIMES TAP VALUE CURRENT	AT 20 TIMES TAP VALUE CURRENT
	(0.5 (0.6	2 2.2	56 56	69 68	3.92 3.96	20.6 20.7	103 106	270 288
	(0.8	2.5	56	67	3.96	21	114	325
0.5/2.5	(1.0	2.8	56	66	4.07	21.4	122	360
	(1.5	3.4	56	62	4.19	23.2	147	462
	(2.0	4.0	56	60	4.30	24.9	168	548
	(2.5	4.4	56	58	4.37	26.2	180	630
	(2	8	230	67	3.88	21	110	308
	(2.5	8.8	230	66	3.87	21.6	118	342
	(3	9.7	230	64	3.93	22.1	126	381
2/6	(3.5	10.4	230	63	4.09	23.1	136	417
	(4	11.2	230	62	4.08	23.5	144	448
	(5	12.5	230	59	4.20	24.8	162	540
	(6	13.7	230	57	4.38	26.5	183	624
	(4	16	460	65	4.00	22.4	126	376
	(5	18.8	460	63	4.15	23.7	143	450
	(6	19.3	460	61	4.32	25.3	162	531
4/12	(7	20.8	460	59	4.27	26.4	183	611
	(8	22.5	460	56	4.40	27.8	204	699
	(10	25	460	53	4.60	30.1	247	880
	(12	28	460	47	4.92	35.6	288	1056

COM-7 MODERATELY INVERSE TIME RELAY

VOLT AMPERES**

		CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
								
	(0.5	2	56	68	3.88	20.7	103	278
	(0.6	2.2	56	67	3.93	20.9	107	288
	(0.8	2.5	56	66	3.93	21.1	114	320
0.5/2.5	(1.0	2.8	56	64	4.00	21.6	122	356
	(1.5	3.4	56	61	4.08	22.9	148	459
	(2.0	4.0	56	58	4.24	24.8	174	552
	(2.5	4.4	56	56	4.38	25.9	185	640
	(2	8	230	66	4.06	21.3	111	306
	(2.5	8.8	230	63	4.07	21.8	120	342
	(3	9.7	230	63	4.14	22.5	129	366
2/6	(3.5	10.4	230	62	4.34	23.4	141	413
	(4	11.2	230	61	4.34	23.8	149	448
	(5	12.5	230	59	4.40	25.2	163	530
	(6	13.7	230	58	4.62	27	183	624
	(4	16	460	64	4.24	22.8	1 29	392
	(5	18.8	460	61	4.30	24.2	149	460
4/12	(6	19.3	460	60	4.62	25.9	168	540
	(7	20.8	460	58	4.69	27.3	187	626
	(8	22.5	460	55	4.80	29.8	211	688
	(10	25	460	51	5.20	33	260	860
	(12	28	460	46	5.40	37.5	308	1032

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

φ Degrees current lags voltage at tap value current.

^{••} Voltages taken with Rectox type voltmeter.

ENERGY REQUIREMENTS

COM-8 INVERSE TIME AND COM-9 VERY INVERSE TIME RELAYS

				•		VOLT A	MPERES**	
		CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
	(0.5	2	56	72	2.38	21	132	350
	(0.6	2.2	56	71	2.38	21	134	365
	(0.8	2.5	56	69	2.40	21.1	142	400
0.5/2.5	(1.0	2.8	56	67	2.42	21.2	150	440
	(1.5	3.4	56	62	2.51	22	170	530
	(2.0	4.0	56	57	2.65	23.5	200	675
	(2.5	4.4	56	53	2.74	24.8	228	800
	(2	8	230	70	2.38	21	136	360
	(2.5	8.8	230	66	2.40	21.1	142	395
	(3	9.7	230	64	2.42	21.5	149	430
2/6	(3.5	10.4	230	62	2.48	22	157	470
	(4	11.2	230	60	2.53	22.7	164	500
	(5	12.5	230	58	2.64	24	180	580
	(6	13.7	230	56	2.75	25.2	198	660
	(4	16	460	68	2.38	21.3	146	420
	(5	18.8	460	63	2.46	21.8	158	480
	(6	19.3	460	60	2.54	22.6	172	550
4/12	(7	20.8	460	57	2.62	23.6	190	620
	(8	22.5	460	54	2.73	24.8	207	700
	(10	25	460	48	. 3.00	27.8	248	850
	(12	28	460	45	3.46	31.4	292	1020

TYPE COM-11 RELAY

					VOLT AMPERES**			
		CONTINUOUS	ONE SECOND	POWER	АТ	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	$ANGLE\phi$	CURRENT	CURRENT	CURRENT	CURRENT
	0.5	1.7	56	36	0.72	6.54	71.8	250
	0.6	1.9	56	34	0.75	6.80	75.0	267
	0.8	2.2	56	30	0.81	7.46	84.0	298
0.5/2.5	1.0	3.5	56	27	0.89	8.30	93.1	330
	1.5	3.0	56	22	1.13	10.04	115.5	411
	2.0	3.5	56	17	1.30	11.95	136.3	502
	2.5	3.8	56	16	1.48	13.95	160.0	610
	2.0	7.0	230	32	0.73	6.30	74.0	264
	2 5	7.8	230	30	0.78	7.00	78.5	285
	3.0	8.3	230	27	0.83	7.74	84.0	309
2/6	3.5	9.0	230	24	0.88	8.20	89.0	340
	4.0	10.0	230	23	0.96	9.12	102.0	372
	5.0	11.0	230	20	1.07	9.80	109.0	430
	6.0	12.0	230	20	1.23	11.34	129.0	504
	4.0	14	460	29	0.79	7.08	78.4	296
	5.0	16	460	25	0.89	8.00	90.0	340
	6.0	17	460	22	1.02	9.18	101.4	378
4/12	7.0	18	460	20	1.10	10.00	110.0	454
	8.0	20	460	18	1.23	11.1	124.8	480
	10.0	22	460	17	1.32	14.9	131.6	600
*	12.0	26	460	16	1.8	16.3	180.0	720

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

[•] Degrees current lags voltage at tap value current.

^{**} Voltages taken with Rector type voltmeter.

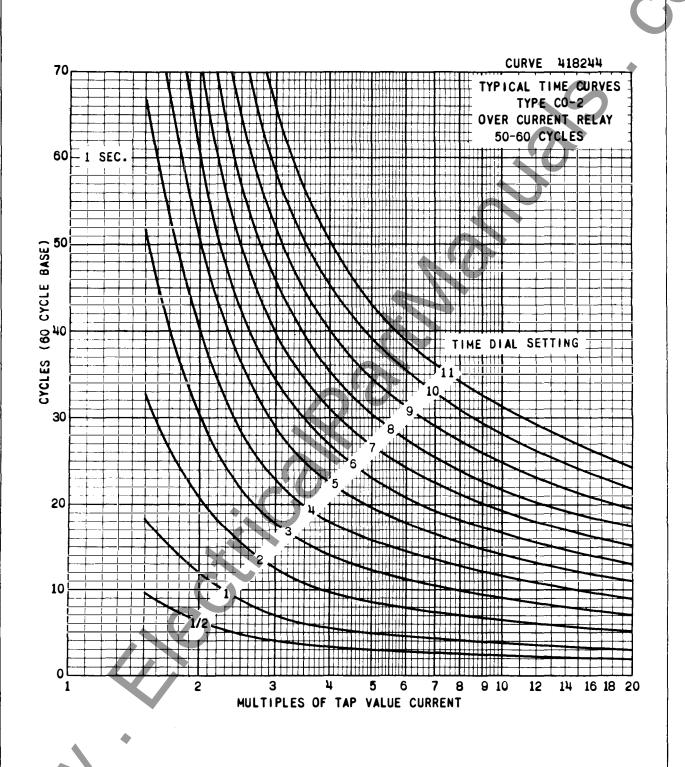


Fig. 7. Typical Time Curves of the Type COM-2 Relay.

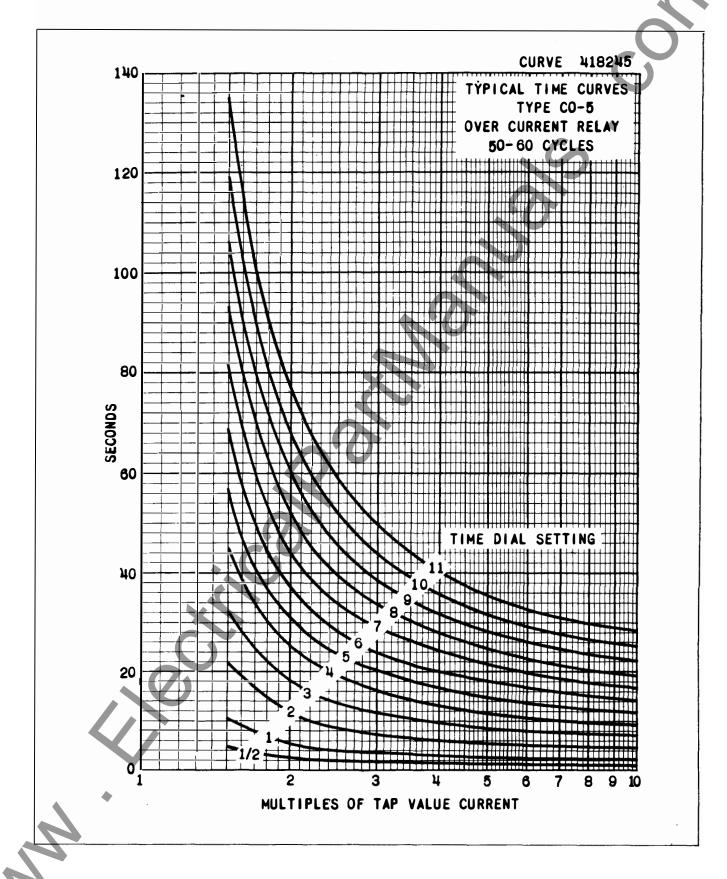


Fig. 8. Typical Time Curves of the Type COM-5 Relay.

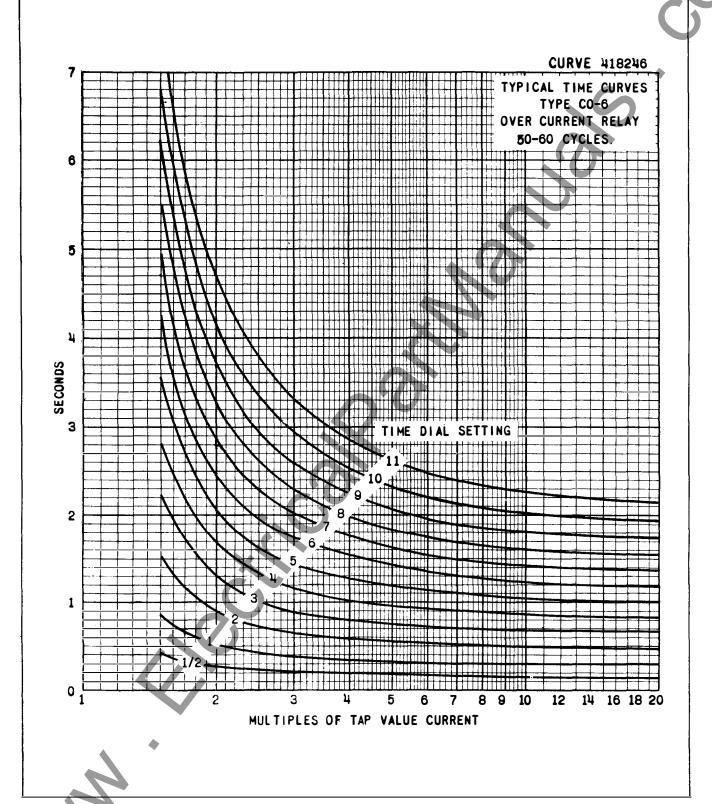


Fig. 9. Typical Time Curves of the Type COM-6 Relay.

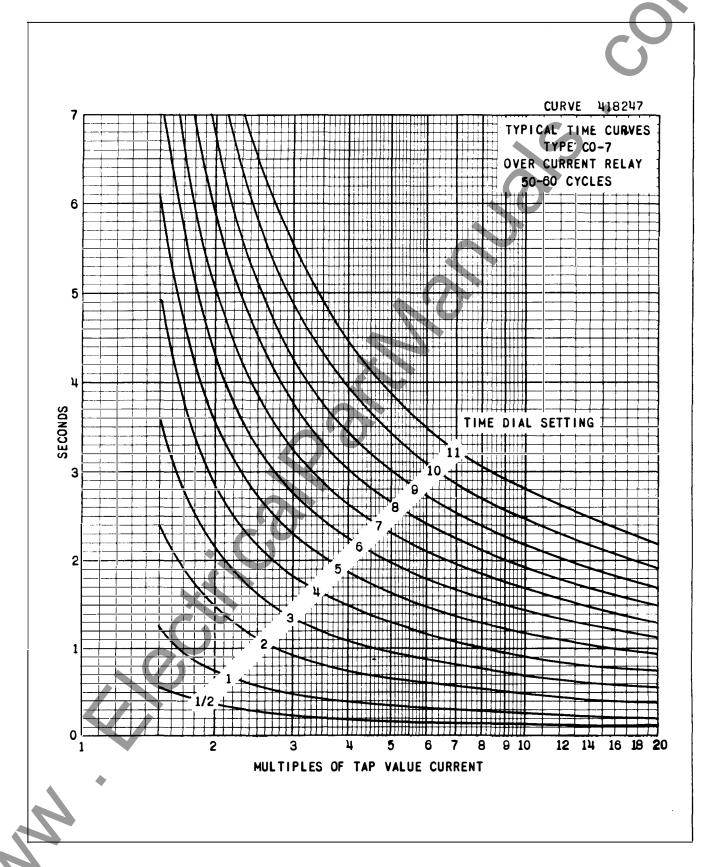


Fig. 10. Typical Time Curves of the Type COM-7 Relay.

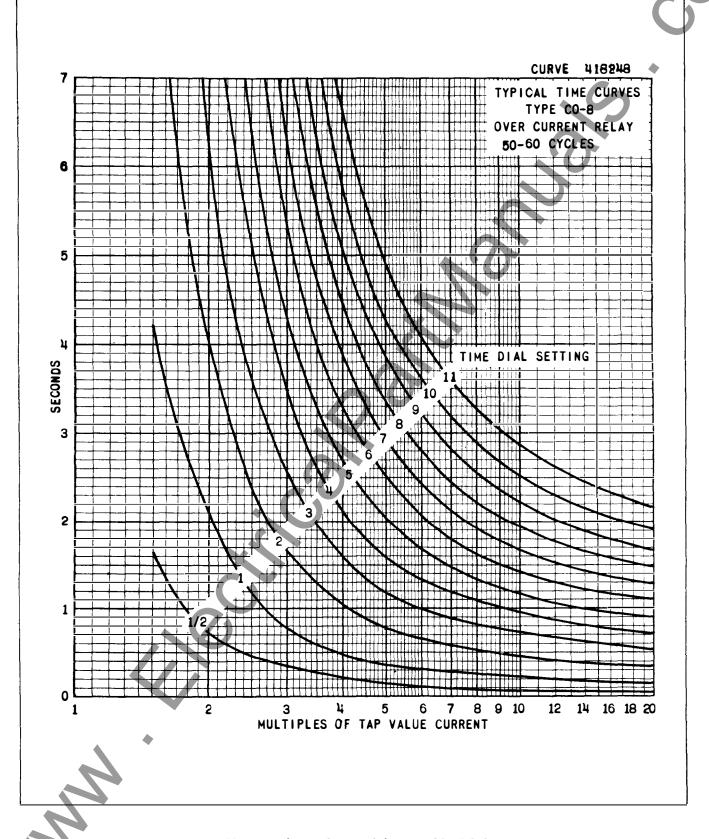


Fig. 11. Typical Time Curves of the Type COM-8 Relay.

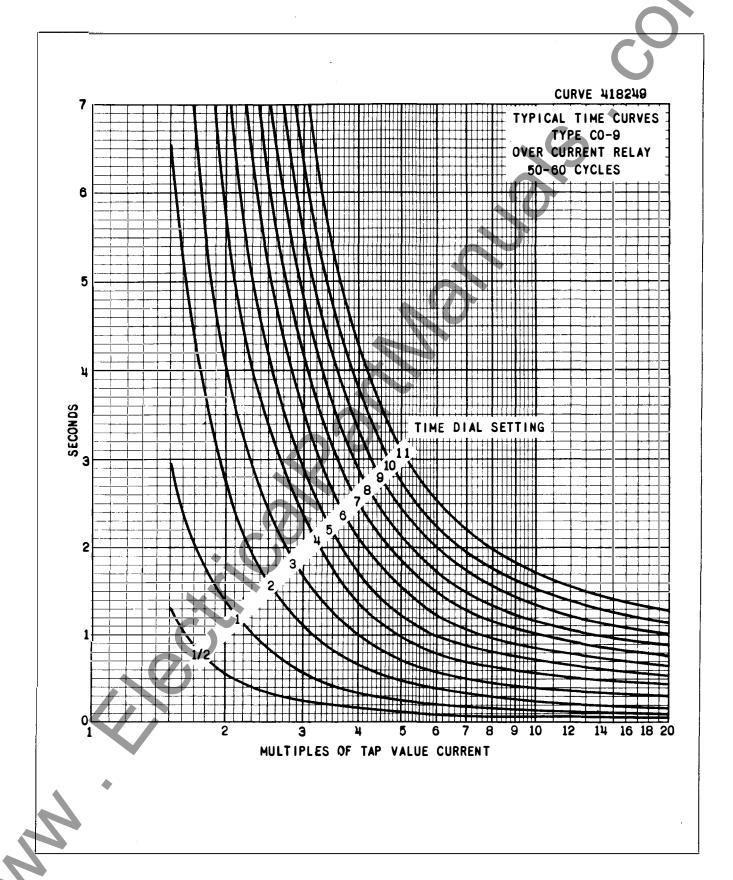


Fig. 12. Typical Time Curves of the Type COM-9 Relay.

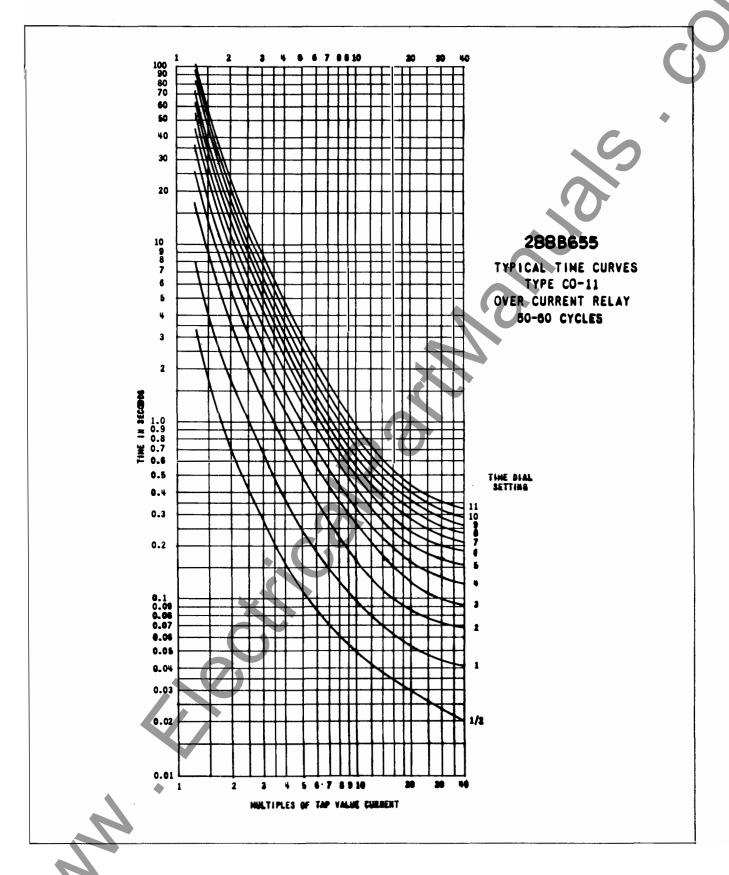


Fig. 13. Typical Time Curves of the Type COM-11 Relay.

range the drop-out ratio will be greater than 90% and it may be desirable to lower the contact shield to increase the contact gap and follow. The range may be increased by lowering the plunger after the core screw has been set at its maximum rated position. If the plunger is lowered to increase the pick-up current value, then at 300% of minimum trip the drop-out ratio is 60% of the pick-up current. At 400% of minimum trip the drop-out ratio is 45% of the pick-up current.

The burden of this unit at minimum pick-up is 0.44 V.A. at 60 cycles.

Continuous current rating of the coil is 2 times minimum pickup value.

One second rating is approximately 45 times minimum pick-up.

Characteristic operating times for the unit over its nominal range are:

Less than 1 cycle at 200% of trip value 1/2 cycle at 500% of trip value 1/4 cycle at 1000% of trip value

Trip Circuit

The main contacts will safely close 30 amperes at 250 volts d-c and the seal-in contacts of the indicating contactor switch will safely carry this current long enough to trip a circuit breaker.

The IIT and ITH contacts will safely close 30 amperes at 250 volts d-c, and will carry this current long enough to trip a breaker.

The indicating contactor switch has two taps provide a pickup setting of 0.2 or 2 amperes. To change taps requires connecting the lead located in front of the tap block to the desired setting by means of a screw connection.

Trip Circuit Constants

Contactor Switch 0.2 ampere tap - 6.5 ohms d-c resistance
2.0 ampere tap - 0.15 ohms d-c resistance

SETTINGS

CO Unit

The overcurrent unit settings can be defined either by tap setting and time dial position or by tap

setting and a specific time of operation at some current multiple of the tap setting (e.g. 4 tap setting, 2 time dial position or 4 tap setting, 0.6 seconds at 6 times tap value current).

To provide selective circuit breaker operation, a minimum coordinating time of 0.3 seconds plus circuit breaker time is recommended between the relay being set and the relays with which coordination is to be effected.

The connector screw on the terminal plate above the time dial makes connections to various turns on the operating coil. By placing this screw in the various terminal plate holes, the relay will respond to multiples of tap value currents in accordance with the various typical time-current curves.

Caution

Since the tap block connector screw carries operating current, be sure that the screw is turned tight. In order to avoid opening the current transformer circuits when changing taps under load, connect the spare connector screw in the desired tap position before removing the other tap screw from the original tap position.

Instantaneous Reclosing


The factory adjustment of the CO unit contact provides a contact follow. Where instantaneous circuit breaker reclosing will be initiated upon the closure of the CO contact, this contact follow must be eliminated by loosening the stationary contact mounting screw, removing the contact plate and then replacing the plate with the bent end resting against the contact spring. With this change and the contact mounting screw tightened, the stationary contact will rest solidly against its backstop.

Indicating Contactor Switch (ICS)


No setting is required on the ICS unit except the selection of the 0.2 or 2.0 ampere tap setting. This selection is made by connecting the lead located in front of the tap block to the desired setting by means of the connecting screw. When the relay energizes a 125 or 250 volt d-c type WL relay switch, or equivalent, use the 0.2 ampere tap; for 48 volt d-c applications set in 2 tap and use Type WL relay coil S#304C209G01 or equivalent.

Indicating Instantaneous Trip (IIT)

The core screw must be adjusted to the value of

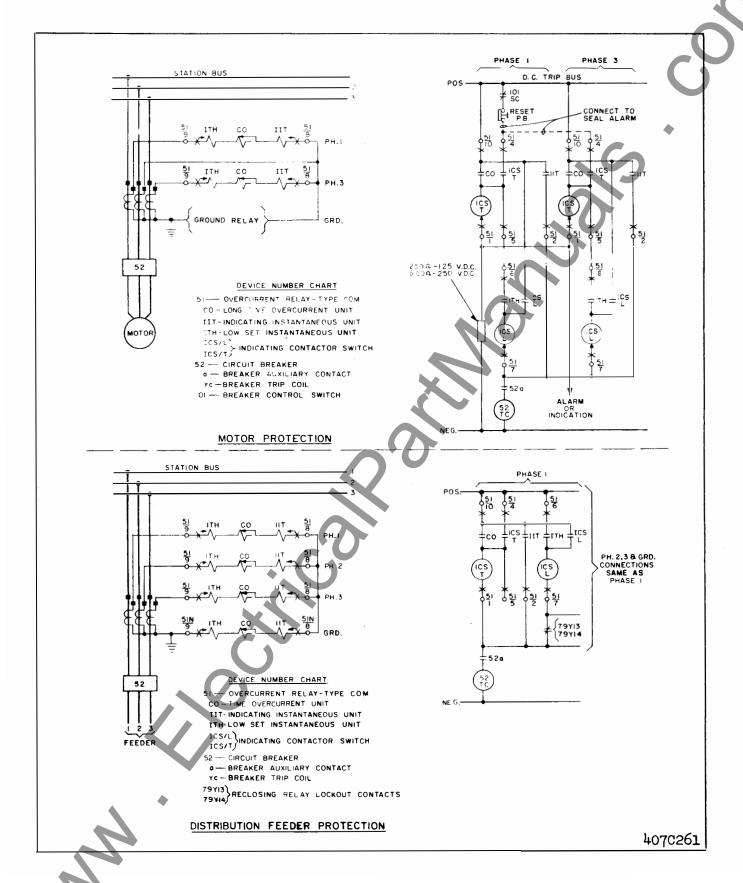

* Fig. 14. External Schematic of COM Relays without Auxiliary Time-Delay Unit.

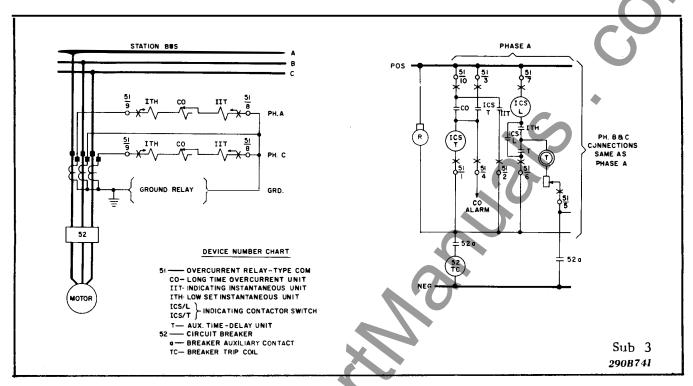

O Fig. 15. External Schematic of COM Relays with Auxiliary Time-Delay Unit and ITH Unit.

pick-up current desired.

The nameplate data will furnish the actual current range that may be obtained from the HT unit.

ITH Unit

The unit, prior to shipment is adjusted for minimum pick-up value, that is, the lower value marked on the side of the frame. The following procedure is used when changing this setting over the indicated range where a 90% or higher drop-out ratio is desired. Connect the coil of the unit in series with an ammeter and adjustable load. Apply the desired pick-up current, then adjust the core screw until the plunger just picks up. Lock core screw securely in place.

If it is desired to set the unit for either a different drop-out ratio over the nominal range or for pickup values above the nominal range, then the following procedure should be followed.

With the unit in series with an ammeter and adjustable load, apply the desired drop-out current. Adjust the core screw until the plunger assembly just drops out. Then apply the desired pick-up current and adjust the Micarta contact shield till the plunger assembly just picks up. It is recommended that the contact gap should not be made less than 0.13 of an

inch. The contact gap may be determined by turning up the contact shield from the setting position until the contacts just close. One turn of the shield is equal to .018 of an inch contact gap.

Tapped Resistor (When Used)

The relay is shipped with the resistor tapped for 125 volt d-c service. See Fig. 17 or 18 for the proper positions for other d-c ratings. When viewed from the rear of the relay the red dot on terminal 1 of the resistor is on the extreme left.

O INSTALLATION

The relays should be mounted on switchboard panels or their equivalent in a location free from dirt, moisture, excessive vibration and heat. Mount the relay vertically by means of the rear mounting stud or studs for the type FT projection case or by means of the four mounting holes on the flange for the semi-flush type FT case. Either the stud or the mounting screws may be utilized for grounding the relay. External toothed washers are provided for use in the locations shown on the outline and drilling plan to facilitate making a good electrical connection between the relay case, its mounting screws or studs, and the relay panel. Ground Wires are affixed to the mounting screws or studs as required for poorly grounded or insulating panels. Other electrical connections may be made directly to the terminals by

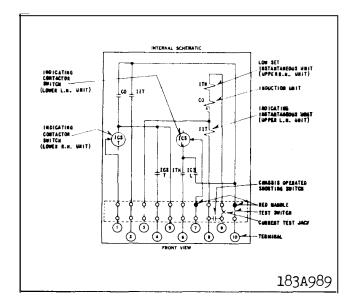


Fig. 16. Internal Schematic of the Type COM Relay, <u>without</u>
Auxiliary Time-Delay Unit, in FT21 Case. (For S#289B355A — Series of COM-5 Relays).

means of screws for steel panel mounting or to the terminal stud furnished with the relay for thick panel mounting. The terminal stud may be easily removed or inserted by locking two nuts on the stud and then turning the proper nut with a wrench.

For detail information on the FT case refer to I.L. 41-076.

ADJUSTMENTS AND MAINTENANCE

The proper adjustments to insure correct operation of this relay have been made at the factory. Upon receipt of the relay no customer adjustments, other than those covered under "SETTINGS" should be required.

- The indicating Instantaneous Trip unit (IIT) used in some relays requires a much higher current for tripping than is required by the other units. For this reason, the junction of the CO unit coil and the IIT unit coil is brought out to switch jaw no. 3 (whenever it is available) to permit the testing of these units separately.
- CAUTION: When applying current in excess of 50 amperes to test the IIT, the current should not be left on while adjusting it to the trip level. Instead, apply the current in short burst, not more than 2 seconds long, to check for tripping. Make adjustments in the current control while the current is off.
- High currents left on for excessive time periods can

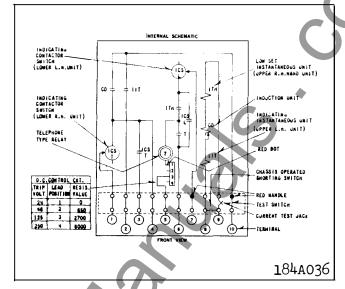


Fig. 17. Internal Schematic of the Type COM Relay <u>with</u>
Auxiliary Time-Delay Unit and <u>ITH Unit</u>, in FT21
Case. (For S#289B456A — Series of COM-5 Relays).

result in the softening and possible melting of insulation on the interconnecting wires.

Acceptance Check

The Collowing check is recommended to insure that the relay is in proper working order:

1. Contact

- a) By turning the time dial, move the moving contacts until they deflect the stationary contact to a position where the stationary contact is resting against its backstop. The index mark located on the movement frame should coincide with the "O" mark on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".
- b) For relays indentified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020". The placement of the various time dial positions in line with the index mark will give operating times as shown on the respective time-current curves. For double trip relays, the follow on the stationary contacts should be approximately 1/32".

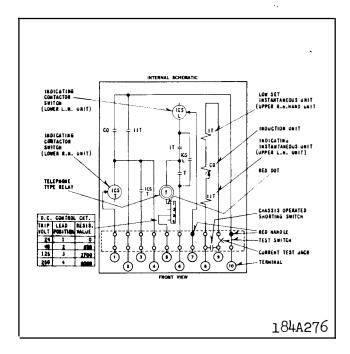


Fig. 18. Internal Schematic of the Type COM Relay, with Auxiliary Time-Delay Unit and <u>IT Unit</u>, in FT21 Case. (For S#289B511A – Series of COM-5 Relays).

- 2. Minimum Trip Current Set the time dial to position 6. Using lowest tap setting, alternately apply tap value current plus 3% and tap value current minus 3%. The moving contact should leave the backstop at tap value current plus 3% and should return to the backstop at tap value current minus 3%.
- 3. <u>Time Curve</u> Table I shows the time curve calibration points for the various types of relays. With the time dial set to the indicated position and on the lowest top setting, apply the currents specified by Table I, (e.g. for the COM-2, 3 and 20 times tap value current) and measure the operating time of the relay. The operating times should equal those of Table I plus or minus 5 percent.

For type COM-11 relay only, the 1.30 times tap value operating time from the number 6 time dial position is $54.9 \pm 5\%$ seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the nominal operating time by approximately 4%.

4. <u>Indicating Instantaneous Trip Unit (IIT)</u> — The core screw which is adjustable from the top of the trip unit determines the pickup value. The trip unit has a nominal ratio of adjustment of 1 to 4 and

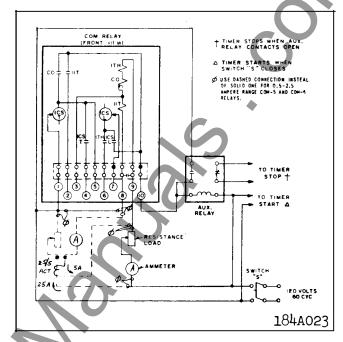


Fig. 19. Diagram of Test Connections for CO Unit of COM Relays.

an accuracy within the limits of 10%.


The making of the contacts and target indication should occur at approximately the same instant. Position the stationary contact for a minimum of 1/32" wipe. The bridging moving contact should touch both stationary contacts simultaneously.

Apply sufficient current to operate the IIT. The operation indicator target should drop freely.

5. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operation indicator target should drop freely.

The contact gap should be approximately .047'' between the bridging moving contact and the adjustable stationary contacts. The bridging moving contact should touch both stationary contacts simultaneously.

6. High Drop-out Instantaneous Unit (ITH) — The plunger assembly should pickup and seal in at the minimum pickup current value stamped on the frame and drop out at least 90% of this value. The unit should maintain at least a 90% drop out ratio over the nominal range.

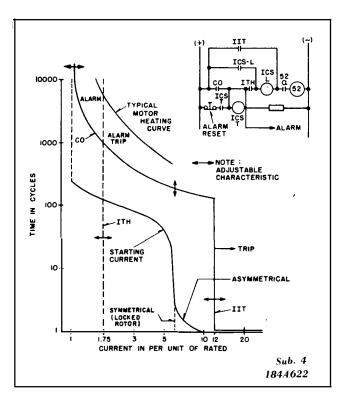

© Fig. 20. Setting Example for Motor Protection Using S#289B355A — Relays <u>without</u> Auxiliary Time-Delay Unit.

The contact gap should not be less than .013 of an inch. Contact gap is determined as described under settings.

7. Auxiliary Time-Delay Unit (T) — For relays wired per Fig. 17 or 18, apply 100 volts d-c to terminals 5 and 7. Manually close the contacts of the ITH or IT unit in the top right-hand corner of the relay. The T unit should operate.

Routine Maintenance

All relays should be inspected and checked periodically to assure proper operation. Generally a visual inspection should call attention to any noticeable changes. A minimum suggested check on the relay system is to close the contacts manually to assure that the breaker trips and the target drops. Then release the contacts and observe that the reset is smooth and positive.

If an additional time check is desired, pass secondary current through the relay and check the time of operation. It is preferable to make this at several times pick-up current at an expected operating point for the particular application. For the 0.5 ampere

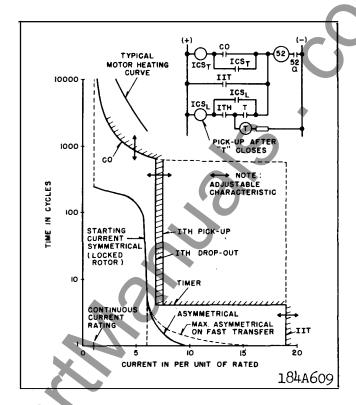


Fig. 21. Setting Example for Motor Protection Using S#289B456A — or S#289B511A — Relays <u>with</u> Auxiliary Time-Delay Unit.

range COM-5 and COM-6 induction units use the dashed test circuit in Fig. 19 as these relays are affected by a distorted wave form. With this connection the 25/5 ampere current transformers should be worked well below the knee of the excitation curve. (i.e. Use a 10L50 or better)

All contacts should be periodically cleaned. A contact burnisher #182A836H01 is recommended for this purpose. The use of abrasive material for cleaning contacts is not recommended, because of the danger of embedding small particles in the face of the soft silver and thus impairing the contact.

CALIBRATION

Use the following procedure for calibrating the relay if the relay has been taken apart for repairs or the adjustments disturbed. This procedure should not be used until it is apparent that the relay is not in proper working order. (See "Acceptance Check")

CO Unit

- 1. Contact
- a) By turning the time dial, move the moving

contacts until they deflect the stationary contact to a position where the stationary contact is resting against its backstop. The index mark located on the movement frame should coincide with the "O" mark on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".

- b) For relays identified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020".
- 2. <u>Minimum Trip Current</u> The adjustment of the spring tension in setting the minimum trip current value of the relay is most conveniently made with the damping magnet removed.

With the time dial set on "O", wind up the spiral spring by means of the spring adjuster until approximately 6-3/4 convolutions show.

Set the relay on the lowest tap setting, the time dial to position 6.

Adjust the control spring tension so that the moving contact will leave the backstop at tap value current +1.0% and will return to the backstop at tap value current -1.0%.

3. <u>Time Curve Calibration</u> - Install the permanent magnet.

Apply the indicated current per Table I for permanent magnet adjustment (e.g. COM-8, 2 times tap value) and measure the operating time. Adjust the permanent magnet keeper until the operating time corresponds to the value of Table I.

For Type COM-11 Relay only, the 1.3 times tap value operating time from the number 6 time dial position is 54.9 ± 5% seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the

nominal operating time by approximately 4%. If the operating time at 1.3 times tap value is not within these limits, a minor adjustment of the control spring will give the correct operating time without any undue effect on the minimum pick-up of the relay. This check is to be made after the 2 times tap value adjustment has been completed.

Apply the indicated current per Table I for the electromagnet plug adjustment (e.g. COM-8, 20 times tap value) and measure the operating time. Adjust the proper plug until the operating time corresponds to the value in Table I. (Withdrawing the left hand plug, front view, increases the operating time and withdrawing the right hand plug, front view, decreases the time.) In adjusting the plugs, one plug should be screwed in completely and the other plug run in or out until the proper operating time has been obtained.

Recheck the permanent magnet adjustment. If the operating time for this calibration point has changed, readjust the permanent magnet and then recheck the electromagnet plug adjustment.

4. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operating indicator target should drop freely.

5. Indicating Instantaneous Trip Unit (IIT)

The core screw must be adjusted to the value of pick-up current desired.

The nameplate date will furnish the actual current range that may be obtained from the IIT unit.

6. High Drop-out Instantaneous Unit (ITH) — The factory adjustment of the position of the plunger steel provides a drop-out ratio of 90% over the nominal range. But, in the event a considerable amount of material is removed from the contacts, due to repeated operations, burnishing, etc., the drop-out ratio may fall below 90%. If this occurs, then the plunger steel should be turned down to compensate. If the plunger steel setting is changed for the above or any other reasons, the following procedure should be used to recalibrate the relay.

Set the core screw at ten turns up from its bottom position. Adjust the plunger steel position on the plunger until the current value at which the plunger drops-out is 90% of the maximum rated current. Then set the contact gap at 3/4 of a turn down, and adjust the core screw for pick-up. Drop-out value will normally be above 90% of this setting. If desired, the contact gap and follow may be increased by lowering the contact shield and readjusting the core screw for pick-up.

RENEWAL PARTS

Repair work can be done most satisfactorily at the factory. However, interchangeable parts can be furnished to the customers who are equipped for doing repair work. When ordering parts, always give, the complete nameplate data.

TABLE 1

TIME CURVE CALIBRATION DATA - 50 & 60 CYCLES

	PERMANENT	Γ MAGNET ADJUSTM	ELECTROMAGNET PLUGS		
	TIME	CURRENT	OPERATING	CURRENT	OPERATING
RELAY	DIAL	(MULTIPLES OF	TIME	(MULTIPLES OF	TIME
\mathtt{TYPE}	POSITION	TAP VALUE)	SECONDS	TAP VALUE)	SECONDS
COM-2	6	3	0.57	20	0.22
COM-5	6	2	37.80	10	1 4.3 0
COM-6	6	2	2.46	20	1.19
COM-7	6	2	4.27	. 20	1.11
COM-8	6	2	13.35	20	1.11
COM-9	6	2	8.87	20	0.65
COM-11	6	2	11.27	20	0.24 △

 Δ For 50 cycle CO-11 relay 20 times operating time limits are 0.24 + 10%, -5%.

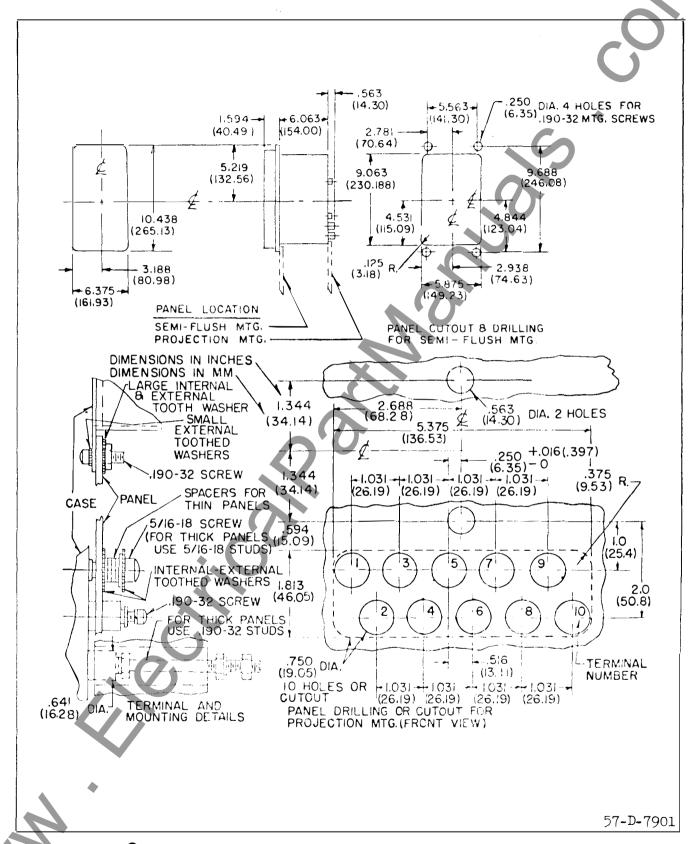


Fig. 22. Outline & Drilling Plan for the Type COM Relay in the FT21 Case.

WESTINGHOUSE ELECTRIC CORPORATION RELAY-INSTRUMENT DIVISION NEWARK, N. J.

Printed in U.S.A.



INSTALLATION . OPERATION . MAINTENANCE

INSTRUCTIONS

TYPE COM OVERCURRENT RELAY

CAUTION Before putting relays into service, remove all blocking which may have been inserted for the purpose of securing the parts during shipment, make sure that all moving parts operate freely, inspect the contacts to see that they are clean and close properly, and operate the relay to check the settings and electrical connections.

APPLICATION

COM relays may be applied wherever two instantaneous overcurrent units are required in addition to the time overcurrent unit. For example Fig. 20 shows how the COM-5 (long time) relay is used for motor protection, with the CO-5 unit alarming just above motor full load and tripping at higher overloads through the low set instantaneous unit; the high set instantaneous unit is set above locked rotor current to provide high speed tripping of heavy faults. Fig. 21 shows how another variation of COM-5 provides improved fault protection for a motor by delaying ITH tripping by 5 to 6 cycles to override the assymetrical starting current.

The relay with auxiliary time-delay unit is also available with the IT Unit (clapper type) rather than the ITH (plunger type). The highest range available in the ITH design is 16-32 amperes.

The COM without the auxiliary time-delay unit may also be utilized for distribution line protection, with the low set instantaneous locked-out by the reclosing relay, and with the high set unit left in service to provide high speed clearing of close-infaults. See Fig. 14 for the connections of this application.

CONTENTS

This instruction leaflet applies to the following types of relays:

Type COM- 2 Short Time Relay

COM- 5 Long Time Relay

COM- 6 Definite Minimum Time Relay

COM- 7 Moderately Inverse Time Relay

COM- 8 Inverse Time Relay

COM- 9 Very Inverse Time Relay

COM-11 Extremely Inverse Time Relay

Each of these is available with or without a 5-6 * cycle (85 to 100 millisecond) time-delay unit.

CONSTRUCTION AND OPERATION

The type COM relays consist of a time-overcurrent unit (CO), two indicating contactor switches (ICS), a indicating instantaneous trip unit (IIT) and a high drop out instantaneous unit (ITH). The principal component parts of the relay are shown in Figures 1-6.

Electromagnet

The electromagnets for the types COM-5, COM-6, COM-7, COM-8 and COM-9 relays have a main tapped coil located on the center leg of an "E" type laminated structure that produces a flux which divides and returns through the outer legs. A shading coil causes the flux through the left leg to lag the main pole flux. The out-of-phase fluxes thus produced in the air gap cause a contact closing torque.

The electromagnets for the types COM-2 and COM-11 relays have a main coil consisting of a tapped primary winding and a secondary winding. Two identical coils on the outer legs of the lamination structure are connected to the main coil secondary in a manner so that the combination of all the fluxes produced by the electromagnet result in out-of-phase fluxes in the air gap. The out-of-phase air gap fluxes produced cause a contact closing torque.

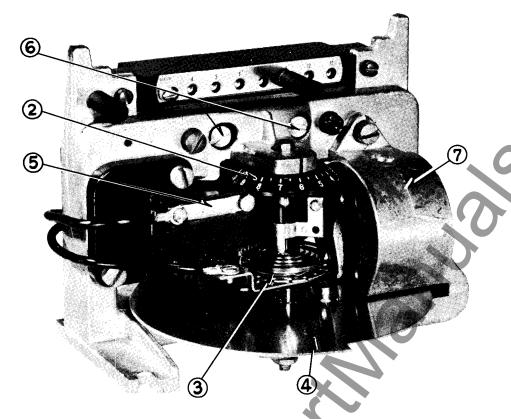


Fig. 1. Time Overcurrent Unit (Front View). 1-Tap Block. 2-Time Dial. 3-Control Spring Assembly. 4-Disc. 5-Stationary Contact Assembly. 6-Magnetic Plugs. 7-Permanent Magnet.

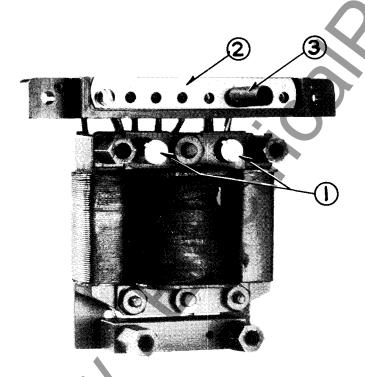


Fig. 2. "E" Type Electromagnet. 1-Magnetic Plugs. 2-Tap Block. 3-Tap Screw.

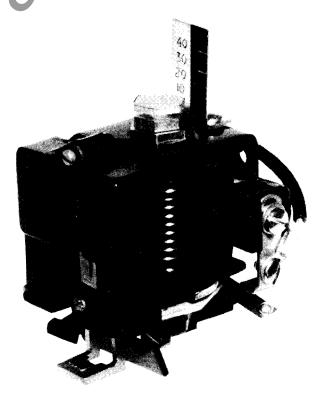


Fig. 3. Indicating Instantaneous Trip Unit (IIT).



Fig. 4. High Drop-Out Instantaneous Trip Unit (ITH).

Fig. 5. Plunger Assembly for ITH Unit.

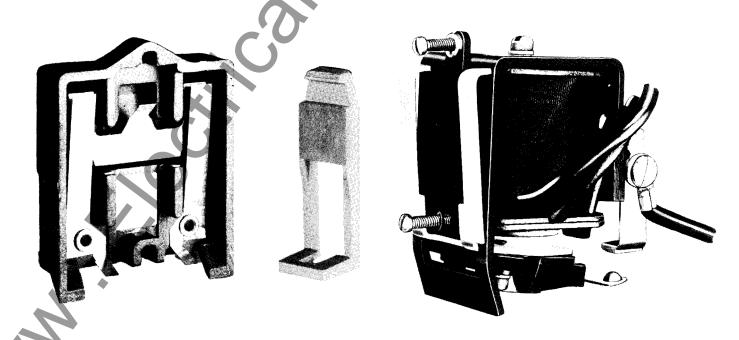


Fig. 6. Indicating Contactor Switch (ICS).

Indicating Contactor Switch Unit (ICS)

The d-c indicating contactor switch is a small clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes the moving contacts bridge two stationary contacts, completing the trip circuit. Also during this operation two fingers on the armature deflect a spring located on the front of the switch, which allows the operation indicator target to drop.

The front spring, in addition to holding the target, provides restraint for the armature and thus controls the pickup value of the switch.

Indicating Instantaneous Trip Unit (IIT)

The instantaneous trip unit is a small a-c operated clapper type device. A magnetic armature, to which leaf-spring mounted contacts are attached, is attracted to the magnetic core upon energization of the switch. When the switch closes, the moving contacts bridge two stationary contacts completing the trip circuit. Also, during the operation, two fingers on the armature deflect a spring located on the front of the switch which allows the operation indicator target to drop.

A core screw accessible from the top of the switch provides the adjustable pickup range. The minimum and maximum pick-up points are indicated on the scale which is located to the rear of the core screw.

High Drop-Out Instantaneous Trip Unit (ITH)

The high drop-out instantaneous trip unit is a small solenoid type device (Fig. 4). A plunger assembly (Fig. 5) rides up and down on a vertical guide rod in the center of the solenoid coil. The plunger assembly consists of a bushing which is threaded on the moving plunger and locked in place by a nut, and a silver disc which rests on a helical compression spring at the lower end of the plunger. The guide rod is fastened to the stationary core which in turn is held in place by the insulating plate on which the stationary contacts are mounted. The stationary core consists of two steel sections separated by a nonmagnetic ring. This non-magnetic ring provides an air gap in which the plunger steel floats. When the coil is energized, the plunger assembly moves upward carrying the silver disc which bridges three conicalshaped stationary contacts. In this position the helical spring is compressed and the plunger is free to

move while the contact disc remains stationary. Thus, a-c vibrations of the plunger assembly are prevented from causing contact chattering. A Micarta disc which acts as a shield for the contact plate, screws on the bottom of the guide rod and is locked in position by a small nut. The adjustable core screw in the top of the frame provides the principal means for adjusting the current operating values.

The ITH unit is a current operated device which will pick-up within the range stamped on the side of the frame and drop-out at 90% of the pick-up current value. The position of the core screw determines the pick-up value for a particular contact gap. The 90% drop-out ratio is accomplished through the right combination of plunger steel setting, electrical pull and spring strength. The most important factor in the adjustment of the unit is the correct positioning of the plunger steel with respect to the stationary core air gap.

Auxiliary Time-Delay Unit (T) - Where Used

This slugged telephone type unit, in conjunction with a tapped resistor, provides a 5-6 cycle delay on pickup. The resistor in the rear of the relay is tapped for use with 24, 48, 125 or 250 volt d-c supply, as shown in the internal schematics of Figs. 17 and 18.

CHARACTERISTICS

The relays are generally available in the following current ranges:

R	ange		Taps					
. :	5 - 2.5	0.5	0.6	0.8	1.0	1.5	2.0	2.5
2	- 6	2	2.5	3	3.5	4	5	6
4	- 12	4	5	6	7	8	10	12

The time vs. current characteristics are shown in Figs. 7 to 13. These characteristics give the contact closing time for the various time dial settings when the indicated multiples of tap value current are applied to the relay.

ITH Unit

The unit has a 2 to 1 range of pick-up adjustment with a 90% or greater drop-out ratio. The only adjustment necessary when making settings within the nominal range is the positioning of the core screw. At the maximum end of the range the drop-out ratio

ENERGY REQUIREMENTS

TYPE COM-2 RELAY

					VOLT AMPERES**				
AMPERE		CONTINUOUS	RATING*	POWER FACTOR	AT TAP VALUE	AT 3 TIMES TAP VALUE	AT 10 TIMES TAP VALUE	AT 20 TIMES TAP VALUE	
RANGE	TAP	(AMPERES)	(AMPERES)	$\underline{ANGLE\phi}$	CURRENT	CURRENT	CURRENT	CURRENT	
	0.5	0.91	28	58	4.8	39.6	256	790	
	0.6	0.96	28	57	4.9	39.8	270	851	
0.5/0.5	0.8	1.18	28	53	5.0	42.7	308	1024	
0.5/2.5	1.0	1.37	28	50	5.3	45.4	348	1220	
	1.5	1.95	28	40	6.2	54.4	435	1740	
	2.0	2.24	28	36	7.2	65.4	580	2280	
	2.5	2.50	28	29	7.9	73.6	700	2850	
	2.0	3.1	110	59	5.04	38.7	262	800	
	2.5	4.0	110	55	5.13	39.8	280	920	
	3.0	4.4	110	51	5.37	42.8	312	1008	
2/6	3.5	4.8	110	47	5.53	42.8	329	1120	
2, 0	4.0	5.2	110	45	5.72	46.0	360	1216	
	5.0	5.6	110	41	5.90	50.3	420	1500	
	6.0	6.0	110	37	6.54	54.9	474	1800	
	0,0	0.0			0.01	0 1.0	-112	1000	
	4.0	7.3	230	65	4.92	39.1	268	848	
	5.0	8.0	230	50	5.20	42.0	305	1020	
	6.0	8.8	230	47	5.34	44.1	330	1128	
4/12	7.0	9.6	230	46	5.35	45.8	364	1260	
	8.0	10.4	230	43	5.86	49.9	400	1408	
	10.0	11.2	230	37	6.6	55.5	470	1720	
	12.0	12.0	230	34	7.00	62.3	528	2064	

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

 $[\]phi$ Degrees current lags voltage at tap value current.

^{**} Voltages taken with Rectox type voltmeter.

ENERGY REQUIREMENTS

COM-5 LONG TIME AND COM-6 DEFINITE MINIMUM TIME RELAYS

VOLT AMPERES**

AMPERE		CONTINUOUS RATING	ONE SECOND RATING*	POWER FACTOR	AT TAP VALUE	AT 3 TIMES TAP VALUE	AT 10 TIMES TAP VALUE	AT 20 TIMES TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
	(0.5	2	56	69	3.92	20.6	103	270
	(0.6	2.2	56	68	3.96	20.7	106	288
	(0.8	2.5	56	67	3.96	21	114	3 25
0.5/2.5	(1.0	2.8	56	66	4.07	21.4	122	360
	(1.5	3.4	56	62	4.19	23.2	147	462
	(2.0	4.0	56	60	4.30	24.9	168	548
	(2.5	4.4	56	58	4.37	26.2	180	630
	(2	8	230	67	3.88	21	110	308
	(2.5	8.8	230	66	3.87	21.6	118	342
	(3	9.7	230	64	3.93	22.1	126	381
2/6	(3.5	10.4	230	63	4.09	23.1	136	417
	(4	11.2	230	62	4.08	23.5	144	448
	(5	12,5	230	59	4,20	24.8	162	540
	(6	13.7	230	57	4.38	26.5	183	624
	•							
	(4	16	460	65	4.00	22.4	126	376
	(5	18.8	460	63	4.15	23.7	143	450
	(6	19.3	460	61	4.32	25.3	162	531
4/12	(7	20.8	460	59	4.27	26.4	183	611
-,	(8	22.5	460	56	4.40	27.8	204	699
	(10	25	460	53	4.60	30.1	247	880
	(12	28	460	47	4.92	35.6	288	1056
	,-2	-3	150	••	1.02	55.6	200	1030

COM-7 MODERATELY INVERSE TIME RELAY

VOLT AMPERES**

AMPERE		CONTINUOUS RATING	ONE SECOND RATING*	POWER FACTOR	AT TAP VALUE	AT 3 TIMES TAP VALUE	AT 10 TIMES TAP VALUE	AT 20 TIMES TAP VALUE
RANGE	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
0.5/2.5	(0.5 (0.6 (0.8 (1.0 (1.5 (2.0 (2.5	2 2.2 2.5 2.8 3.4 4.0 4.4	56 56 56 56 56 56	68 67 66 64 61 58 56	3.88 3.93 3.93 4.00 4.08 4.24 4.38	20.7 20.9 21.1 21.6 22.9 24.8 25.9	103 107 114 122 148 174 185	278 288 320 356 459 552 640
2/6	(2 (2.5 (3 (3.5 (4 (5 (6	8 8.8 9.7 10.4 11.2 12.5 13.7	230 230 230 230 230 230 230 230	66 63 63 62 61 59	4.06 4.07 4.14 4.34 4.34 4.40	21.3 21.8 22.5 23.4 23.8 25.2	111 120 129 141 149 163 183	306 342 366 413 448 530 624
4/12	(4 (5 (6 (7 (8 (10 (12	16 18.8 19.3 20.8 22.5 25 28	460 460 460 460 460 460	64 61 60 58 55 51	4.24 4.30 4.62 4.69 4.80 5.20 5.40	22.8 24.2 25.9 27.3 29.8 33 37.5	129 149 168 187 211 260 308	392 460 540 626 688 860

^{*} Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

 $[\]phi$ Degrees current lags voltage at tap value current.

Voltages taken with Rectox type voltmeter.

ENERGY REQUIREMENTS

COM-8 INVERSE TIME AND COM-9 VERY INVERSE TIME RELAYS

					VOLT AMPERES**			
		CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES
AMPERE		RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE
<u>RANGE</u>	TAP	(AMPERES)	(AMPERES)	ANGLE ϕ	CURRENT	CURRENT	CURRENT	CURRENT
								•
	(0.5	2	56	72	2.38	21	132	350
	(0.6	2.2	56	71	2.38	21	134	365
	8.0)	2.5	56	69	2.40	21.1	142	400
0.5/2.5	(1.0	2.8	56	67	2.42	21.2	150	440
	(1.5	3.4	56	62	2.51	22	170	530
	(2.0	4.0	56	57	2.65	23.5	200	675
	(2.5	4.4	56	53	2.74	24.8	228	800
	(2	8	230	70	2.38	21	136	360
	(2:5	8.8	230	66	2.40	21.1	142	395
	(3	9.7	230	64	2.42	21.5	149	430
2/6	(3.5	10.4	230	62	2.48	22	157	470
	(4	11.2	230	60	2.53	22.7	164	500
	(5	12.5	230	58	2.64	24	180	580
	(6	13.7	230	56	2.75	25.2	198	660
						[
	(4	16	460	68	2.38	21.3	146	420
	(5	18.8	460	63	2.46	21.8	158	480
	(6	19.3	460	60	2.54	22.6	172	550
4/12	(7	20.8	460	57	2.62	23.6	190	620
	(8	22.5	460	54	2.73	24.8	207	700
	(10	25	460		3.00	27.8	248	850
	(12	28	460	48 45	3.46	31.4	292	1020

TYPE COM-11 RELAY

					VOLT A	VOLT AMPERES**		
	CONTINUOUS	ONE SECOND	POWER	AT	AT 3 TIMES	AT 10 TIMES	AT 20 TIMES	
	RATING	RATING*	FACTOR	TAP VALUE	TAP VALUE	TAP VALUE	TAP VALUE	
TAP	(AMPERES)	(AMPERES)	$ANGLE \phi$	CURRENT	CURRENT	CURRENT	CURRENT	
0.5	1.7	56	36	0.72	6.54	71.8	250	
0.6	1.9	56	34	0.75	6.80	75.0	267	
0.8	2.2	56	30	0.81	7.46	84.0	298	
1.0			27	0.89	8.30	93.1	330	
	3.0		22	1.13	10.04	115.5	411	
	3.5		17	1.30	11.95	136.3	502	
2.5	3.8	56	16	1.48	13.95	160.0	610	
	A -						264	
							285	
							309	
							3 4 0	
							372	
							430	
6.0	12.0	230	20	1.23	11.34	129.0	504	
							296	
*							340	
							378	
							454	
					11.1	124.8	480	
					14.9	131.6	600	
12.0	26	460	16	1.8	16.3	180.0	720	
	0.5 0.6 0.8	RATING (AMPERES) 0.5 1.7 0.6 1.9 0.8 2.2 1.0 3.5 1.5 3.0 2.0 3.5 2.5 3.8 2.0 7.0 2 5 7.8 3.0 8.3 3.5 9.0 4.0 10.0 5.0 11.0 6.0 12.0 4.0 14 5.0 16 6.0 17 7.0 18 8.0 20 10.0 22	RATING (AMPERES) RATING (AMPERES) 0.5 1.7 56 0.6 1.9 56 0.8 2.2 56 1.0 3.5 56 1.5 3.0 56 2.0 3.5 56 2.5 3.8 56 2.0 7.0 230 2.5 7.8 230 3.0 8.3 230 3.5 9.0 230 4.0 10.0 230 5.0 11.0 230 6.0 12.0 230 4.0 14 460 5.0 16 460 6.0 17 460 7.0 18 460 8.0 20 460 10.0 22 460	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	TAP CONTINUOUS RATING* (AMPERES) ONE SECOND RATING* (AMPERES) POWER FACTOR ANGLE ≠ CURRENT AT 3 TIMES TAP VALUE CURRENT 0.5 1.7 56 36 0.72 6.54 0.6 1.9 56 34 0.75 6.80 0.8 2.2 56 30 0.81 7.46 1.0 3.5 56 27 0.89 8.30 1.5 3.0 56 22 1.13 10.04 2.0 3.5 56 17 1.30 11.95 2.5 3.8 56 16 1.48 13.95 2.0 7.0 230 32 0.73 6.30 2.5 7.8 230 30 0.78 7.00 3.0 8.3 230 27 0.83 7.74 3.5 9.0 230 24 0.88 8.20 4.0 10.0 230 23 0.96 9.12 5.0 11.0 230 <td>$\begin{array}{c ccccccccccccccccccccccccccccccccccc$</td>	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	

Thermal capacities for short times other than one second may be calculated on the basis of time being inversely proportional to the square of the current.

φ Degrees current lags voltage at tap value current.

^{**} Voltages taken with Rector type voltmeter.

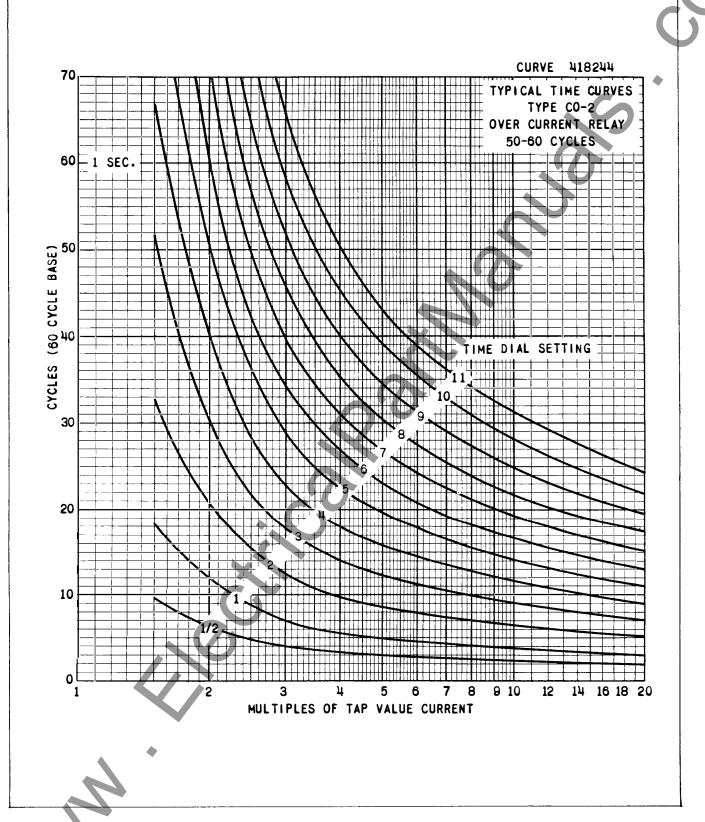


Fig. 7. Typical Time Curves of the Type COM-2 Relay.


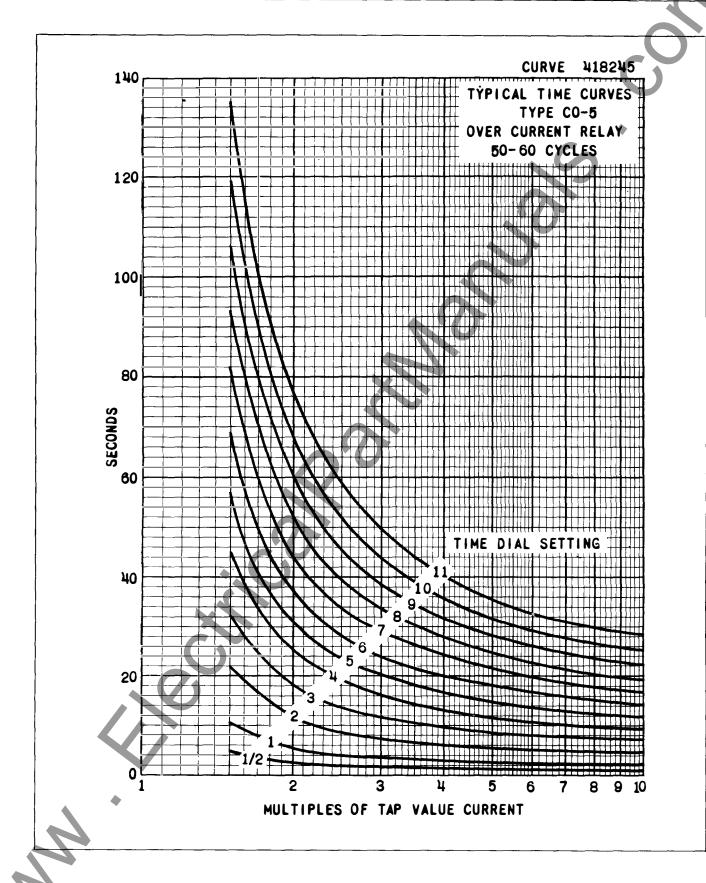


Fig. 8. Typical Time Curves of the Type COM-5 Relay.

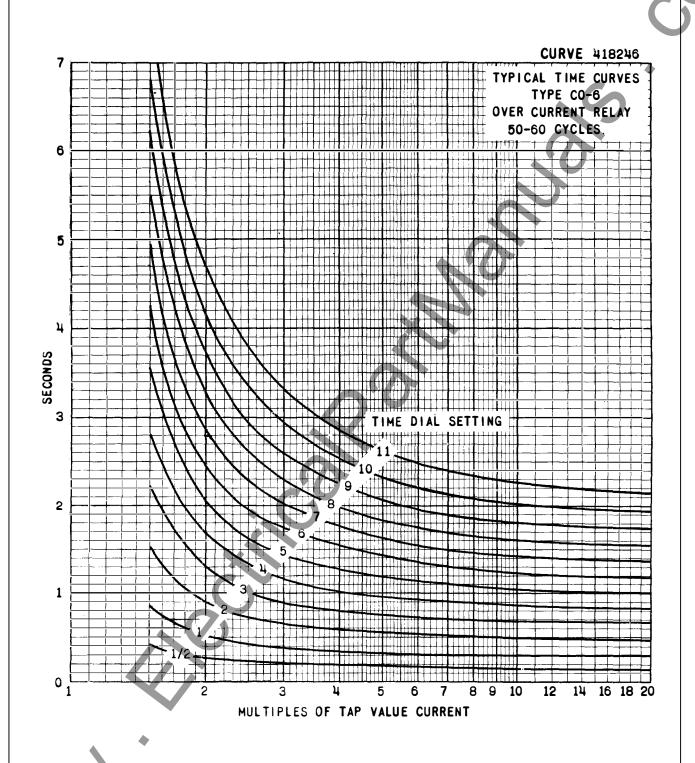

IFig. 9. Typical Time Curves of the Type COM-6 Relay.

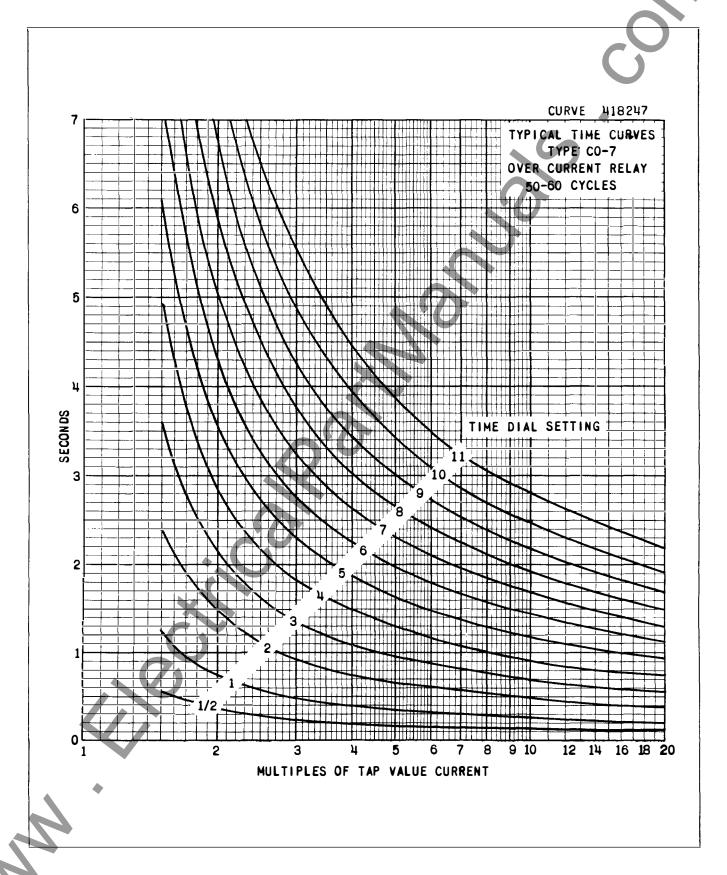


Fig. 10. Typical Time Curves of the Type COM-7 Relay.

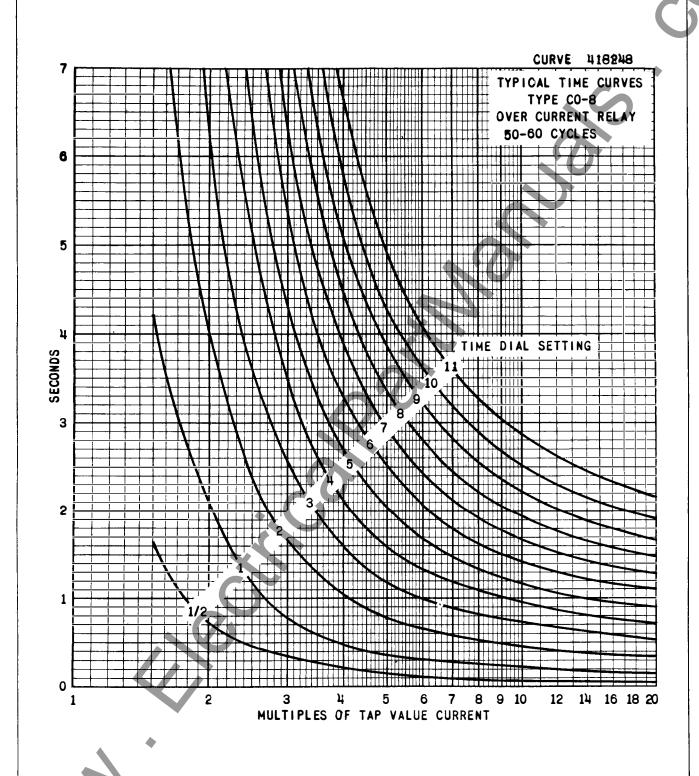


Fig. 11. Typical Time Curves of the Type COM-8 Relay.

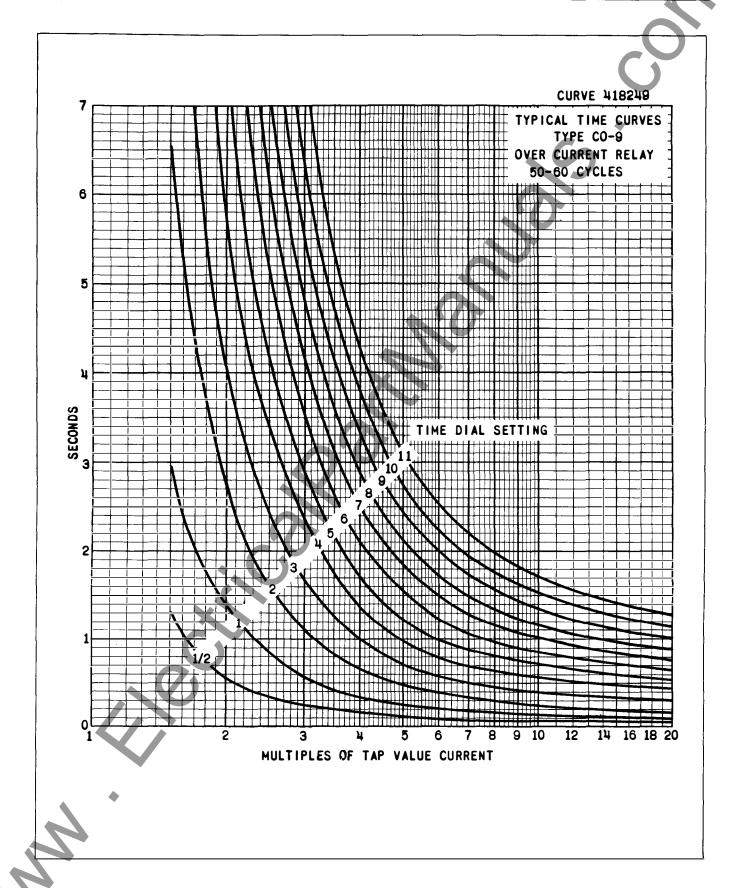


Fig. 12. Typical Time Curves of the Type COM-9 Relay.

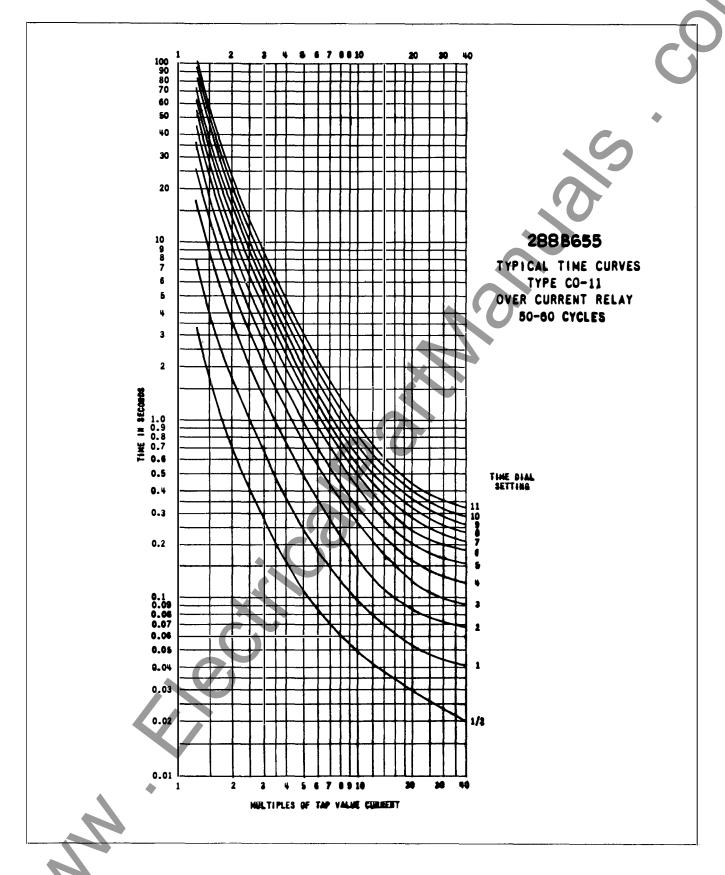


Fig. 13. Typical Time Curves of the Type COM-11 Relay.

will be greater than 90% and it may be desirable to lower the contact shield to increase the contact gap and follow. The range may be increased by lowering the plunger after the core screw has been set at its maximum rated position. If the plunger is lowered to increase the pick-up current value, then at 300% of minimum trip the drop-out ratio is 60% of the pick-up current. At 400% of minimum trip the drop-out ratio is 45% of the pick-up current.

The burden of this unit at minimum pick-up is 0.44 V.A. at 60 cycles.

Continuous current rating of the coil is 2 times minimum pickup value.

One second rating is approximately 45 times minimum pick-up.

Characteristic operating times for the unit over its nominal range are:

Less than 1 cycle at 200% of trip value 1/2 cycle at 500% of trip value 1/4 cycle at 1000% of trip value

Trip Circuit

The main contacts will safely close 30 amperes at 250 volts d-c and the seal-in contacts of the indicating contactor switch will safely carry this current long enough to trip a circuit breaker.

The IIT and ITH contacts will safely close 30 amperes at 250 volts d-c, and will carry this current long enough to trip a breaker.

The indicating contactor switch has two taps provide a pickup setting of 0.2 or 2 amperes. To change taps requires connecting the lead located in front of the tap block to the desired setting by means of a screw connection.

Trip Circuit Constants

Contactor Switch

0.2 ampere tap - 6.5 ohms d-c resistance

2.0 ampere tap - 0.15 ohms d-c resistance

SETTINGS

CO Unit

The overcurrent unit settings can be defined either by tap setting and time dial position or by tap

setting and a specific time of operation at some current multiple of the tap setting (e.g. 4 tap setting, 2 time dial position or 4 tap setting, 0.6 seconds at 6 times tap value current).

To provide selective circuit breaker operation, a minimum coordinating time of 0.3 seconds plus circuit breaker time is recommended between the relay being set and the relays with which coordination is to be effected.

The connector screw on the terminal plate above the time dial makes connections to various turns on the operating coil. By placing this screw in the various terminal plate holes, the relay will respond to multiples of tap value currents in accordance with the various typical time-current curves.

Caution

Since the tap block connector screw carries operating current, be sure that the screw is turned tight. In order to avoid opening the current transformer circuits when changing taps under load, connect the spare connector screw in the desired tap position before removing the other tap screw from the original tap position.

Instantaneous Reclosing


The factory adjustment of the CO unit contact provides a contact follow. Where instantaneous circuit breaker reclosing will be initiated upon the closure of the CO contact, this contact follow must be eliminated by loosening the stationary contact mounting screw, removing the contact plate and then replacing the plate with the bent end resting against the contact spring. With this change and the contact mounting screw tightened, the stationary contact will rest solidly against its backstop.

Indicating Contactor Switch (ICS)

No setting is required on the ICS unit except the selection of the 0.2 or 2.0 ampere tap setting. This selection is made by connecting the lead located in front of the tap block to the desired setting by means of the connecting screw. When the relay energizes a 125 or 250 volt d-c type WL relay switch, or equivalent, use the 0.2 ampere tap; for 48 volt d-c applications set in 2 tap and use Type WL relay coil S#304C209G01 or equivalent.

Indicating Instantaneous Trip (IIT)

The core screw must be adjusted to the value of

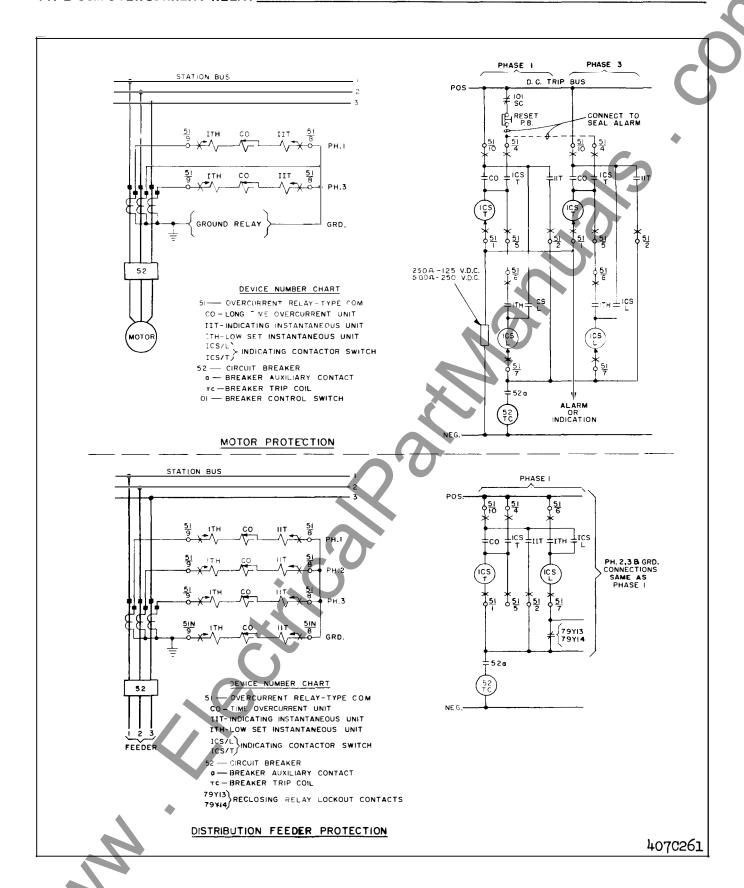

* Fig. 14. External Schematic of COM Relays without Auxiliary Time-Delay Unit.

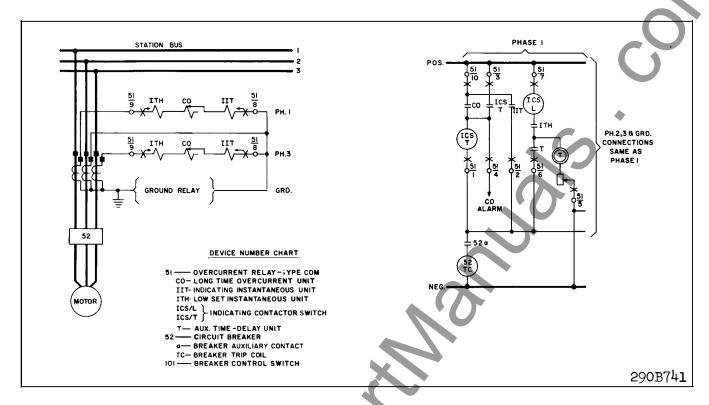


Fig. 15. External Schematic of COM Relays with Auxiliary Time-Delay Unit and ITH Unit.

pick-up current desired.

The nameplate data will furnish the actual current range that may be obtained from the IIT unit.

ITH Unit

The unit, prior to shipment is adjusted for minimum pick-up value, that is, the lower value marked on the side of the frame. The following procedure is used when changing this setting over the indicated range where a 90% or higher drop-out ratio is desired. Connect the coil of the unit in series with an ammeter and adjustable load. Apply the desired pick-up current, then adjust the core screw until the plunger just picks up. Lock core screw securely in place.

If it is desired to set the unit for either a different drop-out ratio over the nominal range or for pickup values above the nominal range, then the following procedure should be followed.

With the unit in series with an ammeter and adjustable load, apply the desired drop-out current. Adjust the core screw until the plunger assembly just drops out. Then apply the desired pick-up current and adjust the Micarta contact shield till the plunger

assembly just picks up. It is recommended that the contact gap should not be made less than 0.13 of an inch. The contact gap may be determined by turning up the contact shield from the setting position until the contacts just close. One turn of the shield is equal to .018 of an inch contact gap.

Tapped Resistor (When Used)

The relay is shipped with the resistor tapped for 125 volt d-c service. See Fig. 17 or 18 for the proper positions for other d-c ratings. When viewed from the rear of the relay the red dot on terminal 1 of the resistor is on the extreme left.

INSTALLATION

The relays should be mounted on switchboard panels or their equivalent in a location free from dirt, mositure, excessive vibration and heat. Mount the relay vertically by means of the mounting stud for the type FT projection case or by means of the four mounting holes on the flange for the semi-flush type FT case. Either the stud or the mounting screws may be utilized for grounding the relay. The electrical connections may be made directly to the ter-

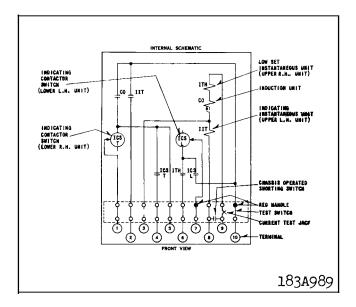


Fig. 16. Internal Schematic of the Type COM Relay, <u>without</u>
Auxiliary Time-Delay Unit, in FT21 Case. (For S#289B355A — Series of COM-5 Relays).

minals by means of screws for steel panel mounting or to the terminal stud furnished with the relay for thick panel mounting. The terminal stud may be easily removed or inserted by locking two nuts on the stud and then turning the proper nut with a wrench.

For detail information on the FT case refer to I.L. 41-076.

ADJUSTMENTS AND MAINTENANCE

The proper adjustments to insure correct operation of this relay have been made at the factory. Upon receipt of the relay no customer adjustments, other than those covered under "SETTINGS" should be required.

For relays which include an indicating instantaneous trip unit (IIT), the junction of the induction and indicating instantaneous trip coils is brought out to switch jaw #3. With this arrangement the overcurrent units can be tested separately.

Acceptance Check

The following check is recommended to insure that the relay is in proper working order:

1. Contact

a) By turning the time dial, move the moving

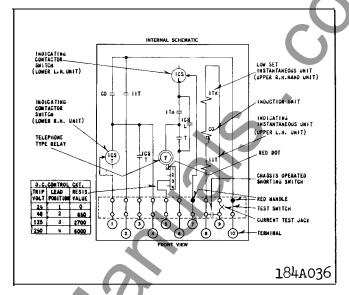


Fig. 17. Internal Schematic of the Type COM Relay <u>with</u>
Auxiliary Time-Delay Unit and <u>ITH Unit</u>, in FT21
Case. (For S#289B456A — Series of COM-5 Relays).

contacts until they deflect the stationary contact to a position where the stationary contact is resting against its backstop. The index mark located on the movement frame should coincide with the "O" mark on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".

- b) For relays indentified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020". The placement of the various time dial positions in line with the index mark will give operating times as shown on the respective time-current curves. For double trip relays, the follow on the stationary contacts should be approximately 1/32".
- 2. Minimum Trip Current Set the time dial to position 6. Using lowest tap setting, alternately apply tap value current plus 3% and tap value current minus 3%. The moving contact should leave the backstop at tap value current plus 3% and should return to the backstop at tap value current minus 3%.

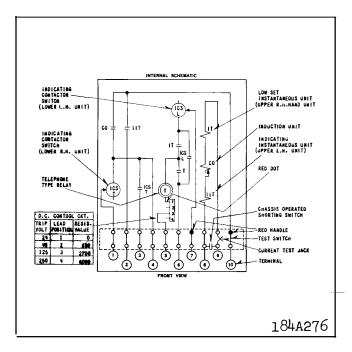


Fig. 18. Internal Schematic of the Type COM Relay, with Auxiliary Time-Delay Unit and IT Unit, in FT21 Case. (For S#289B511A - Series of COM-5 Relays).

3. <u>Time Curve</u> — Table I shows the time curve calibration points for the various types of relays. With the time dial set to the indicated position and on the lowest top setting, apply the currents specified by Table I, (e.g. for the COM-2, 3 and 20 times tap value current) and measure the operating time of the relay. The operating times should equal those of Table I plus or minus 5 percent.

For type COM-11 relay only, the 1.30 times tap value operating time from the number 6 time dial position is 54.9 ± 5% seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the nominal operating time by approximately 4%.

4. <u>Indicating Instantaneous Trip Unit (IIT)</u> — The core screw which is adjustable from the top of the trip unit determines the pickup value. The trip unit has a nominal ratio of adjustment of 1 to 4 and an accuracy within the limits of 10%.

The making of the contacts and target indication

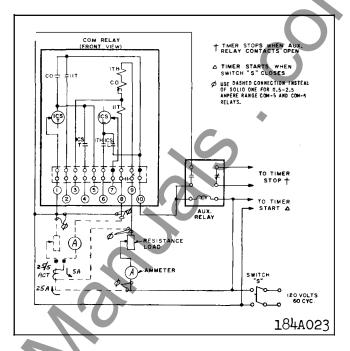


Fig. 19. Diagram of Test Connections for CO Unit of COM Relays.

should occur at approximately the same instant. Position the stationary contact for a minimum of 1/32" wipe. The bridging moving contact should touch both stationary contacts simultaneously.

Apply sufficient current to operate the IIT. The operation indicator target should drop freely.

5. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operation indicator target should drop freely.

The contact gap should be approximately .047" between the bridging moving contact and the adjustable stationary contacts. The bridging moving contact should touch both stationary contacts simultaneously.

6. High Drop-out Instantaneous Unit (ITH) — The plunger assembly should pickup and seal in at the minimum pickup current value stamped on the frame and drop out at least 90% of this value. The unit should maintain at least a 90% drop out ratio over the nominal range.

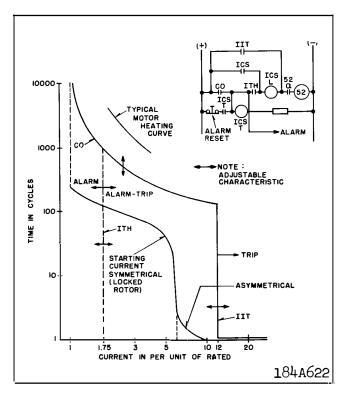


Fig. 20. Setting Example for Motor Protection Using S#289B355A — Relays <u>without</u> Auxiliary Time-Delay Unit.

The contact gap should not be less than .013 of an inch. Contact gap is determined as described under settings.

7. Auxiliary Time-Delay Unit (T) — For relays wired per Fig. 17 or 18, apply 100 volts d-c to terminals 5 and 7. Manually close the contacts of the ITH or IT unit in the top right-hand corner of the relay. The T unit should operate.

Routine Maintenance

All relays should be inspected and checked periodically to assure proper operation. Generally a visual inspection should call attention to any noticeable changes. A minimum suggested check on the relay system is to close the contacts manually to assure that the breaker trips and the target drops. Then release the contacts and observe that the reset is smooth and positive.

If an additional time check is desired, pass secondary current through the relay and check the time of operation. It is preferable to make this at several times pick-up current at an expected operating point for the particular application. For the 0.5 ampere

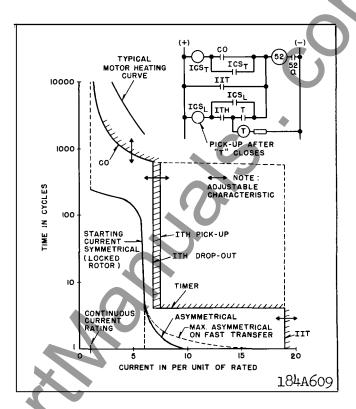


Fig. 21. Setting Example for Motor Protection Using S#289B456A — or S#289B511A — Relays <u>with</u> Auxiliary Time-Delay Unit.

range COM-5 and COM-6 induction units use the dashed test circuit in Fig. 19 as these relays are affected by a distorted wave form. With this connection the 25/5 ampere current transformers should be worked well below the knee of the excitation curve. (i.e. Use a 10L50 or better)

All contacts should be periodically cleaned. A contact burnisher #182A836H01 is recommended for this purpose. The use of abrasive material for cleaning contacts is not recommended, because of the danger of embedding small particles in the face of the soft silver and thus impairing the contact.

CALIBRATION

Use the following procedure for calibrating the relay if the relay has been taken apart for repairs or the adjustments disturbed. This procedure should not be used until it is apparent that the relay is not in proper working order. (See "Acceptance Check")

CO Unit

- 1. Contact
- a) By turning the time dial, move the moving

contacts until they deflect the stationary contact to a position where the stationary contact is resting against its backstop. The index mark located on the movement frame should coincide with the "O" mark on the time dial. For double trip relays, the follow on the stationary contacts should be approximately 1/64".

- b) For relays identified with a "T", located at lower left of stationary contact block, the index mark on the movement frame will coincide with the "O" mark on the time dial when the stationary contact has moved through approximately one-half of its normal deflection. Therefore, with the stationary contact resting against the backstop, the index mark is offset to the right of the "O" mark by approximately .020".
- 2. <u>Minimum Trip Current</u> The adjustment of the spring tension in setting the minimum trip current value of the relay is most conveniently made with the damping magnet removed.

With the time dial set on "O", wind up the spiral spring by means of the spring adjuster until approximately 6-3/4 convolutions show.

Set the relay on the lowest tap setting, the time dial to position 6.

Adjust the control spring tension so that the moving contact will leave the backstop at tap value current +1.0% and will return to the backstop at tap value current -1.0%.

3. <u>Time Curve Calibration</u> - Install the permanent magnet.

Apply the indicated current per Table I for permanent magnet adjustment (e.g. COM-8, 2 times tap value) and measure the operating time. Adjust the permanent magnet keeper until the operating time corresponds to the value of Table I.

For Type COM-11 Relay only, the 1.3 times tap value operating time from the number 6 time dial position is $54.9 \pm 5\%$ seconds. It is important that the 1.30 times tap value current be maintained accurately. The maintaining of this current accurately is necessary because of the steepness of the slope of the time-current characteristic (Figure 13). A 1% variation in the 1.30 times tap value current (including measuring instrument deviation) will change the

nominal operating time by approximately 4%. If the operating time at 1.3 times tap value is not within these limits, a minor adjustment of the control spring will give the correct operating time without any undue effect on the minimum pick-up of the relay. This check is to be made after the 2 times tap value adjustment has been completed.

Apply the indicated current per Table I for the electromagnet plug adjustment (e.g. COM-8, 20 times tap value) and measure the operating time. Adjust the proper plug until the operating time corresponds to the value in Table I. (Withdrawing the left hand plug, front view, increases the operating time and withdrawing the right hand plug, front view, decreases the time.) In adjusting the plugs, one plug should be screwed in completely and the other plug run in or out until the proper operating time has been obtained.

Recheck the permanent magnet adjustment. If the operating time for this calibration point has changed, readjust the permanent magnet and then recheck the electromagnet plug adjustment.

4. Indicating Contactor Switch (ICS) — Close the main relay contacts and pass sufficient d-c current through the trip circuit to close the contacts of the ICS. This value of current should be not greater than the particular ICS tap setting being used. The operating indicator target should drop freely.

5. Indicating Instantaneous Trip Unit (IIT)

The core screw must be adjusted to the value of pick-up current desired.

The nameplate date will furnish the actual current range that may be obtained from the IIT unit.

6. High Drop-out Instantaneous Unit (ITH) — The factory adjustment of the position of the plunger steel provides a drop-out ratio of 90% over the nominal range. But, in the event a considerable amount of material is removed from the contacts, due to repeated operations, burnishing, etc., the drop-out ratio may fall below 90%. If this occurs, then the plunger steel should be turned down to compensate. If the plunger steel setting is changed for the above or any other reasons, the following procedure should be used to recalibrate the relay.

Set the core screw at ten turns up from its bottom position. Adjust the plunger steel position on the plunger until the current value at which the plunger

drops-out is 90% of the maximum rated current. Then set the contact gap at 3/4 of a turn down, and adjust the core screw for pick-up. Drop-out value will normally be above 90% of this setting. If desired, the contact gap and follow may be increased by lowering the contact shield and readjusting the core screw for pick-up.

RENEWAL PARTS

Repair work can be done most satisfactorily at the factory. However, interchangeable parts can be furnished to the customers who are equipped for doing repair work. When ordering parts, always give, the complete nameplate data.

TABLE 1

TIME CURVE CALIBRATION DATA - 50 & 60 CYCLES

	PERMANENT	ΓMAGNET ADJUSTM	ELECTROMAGE	ELECTROMAGNET PLUGS		
RELAY TYPE	TIME DIAL POSITION	CURRENT (MULTIPLES OF TAP VALUE)	OPERATING TIME SECONDS	CURRENT (MULTIPLES OF TAP VALUE)	OPERATING TIME SECONDS	
COM-2	6	3	0.57	20	0.22	
COM-5	6	2	37.80	10	14.30	
COM-6	6	2	2,46	20	1.19	
COM-7	6	2	4.27	20	1.11	
COM-8	6	2	13.35	20	1.11	
COM-9	6	£ 0	8.87	20	0.65	
COM-11	6	2	11.27	20	0.24 △	

 \triangle For 50 cycle CO-11 relay 20 times operating time limits are 0.24 + 10%, -5%.

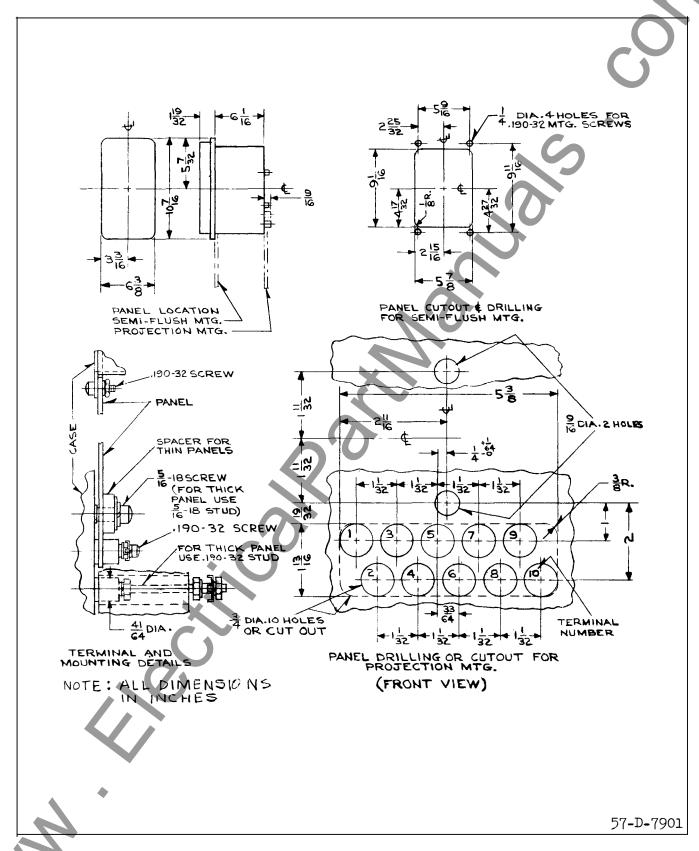


Fig. 22. Outline & Drilling Plan for the Type COM Relay in the FT21 Case.

WESTINGHOUSE ELECTRIC CORPORATION RELAY-INSTRUMENT DIVISION NEWARK, N. J.

Printed in U.S.A.