




4th WIRE DISCONNECT

For SST Ground Sensor in AKR Substructure

Numbers on Drawing Correspond to Numbers on Enclosed Parts List

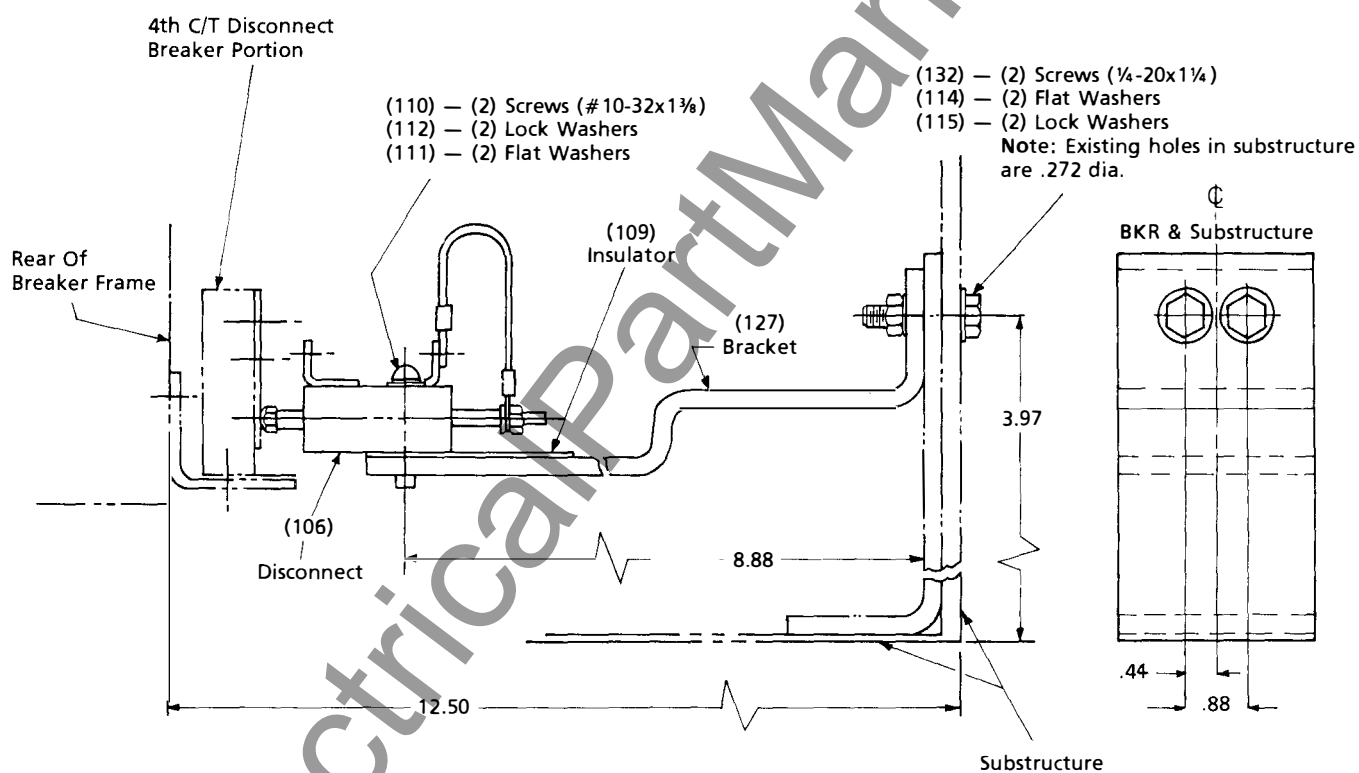

AKR 75
AKR100 BREAKERS IN SSB SUBSTRUCTURE

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company.

www.ElectricalPartManuals.com