

Oil Pump (Oil Turbine Driven)

Figure 1 shows the oil turbine driven, vertical shaft, centrifugal type pump used to supply oil to the generator hydrogen seals.

The unit as shown in the illustration, is designed for mounting on the auxiliary reservoir, which is integral with the main reservoir, so that the pump impeller is always below the minimum oil level. This arrangement insures a positive suction head and eliminates the necessity of priming the pump.

The pump impeller "7" is threaded on the shaft "11" with a left hand thread and secured by a set screw. Leakage from the discharge side back to the suction is limited to a minimum by the small clearance between the wearing rings "2" and the impeller hubs. The sheet metal screen "4" is used to protect the impeller against debris.

The oil turbine (of the Francis wheel type) utilizes the energy of high pressure oil delivered by the main oil pump, and discharges into the bearing supply system. The oil turbine wheel "17" is threaded on the shaft with a left hand thread. The wearing rings "16" fit around the wheel hubs with a small clearance to limit oil leakage from the inlet side to the exhaust side. Oil leakage downward along the shaft is likewise limited to a minimum by the seal rings "41" which are held in the gland casing "39" by the spacer rings "40" and gland nut "38".

A centrifugal type blower, consisting of items "29", "30" and "31" is mounted at the top of the unit and driven by the shaft "11". This blower, in conjunction with special baffles between the main and auxiliary reservoirs, is used to thoroughly deaerate the oil and thus maintain a supply for the generator seals, free of entrained air or hydrogen gas. The blower impeller "31" is threaded on the shaft with a left hand thread. Leakage of oil into the suction side is limited to a minimum by the shaft thrower "34" and packing ring "32". The blower discharge should be led to a point at atmospheric pressure outside of the building.

The shaft "11" is supported by two babbitt lined, sleeve type bearings. The upper bearing "20" is lubricated by oil from the discharge of the oil turbine. The lower bearing "10", in addition to carrying the radial load, serves also as the thrust bearing. It is lubricated by oil supplied through suitable passages from the oil pump discharge.

The support "23" is bolted to the top of the oil reservoir. When dismantling for inspection, the entire unit should be lifted out of the reservoir. Dismantling of the various parts is then obvious.

The following list has been compiled to facilitate ordering spare or renewal parts by item number and name together with the serial number of the unit.

Oil Pump

Item No.	Name
1	Pump Discharge Pipe
2	Pump Body Wearing Rings
3	Gasket
4	Pump Body Screen
5	Pump Body Cover
6	Pump Body
7	Pump Impeller
8	Gasket
9	Thrust Bearing Set Screw
10	Thrust Bearing
11	Shaft
12	Pump Body Support
13	Gasket
14	Gasket
15	Oil Turbine Body
16	Oil Turbine Body Wearing Ring
17	Oil Turbine Wheel
18	Gasket
19	Oil Turbine Body Cover
20	Bearing (Upper)
21	Gasket
22	Oil Drain Pipe
23	Pump Support
24	Gasket
25	Oil Drain Cover
26	Gasket
27	Blower Body Taper Dowel
28	Gasket
29	Blower Body Cover
30	Blower Body
31	Blower Impeller
32	Blower Oil Guard Packing Ring
33	Blower Oil Guard
34	Shaft Thrower
35	Gasket
36	Gasket
37	Oil Turbine Inlet Pipe
38	Gland Nut
39	Gland Casing
40	Gland Spacer Ring
41	Gland Seal Ring

Oil Pump

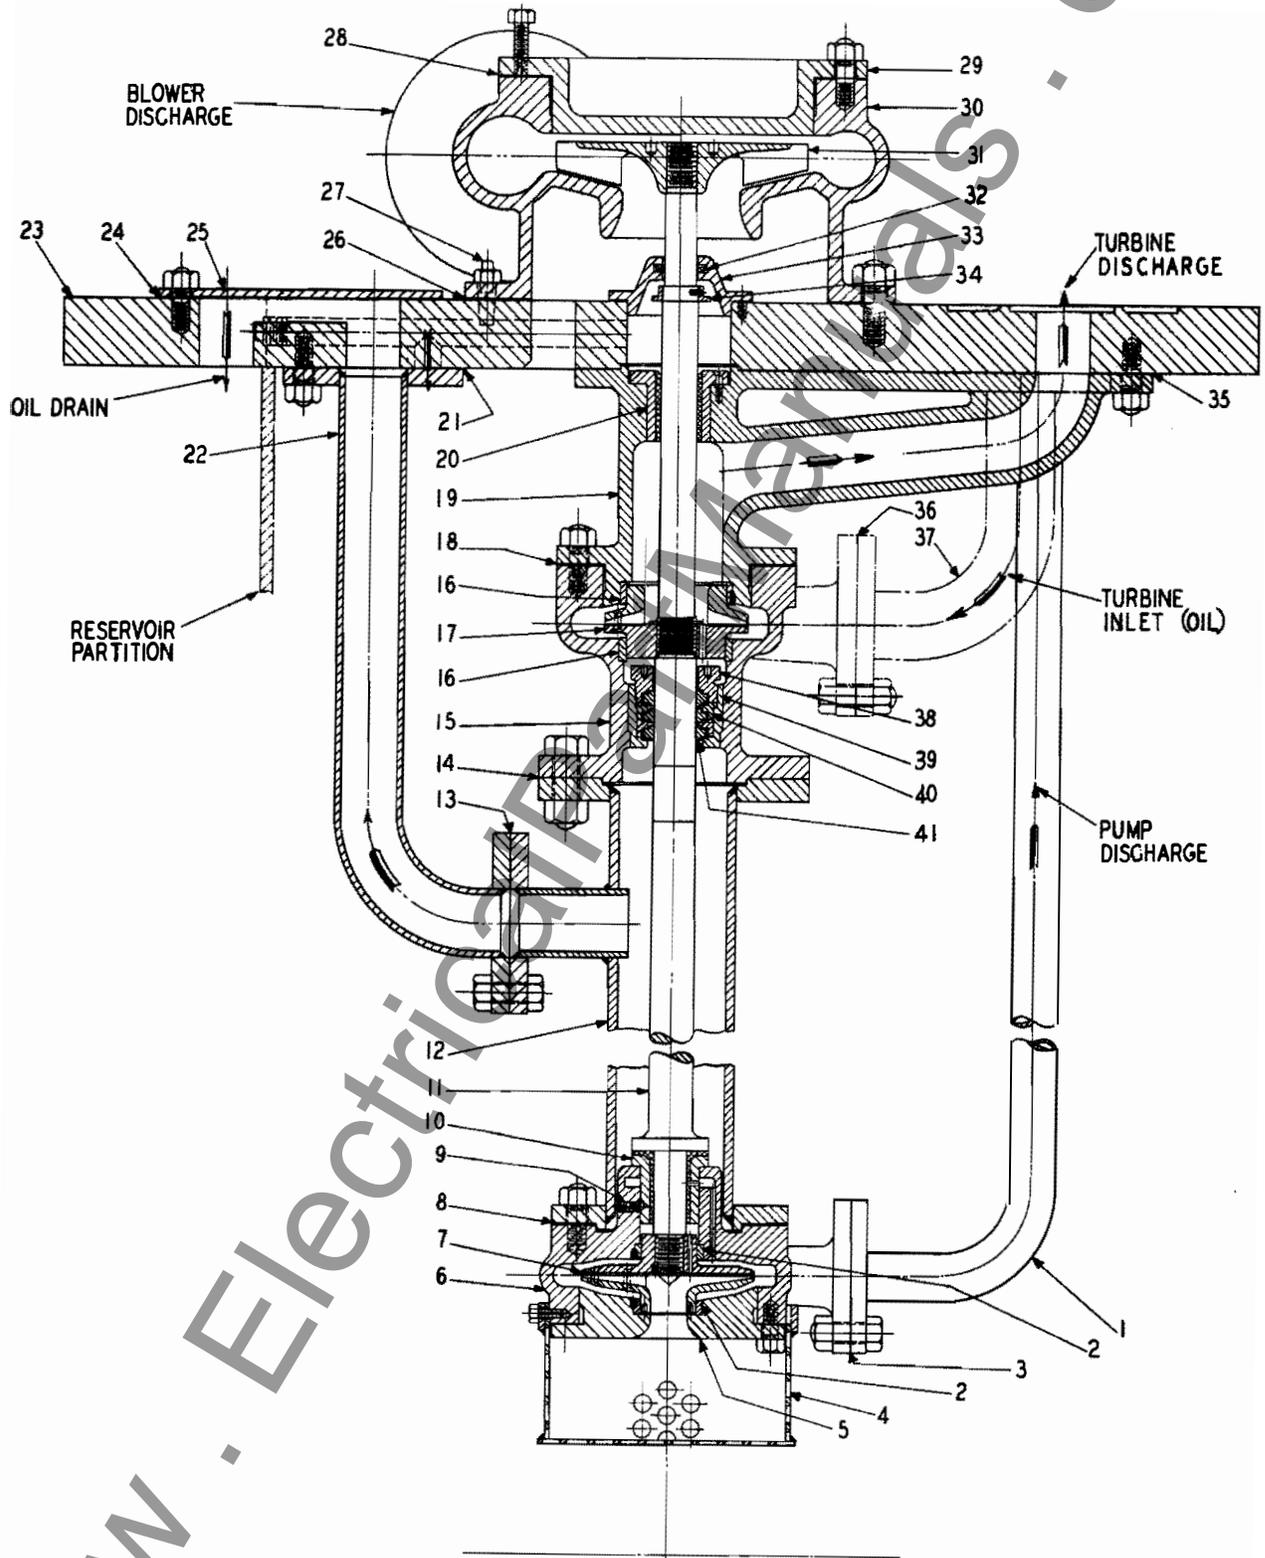


Fig. 1- Assembly