

### INSTALLATION . OPERATION . MAINTENANCE

# INSTRUCTIONS

# TYPE TCF POWER LINE CARRIER FREQUENCY SHIFT TRANSMITTER EQUIPMENT 1 WATT/10 WATT FOR KEYED AND VOICE APPLICATIONS

**CAUTION:** It is recommended that the user of this equipment become thoroughly familiar with the information in this instruction leaflet before energizing the carrier assembly. Failure to observe this precaution may result in damage to the equipment.

If the carrier set is mounted in a cabinet, it must be bolted down to the floor or otherwise secured before swinging out the equipment rack to prevent its tipping over.

#### APPLICATION

The type TCF carrier transmitter equipment provides for the transmission of either of two closely controlled discrete frequencies, both within a narrow-band channel, over high-voltage transmission lines. The center frequency of the channel can vary from 30 to 300 KHz in 0.5 KHz steps. The two frequencies transmitted are separated by 200 Hz, one being at center frequency (fc) plus 100 Hz and the others at center frequency minus 100 Hz. The higher frequency, termed the Guard frequency, is transmitted continuously when conditions are normal. It indicates at the receiving end of the line that the channel is operative and it also serves to prevent false operation of the receiver by line noise. The lower frequency, termed the Trip frequency, is transmitted as a signal that an operation (such as tripping a circuit breaker) should be performed at the receiving end of the line.

When frequency shift carrier is used in protective relaying applications, it is recommended that the trip frequency be transmitted at a higher power level to increase reliability of the system under conditions of abnormally high channel losses or line noise. The frequency is shifted from Guard to Trip by the closing of a protective relay contact, and the same contact also shifts the transmitter from a 1-watt to a 10-watt output level.

When electro-mechanical relays are used for keying from guard to trip frequency, the contact used is connected to the high voltage input of a buffering keying board. This board buffers the input so that random noise does not key the circuits. When solid state relays are used, the 20 V D.C. voltage used for keying is connected to the low voltage input of the buffering keying board.

#### CONSTRUCTION

The 1 watt/10 watt TCF transmitter unit is mounted on a standard 19-inch wide panel 12¼ inches (7 rack units) high with edge slots for mounting on a standard relay rack. All components are mounted on the rear of the panel. Fuses, a pilot light, a power switch and a jack for metering the amplifier collector current are accessible from the front of the panel. See Fig. 5. All of the circuitry that is suitable for printed circuit board mounting is on two such boards, as shown in Fig. 2. The components mounted on each printed circuit board or other sub-assembly are shown enclosed by dotted lines on the internal schematic. Fig. 1. The location of components on the two printed circuit boards are shown on separate illustrations, Fig. 3 & 4.

External connections to the assembly are made through a 18-circuit receptacle, J3. The r.f. output connection to the assembly is made through a coaxial cable jack, J2.

#### OPERATION

The transmitter is made up of four main stages and two filters. The stages include two crystal oscillators operating at frequencies that differ by the desired channel frequency, a mixer and buffer

All possible contingencies which may arise during installation, operation, or maintenance, and all details and variations of this equipment do not purport to be covered by these instructions. If further information is desired by purchaser regarding his particular installation, operation or maintenance of his equipment, the local Westinghouse Electric Corporation representative should be contacted.

amplifier, a driver stage and a power amplifier. One filter is located between the driver and the power amplifier and the second filter removes harmonics that may be generated by distortion in the power amplifier.

A single crystal designed for oscillation in the 30 KHz to 300 KHz range cannot be forced to oscillate away from its natural frequency by as much as  $\pm$  100 Hz. In order to obtain this desired frequency shift, it is necessary to use crystals in the  $2\,\text{MHz}$ range. The crystals are Y1 and Y2 of Fig. 1. The frequency of Y2 is 2.00~MHz when operated with a specified amount of series capacity, and the frequency of Y1 is 2.00 MHz plus the channel frequency, or 2.03 MHz. Capacitor C55 and crystal Y2 in series are connected between the positive side of the supply voltage and the base of transistor Q51, which operates in the emitter follower mode. The emitter is coupled to the base through C57, and with Y2 removed the base of Q51 would be held at approximately the midpoint of the supply voltage by R51 and R52. The crystal serves as a seriesresonant circuit with very high inductance and low capacitance. The circuit can be made to oscillate at other than the natural frequency of the crystal by varying the series capacitor, C55. Increasing C55 will lower the frequency of oscillations and reducing C55 will raise the frequency.

Crystal Y1 is connected in a circuit that is similar except for the addition of C53 and diodes D51 and D52. By adjustment of C52 this circuit is made to oscillate at 100 Hz above its marked frequency. Capacitor C53 is not effective until is biased in the forward direction and becomes conductive. It is biased in the reverse direction until the relay control contact is closed, which places 45 V.D.C. at terminal 3 of the printed circuit board. With D51 conducting, C53 is effectively in parallel with C52, and adjustment of C53 will reduce the frequency by 200 Hz. The crystals taken individually have a greater variation of frequency with temperature than would be acceptable. However, by proper matching of the two crystals, the variation in their difference frequency can be kept within limits that permit holding the frequency stability of the overall transmitter to  $\pm 10$ Hz over a temperature range of -20 to  $\pm$  60°C.

The frequencies produced by the two oscillators are coupled to the base of mixer transistor Q53 through C62 and C63. The sum of the two frequencies is so high that a negligible amount appears on the secondary of transformer T51, but the difference frequency is accepted and amplified by Q53 and Q54.

When the relay control, or keying, contact is closed, it increases the output power from 1 watt to 10 watts as well as changing the frequency from Guard to Trip. This is effected by reducing the emitter resistance of buffer-amplifier transistor Q54. When the keying contact is open, transistor Q55 receives no base current and is non-conducting. Emitter resistor R70 therefore is effectively open-circuited. The level of output power is adjusted to 1 watt by means of R64. When Q55 is made conductive by closing the keying contact. R70 is placed in parallel with R68 and the amount of emitter resistance not bypassed by C66 can be adjusted as required to obtain a 10-watt output level.

As is shown on the Internal Schematic, Fig. 1, or Fig. 2, the voltage for the keying ciruit is obtained from the 45-volt regulated supply in the transmitter, and opening the single power switch deenergizes both the transmitter and the keying circuit.

The driver stage consists of transistors Q56 and Q57 connected in a conventional push-pull circuit with input supplied from the collector of Q54 through transformer T52. Thermistor R73 and resistors R74 and R75 are connected to provide a variable bias that reduces the effect of varying ambient temperatures on the input level.

The driver filter, FL101, consists of a seriesresonant inductor and capacitor connected between the driver and power amplifier stages by appropriate transformers T1 and T2. This filter greatly improves the waveform of the signal applied to the power amplifier.

The power amplifier uses two series-connected power transistors, Q101 and Q102, operating as a class B push-pull amplifier with single-ended output. Diodes D101 and D103 provide protection for the base-emitter junctions of the power transistors. Zener diodes D105 and D106 protect the collector-emitter junctions from surges that might come in from the power line through the coaxial cable.

The output transformer T3 couples the power transistors to the output filter FL102. The output filter includes two trap circuits (L102, CB and L103, CC) which are factory tuned to the second and third harmonics of the transmitter frequency. Capacitor CD approximately cancels the inductive reactance of the two trap circuits at the operating frequency. Protective gap G1 is a small lightning arrester to limit the magnitude of switching surges or other line disturbances reaching the carrier set through the line turner and coaxial cable. Auto-

transformer T4 matches the filter impedance to coaxial cables of 50, 60, or 70 ohms.

The series resonant circuit composed of L105 and CE is tuned to the transmitter frequency, and aids in providing resistive termination for the output stage. Jack J02 is mounted on the rear panel of FL102 and is used for measuring the r.f. output current of the transmitter into the coaxial cable. It should be noted that the filter contains no shunt reactive elements, thus providing a reverse impedance that is free of possible "across-the-line" resonances.

The power supply is a series-type transistorized d-c voltage regulator which has a very low stand-by current drain when there is no output current demand. The Zener diode Z1 holds a constant base-tonegative voltage on the series-connected power transistor Q1. Depending on the load current, the d-c voltage drop through transistor Q1 and resistors R1 and R2 varies to maintain a constant output voltage. The Zener diode Z2 serves to protect the collector-base junction of Q1 from surge voltages. Capacitor C1 provides a low carrier-frequency impedance across the d-c output voltage. Capacitors C2 and C3 bypass r.f. or transient voltages to ground, thus preventing damage to the transistor circuits.

When keyed for voice by the voice adapter, transistor Q55 is keyed into class A operation so that its conduction can be modulated by the voice input from the voice adapter. Potentiometer R82 is adjusted so that the nominal output of carrier is 3.25 watts (14 volts across 60 ohms). The voice input modulates the carrier through this transistor by varying the amount of conduction of Q55 so that the output power of carrier varies with the voice amplitude following the voice frequency components. Since with Q55 completely non-conducting, R64 has been set to produce a 1-watt output, maximum modulation on the side to shut off Q55 will not result in an output level of less than 1-watt carrier at any time. Also since the output level has been set at 10 watts with Q55 completely conducting by the adjustment of R70, the maximum modulation on the side of turn on of Q55 will not result in a carrier output level of greater than 10 watts at any time. Thus the modulation for voice will not result in the output carrier level dropping below 1 watt and endangering the guard frequency for relaying purposes.

The buffer keying board in addition to providing proper buffering, also contains logic for the proper keying of both frequency and output level in re-

gards to protective relaying operation, voice adapter operation, and 52b contact operation.

It should be remembered that protective relaying operation has first priorty. If the protective relay operates and puts a voltage input into any of the three input points labeled carrier auxiliary keying, the transmitter will both frequency shift to trip frequency and full 10 watts output whether voice is called for or not.

The operation of the 52b contact will remove the 10 watt keying output and permit the voice adapter to key to 3,2 Watts output for AM voice modulation. This allows voice modulation on the trip frequency after the 52b contact has operated.

#### CHARACTERISTICS

Frequency Range	30-300 kHz
Output	1 watt guard - 10 watts trip - 3.2 watts voice (into 50 to 70 ohm resistive load)
Frequency Stability	±10 Hz from -20°C to +55°C.
Frequency spacing	Two-way channel, - See Voice Adapter Instruction Leaflet.
Harmonics	Down 55 db (min.) from output level.
Input voltage	48 or 125 v.d.c.
Supply voltage variation	42-56v. for nom. 48v. supply. 105-140v. for nom. 125v. supply.
Battery drain	0.5 a. guard \ 48 v.d.c.
	0.5 a. guard 0.9 a. trip 125 v.d.c.
Keying circuit current	4 ma.
Temperature range	-20 to $+60$ °C. around chassis.
Dimensions	Panel height - $12\frac{1}{4}$ " or 7 r.u. Panel width - 19"
Weight	12 lbs.

#### INSTALLATION

The TCF transmitter is generally supplied in a cabinet or on a relay rack as part of a complete carrier assembly. The location must be free from dust, excessive humidity, vibration, corrosive fumes, or heat. The maximum ambient temperature around the chassis must not exceed 60°C.

#### **ADJUSTMENTS**

The TCF 1W/10W transmitter is shipped with the power output controls R64, R82 and R70, set for outputs of 1 watt, 3.2 watts and 10 watts into a 60 ohm load. If it is desired to check the adjustments or if repairs have made readjustment necessary, the coaxial cable should be disconnected from the assembly terminals and replaced with a 50 to 70 ohm non-inductive resistor of at least a 10 watt rating. Use the value of the expected input impedance of the coaxial cable and line tuner. If this is not known, assume 60 ohms. Connect the T4 output lead to the corresponding tap. Connect an a-c vacuum tube voltmeter (VTVM) across the load resistor. Turn power output control R64 to minimum (full counter-clockwise). Turn on the power switch on the panel and note the d-c voltage across terminals 5 and 7 of J3. If this is in the range of 42 to 46 volts, rotate R64 clockwise to obtain 4 or 5 volts across the load resistor used. At this point check the adjustment of the series output tuning coil L105 by loosening the knurled shaft-locking nut and moving the adjustable core in and out a small amount from its initial position. Leave it at the point of maximum voltage across the load resistor used. Then rotate R64 farther clockwise to obtain the correct voltage for 1 watt in the load resistor, as shown in the following table.

Then change to Trip frequency by connecting together terminals 2, 3 and 4 of the transmitter printed circuit board (which is approximately equivalent to connecting together terminals 7 and 12 of J3), and rotate R70 until the voltage across the load resistor is as shown in the following table for a 10 watt output. Recheck the adjustment of L105 for maximum output voltage and readjust R70 for a 10 watt output if necessary. Tighten the locking nut on L105. Open the power switch and remove the jumper used to key the transmitter to the 10 watt level. Key for voice by opening connection between terminals 12 and 7 of • J3. This is done by removing handset from telephone hook switch of corresponding voice adapter. (Another method would be to jumper terminal 2 to terminal 14 if buffer keying board). Turn the power back on. Adjust R82 for a 3.2 watt output across the load resistor (14V  $\,$ 

across 60 ohms). Open the power switch, remove the jumper, remove the load resistor, and reconnect the coaxial cable circuit to the transmitter.

	VOLTAGE FO	R
1 WATT OUTPUT	3.2 WATTS OUTPUT	10 WATTS OUTPUT
7.1	12.7	22.4
7.8	14	24.5
8.4	15	26.5
	7.1 7.8	7.1 12.7 7.8 14

Follow the procedure outlined in the line tuner instructions for its adjustment.

Normally the output filter (FL102) will require no readjustment except as noted above. It is factory tuned for maximum second and third harmonic rejection, and for series resonance (maximum output at the fundamental frequency) with a 60-ohm load. A small amount of reactance in the transmitter output load circuit may be tuned out by readjustment of the movable core of L105. This may be necessary with some types of line coupling equipment. The adjustable cores of L102 and L103 have been set for maximum harmonic rejection and no change should be made in these settings unless suitable instruments are available for measuring the second and third harmonic present in the transmitter output.

The operating frequencies of crystals Y1 and Y2 have been carefully adjusted at the factory and good stability can be expected. If it is desired to check the frequencies of the individual crystals, this can be done by turning the matched pair 180° and inserting a crystal in its proper socket with the other crystal unconnected. A sensitive frequency counter with a range of at least 2.2 MHz can be connected from TP51 to TP54. (Connection to TP54 rather than to TP53 provides a better signal to the counter and avoids some error from the effect of the counter input capacitance on the oscillator circuit.) While measurement of the oscillator crystals individually is necessary for the initial adjustment of the oscillators, generally any subsequent checks may be made with a lower range counter connected at the transmitter output. If any minor adjustment of the Guard and Trip frequencies should be needed, the Guard adjustment should be made with capacitor C52 and the Trip Adjustment with C53.

### Q56-Q57 Bias Adjustment

The push-pull output stages of the transmitter board are normally shipped correctly biased. If any components involved in these stages have been changed, then it may be necessary to recheck the biasing of this stage. Unsolder the lead from terminal 2 of transformer T1 (just above FL101) and temporarily connect a low-range d-c milliammeter (0-1.0 ma) between the removed lead (+) and T1 terminal 2 (-). Turn the slotted control on the small potentiometer R80 to full counterclockwise. Now, apply power to the TCF carrier set, but do not transmit carrier. This can be done by removing the crystals. Advance the potentiometer clockwise until the milliammeter reads 0.2 ma. Turn off the power, remove the milliammeter, and solder the lead back on terminal 2 of T1. Replace the crystals and again apply d-c power to reenergize the transmitter. Check output, etc. of transmitter as previously described.

### MAINTENANCE

Periodic checks of the transmitter Guard and Trip power outputs will detect impeding failure so that the equipment can be taken out of service for correction. At regular maintenance intervals, any accumulated dust should be removed, particularly from the heat sinks. It is also desirable to check the transmitter power output at such times, making any necessary readjustments to return the equipment to its initial settings.

Voltage values should be recorded after adjustment in order to establish reference values which will be useful when checking the apparatus. The readings will remain fairly constant over an indefinite period unless a failure occurs. However, if transistors are changed, there may be considerable difference in these readings without the overall performance being affected.

Typical voltage values are given in the following tables. Voltages should be measured with a VTVM. Readings may vary as much as  $\pm 20\%$ .

# TABLE I TRANSMITTER D-C MEASUREMENTS

Note: All voltages are positive with respect to Neg. 45 V. (TP51). All voltages read with d-c VTVM.

Test Point	Voltage at 1 Watt Output	Voltage at 10 Watts Output	Voltage at 3.2 Watts Output (For Voice)
TP52 TP53 TP54 TP55	20 5.4 3.4 21	20 5.4 3.4 18.5 18.5	20 5.4 3.4 
TP56 TP57	*<1.0	*<1.0	
TP58 TP59 TP101	44.3 *<1.0 0	44.1 *<1.0 0	- - -
TP103 TP105	I -	21 ± 2 44.0	

# TABLE II TRANSMITTER RF MEASUREMENTS

Note: Voltages taken with transmitter set to indicated output across 60 ohms. These voltages subject to variations, depending upon frequency and transistor characteristics. T51-3 = Terminal 3 of transformer T51. Other transformer terminals identified similarly. All read with a-c VTVM.

Test Point	Voltage at 1 watt Output	Voltage at 10 watts Output	Voltage at 3.2 Watts Output (For Voice)
TP54 to TP51 TP57 to TP51 TP59 to TP51	0.015-0.03 0.05 -0.09 0.05 -0.09	0.015-0.03 0.3 -1.2 0.3 -1.2	- -
T1-1 to TP51 T1-3 to TP51 T1-4 to Gnd.	1.65 1.45 .6	5.6 4.9 2.0	
T2-1 to Gnd. TP101 to TP103 TP103 to TP105	)	1.85 17.0 17.0	- - -
T3-4 to Gnd. T4-2 to Gnd. TP109 to Gnd.	35 31 9.8	112 110 31	- - -
J102 to Gnd.	7.8	24.5	14

# CONVERSION OF TRANSMITTER FOR CHANGED CHANNEL FREQUENCY

The parts required for converting a 1W/10W TCF transmitter for operation on a different channel frequency consist of a pair of matched crystals for the new channel frequency, new capacitors C103 and  $\mathrm{C}104$  on the power amplifier circuit board if the old and new frequencies are not in the same frequency group (see table on internal schematic drawing) and, in general, new or modified filters FL101 and FL102. Inductors L101, L102 and L103 in these filters are adjustable over a limited range, but forty-two combinations of capacitors and inductors are required to cover the frequency range of 30 to 300 kHz. The widths of the frequency groups vary from 1.5 kHz at the low end of the channel frequency range to 13 kHz at the upper end. A particular assembly can be adjusted over a somewhat wider range than the width of its assigned group since some overlap is necessary to allow for component tolerances. The nominal kHz adjustment ranges of the group are:

30.0-31.5	61.0- 64.0	110 0 110 =	
		113.0-119.5	207.1-214.0
32.0-33.5	64.5- 68.0	120.0-127.0	214.1-222.0
34.0-36.0	68.5- 72.0	127.5-135.0	222.1-230.0
36.5-38.5	72.5- 76.0	135.5-143.0	230.1-240.0
39.0-41.0	76.5- 80.0	143.5-151.0	240.1-250.0
41.5-44.0	80.5 -84.5	151.5-159.5	250.1-262.0
44.5-47.0	85.0- 89.0	160.0-169.5	262.1-274.0
47.5 - 50.0	89.5- 94.5	170.0-180.0	284.1-287.0
50.5-53.5	95.0-100.0	180.5-191.5	287.1-300.0
54.0-57.0	100.5-106.0	192.0-200.0	
57.5-60.5	106.5-112.5	200.1-207.0	

If the new frequency lies within the same frequency group as the original frequency, the filters can be readjusted. If the frequencies are in different groups, it is possible that changes only in the fixed capacitors may be required. In general, however, it is desirable to order complete filter assemblies adjusted at the factory for the specified frequency.

A signal generator, a frequency counter and a vacuum tube voltmeter are required for readjustment of FL101. The signal generator and the counter should be connected across terminals 4 and 5 of transformer T1 and the voltmeter across terminals 1 and 2 of transformer T2. The signal generator should be set at the channel center frequency and at 2 to 3 volts output. The core screw of the small inductor should be turned to the position that gives a true maximum reading on the VTVM. Turning the

screw to either side of this position should definitely reduce the reading. The change in inductance with core position is less at either end of the travel than when near the center and consequently the effect of core screw rotation on the VTVM reading will be less when the resonant inductance occurs near the end of core travel.

The procedure for readjustment of the 2nd and 3rd harmonic traps of filter FL102 is somewhat similar. A signal generator and a counter should be connected to terminals 3 and 4 of transformer T3, and a 500 ohm resistor and a VTVM to the terminals of protective gap G1. The ground or shield lead of all instruments should be connected to the grounded terminal of the transformer. Set the signal generator at exactly twice the channel center frequency and at 5 to 10 volts output. Turn the core screw of the large inductor L102, to the position that gives a definite minimum reading on the VTVM. Similarly, with the signal generator set at exactly three times the channel center frequency and  $5\ \mathrm{to}$ 10 volts output, set the core screw of the small inductor, L103, to the position that gives a definite minimum reading on the VTVM. Then remove the instruments and the 500 ohm resistor.

After the new pair of matched crystals have been adjusted, as described under "ADJUSTMENTS", the transmitter can be operated with a 50 to 70 ohm load (depending on which tap of T4 is used) connected to its output, and inductor Li05 can be readjusted for maximum output at the changed channel frequency by the procedure described in the same section.

If a frequency-sensitive voltmeter is available, the 2nd and 3rd harmonic traps may be adjusted without using an oscillator as a source of double and triple the channel frequency. Connect the frequency-sensitive voltmeter from TP109 to ground and adjust the transmitter for rated output into the selected load resistor. Set the voltmeter at twice the channel frequency and, using the tuning dial and db range switch, obtain a maximum on-scale reading of the 2nd harmonic. Then vary the core position of L102 until a minimum voltmeter reading is obtained. Similarily, tune the voltmeter to the third harmonic and adjust L103 for minimum voltmeter reading. Although the transmitter frequency will differ from the channel center frequency by 100 Hz, the effect of this difference on the adjustment of the harmonic traps will be negligible. It should be noted that the true magnitude of the harmonics cannot be measured in this manner because of the preponderance of the fundamental frequency at the voltmeter terminals. Accurate measurement of the harmonics requires use of a filter between TP109 and the voltmeter that provides high rejection of the fundamental. The insertion looses of this filter for the 2nd and 3rd harmonics must be measured and taken into account.

RECOMMENDED TEST EQUIPMENT

- I. Minimum Test Equipment for Installation.
  - a. 60-ohm 10-watt non-inductive resistor.
- b. A-C vacuum Tube Voltmeter (VTVM) or equivalent. Voltage range 0.003 to 30 volts, frequency range 60 hz to 330 kHz; impedance 7.5 megohms.
- © c. D-C Vacuum Tube Voltmeter (VTVM) or equivalent.
- II. Desirable Test Equipment for Apparatus Maintance.
  - a. All items listed in I.
  - b. Signal Generator

Output Voltage:

up to 8 volts.

Frequency Range:

20-kHz to 900 kHz

- c. Osiclloscope
- d. Frequency counter
- e. Ohmmeter
- f. Capacitor checker.

Some of the functions of the recommended test equipment are combined in the type TCT carrier test meter unit, which is designed to mount on a standard 19" rack but also can be removed and used as a portable unit.

### RENEWAL PARTS

Repair work can be done most satisfactorily at the factory. However, replacement parts can be furnished, in most cases, to customers who are equipped for doing repair work. When ordering parts, always give the complete nameplate data and identify the part by its designation on the Internal Schematic drawing.

CIRCUIT SYMBOL	DESCRIPTION	WESTINGHOUSE DESIGNATION
	CAPACITORS	
C1	Oil-filled; 0.45 mfd.; 330 V.A.C.	1723408
C2	Oil-filled; 0.5 mfd.; 1500 V.D.C.	1877962
C3	Oil-filled; 0.5 mfd.; 1500 V.D.C.	1877962
Buffer C1, C2, C3	Metallized Paper, 0.47 mfd.;	849A437H04
C21	Metallized Paper, .047 mfd.;	849A437H04
C51	Dur-Mica, 1500 pf., 500 V.D.C.	762A757H03
C52	Variable, 5.5-18 pf.	879A834H01
C53	Variable, 5.5-18 pf.	879A834H01
C54	Metallized paper, .1 mfd.; 200 V.D.C.	187A624H01
C55	Variable, 5.5-18 pf.	879A834H01
C56	Dur-Mica, 2000 pf.; 500 V.D.C.	187A584H01
C57	Dur-Mica, 2000 pf.; 500 V.D.C.	
C58	Metallized paper, 0.25 mfd.; 200 V.D.C.	187A584H01
C59	Dur-Mica, 100 pf., 500 V.D.C.	187A624H02
C60	Dur-Mica, 100 pf., 500 V.D.C.	762A757H01
C61	Metallized paper, 0.25 mfd.; 200 V.D.C.	762A757H01
C62	Dur-Mica, 4700 pf., 500 V.D.C.	187A624H02
C63	Dur-Mica, 1000 pf., 500 V.D.C.	762A757H04
C64	Metallized paper, 0.25 mfd.; 200 V.D.C.	762A757H02
C65	Metallized paper, 0.25 mfd.; 200 V.D.C.	187A624H02
C66	Metallized paper, 0.25 mfd.; 200 V.D.C.	187A624H02
C67	Metallized paper, 0.25 mfd.; 200 V.D.C.	187A624H02
C68	Metallized paper, 0.5 mfd.; 200 V.D.C.	187A624H02
C69	Metallized paper, 0.25 mfd., 200 V.D.C.	187A624H03
C70	Dur-Mica, 300 pf, 500 V.D.C.	187A624H02
C71	3 pf,	187A584H09
C72	3 pf,	861A846H03
C73	3 pf,	861A846H03
C74	Metallized paper, 1.0 mf, 200 V.D.C.	861A846H03
C75	Metallized paper, 0.5 mf, 200 V.D.C.	187A624H04
C76	Metallized paper, 0.01 mf, 200 V.D.C.	187A624H03
C77	0.47 mfd,	764A278H10
C101	Metallized paper, 0.25 mfd,; 200 V.D.C.	188А669Н01
C102	Metallized paper, 0.25 mfd.; 200 V.D.C.	187A624H02
103 & C104		187A624H02
103 & C104	(30-50 KC) — Extended foil, 0.47 mfd.; 400 V.D.C. (50.5-75 KC) — Extended foil, 0.22 mfd.; 400 V.D.C.	188A293H01
103 & C104		188A293H02
103 & C104	(75.5 - 100 KC) — Extended foil, 0.15 mfd., 400 V.D.C.	188A293H03
103 & C104	(100.5 - 150 KC) — Extended foil, 0.10 mfd., 400 V.D.C.	188А293Н04
	(150.5 - 300 KC) — Extended foil, 0.047 mfd.; 400 V.D.C.	188A293H05
D11	DIODES – GENERAL PURPOSE 1N645A	
D12	1N645A	837A692H03
D13		837A692H03
D14	1 N4 822 1 N4 822	188A342H11
	111022	188A342H11

CIRCUIT	DESCRIPTION	WESTINGHOUSE DESIGNATION
SYMBOL	DIODES - GENERAL PURPOSE	
		188A342H11
D15	1N4822	188A342H11
D16	1N4822	837A692H03
D21	1N645A	188A342H11
D22	1N4822	188A342H11
D23	1N4822	188A342H11
D24	1N4822	188A342H11
D25	1N4822	184A885H12
D51	1N628; 125 V.; 30 MA.	184A885H12
D52	1N628; 125 V., 30 MA.	184A885H07
D55	1N457A; 60 V., 200 MA.	184A885H12
D58	1N628; 125 V., 30 MA.	407C703H03
D101	1N538; 200 V., 750 MA.	182A881H04
D102,D104	1N91; 100 V., 150 MA. (Germanium Version used with 2N1908)	407C703H03
D103	1N538; 200 V., 750 MA.	188A342H06
D102,D104	1N4818 (Silicon Version used with 2N3792)	10012
	DIODES - ZENER	184A854H06
Z1	1N2828B; 45V. ±5%; 50 W.	184A617H12
Z2	1N3009A; 130 V. ±10%; 10 W.	186A797H06
Z4, Z5, Z6	1N957B	862A288H01
Buffer, Z2, Z3	1N3688A	862A288H01
Z13	1N3688A	185A212H06
Z14	1N3686B	186A797H06
Z21	1N957B	862A288H01
Z22	1N3688A	862A288H01
Z23	1N3688A	185A212H06
Z24	1N3688B	185A212H06
Z54	1N3686B; 20 V. ±5%; 750 MW.	184A617H13
Z105	1N2999A; 56 V. ±10%; 10 W.	184A617H13
Z106	1N2999A; 56 V. ±10%; 10 W.	10470111110
	RESISTORS	04D1299H44
R1	26.5 ohms ±5%; 40 W. (For 125 V Supply)	04D1299H44
R2	26.5 ohms ±5%; 40 W. (For 125 V Supply)	04D1299H44
R3	26.5 ohms ±5%; 40 W. (For 48 V Supply)	1268047
R3	500 ohms ±5%; 40 W. (For 125 V Supply)	187A644H03
R4	100 ohms ±10%; 1 W. Composition	187A641H27
R5	1K ±10%; ½ W. Composition	188A317H01
R6	3K ±5%; 5 W. Wire Wound	
R7	15K ±10%; 2 W. Composition	187A642H55
Buf. R4, R6	18K ± 2%; ½ W. Metal Glaze	629A531H62
	51K ±2%; ½ W. Metal Glaze	629A531H73
Buf. R2, R5 Buf. R3	1.8K ± 2%; ½ W. Metal Glaze	629A531H38

CIRCUIT SYMBOL	DESCRIPTION	WESTINGHOUSE DESIGNATION
	RESISTORS (Continued)	
Buf. R7, R10, R12	1.5K ±2%; ½ W. Metal Glaze	C20 A 5 2 1 1 1 2 2
Buf. R8, R9, R11	6.2K ±2%; ½ W. Metal Glaze	629A531H36
Buf. R13	10K ±2%; ½ W. Metal Glaze	629A531H51
R14, 20, 21, 28, 32	10K ± 2%; ½ W, Metal Glaze	629A531H56
R15,17,22,24,25	12K ±2%; ½ W. Metal Glaze	629A531H56
R16, 18, 19	27K ± 2%; ½ W. Metal Glaze	629A531H58
223, 29	4.7K ±2%; ½ W. Metal Glaze	629A531H66
R26, 27	27K ± 2%; ½ W. Metal Glaze	629A531H48
230, 31, 33	12K ±2%; ½ W. Metal Glaze	629A531H66
R34	4:7K ±2%; ½ W. Metal Glaze	629A531H58
R51	10K ±5%; ½ W. Composition	629A531H48
R52	10K ±5%; ½ W. Composition	184A763H51
R53	10K ±5%; ½ W. Composition	184A763H51
R54	10K ±5%; ½ W. Composition	184A763H51
R55	100 Ohms ±5%; ½ W. Composition	184A763H51
R56	3.6K ±5%; ½ W. Composition	184A763H03
R57	3.6K ±5%; ½ W. Composition	184A763H40
R58	100 ohms ±5%; ½ W. Composition	184A763H40
R59	10K ±5%; ½ W. Composition	184А763Н03
R60	5.6K ±5%; ½ W. Composition	184A763H51
R61	15K ±5%; ½ W. Composition	184A763H45
R62	10K ± 5%; ½ W. Composition	184A763H55
R63	1K ±5%; ½ W. Composition	184A763H51
R64	Potentiometer, 1K; ¼ W.	184A763H27
R65	1.8K ±5%; ½ W. Composition	184A763H02
R66	8.2K ±5%; ½ W. Composition	184A763H02
R67	12K ±5%; ½ W. Composition	184A763H49
R68	330 ohms ±5%; ½ W. Composition	184A763H53
R69	800 ohms ±5%; ½ W. Composition	184A763H15
R70	Potentiometer, 1K; ¼ W.	184A859H06
R71	4.7K ±5%; ½ W. Composition	629A430H02
R72	39K ±5%; ½ W. Composition	184A763H43
R73		184A763H65
R74	Thermistor, 30 ohms, Type 3D202 (G.E.C.)	185A211H06
R75	180 Ohms ± 5%; ½ W. Composition	184A763H02
R76	100 Ohms ± 5%; ½ W. Composition	184A763H03
R77	2K ±5%; ½ W. Composition	184A763H34
R78	10 ohms ±5%; ½ W. Composition	187A290H01
R80	10 ohms ±5%; ½ W. Composition	187A290H01
R80	20K ± 2%; ½ W. Metal Glaze	629A531H63
R81	25K Potentiometer ±20%; ¼ W.	629A430H09
1001	1K ±1%; ½ W. Metal Film	848A819H48

CIRCUIT	DESCRIPTION	WESTINGHOUSE DESIGNATION
SYMBOL	RESISTORS (Cont'd.)	
		629A430H07
R82	5K Pot. ±20%; ½ W.  10.2K ±1%, ½ W. Metal Film	843A820H46
R83	27 ohms ±5%, ½ W. Composition	187A290H11
R84	Thermistor 3D402 10 ohms	185A211H03
R85	750 ohms ±1%, ½ W. Metal Film	848A819H36
R86		187A280H01
R101	10 ohms ±5%; ½ W. Composition  2.2K ±10%; 1 W. Composition	187A644H35
R102	War die	184A636H14
R103	2.7 ohms ±10%; ½ W. Wire Wound 0.27 ohms ±10%; 1 W. Wire Wound	184A636H18
R104	11.00	187A290H01
R105	1 W. G asition	187A644H43
R106		184A636H14
R107		184A636H18
R108	0.27 ohms ±10%; 1 W. Wire Wound  TRANSFORMERS	
		606B410G01
T1	Driver Output Transformer	292B526G01
Т2	Power Amp. Input Transformer	292B526G02
Т3	Power Amp. Output Transformer	292B526G03
T4	Load-Matching Auto-Transformer	606B537G01
T51	Buffer Amplifier Transformer	606B537G02
T52	Driver Input Transformer	
	TRANSISTORS	187A342H02
Q1	2N1015C	849A441H02
Q11	2N4356	184A638H19
Q12	2N699	849A441H02
Q21	2N4356	184A638H19
Q22	2N699	184A638H18
Q51	2N697	184A638H18
Q52	2N697	184A638H18
Q53	2N697	184A638H19
Q54	2N699	184A638H18
Q55	2N697	762A672H07
Q56	2N2726/2N3712	762A672H07
Q57	2N2726/2N3712	
Q101,Q102	2N1908 (Use in Matched Pairs) (Germanium Version used with 1N91	187A673H16
Q101,Q102	2N3792 (Use in Matched Pairs) (Silicon Version used with 1N4818)	
	MISCELLANEOUS	
Y1-Y2	Supplied for Desired Channel Frequency in Pair Matched Per Specifications on Drawing	408C743
FL101	Driver Filter	408C261 + (Req.Freq.)
FL102	Output Filter	541S214 +(Req. Freq.
PL	Pilot Light Bulb - For 48 V. Supply (When supplied)	187A133H02
	Pilot Light Bulb - For 125 or 259 V. Supply (When supplied)	183A955H01
F1, F2	Fuse, 1.5A (When supplied)	11D9195H26


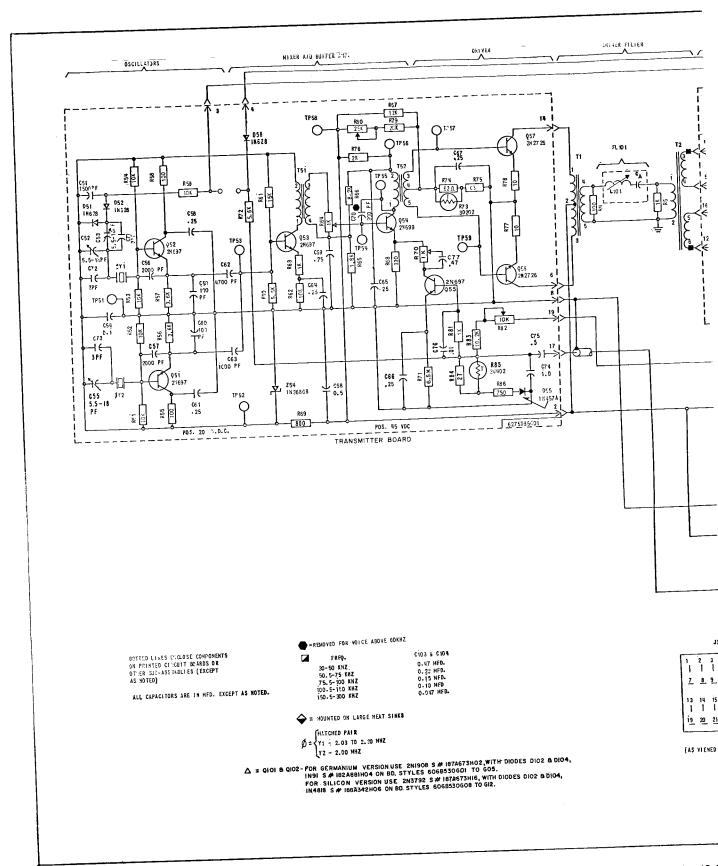


Figure 2 - Internal Schematic of the Type TCF Transmitter 1 Watt/3.

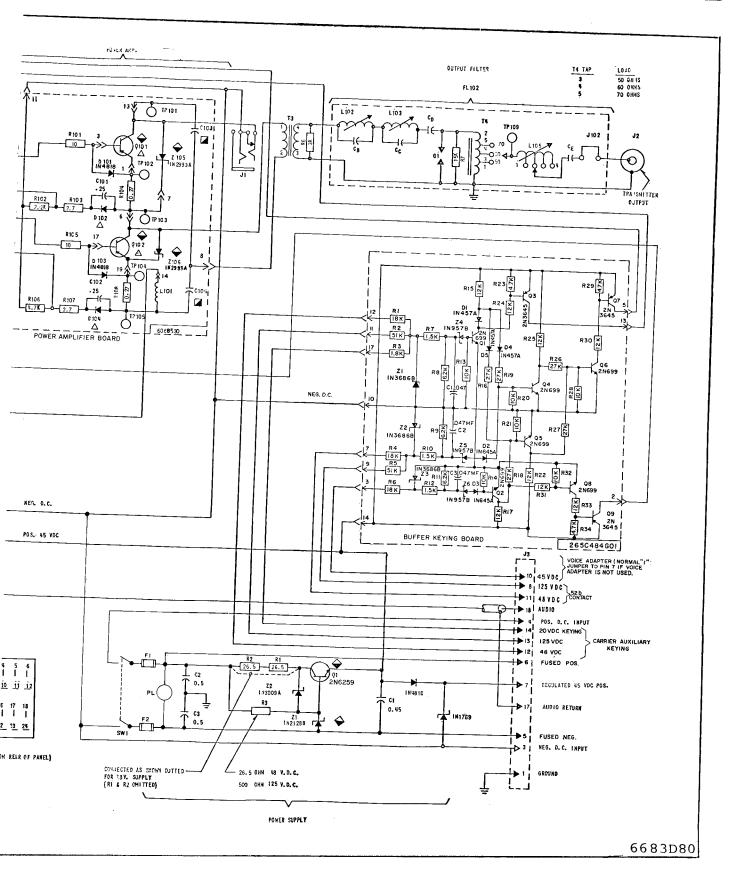

att/10 Watt for Keyed and Voice Applications with Pilot Light, Switch, and Fuses.


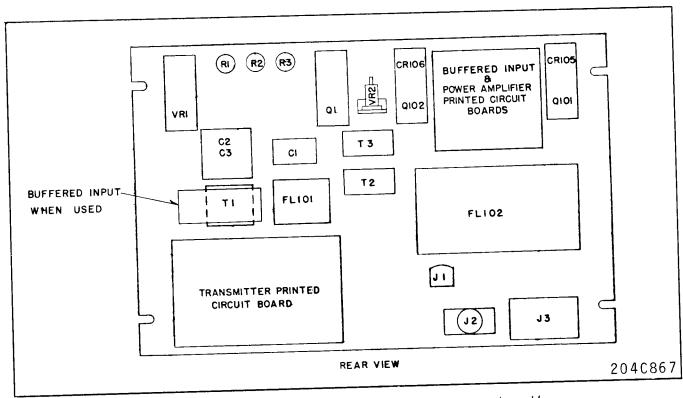


Figure 3 — Component Locations of the Type TCF Transmitter Assembly.

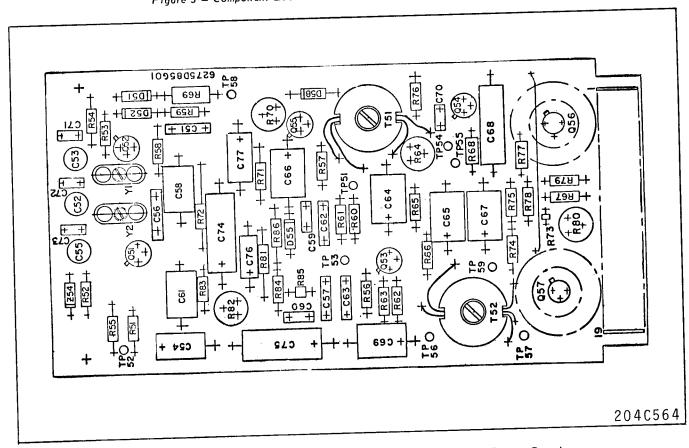

**♦** Figure 4 - Component Locations of the Transmitter Printed Circuit Board.

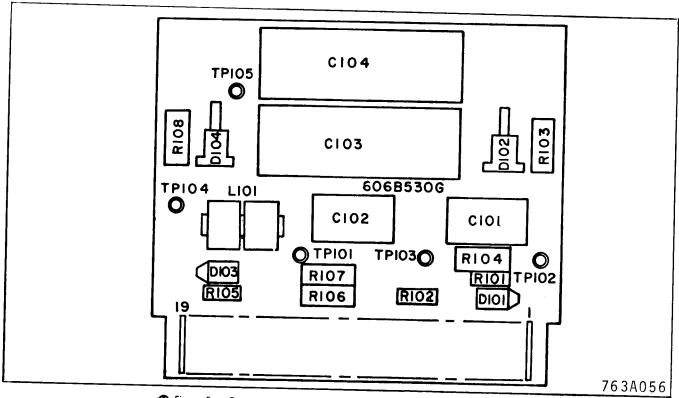


Figure 5 — Component Location of the Power Amplifier Printed Circuit Board.

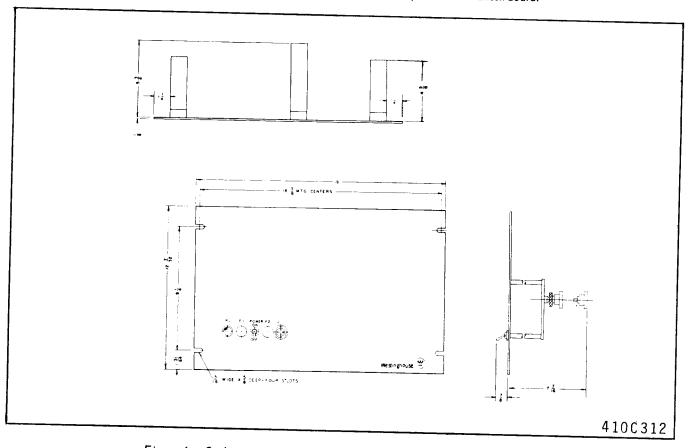


Figure 6 - Outline and Drilling Plan for the Type TCF Transmitter Assembly.

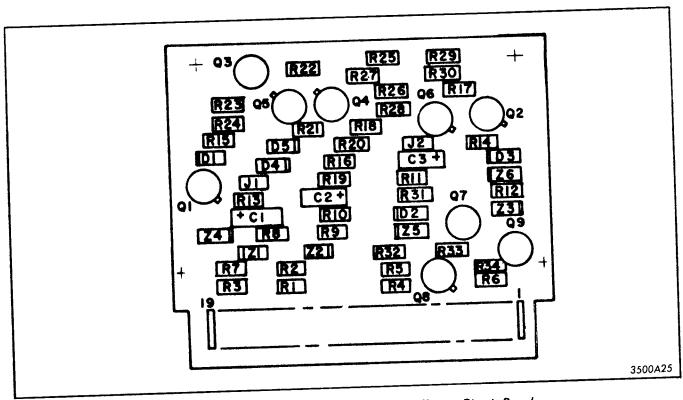


Figure 7 — Component Location of Buffer Keying Circuit Board.

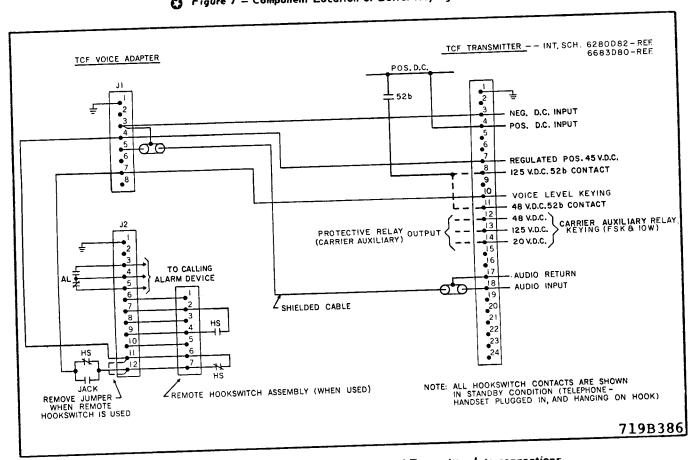


Figure 8 - TCF Voice Adapter, Relaying, and Transmitter Interconnections.

		1.1.482 <sup>87</sup>
		. 1
		A STATE OF THE STA
		68

No. 1		
Marini		



WESTINGHOUSE ELECTRIC CORPORATION RELAY-INSTRUMENT DIVISION NEWARK, N. J.



## INSTALLATION . OPERATION . MAINTENANCE

# INSTRUCTIONS

# TYPE TCF POWER LINE CARRIER FREQUENCY SHIFT TRANSMITTER EQUIPMENT 1 WATT/10 WATT FOR KEYED AND VOICE APPLICATIONS

**CAUTION:** It is recommended that the user of this equipment become thoroughly familiar with the information in this instruction leaflet before energizing the carrier assembly. Failure to observe this precaution may result in damage to the equipment.

If the carrier set is mounted in a cabinet, it must be bolted down to the floor or otherwise secured before swinging out the equipment rack to prevent its tipping over.

### APPLICATION

The type TCF carrier transmitter equipment provides for the transmission of either of two closely controlled discrete frequencies, both within a narrow-band channel, over high-voltage transmission lines. The center frequency of the channel can vary from 30 to 300 KHz in 0.5 KHz steps. The two frequencies transmitted are separated by 200 Hz, one being at center frequency (fc) plus  $100~\mathrm{Hz}$ and the others at center frequency minus 100 Hz. The higher frequency, termed the Guard frequency, is transmitted continuously when conditions are normal. It indicates at the receiving end of the line that the channel is operative and it also serves to prevent false operation of the receiver by line noise. The lower frequency, termed the Trip frequency, is transmitted as a signal that an operation (such as tripping a circuit breaker) should be performed at the receiving end of the line.

When frequency shift carrier is used in protection relaying applications, it is recommended that the trip frequency be transmitted at a higher power level to increase reliability of the system under conditions of abnormally high channel losses or line noise. The frequency is shifted from Guard to Trip by the closing of a protective relay contact, and the same contact also shifts the transmitter from a 1 watt to a 10 watt output level.

When electro-mechanical relays are used for keying from guard to trip frequency, the contact used is connected to the high voltage input of a buffering keying board. This board buffers the input so that random noise does not key the circuits. When solid state relays are used, the 20 V D.C. voltage used for keying is connected to the low voltage input of the buffering keying board.

### CONSTRUCTION

The 1 watt/10 watt TCF transmitter unit is mounted on a standard 19-inch wide panel 12¼ inches (7 rack units) high with edge slots for mounting on a standard relay rack. All components are mounted on the rear of the panel. Fuses, a pilot light, a power switch and a jack for metering the amplifier collector current are accessible from the front of the panel. See Fig. 5. All of the circuitry that is suitable for printed circuit board mounting is on two such boards, as shown in Fig. 2. The components mounted on each printed circuit board or other sub-assembly are shown enclosed by dotted lines on the internal schematic. Fig. 1. The location of components on the two printed circuit boards are shown on separate illustrations, Fig. 3 & 4.

External connections to the assembly are made through a 18-circuit receptacle, J3. The r.f. output connection to the assembly is made through a coaxial cable jack, J2.

### OPERATION

The transmitter is made up of four main stages and two filters. The stages include two crystal oscillators operating at frequencies that differ by the desired channel frequency, a mixer and buffer amplifier, a driver stage and a power amplifier. One filter is located between the driver and the power amplifier and the filter removes harmonics that may be generated by distortion in the power amplifier.

A single crystal designed for oscillation in the 30 KHz to 300 KHz range cannot be forced to oscillate away from its natural frequency by as much as  $\pm$  100 Hz. In order to obtain this desired frequency

shift, it is necessary to use crystals in the  $2\,\mathrm{MHz}$ range. The crystals are Y1 and Y2 of Fig. 1. The frequency of Y2 is 2.00 MHz when operated with a specified amount of series capacity, and the frequency of Y1 is 2.00 MHz plus the channel frequency, or 2.03 MHz. Capacitor C55 and crystal Y2 in series are connected between the positive side of the supply voltage and the base of transistor Q51, which operates in the emitter follower mode. The emitter is coupled to the base through C57, and with Y2 removed the base of Q51 would be held at approximately the midpoint of the supply voltage by R51 and R52. The crystal serves as a seriesresonant circuit with very high inductance and low capacitance. The circuit can be made to oscillate at other than the natural frequency of the crystal by varying the series capacitor, C55. Increasing C55 will lower the frequency of oscillations and reducing C55 will raise the frequency.

Crystal Y1 is connected in a circuit that is similar except for the addition of C53 and diodes D51 and D52. By adjustment of C52 this circuit is made to oscillate at 100 Hz above its marked frequency. Capacitor C53 is not effective until is biased in the forward direction and becomes conductive. It is biased in the reverse direction until the relay control contact is closed, which places 45 V.D.C. at terminal 3 of the printed circuit board. With D51 conducting, C53 is effectively in parallel with C52, and adjustment of C53 will reduce the frequency by 200 Hz. The crystals taken individually have a greater variation of frequency with temperature than would be acceptable. However, by proper matching of the two crystals, the variation in their difference frequency can be kept within limits that permit holding the frequency stability of the overall transmitter to  $\pm 10$ Hz over a temperature range of -20 to  $\pm$  60°C.

The frequencies produced by the two oscillators are coupled to the base of mixer transistor Q53 through C62 and C63. The sum of the two frequencies is so high that a negligible amount appears on the secondary of transformer T51, but the difference frequency is accepted and amplified by Q53 and Q54.

When the relay control, or keying, contact is closed, it increases the output power from 1 watt to 10 watts as well as changing the frequency from Guard to Trip. This is effected by reducing the emitter resistance of buffer-amplifier transistor Q54. When the keying contact is open, transistor

Q55 receives no base current and is non-conducting. Emitter resistor R70 therefore is effectively open-circuited. The level of output power is adjusted to 1 watt by means of R64. When Q55 is made conductive by closing the keying contact. R70 is placed in parallel with R68 and the amount of emitter resistance not bypassed by C66 can be adjusted as required to obtain a 10-watt output level.

\* As is shown on the Internal Schematic, Fig. 1, or Fig. 2, the voltage for the keying ciruit is obtained from the 45-volt regulated supply in the transmitter, and opening the single power switch deenergizes both the transmitter and the keying circuit.

The driver stage consists of transistors Q56 and Q57 connected in a conventional push-pull circuit with input supplied from the collector of Q54 through transformer T52. Thermistor R73 and resistors R74 and R75 are connected to provide a variable bias that reduces the effect of varying ambient temperatures on the input level.

The driver filter, FL101, consists of a series-resonant inductor and capacitor connected between the driver and power amplifier stages by appropriate transformers T1 and T2. This filter greatly improves the waveform of the signal applied to the power amplifier.

The power amplifier uses two series-connected power transistors, Q101 and Q102, operating as a class B push-pull amplifier with single-ended output. Diodes D101 and D103 provide protection for the base-emitter junctions of the power transistors. Zener diodes D105 and D106 protect the collector-emitter junctions from surges that might come in from the power line through the coaxial cable.

The output transformer T3 couples the power transistors to the output filter FL102. The output filter includes two trap circuits (L102, CB and L103, CC) which are factory tuned to the second and third harmonics of the transmitter frequency. Capacitor CD approximately cancels the inductive reactance of the two trap circuits at the operating frequency. Protective gap G1 is a small lightning arrester to limit the magnitude of switching surges or other line disturbances reaching the carrier set through the line turner and coaxial cable. Autotransformer T4 matches the filter impedance to coaxial cables of 50, 60, or 70 ohms.

The series resonant circuit composed of L105 and CE is tuned to the transmitter frequency, and aids in providing resistive termination for the output stage. Jack J02 is mounted on the rear panel of FL102 and is used for measuring the r.f. output current of the transmitter into the coaxial cable. It should be noted that the filter contains no shunt reactive elements, thus providing a reverse impedance that is free of possible "across-the-line" resonances.

The power supply is a series-type transistorized d-c voltage regulator which has a very low stand-by current drain when there is no output current demand. The Zener diode Z1 holds a constant base-to-negative voltage on the series-connected power transistor Q1. Depending on the load current, the d-c voltage drop through transistor Q1 and resistors R1 and R2 varies to maintain a constant output voltage. The Zener diode Z2 serves to protect the collector-base junction of Q1 from surge voltages. Capacitor C1 provides a low carrier-frequency impedance across the d-c output voltage. Capacitors C2 and C3 bypass r.f. or transient voltages to ground, thus preventing damage to the transistor circuits.

When keyed for voice by the voice adapter, transistor Q55 is keyed into class A operation so that its conduction can be modulated by the voice input from the voice adapter. Potentiometer R82 is adjusted so that the nominal output of carrier is 3.25 watts (14 volts across 60 ohms). The voice input modulates the carrier through this transistor by varying the amount of conduction of Q55 so that the output power of carrier varies with the voice amplitude following the voice frequency components. Since with Q55 completely non-conducting, R64 has been set to produce a 1 watt output, maximum modulation on the side to shut off Q55 will result in an output level of less than 1 watt carrier at any time. Also since the output level has been set at 10 watts with Q55 completely conducting by the adjustment of R70, the maxst imum modulation on the side of turn on of Q55 will not result in a carrier output level of greater than 10 watts at any time. Thus the modulation for voice will not result in the output carrier level

\* The buffer keying board in addition to providing proper buffering, also contains logic for the proper keying of both frequency and output level in re-

frequency for relaying purposes.

dropping below 1 watt and endangering the guard

gards to protective relaying operation, voice adapter operation, and 52b contact operation.

- \* It should be remembered that protective relaying operation has first priorty. If the protective relay operates and puts a voltage input into any of the three input points labeled carrier auxiliary keying, the transmitter will both frequency shift to trip frequency and full 10 watts output whether voice is called for or not.
- \* The operation of the 52b contact will remove the 10 watt keying output and permit the voice adapter to key to 3.2 Watts output for AM voice modulation. This allows voice modulation on the trip frequency after the 52b contact has operated.

### CHARACTERISTICS

Frequency Range	30-300 kHz
Output	1 watt guard - 10 watts trip - 3.2 watts voice (into 50 to 70 ohm resistive load)
Frequency Stability	±10 Hz from -20°C to +55°C.
Frequency spacing	Two-way channel, - See Voice Adapter Instruction Leaflet.
Harmonics	Down 55 db (min.) from output level.
Input voltage	48 or 125 v.d.c.
Supply voltage variation	42-56v. for nom. 48v. supply. 105-140v. for nom. 125v. supply.
Battery drain	0.5 a. guard } 48 v.d.c. 1.15a. trip
	0.5 a. guard 0.9 a. trip
Keying circuit current	4 ma.
Temperature range	-20 to +60°C. around chassis.
Dimensions	Panel height - 12¼" or 7 r.u. Panel width - 19"
Weight	12 lbs.

### INSTALLATION

The TCF transmitter is generally supplied in a cabinet or on a relay rack as part of a complete carrier assembly. The location must be free from dust, excessive humidity, vibration, corrosive fumes, or heat. The maximum ambient temperature around the chassis must not exceed 60°C.

#### **ADJUSTMENTS**

The TCF 1W/10W transmitter is shipped with the power output controls R64, R82 and R70, set for outputs of 1 watt, 3.2 watts and 10 watts into a 60 ohm load. If it is desired to check the adjustments or if repairs have made readjustment necessary, the coaxial cable should be disconnected from the assembly terminals and replaced with a 50 to 70 ohm non-inductive resistor of at least a 10 watt rating. Use the value of the expected input impedance of the coaxial cable and line tuner. If this is not known, assume 60 ohms. Connect the T4 output lead to the corresponding tap. Connect an a-c vacuum tube voltmeter (VTVM) across the load resistor. Turn power output control R64 to minimum (full counter-clockwise). Turn on the power switch on the panel and note the d-cvoltage across terminals 5 and 7 of J3. If this is in the range of 42 to 46 volts, rotate R64 clockwise to obtain 4 or 5 volts across the load resistor used. At this point check the adjustment of the series output tuning coil L105 by loosening the knurled shaft-locking nut and moving the adjustable core in and out a small amount from its initial position. Leave it at the point of maximum voltage across the load resistor used. Then rotate R64 farther clockwise to obtain the correct voltage for 1 watt in the load resistor, as shown in the following table.

Then change to Trip frequency by connecting together terminals 2 and 3 of the transmitter printed circuit board (which is approximately equivalent to connecting together terminals 7 and 8 of J3), and rotate R70 until the voltage across the load resistor is as shown in the following table for a 10 watt output. Recheck the adjustment of L105 for maximum output voltage and readjust R70 for a 10 watt output if necessary. Tighten the locking nut on L105. Open the power switch and remove the jumper used to key the transmitter to the 10 watt level. Key for voice by jumpering together terminals 16 and 7 of J3. Turn the power back on. Adjust R82 for a 3.2 watt output across the load resistor (14V across 60 ohms). Open the power switch, remove the jumper,

remove the load resistor, and reconnect the coaxial cable circuit to the transmitter.

T 106	VOLTAGE FOR		
TAP	) WATT	3.2 WATTS	10 WATTS
	OUTPUT	OUTPUT	OUTPUT
50	7.1	12.7	22.4
60	7.8	14	24.5
70	8.4	15	26.5

Follow the procedure outlined in the line tuner instructions for its adjustment.

Normally the output filter (FL102) will require no readjustment except as noted above. It is factory tuned for maximum second and third harmonic rejection, and for series resonance (maximum output at the fundamental frequency) with a 60-ohm load. A small amount of reactance in the transmitter output load circuit may be tuned out by readjustment of the movable core of L105. This may be necessary with some types of line coupling equipment. The adjustable cores of L102 and L103 have been set for maximum harmonic rejection and no change should be made in these settings unless suitable instruments are available for measuring the second and third harmonic present in the transmitter output.

The operating frequencies of crystals Y1 and Y2 have been carefully adjusted at the factory and good stability can be expected. If it is desired to check the frequencies of the individual crystals, this can be done by turning the matched pair 180° and inserting a crystal in its proper socket with the other crystal unconnected. A sensitive frequency counter with a range of at least 2.2 MHz can be connected from TP51 to TP54. (Connection to TP54 rather than to TP53 provides a better signal to the counter and avoids some error from the effect of the counter input capacitance on the oscillator circuit.) While measurement of the oscillator crystals individually is necessary for the initial adjustment of the oscillators, generally any subsequent checks may be made with a lower range counter connected at the transmitter output. If any minor adjustment of the Guard and Trip frequencies should be needed, the Guard adjustment should be made with capacitor C52 and the Trip Adjustment with C53.

### Q56-Q57 Bias Adjustment

The push-pull output stages of the transmitter board are normally shipped correctly biased. If any components involved in these stages have been changed, then it may be necessary to recheck the biasing of this stage. Unsolder the lead from terminal 2 of transformer T1 (just above FL101) and temporarily connect a low-range d-c milliammeter (0-1.0 ma) between the removed lead (+) and T1 terminal 2 (-). Turn the slotted control on the small potentiometer to full counterclockwise. Now, apply power to the TCF carrier set, but do not transmit carrier. This can be done by removing the crystals. Advance the potentiometer clockwise until the milliammeter reads 0.2 ma. Turn off the power, remove the milliammeter, and solder the lead back on terminal 2 of T1. Replace the crystals and again apply d-c power to reenergize the transmitter. Check output, etc. of transmitter as previously described.

### MAINTENANCE

Periodic checks of the transmitter Guard and Trip power outputs will detect impeding failure so that the equipment can be taken out of service for correction. At regular maintenance intervals, any accumulated dust should be removed, particularly from the heat sinks. It is also desirable to check the transmitter power output at such times, making any necessary readjustments to return the equipment to its initial settings.

Voltage values should be recorded after adjustment in order to establish reference values which will be useful when checking the apparatus. The readings will remain fairly constant over an indefinite period unless a failure occurs. However, if transistors are changed, there may be considerable difference in these readings without the overall performance being affected.

Typical voltage values are given in the following tables. Voltages should be measured with a VTVM. Readings may vary as much as  $\pm 20\%$ .

# TABLE I TRANSMITTER D-C MEASUREMENTS

Note: All voltages are positive with respect to Neg. 45 V. (TP51). All voltages read with d-c VTVM.

Test Point	Voltage at 1 Watt Output	Voltage at 10 Watts Output	Voltage at 3.2 Watts Output (For Voice)
TP52 TP53 TP54 TP55 TP56 TP57	20 5.4 3.4 21 21 *<1.0	20 5.4 3.4 18.5 18.5 *<1.0	20 5.4 3.4 — — —
TP58 TP59 TP101 TP103	21 ± 2	44.1 *<1.0 0 21 ± 2 44.0	- - - -

# TABLE II TRANSMITTER RF MEASUREMENTS

Note: Voltages taken with transmitter set to indicated output across 60 ohms. These voltages subject to variations, depending upon frequency and transistor characteristics. T51-3 = Terminal 3 of transformer T51. Other transformer terminals identified similarly. All read with a-c VTVM.

Test Point	Voltage at 1 watt Output	Voltage at 10 watts Output	Voltage at 3.2 Watts Output (For Voice)
TP54 to TP51	0.015-0.03	0.015-0.03	-
TP57 to TP51	0.05 -0.09	0.3 -1.2	-
TP59 to TP51	0.05 -0.09	0.3 -1.2	-
T1-1 to TP51	1.65	5.6	-
T1-3 to TP51	1.45	4.9	-
T1-4 to Gnd.	.6	2.0	-
T2-1 to Gnd. TP101 to TP103 TP103 to TP105		1.85 17.0 17.0	
T3-4 to Gnd.	35	112	-
T4-2 to Gnd.	31	110	-
TP109 to Gnd	9.8	31	-
J102 to Gnd.	7.8	24.5	14

# CONVERSION OF TRANSMITTER FOR CHANGED CHANNEL FREQUENCY

The parts required for converting a 1W/10W TCF transmitter for operation on a different channel frequency consist of a pair of matched crystals for the new channel frequency, new capacitors C103 and C104 on the power amplifier circuit board if the old and new frequencies are not in the same frequency group (see table on internal schematic drawing) and, in general, new or modified filters FL101 and FL102. Inductors L101, L102 and L103 in these filters are adjustable over a limited range, but forty-two combinations of capacitors and inductors are required to cover the frequency range of 30 to 300 kHz. The widths of the frequency groups vary from 1.5 kHz at the low end of the channel frequency range to 13 kHz at the upper end. A particular assembly can be adjusted over a somewhat wider range than the width of its assigned group since some overlap is necessary to allow for component tolerances. The nominal kHz adjustment ranges of the group are:

30.0-31.5 32.0-33.5 34.0-36.0 36.5-38.5 39.0-41.0 41.5-44.0 44.5-47.0 47.5-50.0 50.5-53.5 54.0-57.0	61.0- 64.0 64.5- 68.0 68.5- 72.0 72.5- 76.0 76.5- 80.0 80.5 -84.5 85.0- 89.0 89.5- 94.5 95.0-100.0 100.5-106.0	113.0-119.5 120.0-127.0 127.5-135.0 135.5-143.0 143.5-151.0 151.5-159.5 160.0-169.5 170.0-180.0 180.5-191.5	207.1-214.0 214.1-222.0 222.1-230.0 230.1-240.0 240.1-250.0 250.1-262.0 262.1-274.0 284.1-287.0 287.1-300.0
54.0-57.0 57.5-60.5		192.0-200:0 200.1-207.0	287.1-300.0

If the new frequency lies within the same frequency group as the original frequency, the filters can be readjusted. If the frequencies are in different groups, it is possible that changes only in the fixed capacitors may be required. In general, however, it is desirable to order complete filter assemblies adjusted at the factory for the specified frequency.

A signal generator, a frequency counter and a vacuum tube voltmeter are required for readjustment of FL101. The signal generator and the counter should be connected across terminals 4 and 5 of transformer T1 and the voltmeter across terminals 1 and 2 of transformer T2. The signal generator should be set at the channel center frequency and at 2 to 3 volts output. The core screw of the small inductor should be turned to the position that gives a true maximum reading on the VTVM. Turning the

screw to either side of this position should definitely reduce the reading. The change in inductance with core position is less at either end of the travel than when near the center and consequently the effect of core screw rotation on the VTVM reading will be less when the resonant inductance occurs near the end of core travel.

The procedure for readjustment of the 2nd and 3rd harmonic traps of filter FL102 is somewhat similar. A signal generator and a counter should be connected to terminals 3 and 4 of transformer T3, and a 500 ohm resistor and a VTVM to the terminals of protective gap G1. The ground or shield lead of all instruments should be connected to the grounded terminal of the transformer. Set the signal generator at exactly twice the channel center frequency and at 5 to 10 volts output. Turn the core screw of the large inductor L102, to the position that gives a definite minimum reading on the VTVM. Similarly, with the signal generator set at exactly three times the channel center frequency and 5 to 10 volts output, set the core screw of the small inductor, L103, to the position that gives a definite minimum reading on the VTVM. Then remove the instruments and the 500 ohm resistor.

After the new pair of matched crystals have been adjusted, as described under "ADJUSTMENTS", the transmitter can be operated with a 50 to 70 ohm load (depending on which tap of T4 is used) connected to its output, and inductor L105 can be readjusted for maximum output at the changed channel frequency by the procedure described in the same section.

If a frequency-sensitive voltmeter is available, the 2nd and 3rd harmonic traps may be adjusted without using an oscillator as a source of double and triple the channel frequency. Connect the frequency-sensitive voltmeter from TP109 to ground and adjust the transmitter for rated output into the selected load resistor. Set the voltmeter at twice the channel frequency and, using the tuning dial and db range switch, obtain a maximum on-scale reading of the 2nd harmonic. Then vary the core position of L102 until a minimum voltmeter reading is obtained. Similarly, tune the voltmeter to the third harmonic and adjust L103 for minimum voltmeter reading. Although the transmitter frequency will differ from the channel center frequency by 100 Hz, effect of this difference on the adjustment of the harmonic traps will be negligible. It should be noted that the true magnitude of the harmonics cannot be measured in this manner because of the preponderance of the fundamental frequency at the voltmeter terminals. Accurate measurement of the harmonics requires use of a filter between TP109 and the voltmeter that provides high rejection of the fundamental. The insertion looses of this filter for the 2nd and 3rd harmonics must be measured and taken into account.

RECOMMENDED TEST EQUIPMENT

- I. Minimum Test Equipment for Installation.
  - a. 60-ohm 10-watt non-inductive resistor.
  - A-C vacuum Tube Voltmeter (VTVM). Voltage range 0.003 to 30 volts, frequency range 60 hz to 330 kHz; impedance 7.5 megohms.
  - c. D-C Vacuum Tube Voltmeter (VTVM).

Voltage Range;

1.5 to 300 volts.

Input Impedance:

7.5 megohms.

- II. Desirable Test Equipment for Apparatus Maintance.
  - a. All items listed in I.
  - b. Signal Generator

Output Voltage:

up to 8 volts.

Frequency Range:

20-kHz to 900 kHz

- c. Osiclloscope
- d. Frequency counter
- e. Ohmmeter
- f. Capacitor checker.

Some of the functions of the recommended test equipment are combined in the type TCT carrier test meter unit, which is designed to mount on a standard 19" rack but also can be removed and used as a portable unit.

### RENEWAL PARTS


Repair work can be done most satisfactorily at the factory. However, replacement parts can be furnished, in most cases, to customers who are equipped for doing repair work. When ordering parts, always give the complete nameplate data and identify the part by its designation on the Internal Schematic drawing.

CIRCUIT SYMBOL	DESCRIPTION	WESTINGHOUSE
	CAPACITORS	DESIGNATION
C1	Oil-filled; 0.45 mfd.; 330 V.A.C.	
C2	Oil-filled; 0.5 mfd.; 1500 V.D.C.	1723408
C3	Oil-filled; 0.5 mfd.; 1500 V.D.C.	1877962
Buffer C1, C2, C	Metallized Paper, 0.47 mfd.;	1877962
C21	Metallized Paper, .047 mfd.;	849A437H04
C51	Dur-Mica, 1500 pf., 500 V.D.C.	849A437H04
C52	Variable, 5.5-18 pf.	762A757H03
C53	Variable, 5.5-18 pf.	879A834H01
C54		879A834H01
C55	Metallized paper, .1 mfd.; 200 V.D.C.  Variable, 5.5-18 pf.	187A624H01
C56		762A736H01
C57	Dur-Mica, 2000 pf.; 500 V.D.C.	187A584H01
C58	Dur-Mica, 2000 pf.; 500 V.D.C.	187A584H01
C59	Metallized paper, 0.25 mfd.; 200 V.D.C.	187A624H02
C60	Dur-Mica, 100 pf., 500 V.D.C.	762A757H01
C61	Dur-Mica, 100 pf., 500 V.D.C.	762A757H01
C62	Metallized paper, 0.25 mfd.; 200 V.D.C.	187A624H02
C63	Dur-Mica, 4700 pf., 500 V.D.C.	762A757H04
	Dur-Mica, 1000 pf., 500 V.D.C.	
C64	Metallized paper, 0.25 mfd.; 200 V.D.C.	762A757H02
C65	Metallized paper, 0.25 mfd.; 200 V.D.C.	187A624H02
C66	Metallized paper, 0.25 mfd.; 200 V.D.C.	187A624H02
C67	Metallized paper, 0.25 mfd.; 200 V.D.C.	187A624H02
C68	Metallized paper, 0.5 mfd.; 200 V.D.C	187A624H02
C69	Metallized paper, 0.25 mfd., 200 V.D.C.	187A624H03
C70	Dur-Mica, 300 pf, 500 V.D.C.	187A624H02
C71	3 pf,	187A584H09
C72	3 pf,	861A846H03
C73	3 pf,	861A846H03
C74	Metallized paper, 1.0 mf, 200 V.D.C.	861A846H03
C75	Metallized paper, 0.5 mf, 200 V.D.C.	187A624H04
C76	Metallized paper, 0.01 mf, 200 V.D.C.	187A624H03
C77	0.47 mfd,	764A278H10
C101	Metallized paper, 0.25 mfd,; 200 V.D.C.	188А669Н01
C102	Metallized paper, 0.25 mfd.; 200 V.D.C.	187A624H02
103 & C104	(30-50 KC) — Extended foil, 0.47 mfd.; 400 V.D.C.	187A624H02
03 & C104	(50.5-75 KC) — Extended foil, 0.22 mfd.; 400 V.D.C.	188A293H01
03 & C104	(75.5 - 100 KC) Extend 1.6 ii a. (75.5 - 100 KC)	188A293H02
03 & C104	(75.5 - 100 KC) — Extended foil, 0.15 mfd., 400 V.D.C.	188А293Н03
03 & C104	(100.5 - 150 KC) — Extended foil, 0.10 mfd., 400 V.D.C.	188A293H04
	(150.5 - 300 KC) — Extended foil, 0.047 mfd.; 400 V.D.C.	188A293H05
D11	DIODES - GENERAL PURPOSE	
D12	1N645A	837A692H03
D13		837A692H03
D14	1N4822	
D14	1 N4 822	188A342H11


CIRCUIT	* ELECTRICAL PARTS LIST	WESTINGHOUSE DESIGNATION
SYMBOL	DIODES - GENERAL PURPOSE	
	DIODES - GERERAL TOM	188A342H11
D15	1N4822	188A342H11
D16	1N4822	837A692H03
D21	1N645A	188A342H11
D22	1N4822	188A342H11
D23	1N4822	188A342H11
D24	1N4822	188A342H11
D25	1N4822	184A885H12
D51	1N628; 125 V.; 30 MA.	184A885H12
D52	1N628; 125 V., 30 MA.	184A885H07
D55	1N457A; 60 V., 200 MA.	184A885H12
D58	1N628; 125 V., 30 MA.	407C703H03
D101	1N538; 200 V., 750 MA.	182A881H04
D102,D104	1N91; 100 V., 150 MA. (Germanium Version used with 2N1908)	407C703H03
D103	1N538; 200 V., 750 MA.	188A342H06
D102,D104	1N4818 (Silicon Version used with 2N3792)  DIODES - ZENER	
		184A854H06
Z1	1N2828B; 45V. ±5%; 50 W.	184A617H12
Z2	1N3009A; 130 V. ±10%; 10 W.	186A797H06
Z4; Z5, Z6	1N957B	862A288H01
Buffer, Z2, Z3	1N3688A	862A288H01
Z13	1N3688A	185A212H06
Z14	1N3686B	186А797Н06
Z21	1N957B	862A288H01
Z22	1N3688A	862A288H01
Z23	1N3688A	185A212H06
Z24	1N3688B	185A212H06
Z54	1N3686B; 20 V. ±5%; 750 MW.	184A617H13
Z105	1N2999A; 56 V. ±10%; 10 W.	184A617H13
Z106	1N2999A; 56 V. ±10%; 10 W.	
	RESISTORS	04D1299H44
R1	26.5 ohms ±5%; 40 W. (For 125 V Supply)	04D1299H44
R2	26.5 ohms ±5%; 40 W. (For 125 V Supply)	04D1299H44
R3	26.5 ohms ±5%; 40 W. (For 48 V Supply)	1268047
R3	500 ohms ±5%; 40 W. (For 125 V Supply)	187A644H03
R4	100 ohms ±10%; 1 W. Composition	187A641H27
R5	1K ±10%; ½ W. Composition	188A317H01
R6	3K ±5%; 5 W. Wire Wound	187A642H55
R7	15K ±10%; 2 W. Composition	629A531H62
Buf. R4, R6	18K ±2%; ½ W. Metal Glaze	629A531H73
Buf. R2, R5	51K ±2%; ½ W. Metal Glaze	629A531H38
Buf. R3	1.8K ±2%; ½ W. Metal Glaze	

CIRCUIT SYMBOL	DESCRIPTION	WESTINGHOUSE
	RESISTORS (Continued)	DESIGNATION
Buf. R7, R10, R12	1.5K ±2%; ½ W. Metal Glaze	
Buf. R8, R9, R11	6.2K ±2%; ½ W. Metal Glaze	629A531H36
Buf. R13	10K ± 2%; ½ W. Metal Glaze	629A531H51
R14, 20, 21, 28, 32	10K ± 2%; ½ W, Metal Glaze	629A531H56
R15,17,22,24;25	12K ± 2%; ½ W. Metal Glaze	629A531H56
R16, 18, 19	27K ± 2%; ½ W. Metal Glaze	629A531H58
R23, 29	4.7K ±2%; ½ W. Metal Glaze	629A531H66
R26, 27	27K ± 2%; ½ W. Metal Glaze	629A531H48
R30, 31, 33	12K ±2%; ½ W. Metal Glaze	629A531H66
R34	4:7K ±2%; ½ W. Metal Glaze	629A531H58
R51	10K ±5%; ½ W. Composition	629A531H48
R52	10K ±5%; ½ W. Composition	184A763H51
R53	10K ±5%; ½ W. Composition	184A763H51
R54	10K ±5%; ½ W. Composition	184A763H51
R55	100 Ohms ±5%; ½ W. Composition	184A763H51
R56	3.6K ±5%; ½ W. Composition	184A763H03
R57	3.6K ±5%; ½ W. Composition	184A763H40
R58	100 ohms ±5%; ½ W. Composition	184A763H40
R59	10K ±5%; ½ W. Composition	184А763Н03
R60	5.6K ±5%; ½ W. Composition	184A763H51
R61	15K ±5%; ½ W. Composition	184A763H45
R62	10K ±5%; ½ W. Composition	184A763H55
R63	1K ±5%; ½ W. Composition	184A763H51
R64	Potentiometer, 1K; ¼ W.	184A763H27
R65	1.8K ±5%; ½ W. Composition	184A763H02
R66	8.2K ±5%; ½ W. Composition	184A763H02
R67	12K ±5%; ½ W. Composition	184A763H49
R68	330 ohms ±5%; ½ W. Composition	184A763H53
R69	800 ohms ±5%; ½ W. Composition	184A763H15
R70	Potentiometer, 1K; 1/4 W.	184A859H06
R71	4.7K ±5%; ½ W. Composition	629A430H02
R72	39K ±5%; ½ W. Composition	184A763H43
R73	Thermistor, 30 ohms, Type 3D202 (G.E.C.)	184A763H65
R74	180 Ohms ±5%; ½ W. Composition	185A211H06
R75	100 Ohms ±5%; ½ W. Composition	184A763H02
R76	2K ±5%; ½ W. Composition	184А763Н03
R77	10 ohms ±5%; ½ W. Composition	184A763H34
R78	10 ohms ±5%; ½ W. Composition	187A290H01
R80	20K ±2%; ½ W. Metal Glaze	187A290H01
R80	25K Potentiometer ± 20%; ¼ W.	629A531H63
R81	1K ±1%; ½ W. Metal Film	629A430H09
	/01 /2 H. Metal Film	848A819H48

CIRCUIT	* ELECTRICAL PARTS LIST	WESTINGHOUSE DESIGNATION
SYMBOL	RESISTORS (Cont'd.)	
		629А430Н07
R82	5K Pot. ± 20%; ½ W.	843A820H46
R83	10.2K ± 1%, ½ W. Metal Film	187A290H11
R84	27 ohms ±5%, ½ W. Composition	185A211H03
R85	Thermistor 3D402 10 ohms	848A819H36
R86	750 ohms ±1%, ½ W. Metal Film	187A280H01
R101	10 ohms ±5%; ½ W. Composition	187A644H35
R102	2.2K ±10%; 1 W. Composition	184A636H14
R103	2.7 ohms ±10%; ½ W. Wire Wound	184A636H18
R104	0.27 ohms ±10%; 1 W. Wire Wound	187A290H01
R105	10 ohms ±5%; ½ W. Composition	187A644H43
R106	4.7K ±10%; 1 W. Composition	184A636H14
R107	2.7 ohms ±10%; ½ W. Wire Wound	184A636H18
R108	0.27 ohms ±10%; 1 W. Wire Wound	
	TRANSFORMERS	606B410G01
Т1	Driver Output Transformer	292B526G01
T2	Power Amp. Input Transformer	292B526G02
Т3	Power Amp. Output Transformer	292B526G03
T4	Load-Matching Auto-Transformer	606B537G01
T51	Buffer Amplifier Transformer	606B537G02
T52	Driver Input Transformer	
	TRANSISTORS	187A342H02
Q1	2N1015C	849A441H02
Q11	2N4356	184A638H19
Q12	2N699	849A441H02
Q21	2N4356	184A638H19
Q22	2N699	184A638H18
Q51	2N697	184A638H18
Q52	2N697	184A638H18
Q53	2N697	184A638H19
Q54	2N699	184A638H18
Q55	2N697	762A672H07
Q56	2N2726/2N3712	762A672H07
Q57	2N2726/2N3712	187A673H02
Q101,Q102	2N2726/2N3712  2N1908 (Use in Matched Pairs) (Germanium Version used with 1N91	187A673H16
Q101,Q102	2N1908 (Use in Matched Pairs) (Silicon Version used with 1N4818)  2N3792 (Use in Matched Pairs) (Silicon Version used with 1N4818)	
	MISCELLANEOUS	_
Y1-Y2	Supplied for Desired Channel Frequency in Pair Matched Per Specifications on Drawing	408C743 408C261 + (Req.Freq.
FL101	Driver Filter	541S214 +(Req. Freq
FL102	Output Filter	187A133H02
PL PL	Pilot Light Bulb - For 48 V. Supply (When supplied)	183A955H01
FL	Pilot Light Bulb - For 125 or 259 V. Supply (When supplied)	11D9195H26
F1, F2	Fuse, 1.5A (When supplied)	11D91931120

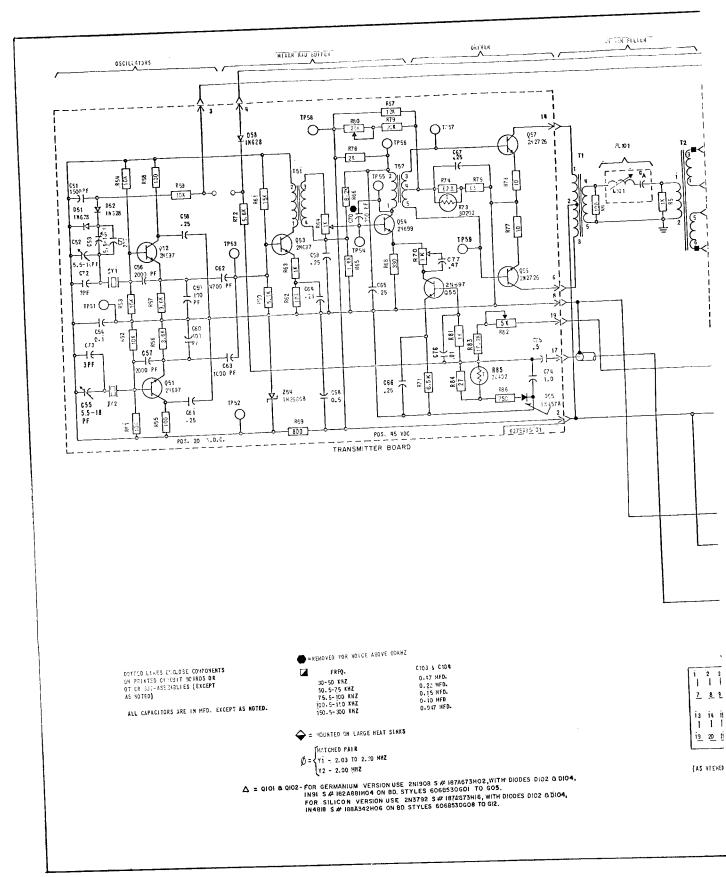

\* Figure 2 - Internal Schematic of the Type TCF Transmitter 1 Watt/3.2

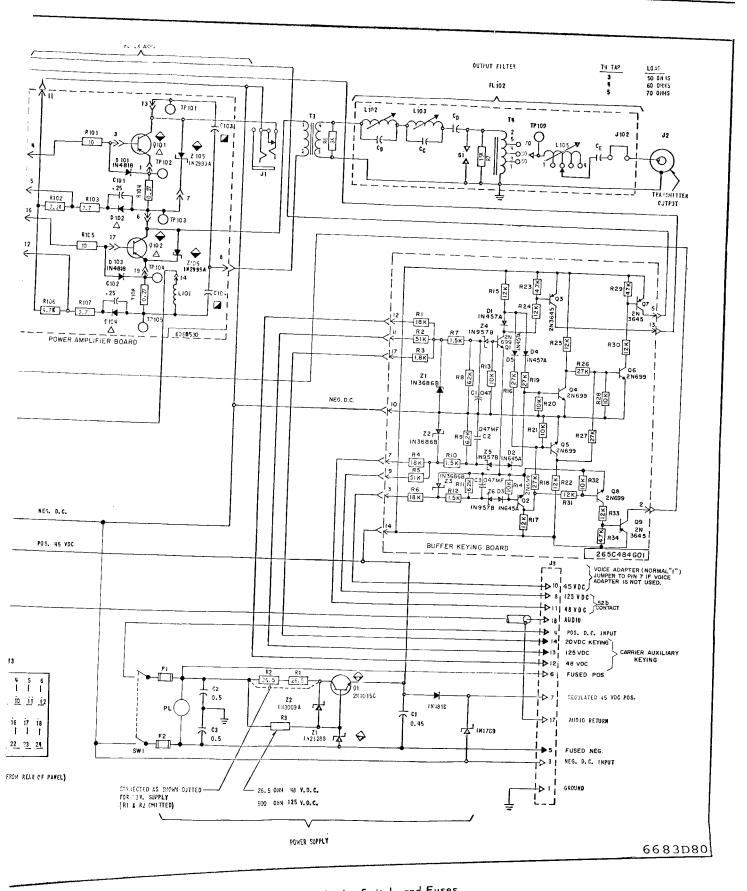

Watt/10 Watt for Keyed and Voice Applications with Pilot Light, Switch, and Fuses.

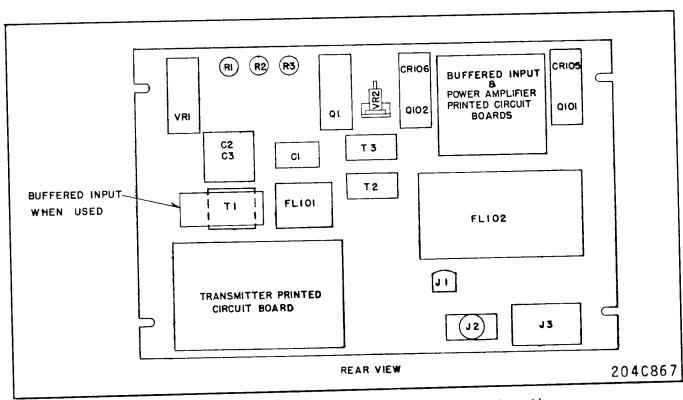


Figure 3 — Component Locations of the Type TCF Transmitter Assembly.

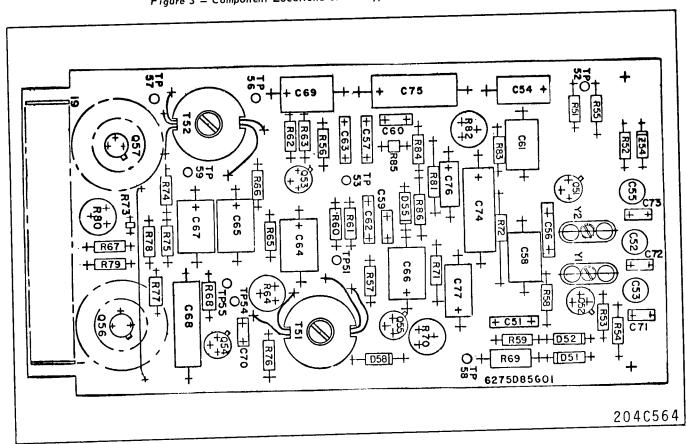


Figure 4 — Component Locations of the Transmitter Printed Circuit Board.



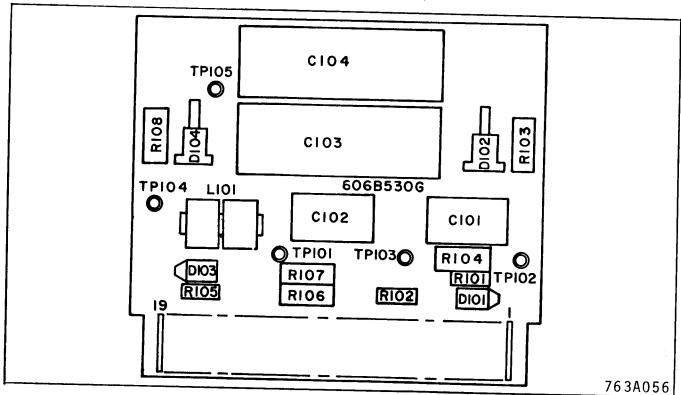



Figure 5 — Component Locations of the Power Supply Printed Circuit Board.

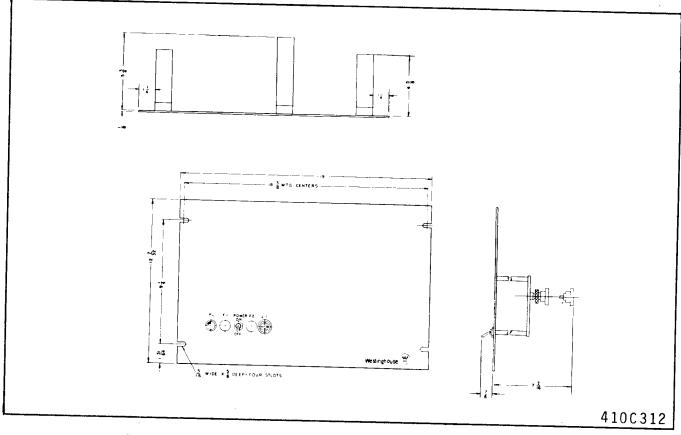

\* Figure 6 - Outline and Drilling Plan for the Type TCF Transmitter Assembly.

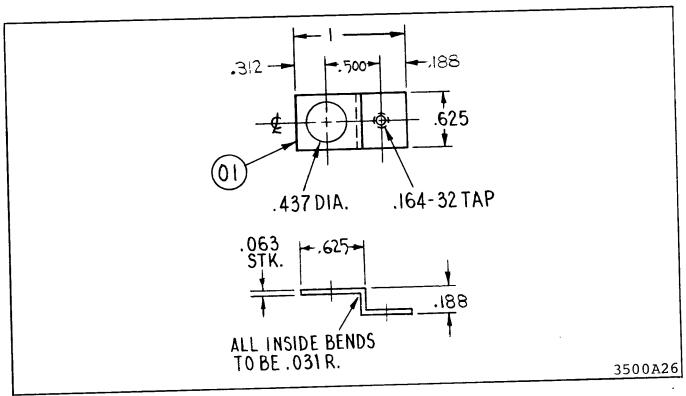

\* Figure 7 — Component Location of Buffer Keying Circuit Board.

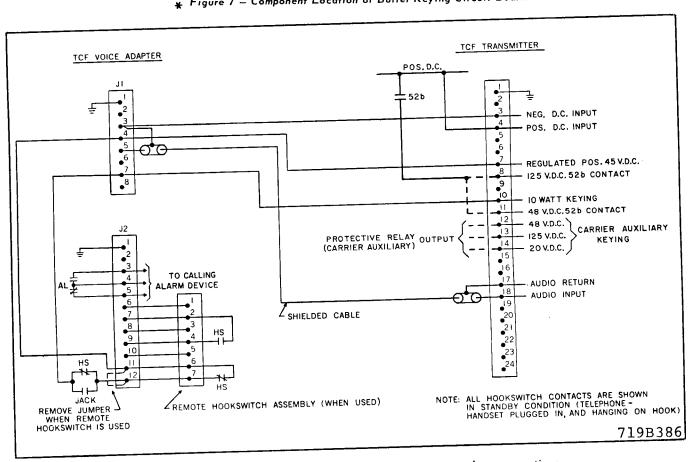

\* Figure 8 — TCF Voice Adapter, Relaying, and Transmitter Interconnections.



WESTINGHOUSE ELECTRIC CORPORATION RELAY-INSTRUMENT DIVISION NEWARK, N. J.

Printed in U.S.A.