


48040-976-02
03/01
Cedar Rapids IA, USA
K442

Instruction Bulletin

Universal Test Set

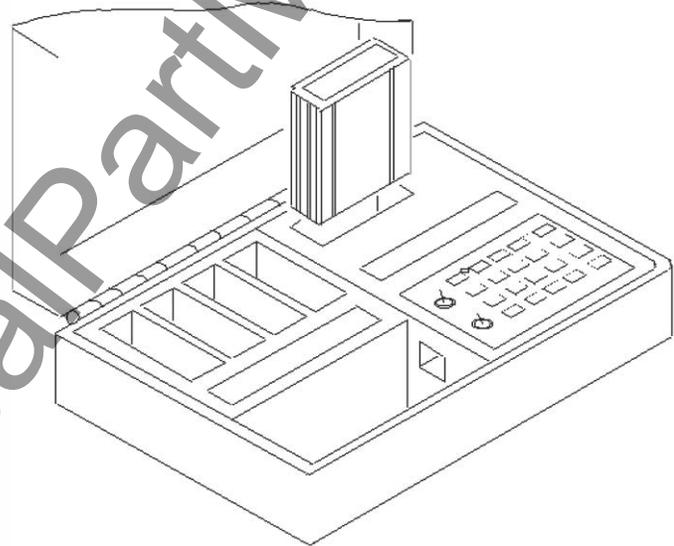

SQUARE D
Schneider Electric

NOTICE

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a "Danger" or "Warning" safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **can result in** death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **can result in** minor or moderate injury.

CAUTION

CAUTION, used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, **can result in** property damage.

NOTE: Provides additional information to clarify or simplify a procedure.

PLEASE NOTE:

Electrical equipment should be installed, operated, serviced and maintained by qualified electrical personnel. This document is not intended as an instruction manual for untrained persons.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Table of Contents

Section 1—General Information	4
Applications.....	4
Terminology	5
Test Types	5
Zone Interlocks and Self-Restraint.....	6
POWERLOGIC System	7
Section 2—Self-Test	8
Section 3—Test Circuit Breaker	10
Section 4—MICROLOGIC Series B CBTMB Test Module	14
Test Setup.....	14
Test Setup for Full-function Circuit Breakers	15
Test Setup for Standard-function Circuit Breakers	16
Main Test Menu	17
Automatic Test Menu for all Circuit Breakers without Ground-fault Alarm	18
Automatic Test Menu for Circuit Breakers with Ground-fault Alarm	19
Individual Test Menu for All Full-function Circuit Breakers without Ground-fault Alarm	20
Individual Test Menu for Full-function Circuit Breakers with Ground-fault Alarm	22
Individual Test Menu for All Standard-function Circuit Breakers.....	24
Manual Test Menu For All Full-function Circuit Breakers without Ground-fault Alarm	26
Manual Test Menu for Full-function Circuit Breakers with Ground-fault Alarm	27
Manual Test Menu for All Standard-function Circuit Breakers	28
Section 5—M-N-P-S CBTM4A Test Module	29
Test Setup for Full-function Circuit Breakers	29
Test Setup for Standard-function Circuit Breakers	30
Main Test Menu	31
Automatic Test Menu for Full-function Circuit Breakers.....	32
Automatic Test Menu for Standard-function Circuit Breakers.....	33
Individual Test Menu for Full-function Circuit Breakers	34
Individual Test Menu for Standard-function Circuit Breakers.....	36
Manual Test Menu for Full-function Circuit Breakers.....	37
Manual Test Menu for Standard-function Circuit Breakers	38
Section 6—SE CBTM1 Test Module	39
Test Setup.....	39
Automatic Test Menu	40
Individual-function Test Menu	41
Manual Test Menu	44
Section 7—ME-NE-PE CBTM3 Test Module	45
Test Setup.....	45
Automatic Test Menu	46
Individual-function Test Menu	47
Manual Test Menu	51
Index	52

Section 1—General Information

APPLICATIONS

CAUTION

HAZARD OF EQUIPMENT DAMAGE

Before using the test set, do the self-test to insure proper test set operation. The self-test is described in Section 2 of this manual.

Failure to follow this instruction can result in equipment damage.

The Universal Test Set is designed to perform operational tests and diagnoses of Square D electronic trip circuit breakers, circuit breaker components and tripping functions. It does not check the primary current sensing capabilities of a circuit breaker.

Check the following table to find the appropriate test set/test module for the circuit breaker.

Table 1: Test Set/Test Module

Circuit Breaker	Circuit Breaker Series Number	Test Set	Test Module ¹
LE/LX	1B	CBTU1 or UTS3	CBTMB
ME	1 and 2	CBT78	Not Available - Primary Injection Testing Only
	3	CBTU1 or UTS3	CBTM3
	4 and 5	CBTU1 or UTS3	CBTM4 or CBTM4A
	5A	CBTU1 or UTS3	CBTM4A
	5B	CBTU1 or UTS3	CBTMB
MX	4 and 5	CBTU1 or UTS3	CBTM4 or CBTM4A
	5B	CBTU1 or UTS3	CBTMB
NE	1	CBTU1 or UTS3	CBTM3
	2 and 3	CBTU1 or UTS3	CBTM4 or CBTM4A
	3A	CBTU1 or UTS3	CBTM4A
	3B	CBTU1 or UTS3	CBTMB
NX	2 and 3	CBTU1 or UTS3	CBTM4 or CBTM4A
	3B	CBTU1 or UTS3	CBTMB
PE	1,2, and 3	CBT78	Not Available - Primary Injection Testing Only
	4	CBTU1 or UTS3	CBTM3
	5 and 6	CBTU1 or UTS3	CBTM4 or CBTM4A
	6A	CBTU1 or UTS3	CBTM4A
	6B	CBTU1 or UTS3	CBTMB
PX	5 and 6	CBTU1 or UTS3	CBTM4 or CBTM4A
	6B	CBTU1 or UTS3	CBTMB
SE	1	CBTSE1	Not Available - Primary Injection Testing Only
	2	CBTU1 or UTS3	CBTM1
	3	CBTU1 or UTS3	CBTM4 or CBTM4A
	3A	CBTU1 or UTS3	CBTM4A
	3B	CBTU1 or UTS3	CBTMB

¹ A kit including the umbilical cord and rating plug adapter is available for each test module. The umbilical cord and rating plug adapter connect the test set to the circuit breaker being tested. A power cord (Part No. 48005-115-01) and an umbilical cord (Part No. 48155-055-50) are also available as replacement parts.

TERMINOLOGY

The following terms are used in diagnosing circuit breaker functions:

LONG-TIME PICKUP. The current at which the long-time delay timer starts.

LONG-TIME AMPERE RATING. The current carrying capacity or “handle rating” of the circuit breaker.

LONG-TIME DELAY. The time period that the long-time delay timer runs before initiating a trip signal, i.e., the length of time the circuit breaker will carry a sustained low-level overload before initiating a trip signal.

SHORT-TIME PICKUP. The current at which the short-time delay timer starts, i.e., the current at which the short-time function recognizes an overcurrent.

SHORT-TIME DELAY. The time period short-time delay timer runs before initiating trip signal, i.e., the short-time delay allows the circuit breaker to carry or withstand low-level or high-level short-circuit currents (up to the published withstand ratings) with intentional delay before tripping. There are two choices of short-time delay characteristics available:

1. **I²t IN.** A delay characteristic which results in an inverse-time delay that most closely parallels time-current characteristics of fuses.
2. **I²t OUT.** A delay characteristic which results in a constant delay that coordinates best with thermal-magnetic and electronic trip circuit breakers.

GROUND-FAULT PICKUP. The ground-fault current level at which ground-fault delay timer starts, i.e., the function which allows the user to set the level of ground-fault current at which the trip system begins timing.

GROUND-FAULT DELAY. The time period the ground-fault delay timer runs before initiating trip signal, i.e., the function which determines the time the circuit breaker will wait before initiating a trip signal. There are two choices of ground-fault delay characteristics available:

1. **I²t IN.** A delay characteristic which results in an inverse-time delay that coordinates best with zero sequence ground-fault relays used in conjunction with thermal-magnetic circuit breakers and fusible switches.
2. **I²t OUT.** A delay characteristic which results in a constant delay characteristic that coordinates best with electronic trip circuit breakers with the ground-fault option.

GROUND-FAULT ALARM PICKUP. The ground-fault current level at which the trip unit initiates a signal to indicate a ground-fault condition. The circuit breaker will not trip.

TEST TYPES

The Universal Test Set provides three test options for each type of circuit breaker tested. These test types are: Automatic Test Mode, Individual-function Test Mode, and Manual Test Mode. The information which follows explains the requirements for and the results obtained by each test.

NOTE: A small straight-blade screwdriver is required for testing circuit breakers.

Automatic Test Mode

TEST REQUIREMENTS: Circuit breaker, rating plug and trip unit information.

TEST RESULTS: Tests long-time, short-time, instantaneous and ground-fault functions simultaneously without pauses or prompts; displays the amount of time delay before initiating the trip signal. Specifies which function failed on a pass/fail basis.

**Universal Test Set
Section 1—General Information****Individual-function Test
Mode**

TEST REQUIREMENTS: Circuit breaker, rating plug and trip unit information. Selection of the specific function(s) to be tested. The Individual-function test mode is accessed from the automatic test mode.

TEST RESULTS: Displays and diagnoses functions one at a time; tests each trip unit switch function as well as the operation of the indicators. Tests calibration and tolerance to predetermined values.

Manual Test Mode

TEST REQUIREMENTS: Circuit breaker, rating plug and trip unit information. A phase or ground- fault current value must be manually entered.

TEST RESULTS: Monitors and displays the trip time of the selected current applied to the trip unit.

CAUTION

HAZARD OF EQUIPMENT DAMAGE

Before using the test set, do the self-test on the testing unit to insure proper test set operation. The self-test is described in Section 2 of this manual.

Failure to follow this instruction can result in equipment damage.

**ZONE INTERLOCKS AND
SELF-RESTRAINT**

Some testing procedures require the zone interlocks or any self-restraint jumper wires to be disconnected. If the circuit breaker is wired for zone interlocking or is self-restrained by jumper wires, do the following:

LE, ME, NE and PE Circuit Breakers

Refer to table 2 and disconnect wires or jumpers from terminals 6 and 8 of the terminal block. Reconnect the wires when testing is complete.

Table 2: Terminal Numbering

Number	Terminal Name
5	
6	ST Restraint OUT
7	
8	GF Restraint OUT
9	

SE Circuit Breakers

Refer to table 3 and disconnect wires or jumpers from terminals 21 and 24 of the terminal block. Reconnect the wires when testing is complete.

Table 3: Terminal Numbering

Number	Terminal Name
19	
20	
21	Ground-fault Zone Interlock
22	
23	
24	Short-time Zone Interlock
25	

POWERLOGIC SYSTEM

If circuit breaker is connected to a POWERLOGIC® system, disconnect POWERLOGIC system before testing. If POWERLOGIC system is not disconnected, Universal Test Set will show “TEST FAILED” message.

Disconnect POWERLOGIC system by doing the following steps:

1. Mark connector (A) in figure 1 at CIM3F communications adapter (B) in figure 1 for circuit breaker before being tested.
2. Disconnect connector (A) from CIM3F communications adapter (B).
3. Reconnect connector (A) when testing is complete.

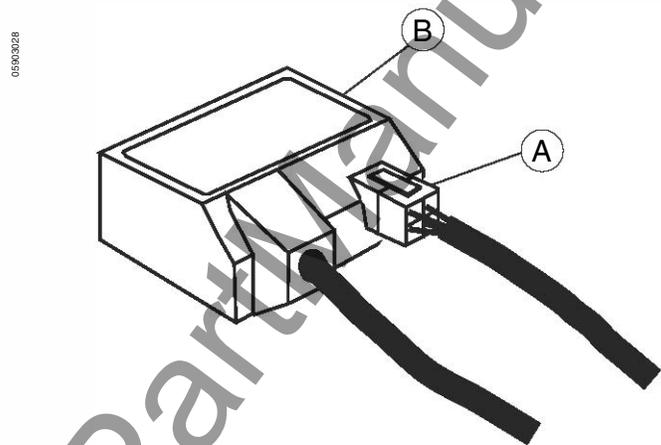


Figure 1: Communication Adapter

Section 2—Self-Test

CAUTION

HAZARD OF EQUIPMENT DAMAGE

DO NOT touch connector pins (Fig.2) when handling test modules. Touching pins can produce an electrostatic discharge resulting in damage to module or trip unit.

Failure to follow this instruction can result in equipment damage.

06940029

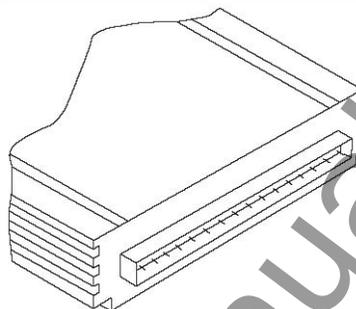


Figure 2: Connector pins

1. Place universal test set (fig. 3) on a flat surface. Open case until cover locks into the open position.
2. Make sure test set power is off (O) by checking position of power switch (A, Fig. 3) on keyboard (F).
3. Plug one end of test set power cord into power cord receptacle (B); plug other end into a grounded power source.
4. Insert Self-test Module (D) into module receptacle (E) in upper right corner of test set. Make sure module label is facing keyboard (F). Never use receptacle for storing modules when test set is not in use; use only module holders (C) for storage.
5. Turn power switch (A) to on (I). The red light on self-test module will glow and an identifying message will appear on the display.
6. The module will run automatically for a short period of time to insure basic operations of test set are working correctly.

NOTE: If an error message occurs or module light fails to come on, turn power to off (O) and carefully re-seat module in receptable.

7. If tests were successful, test set can now be used for testing circuit breakers.

CAUTION

HAZARD OF EQUIPMENT DAMAGE

Test results will be inaccurate if any self-test is unsuccessful. Do not use test set to test circuit breakers if any self-test, including those which follow, is unsuccessful.

Failure to follow this instruction can result in equipment damage.

06940030

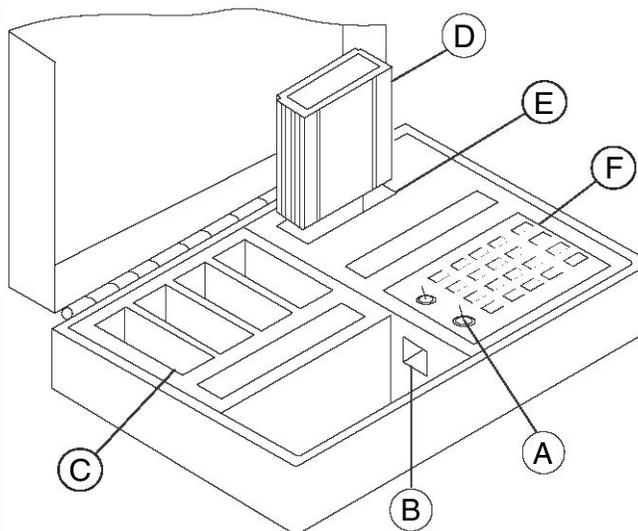


Figure 3: Universal Test Set

8. The test set will now prompt for optional manual testing of functions. These tests must be done on a periodic basis. To test functions, see steps 9 and 10. If manual tests are not being done, go to step 11.
9. Press keys slowly and firmly. Press SET UP key when it is flashing to return test set to the beginning of the following self-test sequence:
 - a. "TEST SYSTEM KEYBOARD?-YES/NO" checks keyboard to make sure it is accepting input correctly. If keyboard is not being tested, press NO key. To test operation of keyboard, press YES key. The display will then step through the test. If display indicates "SYSTEM KEYBOARD FAILED," see step 10A.
 - b. "TEST SYSTEM KEY LIGHTS?-YES/NO" checks the systems key backlights for proper operation. If backlights are not being tested, press NO key. To check operation of backlights, which are located behind the eight system keys (A) in Figure 4, press YES key. The display will step through the test with lights flashing in sequence down the rows. If display indicates "SYSTEM LIGHTS TEST FAILED," see step 10A.
 - c. "TEST SYSTEM L.C.D. DISPLAY?-YES/NO" checks for proper operation of LCD (liquid crystal display) characters. If LCD is not being tested, press NO key. To test LCD, press YES key. Display will then step through the test. If display indicates "SYSTEM L.C.D DISPLAY TEST FAILED," see step 10A.
10. Test set will now display test results:
 - a. If test sequence was not successful, display will so indicate. Press SET UP key to return test to beginning of test sequence and run tests again. If test sequence is again unsuccessful, note message and contact Square D for assistance (1-888-778-2733).
 - b. If test sequence was successful, Universal Test Set can now be used to test circuit breaker trip systems.
11. Turn test set power switch (B) in Figure 4 to OFF.
12. Remove self-test module and store it in module holder.
13. If no additional testing is planned, unplug test set, store power cord in storage area, and close test set case.

CAUTION

HAZARD OF EQUIPMENT DAMAGE

Test results will be inaccurate if any self-test is unsuccessful. Do not use test set to test circuit breakers if any self-test was unsuccessful.

Failure to follow this instruction can result in equipment damage.

05903001

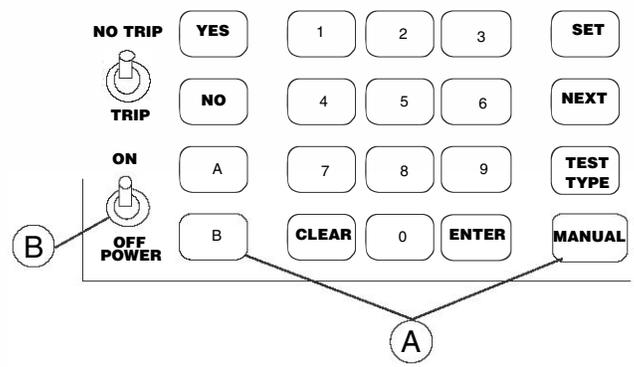


Figure 4: Test System Console

Section 3—Test Circuit Breaker

CAUTION

HAZARD OF EQUIPMENT DAMAGE

Damage to test set and module will occur if current is flowing through circuit breaker during testing. Disconnect all loads from circuit breaker. Do not CLOSE circuit breaker during testing unless all loads are disconnected.

Failure to follow this instruction can result in equipment damage.

When testing only SE Series 2 circuit breakers using a CBTM1 module, test set conducts ground-fault delay test using dc current. As a result, delay times are 20% shorter than circuit breaker would provide in actual operation as shown on trip curves.

A small straight-blade screwdriver is necessary for testing circuit breakers.

NOTE: The test sequence can be stopped at any time by turning test power OFF.

1. Disconnect all loads by (1) placing circuit breaker in OPEN position or (2) disconnecting all loads downstream from circuit breaker under test.

NOTE: During test there must be no current flowing through circuit breaker. Any current flowing through circuit breaker will terminate test and could result in damage to test set. If circuit breaker is in OPEN position, trip solenoid test cannot be done. If downstream loads are disconnected, circuit breaker can be in either OPEN or CLOSED position. If circuit breaker is in CLOSED position, it will trip during functional tests depending upon position of TRIP/NO TRIP switch. If switch is placed in NO TRIP position, test set will not signal circuit breaker to trip during functional tests. If switch is placed in TRIP position, circuit breaker will trip during functional tests.

2. If circuit breaker is connected to POWERLOGIC® system, disconnect POWERLOGIC system according to instructions on page 7.
3. Place test set on a flat surface no more than five feet from circuit breaker to be tested. Open case fully to lock cover into the open position (fig.5).

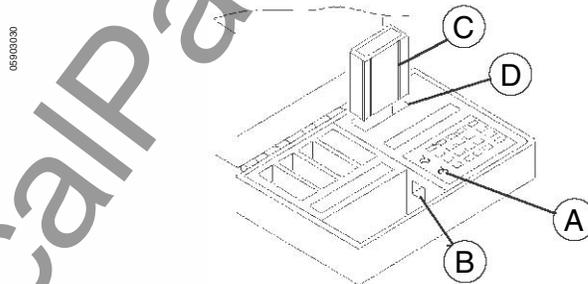


Figure 5: Universal Test Set

4. Make sure test set power is OFF by checking position of power switch (A) on keyboard.
5. Plug test set power cord into test set power cord receptacle (B). Plug other end into a grounded power source.
6. Test the test set by doing the self-test in Section 2. If self-test is unsuccessful contact Square D for assistance (1-888-778-2733) and do not use test set to test circuit breaker. If self-test was successful, proceed with step 7.

CAUTION

HAZARD OF EQUIPMENT DAMAGE

Do not touch connector pins (Fig. 6) when handling test modules. Touching pins can produce an electrostatic discharge resulting in damage to module or trip unit.

Failure to follow this instruction can result in equipment damage.

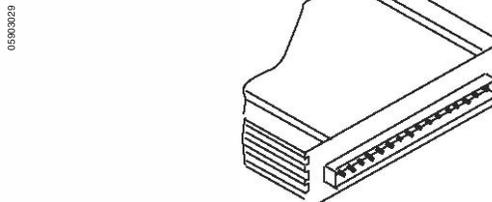


Figure 6: Connector Pins

7. See table on page 4. Select appropriate circuit breaker test module (C, fig. 5) and insert into module receptacle (D).

- Insert test set end of umbilical cord into slot on top of module as shown by label on module. The umbilical cord is inserted with cable toward rear of module as shown in figure 7.

05903032

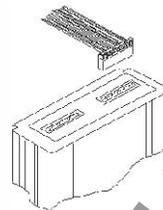


Figure 7: Umbilical Cord

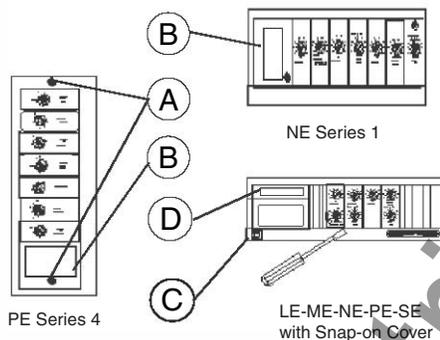
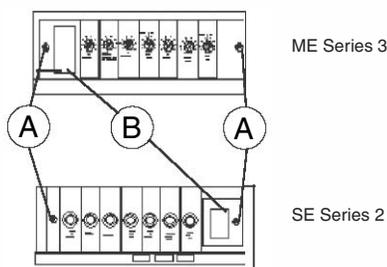


Figure 8: Screw Retained and Snap-On Unit Covers

- Circuit breakers with screw retained trip unit cover: Use a small screwdriver to loosen trip unit cover screws (A) and remove clear plastic trip unit cover.
Circuit breakers with snap-on trip unit cover. Insert a small screwdriver under tab of clear plastic trip unit cover and snap out the cover.
- Circuit breakers with screw retained trip unit cover: To remove any accumulated electrostatic charge, touch trip unit metal panel. Hold rating plug (B), if equipped, firmly and SLOWLY remove it from circuit breaker.
Circuit breakers with snap-on trip unit cover: If equipped with a trip indicator/ammeter (C), use a small screwdriver to carefully pry up one end and then the other, a small amount at a time, to remove the trip indicator/ammeter (C). On circuit breakers without trip indicator/ammeter, remove the black plastic cover. Remove rating plug (D) or black plastic cover.

TRIP UNITS WITH RATING PLUGS ONLY:

- LIGHTLY touch rating plug connector board to metal grounding surface (A, Fig. 9) next to power cord receptacle of test set to discharge any accumulated electrostatic charge.

05903034

ME Series 3, NE Series 2, or PE Series 4 Rating Plug

SE Series 3 Rating Plug

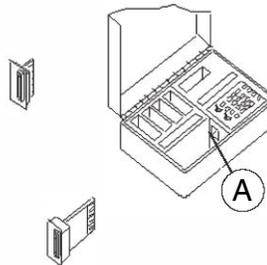


Figure 9: Trip Units with Rating Plugs

12. SLOWLY insert rating plug into connector on tip of module as shown by label.

NOTE: The rating plug must be oriented as shown in figure 10 or 11.

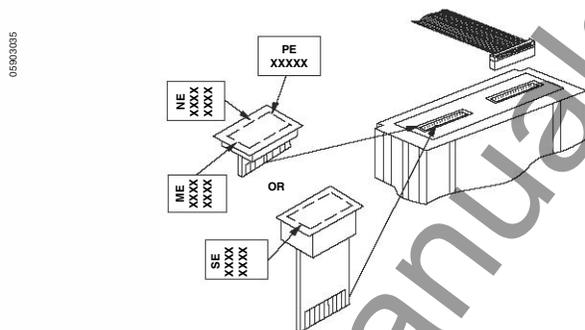


Figure 10: Rating Plug Insertion


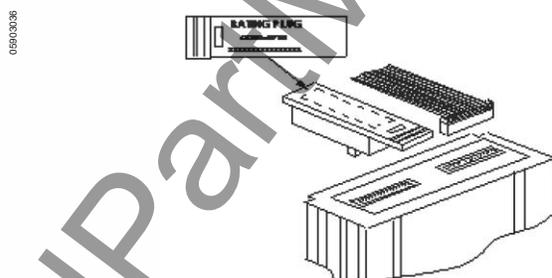


Figure 11: Rating Plug Insertion


ALL TRIP UNITS:

13. Carefully insert adapter end of umbilical cord into rating plug adapter or M-N-P-S Adapter (fig. 12) being careful not to bend adapter pins. Note orientation of connector. (Adapters are stored in the power and umbilical cord storage area).

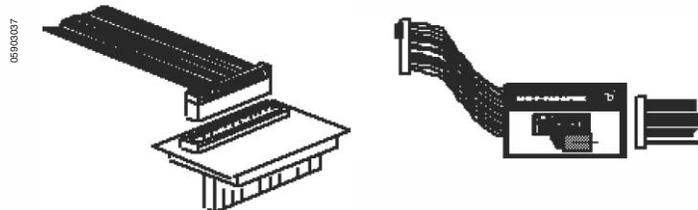

ME Series 3, NE Series 1, PE Series 4 and SE Series 2

ME Series, 4, 5 and 5 A
MX Series 4 and 5
Ne Series 2, 3, and 3A
NX series 2 and 3
PE Series 5, 6, and 6A
PX Series 5 and 6
SE Series 3 and 3A

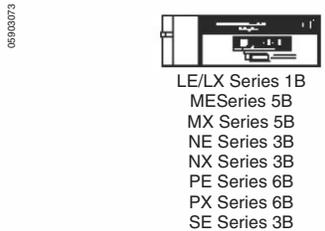

LE/LX Series 1B
ME Series 5B
MX Series 5B
NE Series 3B
NX Series 3B
PE Series 6B
PX Series 6B
SE Series 3B

Figure 12: Rating Plug Adapter and M-N-P-S Adapter

14. Grasp adapter firmly and touch adapter connector board lightly against metal grounding surface (A, fig. 9) next to power cord receptacle.
15. Immediately install adapter SLOWLY into trip unit. Note orientation of umbilical cord and adapter (A, fig. 13).

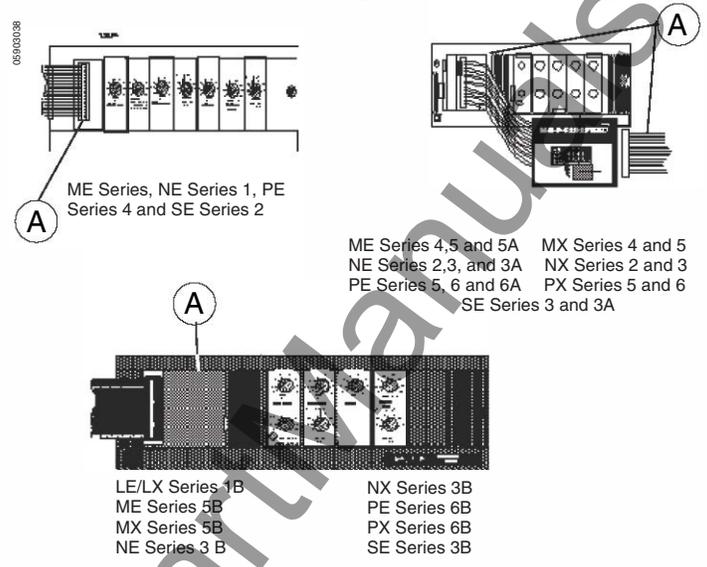


Figure 13: Orientation of Umbilical Cord and Adapter

16. Turn test set power switch on (I). The test set will perform a self-test. After self-test, module identifier will be displayed.
17. Refer to test procedure for the test module being used and begin testing. The test set will request information on frame size and trip unit function.. After all information has been entered and verified, test set will ask for "TEST TYPE." See section 1 for test type. Enter test type and continue with test.



NOTE: If "TEST FAILED" message appears in the display window, check to see if circuit breaker is connected to a POWERLOGIC system. If circuit breaker is connected to POWERLOGIC system, disconnect POWERLOGIC system according to instructions on page 7 and press A to repeat test. If "TEST FAILED" appears again, call Square D (1-888-778-2733).

18. After test has been completed, turn test set power switch to off (O).
19. Slowly remove adapter from trip unit by holding adapter housing firmly and removing it from trip unit.
20. Remove adapter from umbilical cord and store in storage space.
21. Remove umbilical cord from module. Store umbilical cord in storage space.
22. Hold rating plug housing, if equipped, firmly and slowly remove it from the module. Lightly touch rating plug connector to metal grounding surface next to power cord receptacle.
23. Slowly insert rating plug and trip indicator/ammeter or black plastic covers into slots in circuit breaker.
24. Replace clear trip unit cover and secure trip unit cover screws, if equipped.
25. Remove test module and install in module holder. Do not touch connector pins. Disconnect test set, store power cord, and close cover.

Section 4—MICROLOGIC Series B CBTMB Test Module

TEST SETUP


059013039

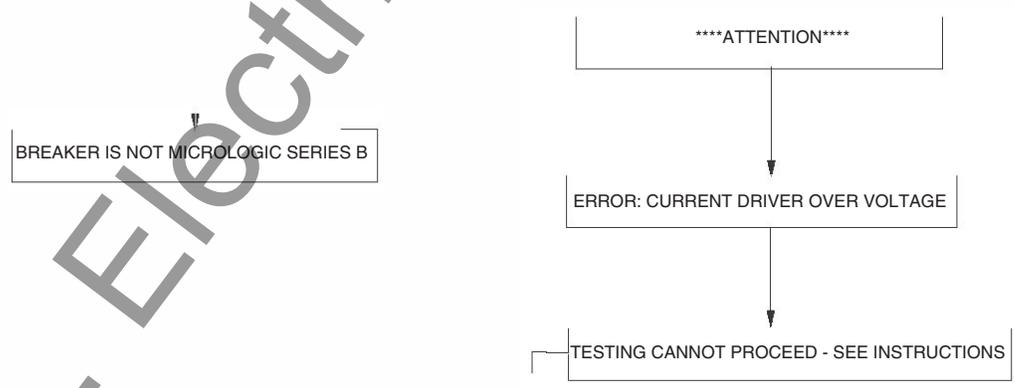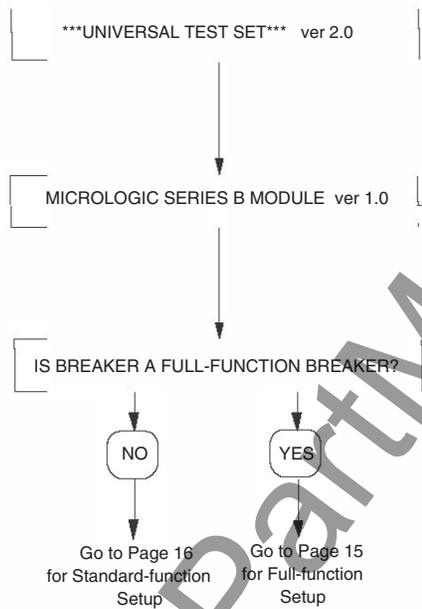


Turn test set power OFF (O). Remove and reseal test module. Check connections of umbilical cord, rating plug and rating plug adapter. Turn test set power ON (I) to restart test. If "TESTING CANNOT PROCEED" message appears again, call Square D (1-888-778-2733.)

**TEST SETUP FOR FULL-FUNCTION
CIRCUIT BREAKERS**

05903040

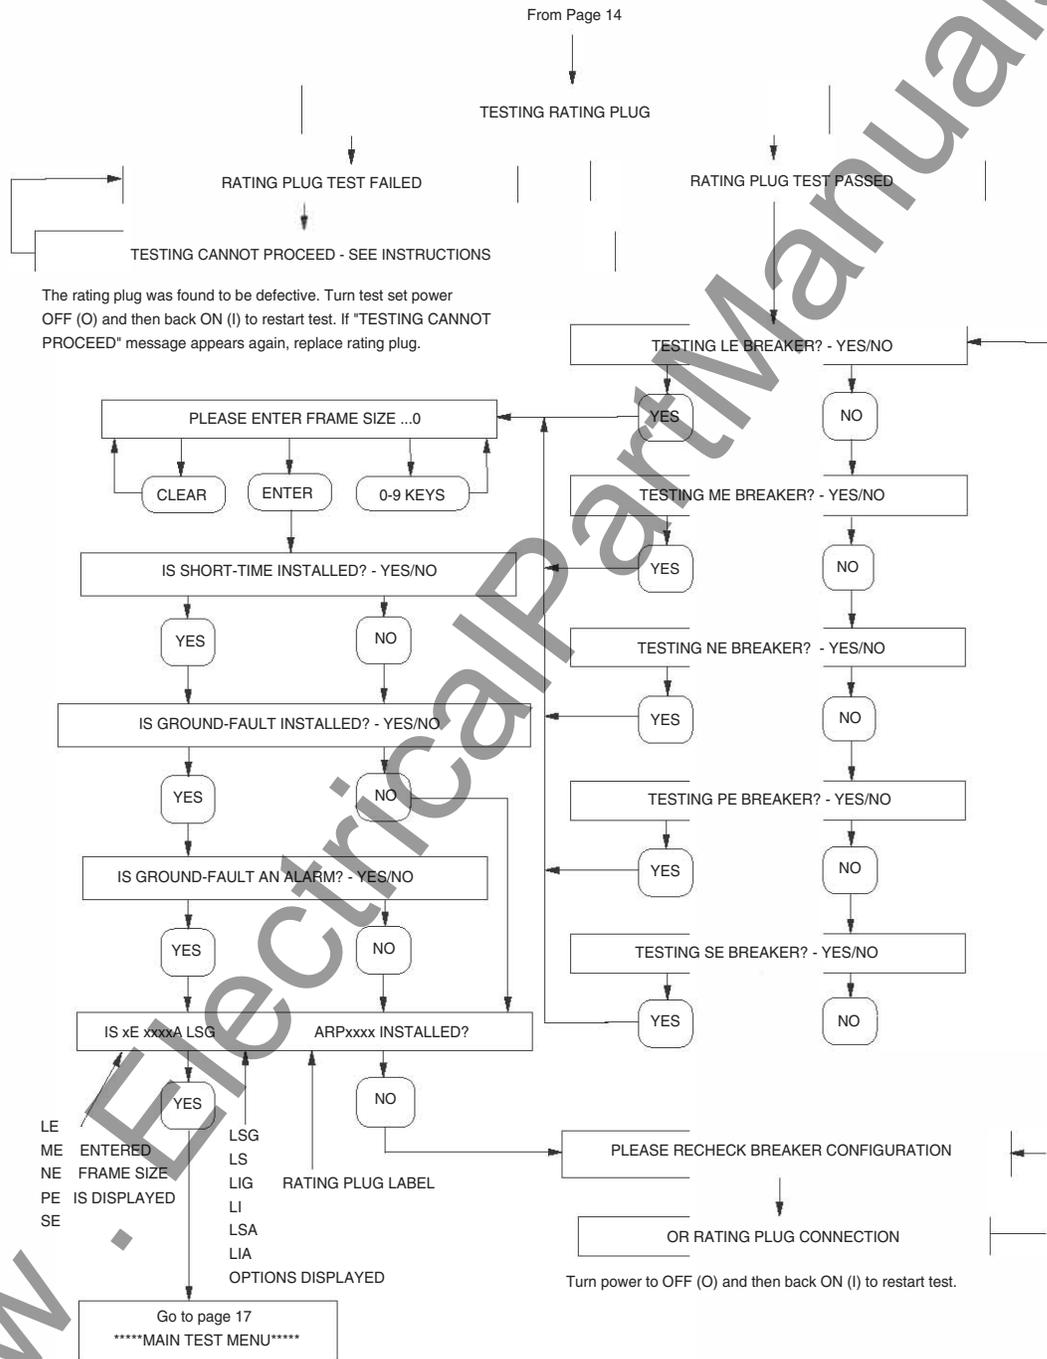


TEST SETUP FOR STANDARD-FUNCTION CIRCUIT BREAKERS

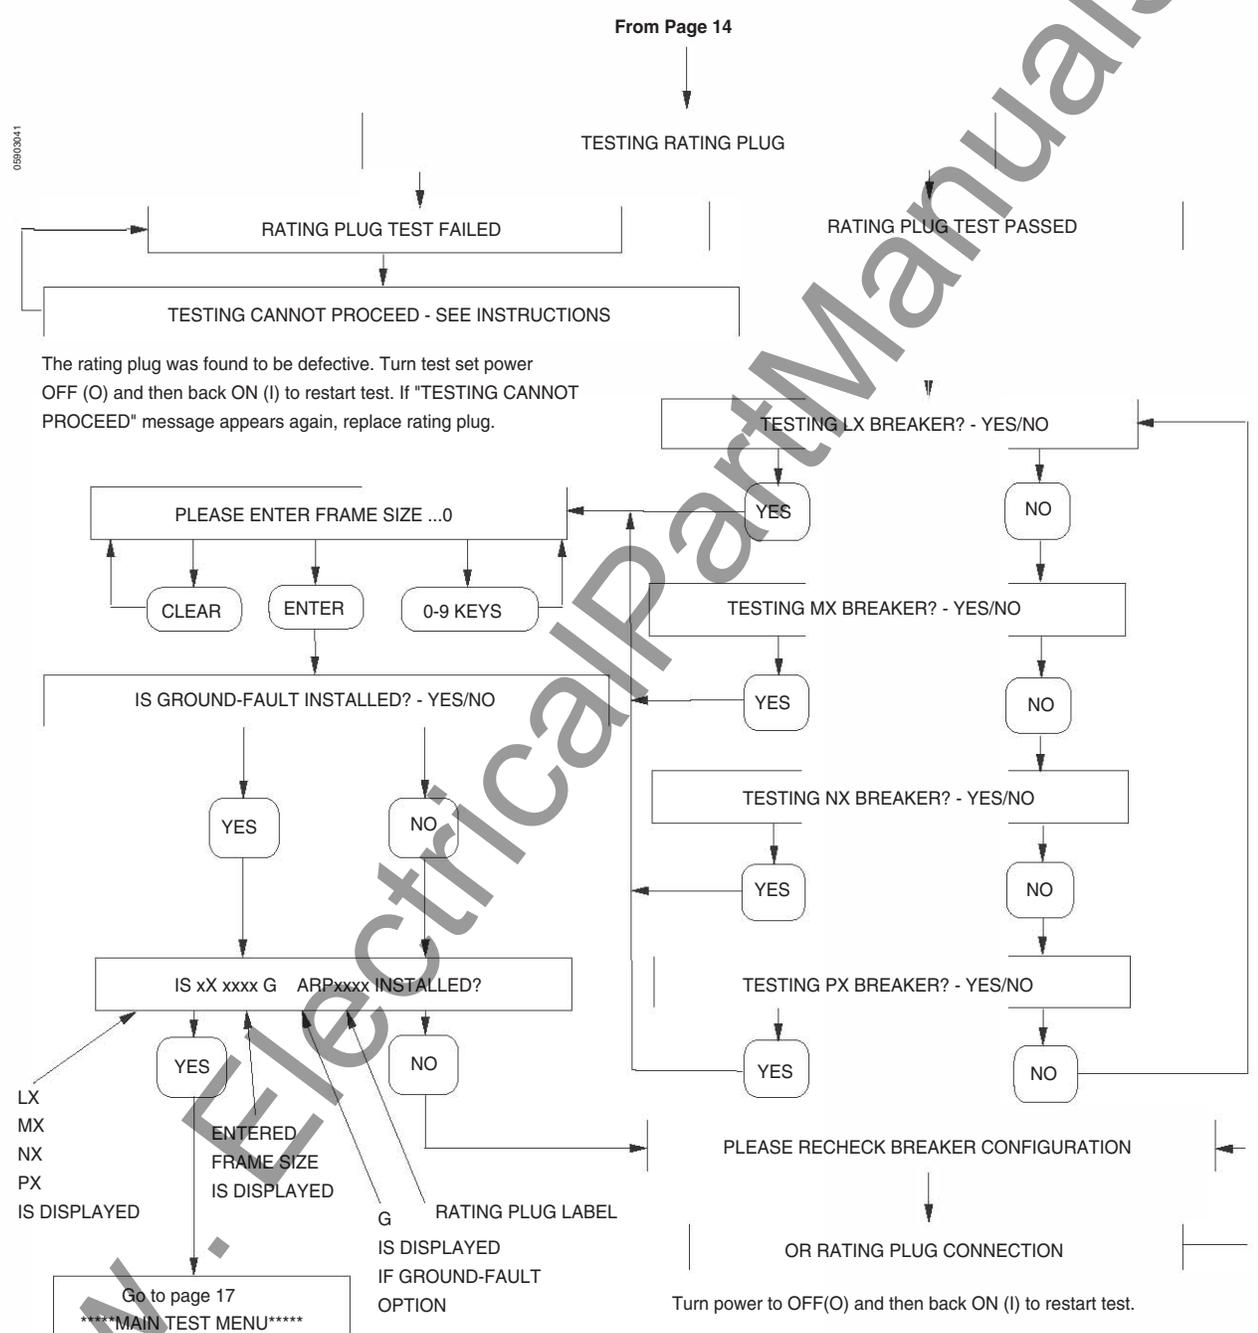

MAIN TEST MENU

0590342

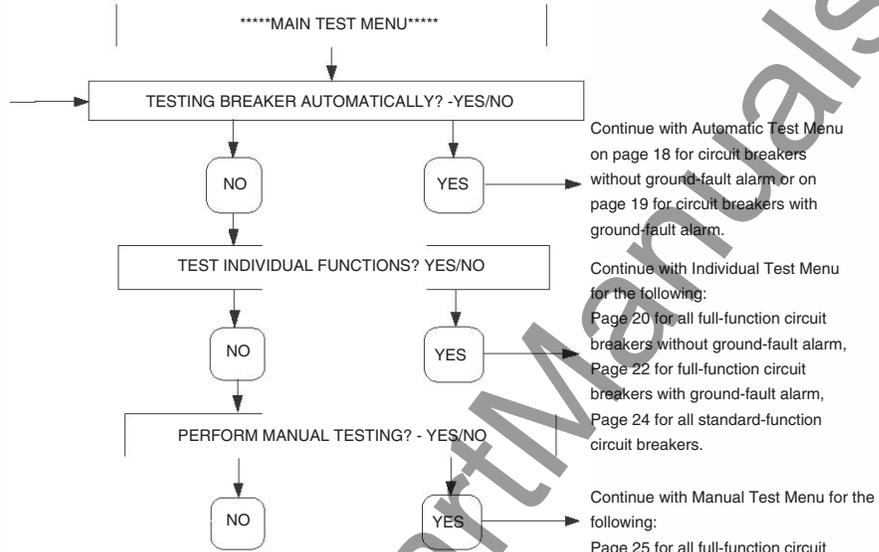

Description of Key Functions


- VERIFIES DATA ENTERED/SHOWN
- NEGATIVE RESPONSE TO DATA SHOWN
- ENTERED AFTER TRIP UNIT FUNCTION SWITCH IS SET
- NOT USED
- DELETES ENTRY
- NOT USED
- SIGNIFIES END OF ENTRY
- NOT USED
- NOT USED
- RETURNS UNIT TO MAIN TEST MENU

NOTE: An option is valid any time its key is flashing.

NOTE: Test sequence can be stopped at any time by turning the test set power to OFF (O).


**AUTOMATIC TEST MENU FOR ALL
CIRCUIT BREAKERS WITHOUT
GROUND-FAULT ALARM**

05903043

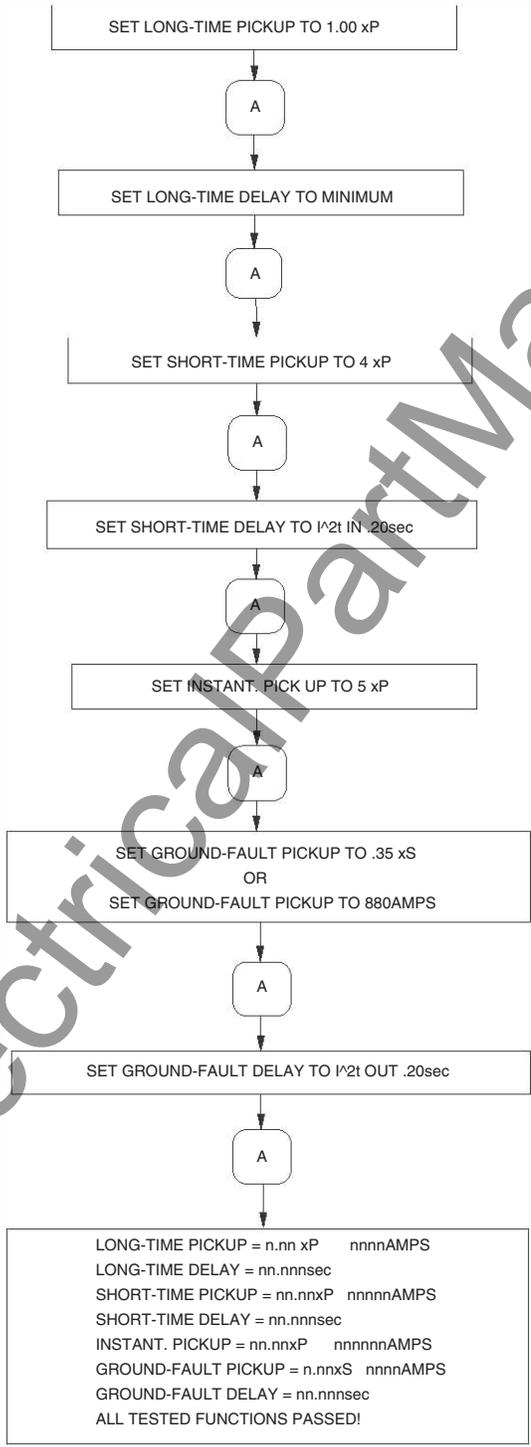


**AUTOMATIC TEST MENU FOR CIRCUIT
BREAKERS WITH GROUND-FAULT
ALARM**

05900044

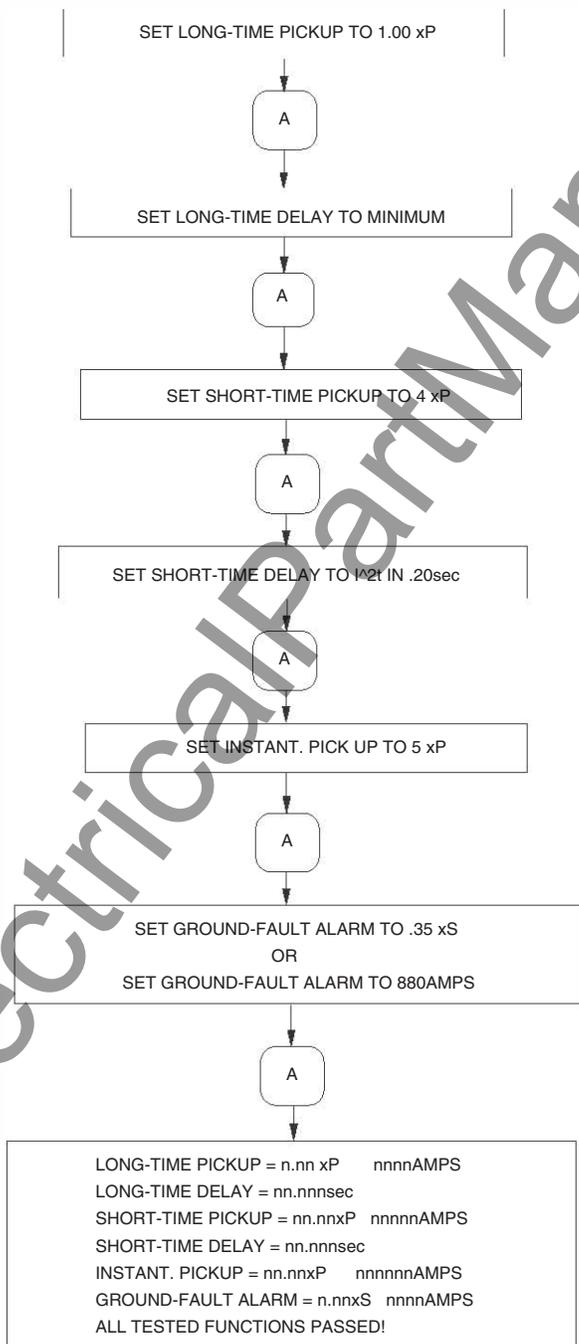

**INDIVIDUAL TEST MENU FOR ALL
FULL-FUNCTION CIRCUIT BREAKERS
WITHOUT GROUND-FAULT ALARM**


09903045

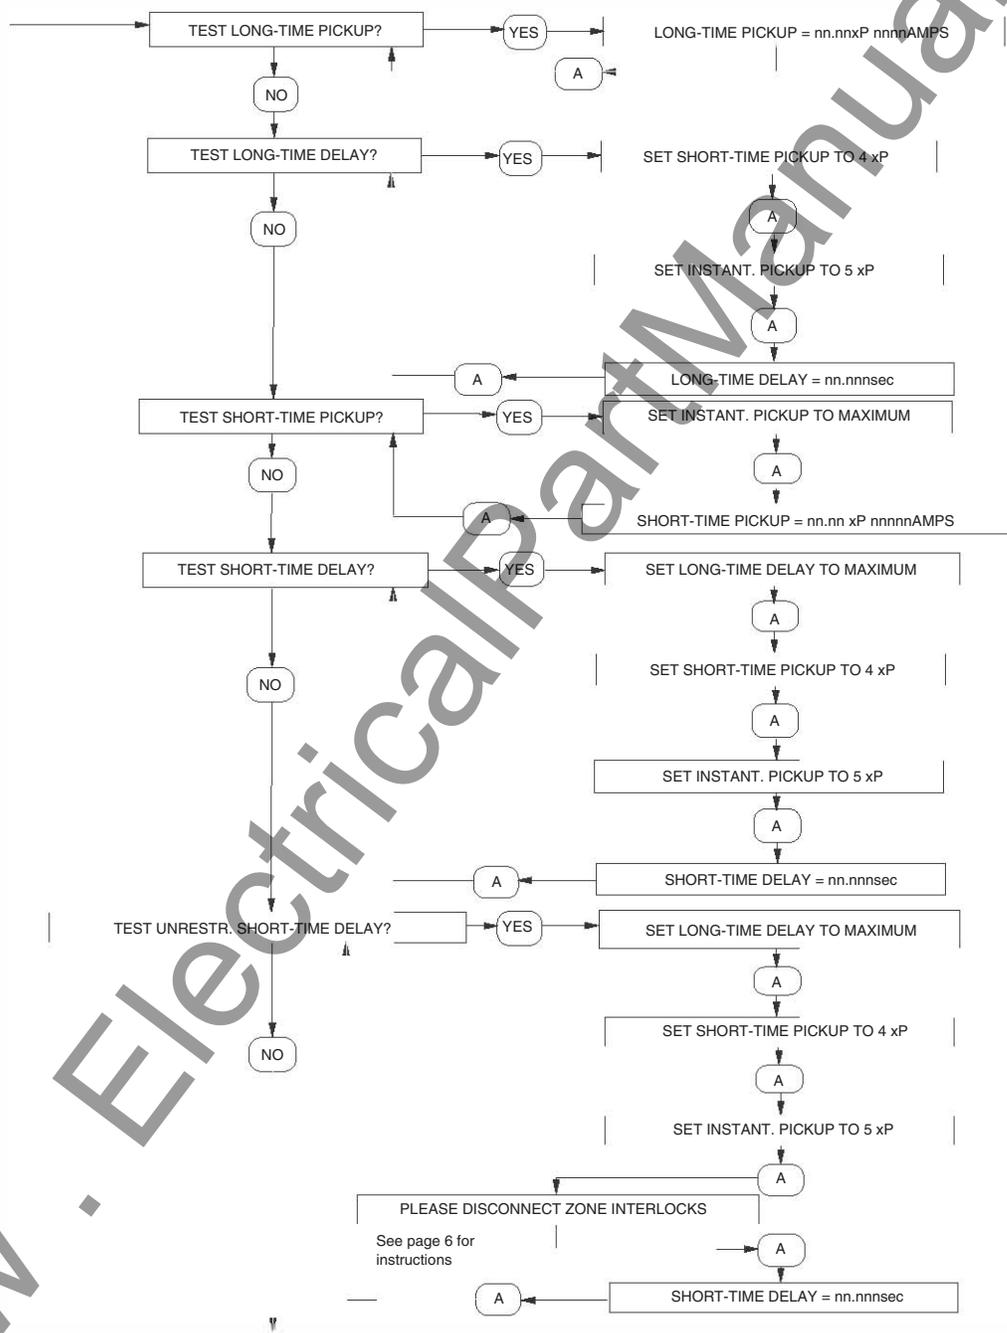

(Continued on next page)

INDIVIDUAL TEST MENU FOR ALL FULL-FUNCTION CIRCUIT BREAKERS WITHOUT GROUND-FAULT ALARMS (-Continued)


0593246

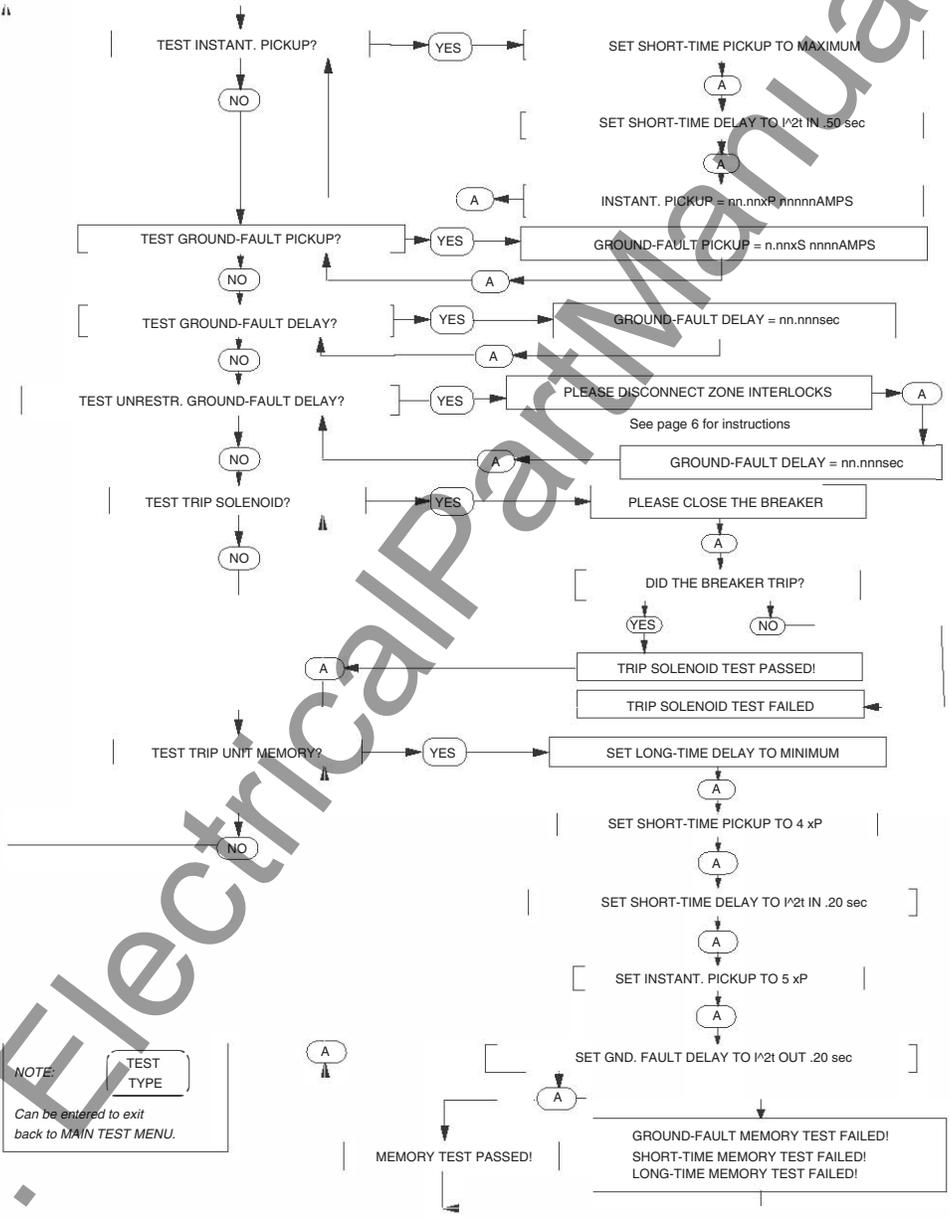

NOTE: TEST TYPE
Can be entered to exit back to MAIN TEST MENU.

INDIVIDUAL TEST MENU FOR FULL-FUNCTION CIRCUIT BREAKERS WITH GROUND-FAULT ALARM


059030145

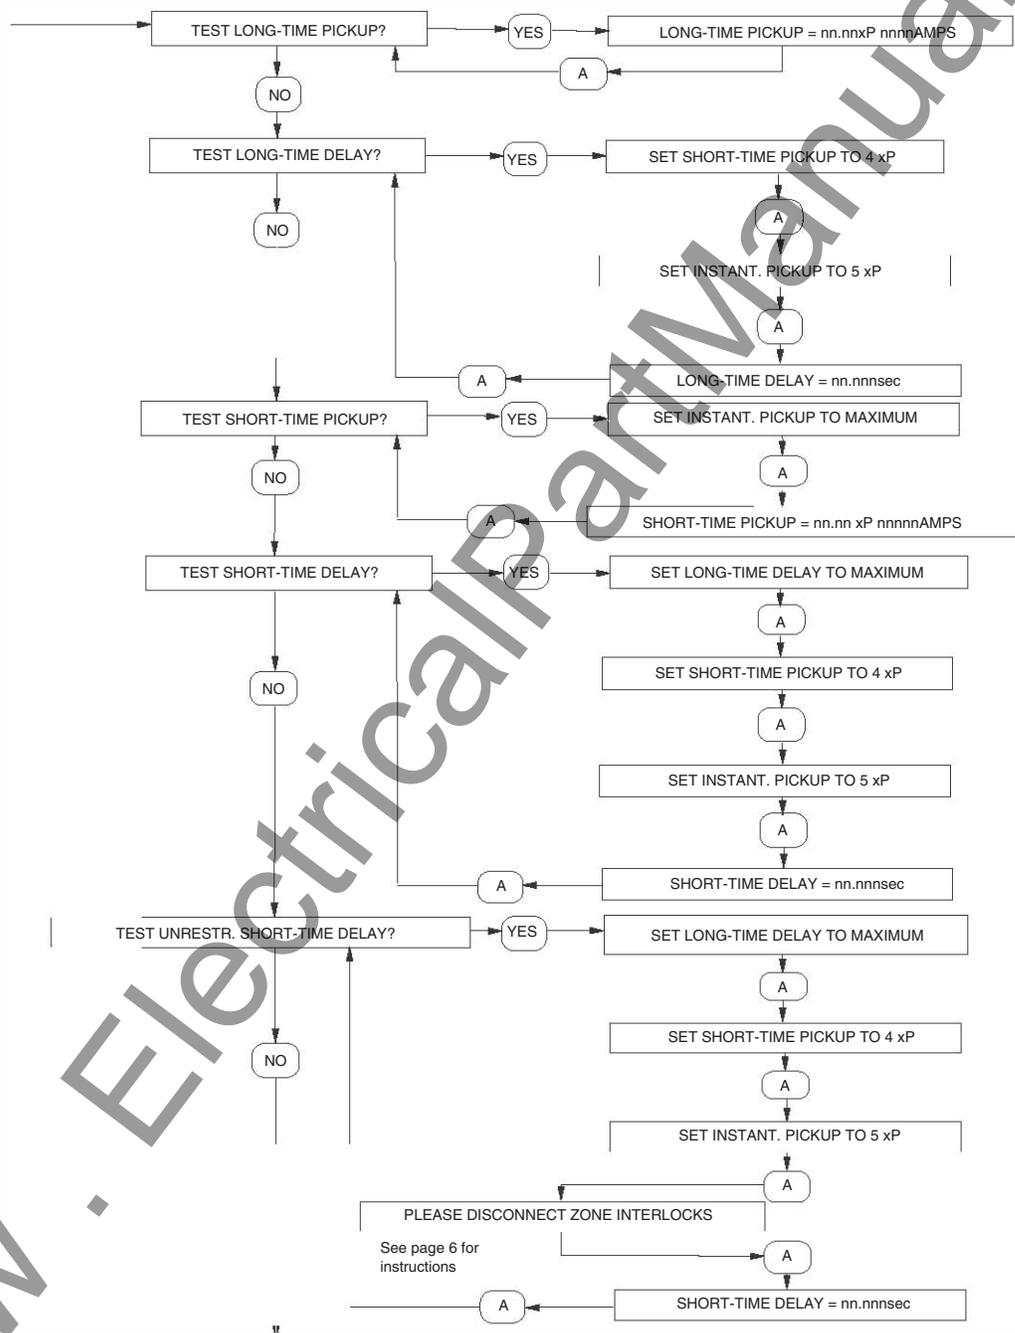

(Continued on next page)

INDIVIDUAL TEST MENU FOR FULL-FUNCTION CIRCUIT BREAKERS WITH GROUND-FAULT ALARM (-Continued)


06903047

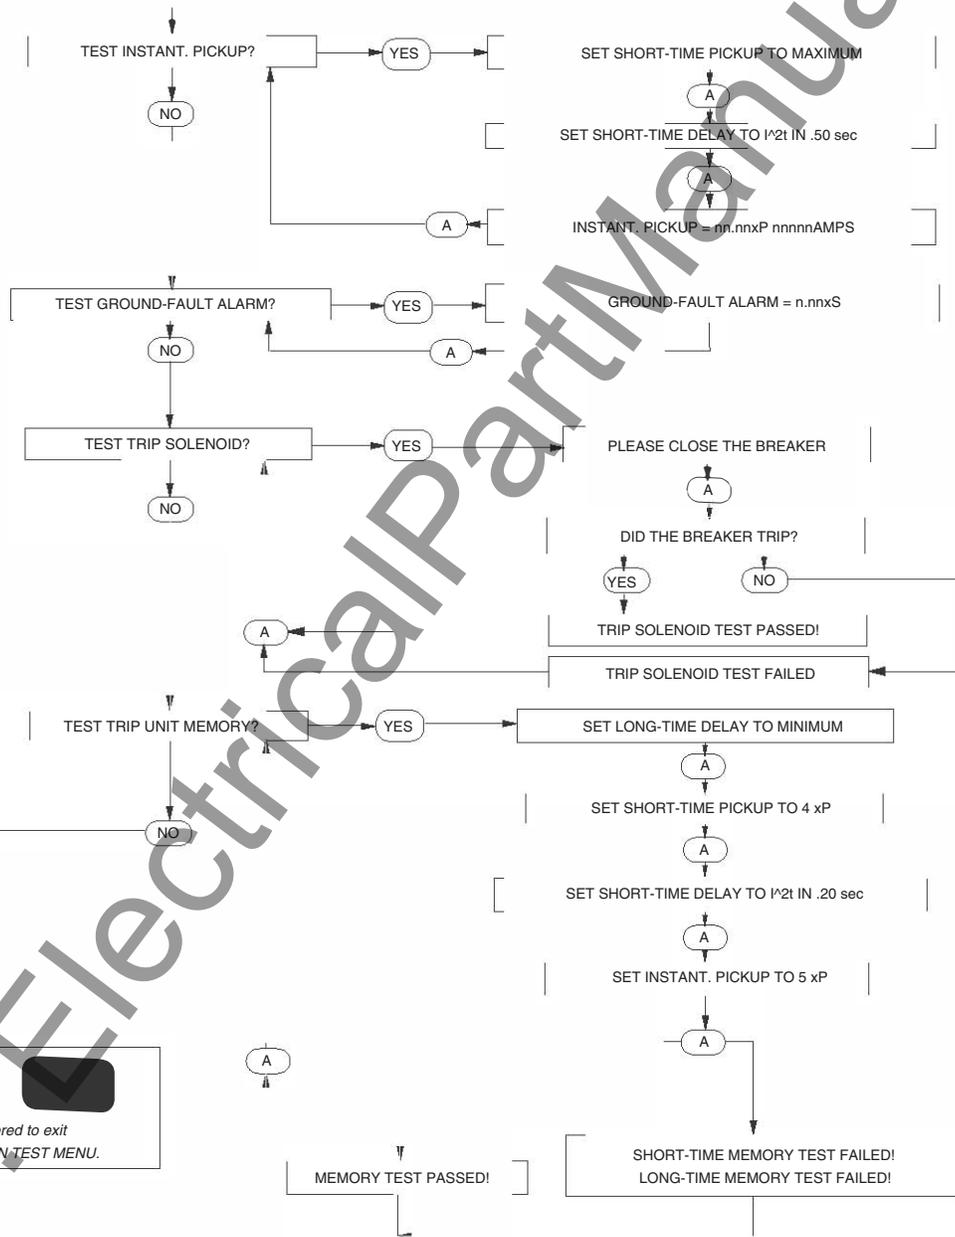

NOTE:
Can be entered to exit back to MAIN TEST MENU.

**INDIVIDUAL TEST MENU FOR
ALL STANDARD-FUNCTION
CIRCUIT BREAKERS**


058103A8

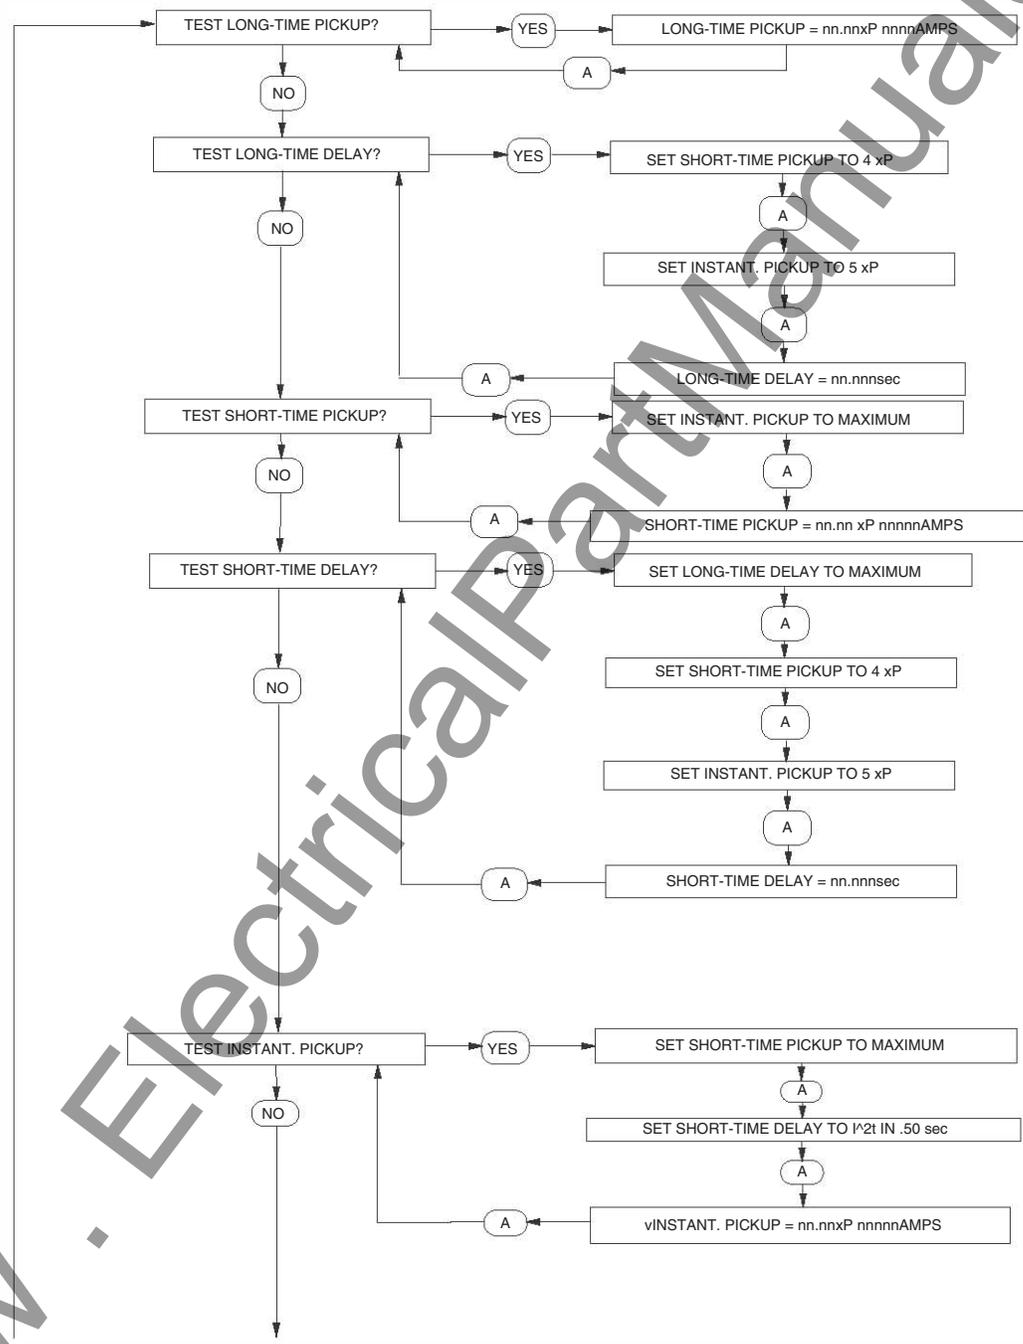

(Continued on next page)

**INDIVIDUAL TEST MENU FOR ALL
STANDARD-FUNCTION CIRCUIT
BREAKERS** —Continued


05903049

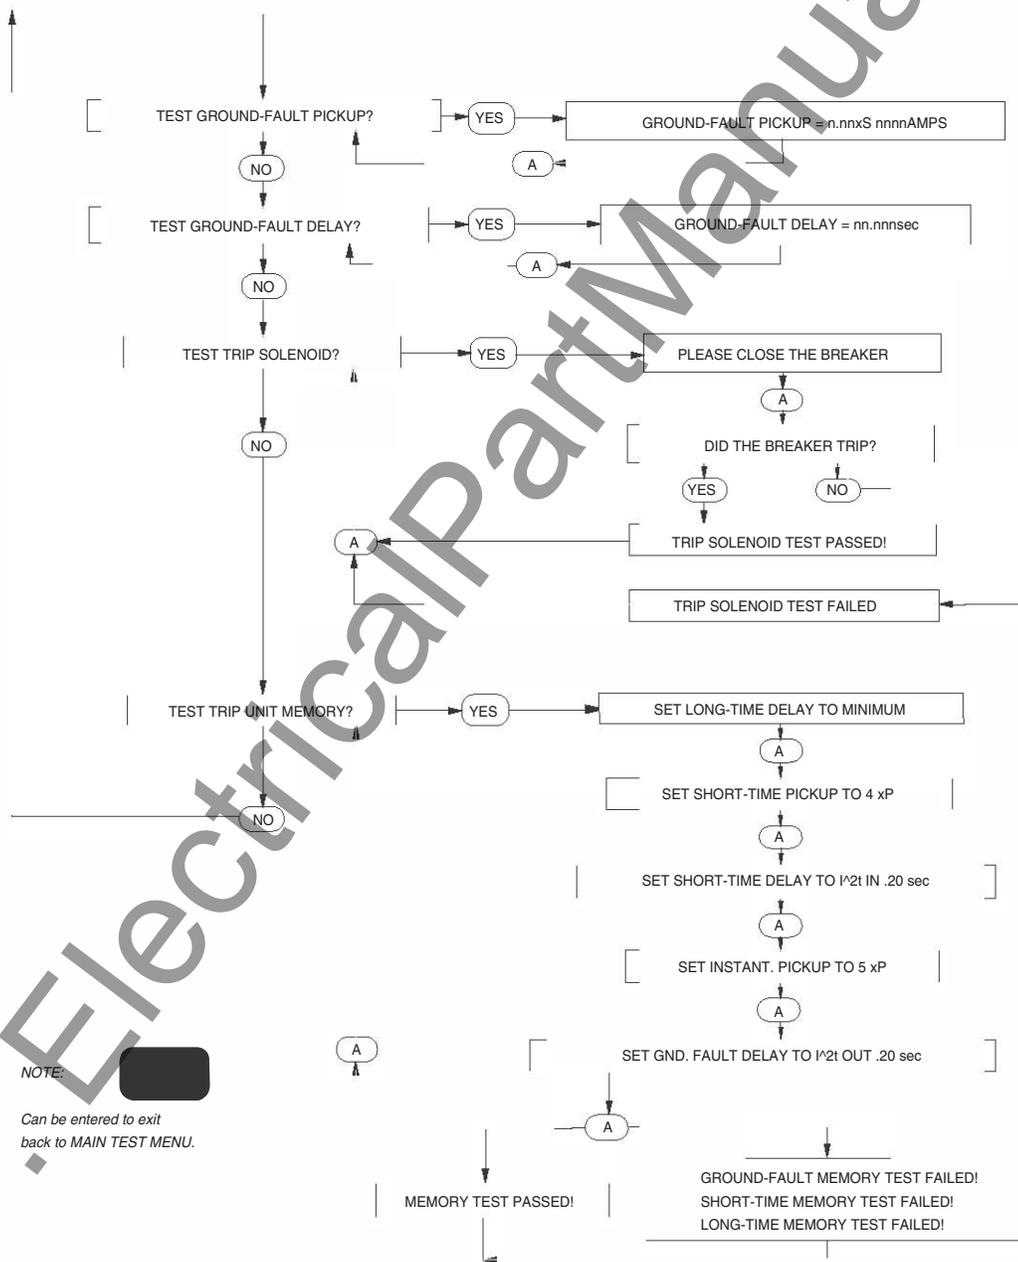

NOTE: XXXXXXXXXX
Can be entered to exit
back to MAIN TEST MENU.

MANUAL TEST MENU FOR ALL FULL-FUNCTION CIRCUIT BREAKERS WITHOUT GROUND-FAULT ALARM

06503050

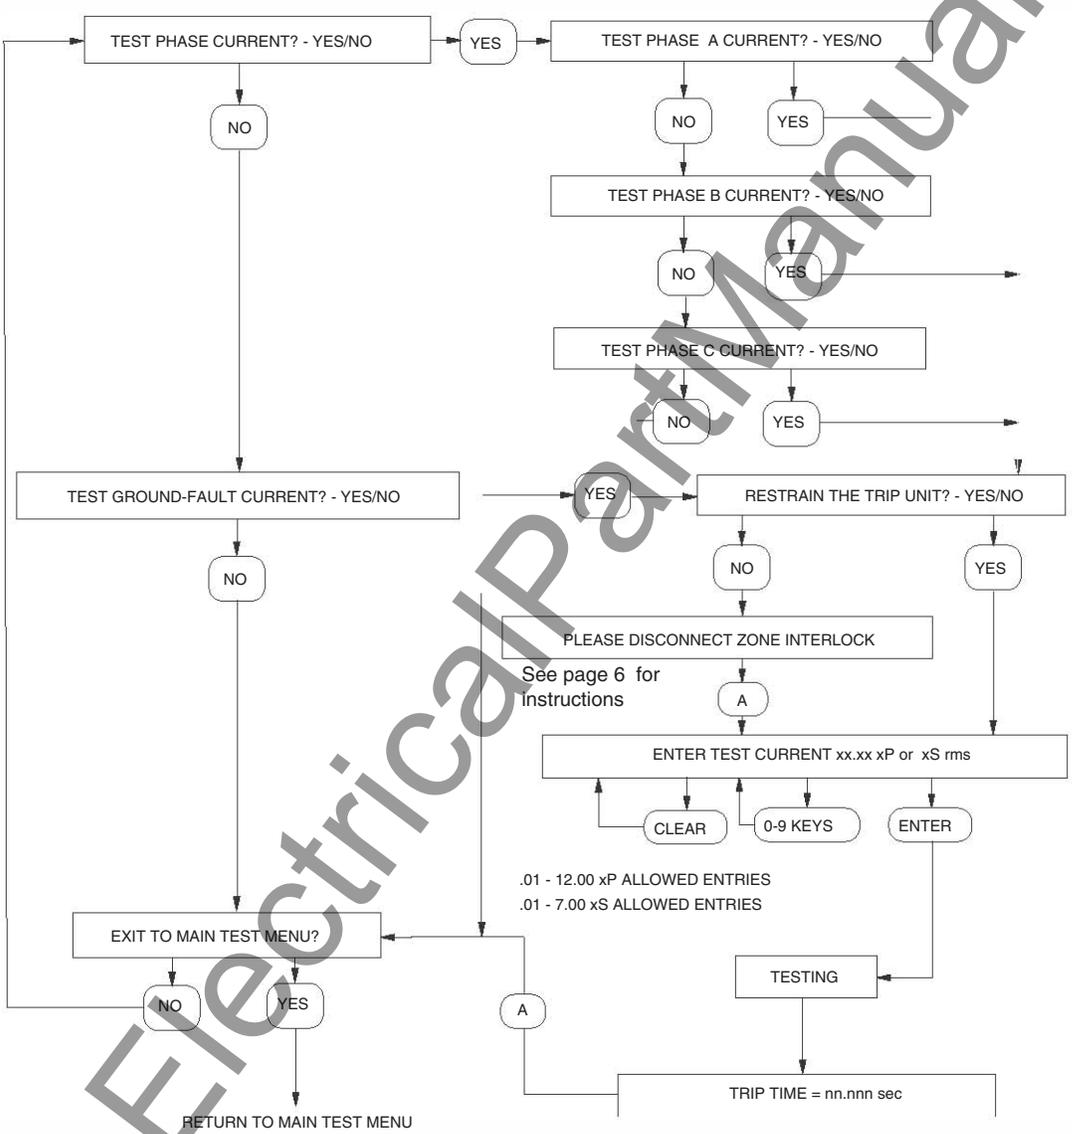


NOTE:

Can be entered during testing to interrupt the test.

MANUAL TEST MENU FOR FULL-FUNCTION CIRCUIT BREAKERS WITH GROUND-FAULT ALARM

05930360

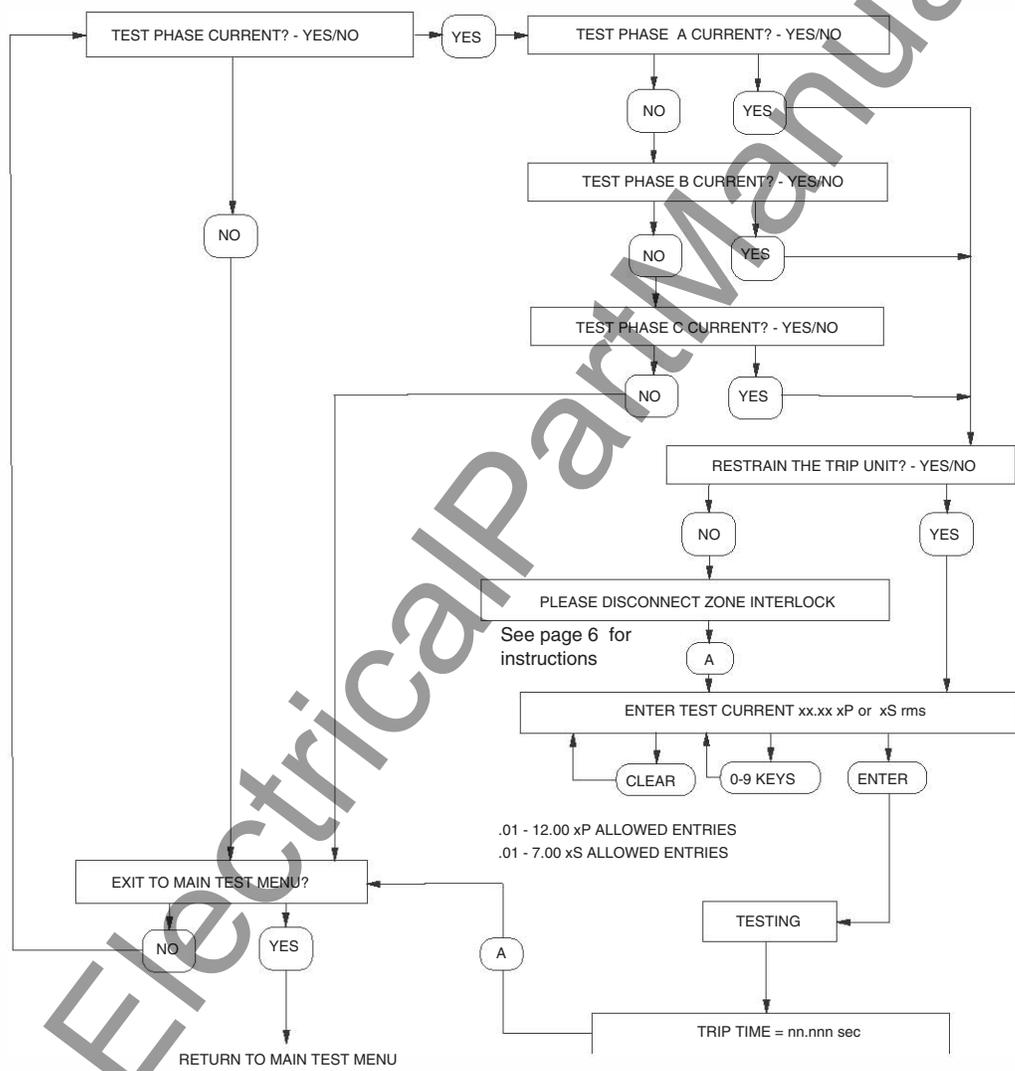


NOTE:

Can be entered during testing to interrupt the test.


**MANUAL TEST MENU FOR ALL
STANDARD-FUNCTION CIRCUIT
BREAKERS**

0550302

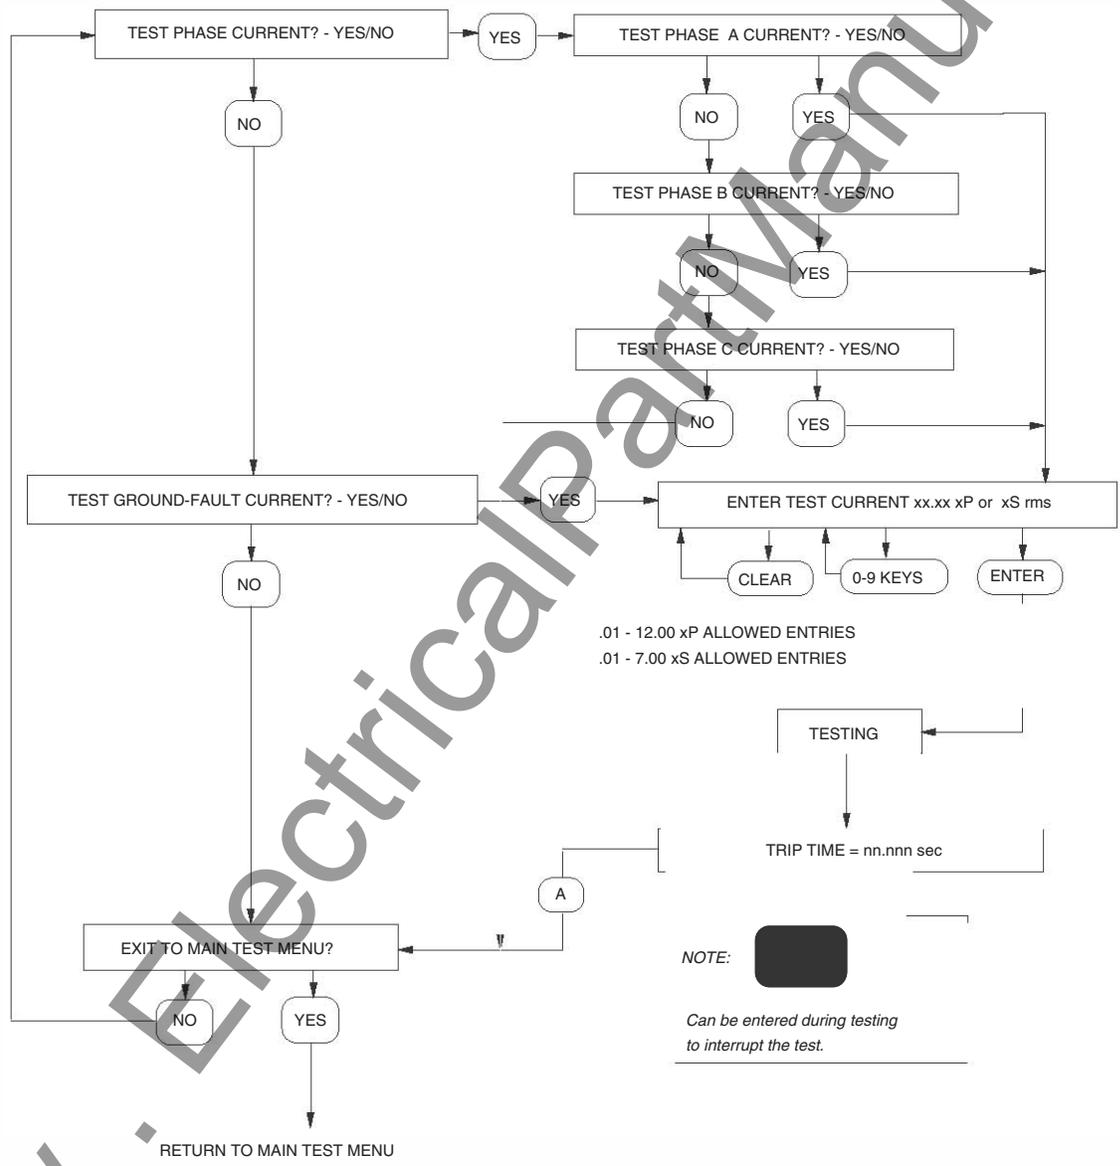

Section 5—M-N-P-S CBTM4A Test Module


TEST SETUP FOR FULL-FUNCTION CIRCUIT BREAKERS

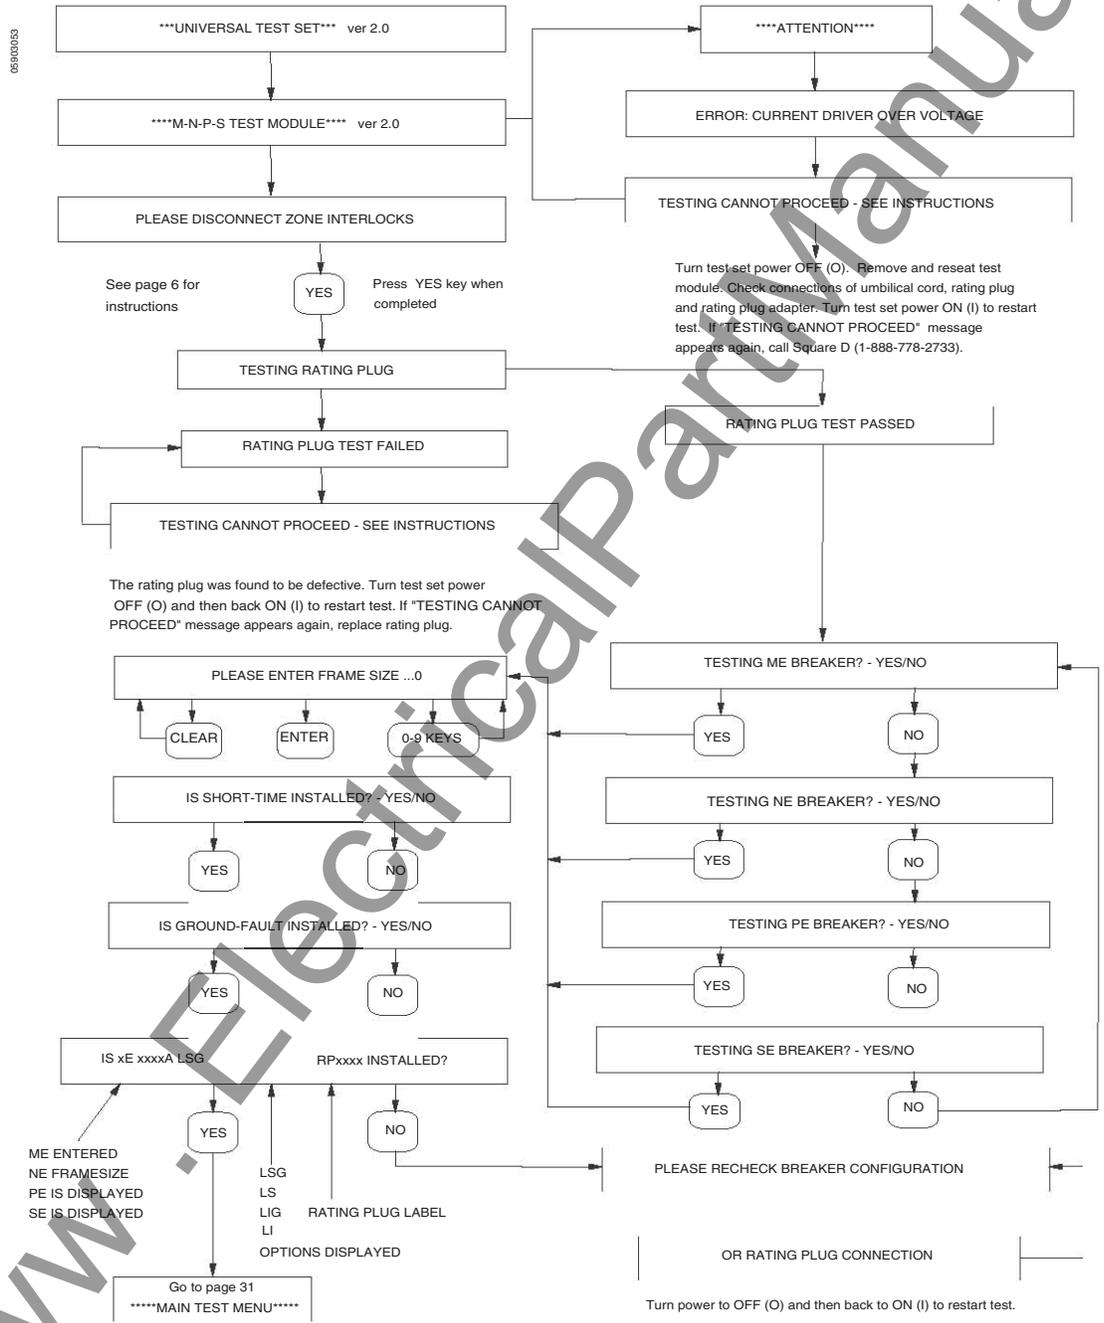

Universal Test Set
Section 5—M-N-P-S CBTM4A Test Module


TEST SETUP FOR STANDARD-FUNCTION CIRCUIT BREAKERS

05903054

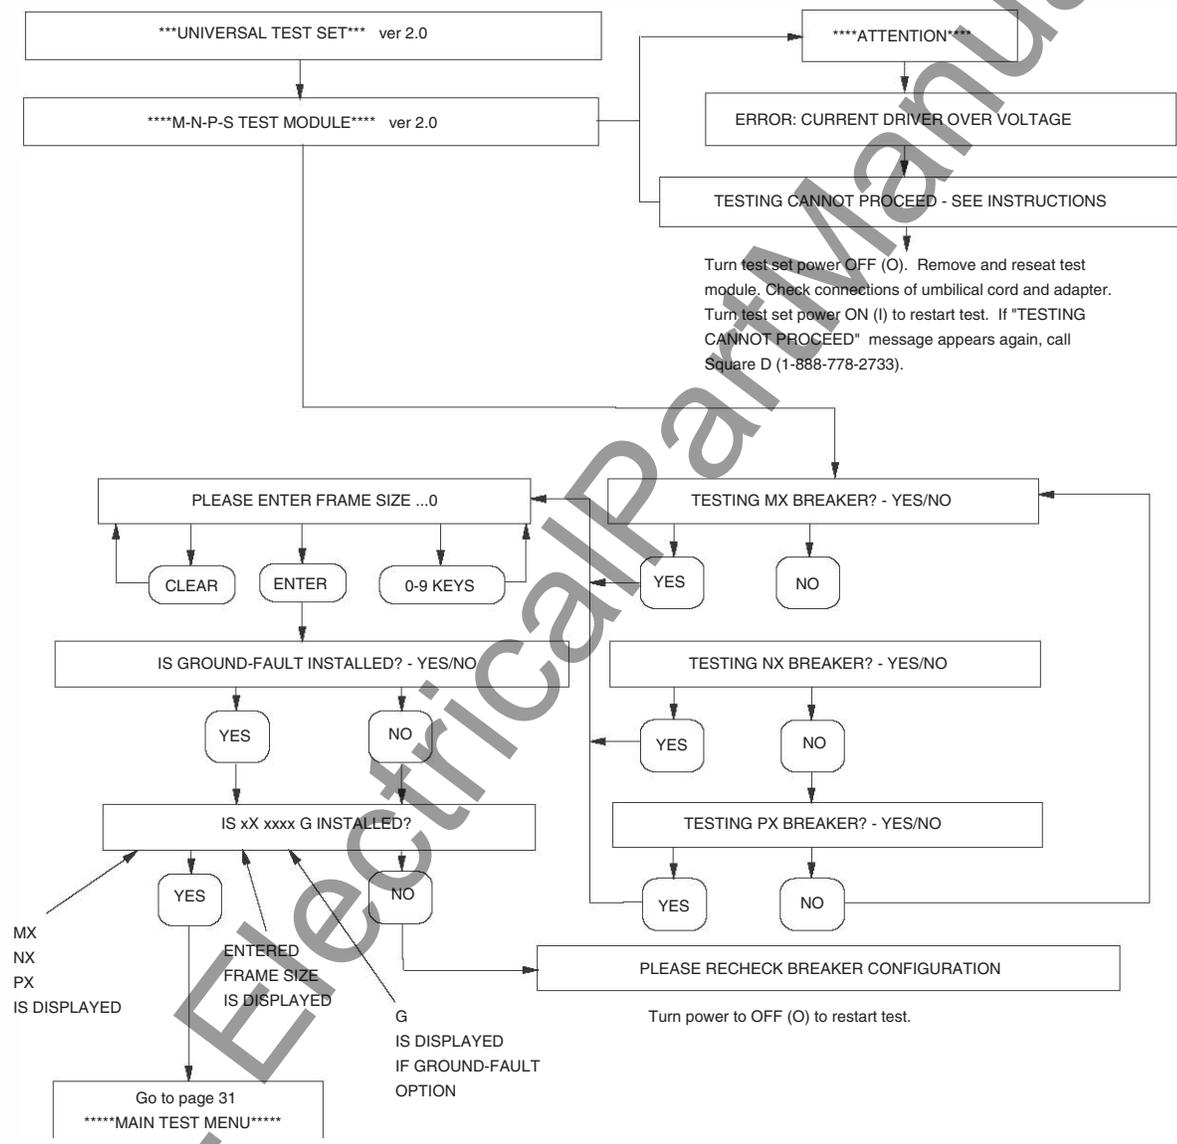

MAIN TEST MENU

05900355

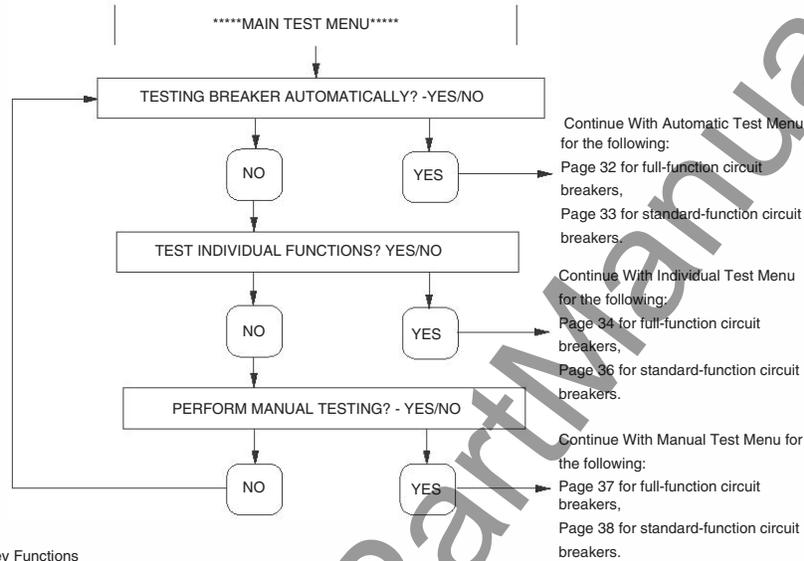

Description of Key Functions


- VERIFIES DATA ENTERED/SHOWN
- NEGATIVE RESPONSE TO DATA SHOWN
- ENTERED AFTER TRIP UNIT FUNCTION SWITCH IS SET
- NOT USED
- DELETES ENTRY
- NOT USED
- SIGNIFIES END OF ENTRY
- NOT USED
- NOT USED
- RETURNS UNIT TO MAIN TEST MENU

NOTE: An option is valid any time its key is flashing.

NOTE: Test sequence can be stopped at any time by turning the test set power to OFF.


AUTOMATIC TEST MENU FOR FULL-FUNCTION CIRCUIT BREAKERS

05903043

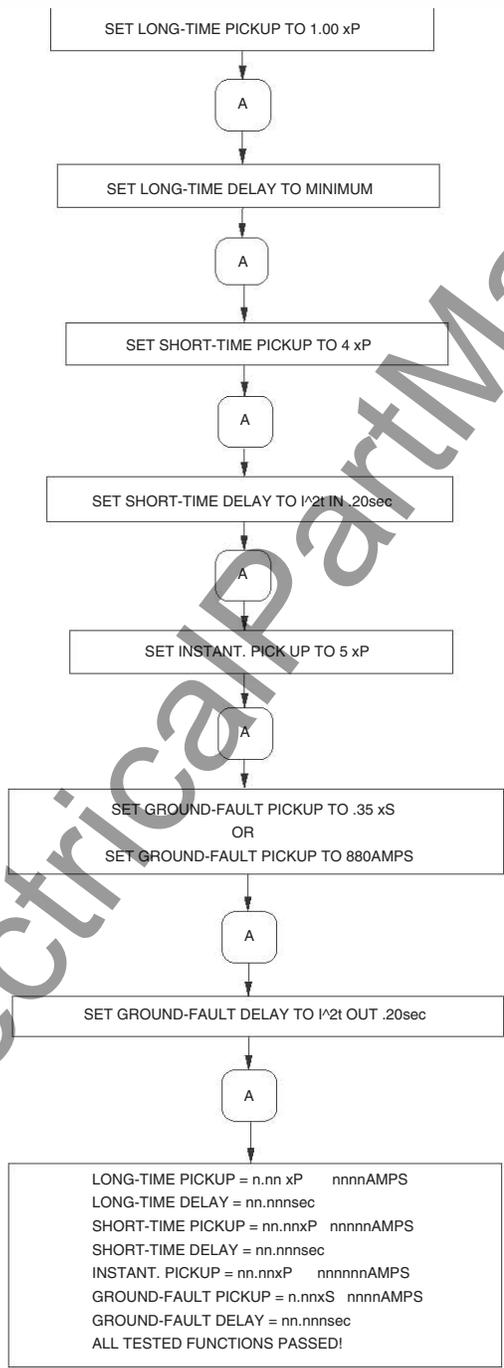


**AUTOMATIC TEST MENU FOR
STANDARD-FUNCTION CIRCUIT
BREAKERS**

05903059

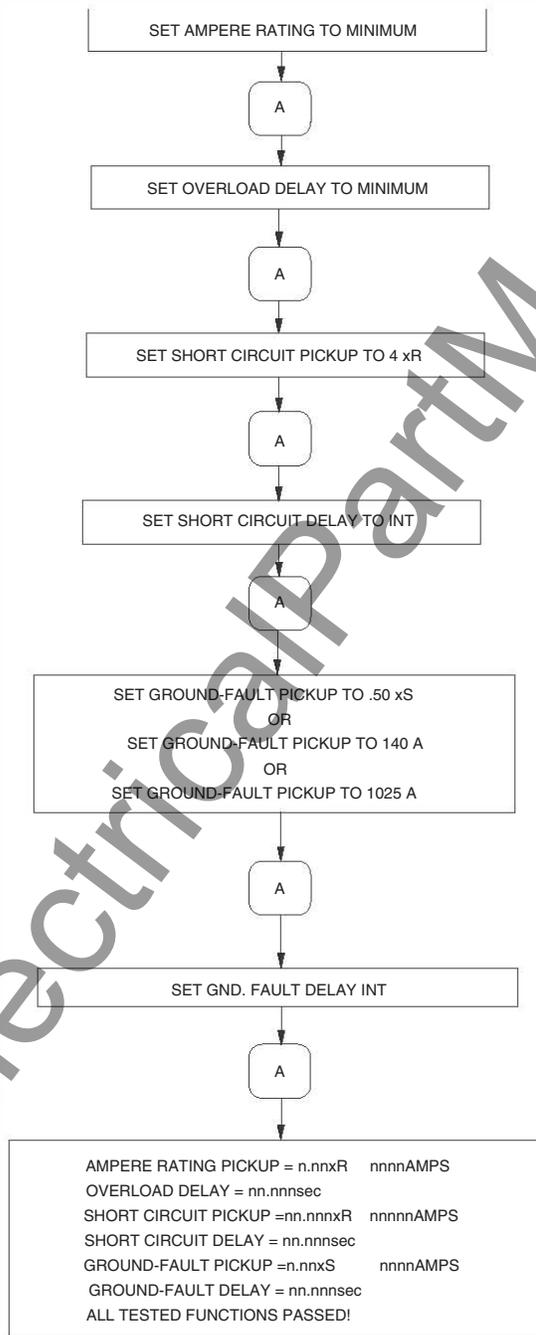

INDIVIDUAL TEST MENU FOR FULL-FUNCTION CIRCUIT BREAKERS


05603075

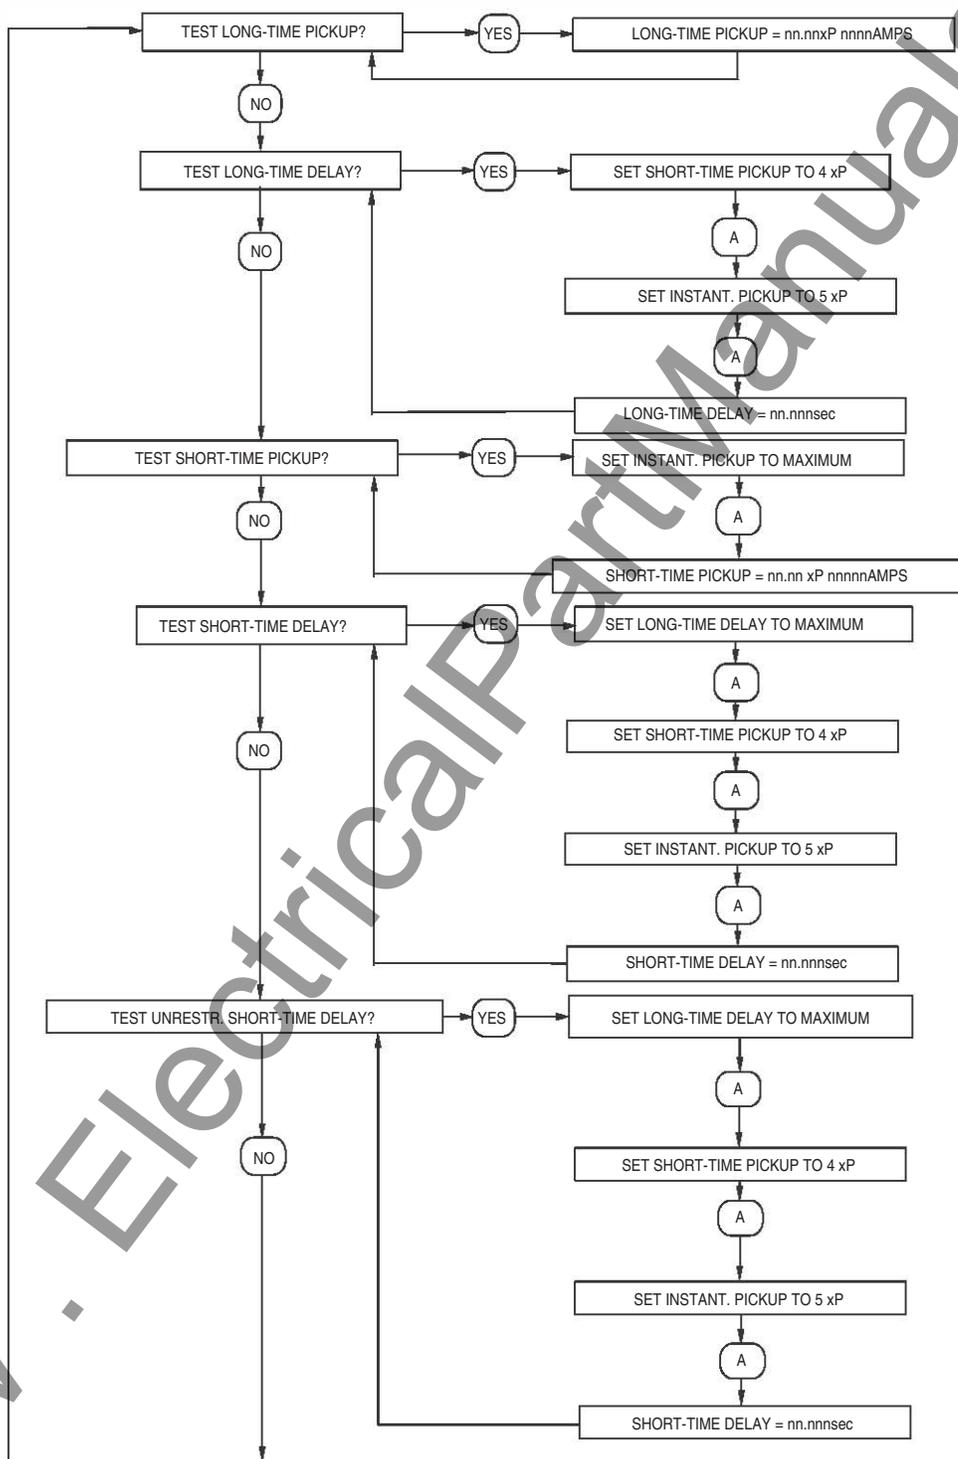

(Continued on next page)

INDIVIDUAL TEST MENU FOR FULL-FUNCTION CIRCUIT BREAKERS-
-Continued

0903057

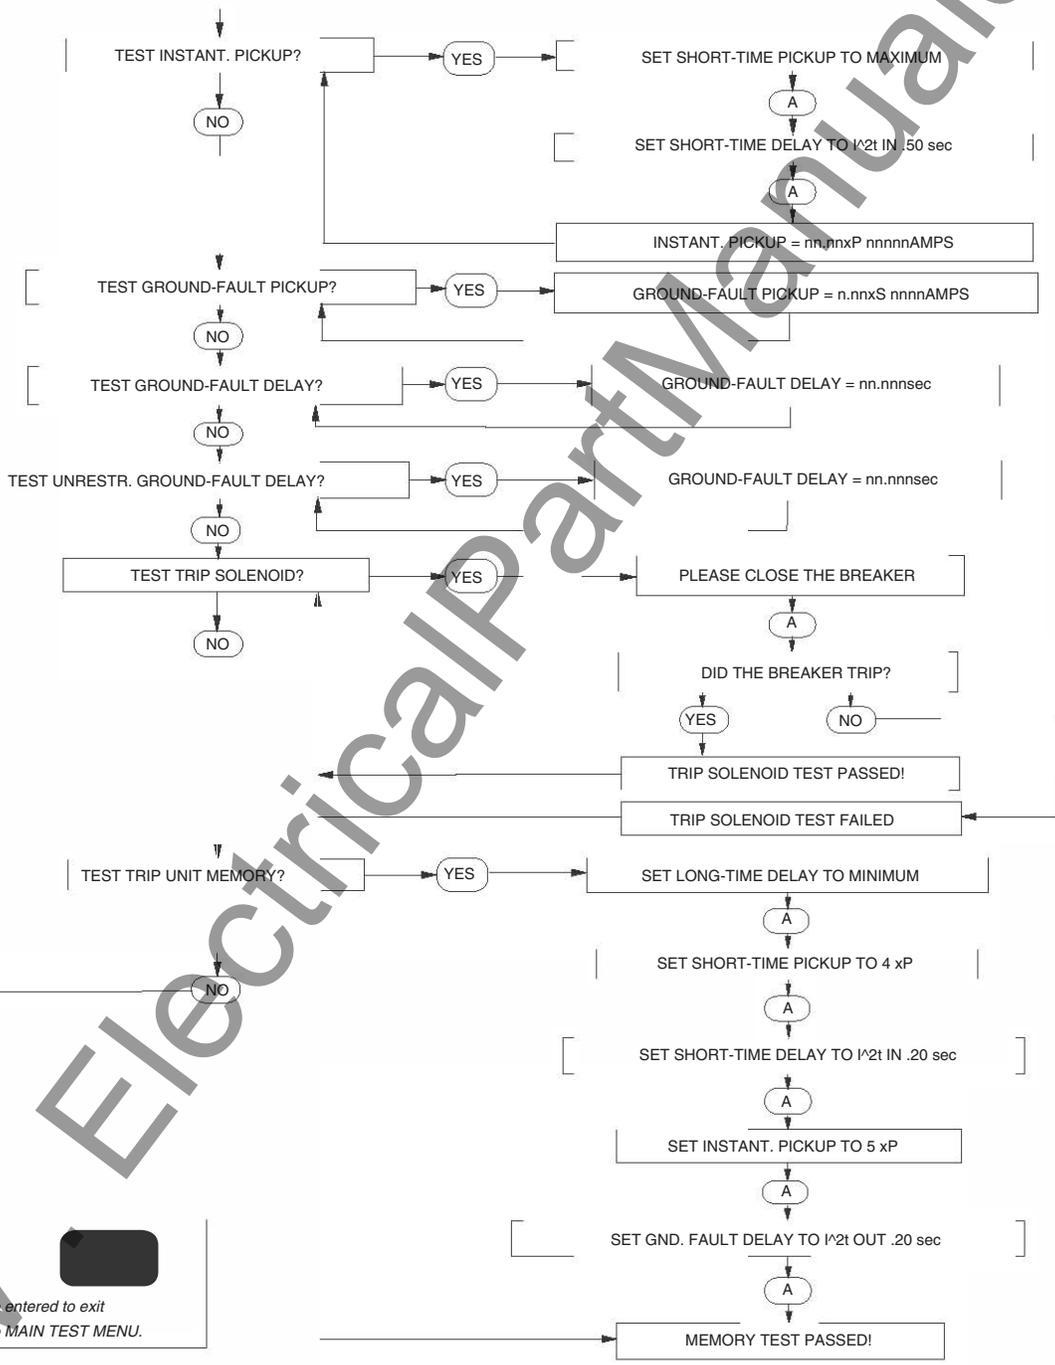


NOTE: Can be entered to exit back to MAIN TEST MENU.

Universal Test Set
Section 5—M-N-P-S CBTM4A Test Module


**INDIVIDUAL TEST MENU FOR
STANDARD-FUNCTION CIRCUIT
BREAKERS**

05930056

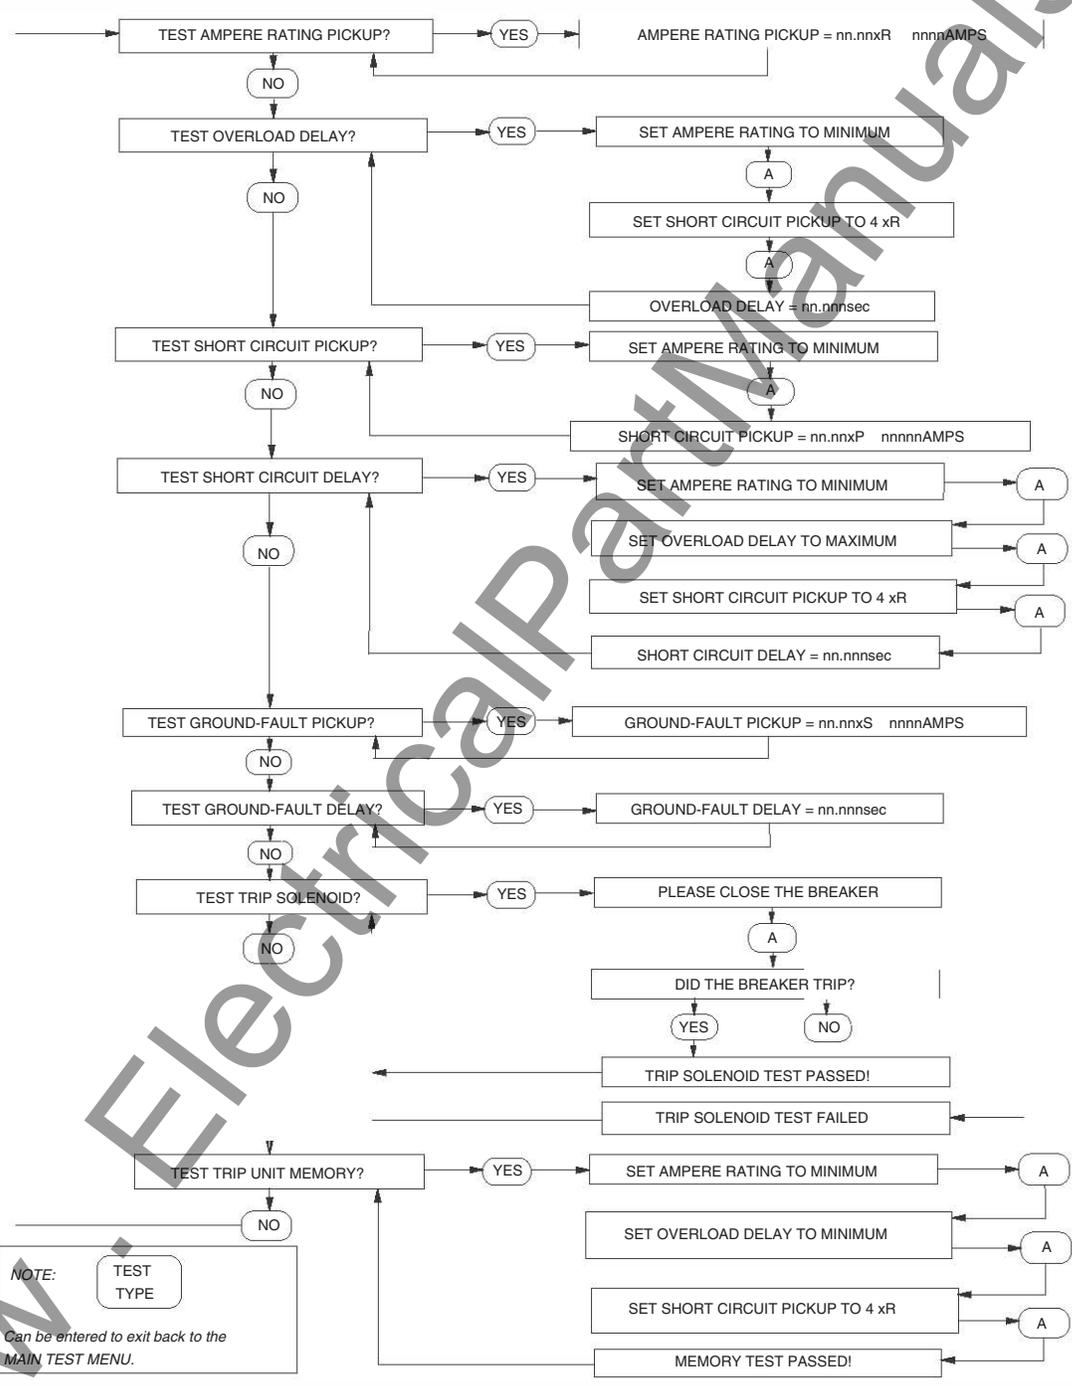


NOTE:
TEST TYPE
Can be entered to exit back to the MAIN TEST MENU.

MANUAL TEST MENU FOR FULL-FUNCTION CIRCUIT BREAKERS

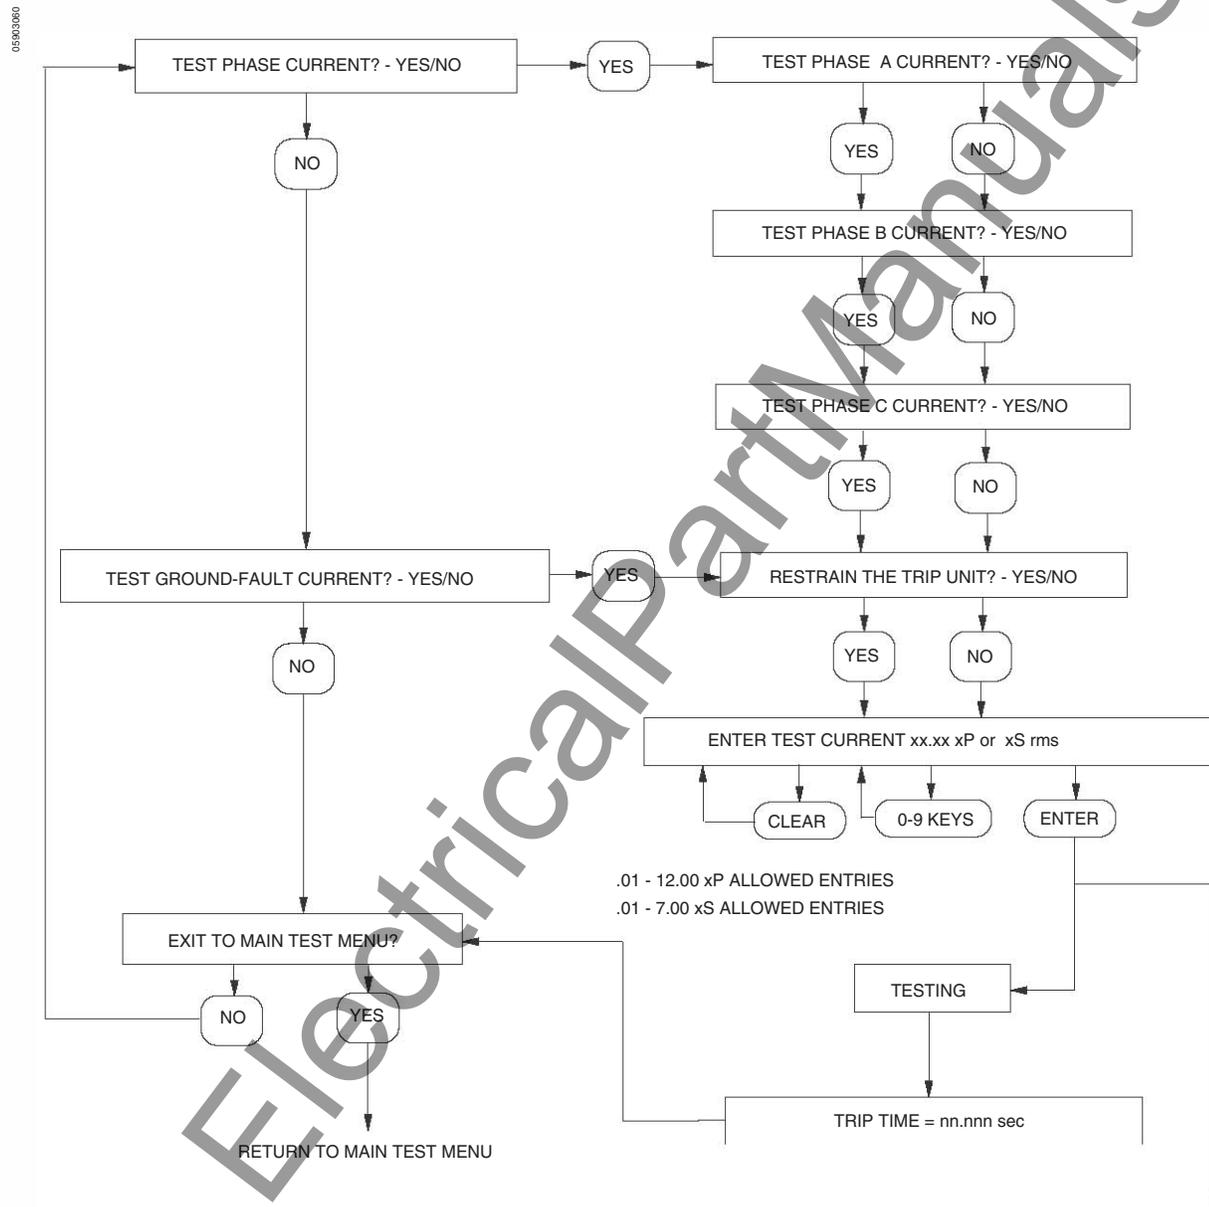

NOTE: If "ERROR: EXCEEDED CURRENT DRIVER LIMIT" OR "TEST INTERRUPTED TO AVOID OVERHEATING!" message appears, the test current entered cannot be tested on more than one phase at a time. Repeat testing phase current by answering Yes to one "TEST PHASE CURRENT? YES/NO" question at a time.


**MANUAL TEST MENU FOR
STANDARD-FUNCTION CIRCUIT
BREAKERS**

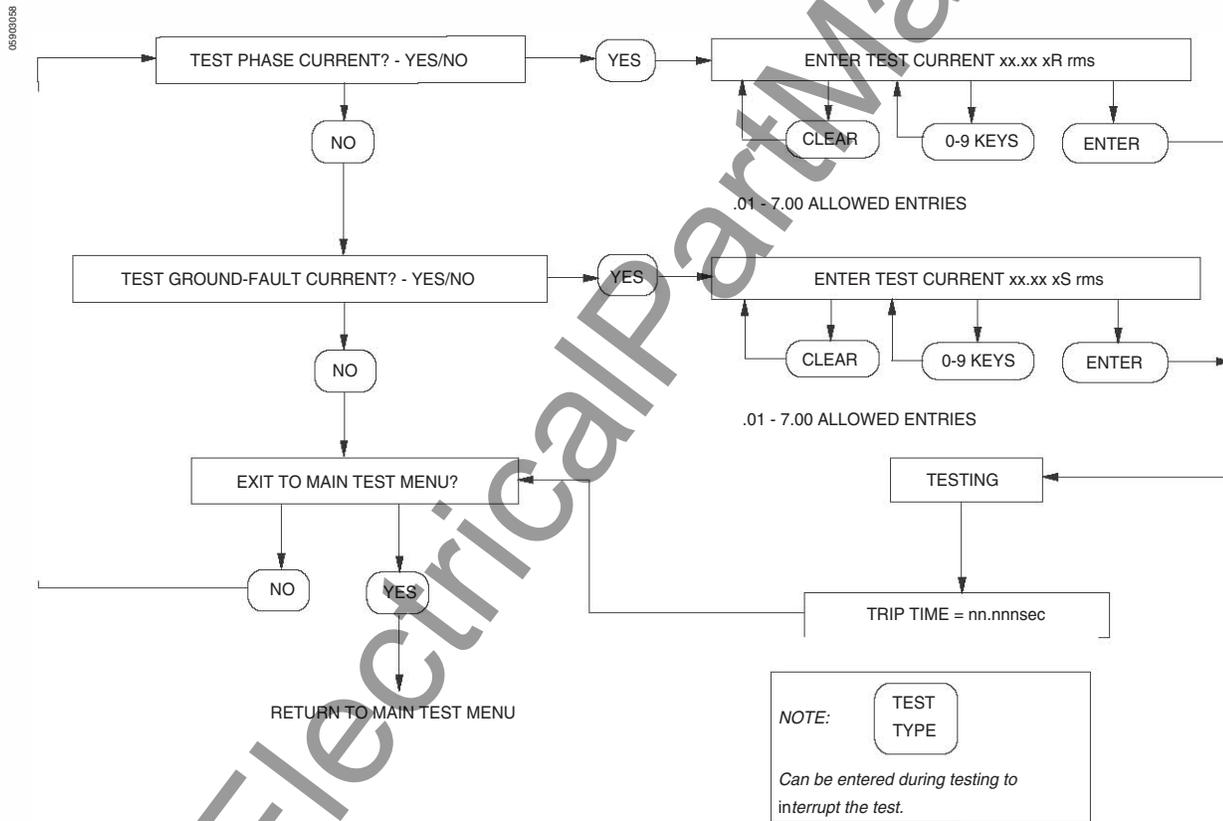

Section 6—SE CBTM1 Test Module

TEST SETUP


059100061

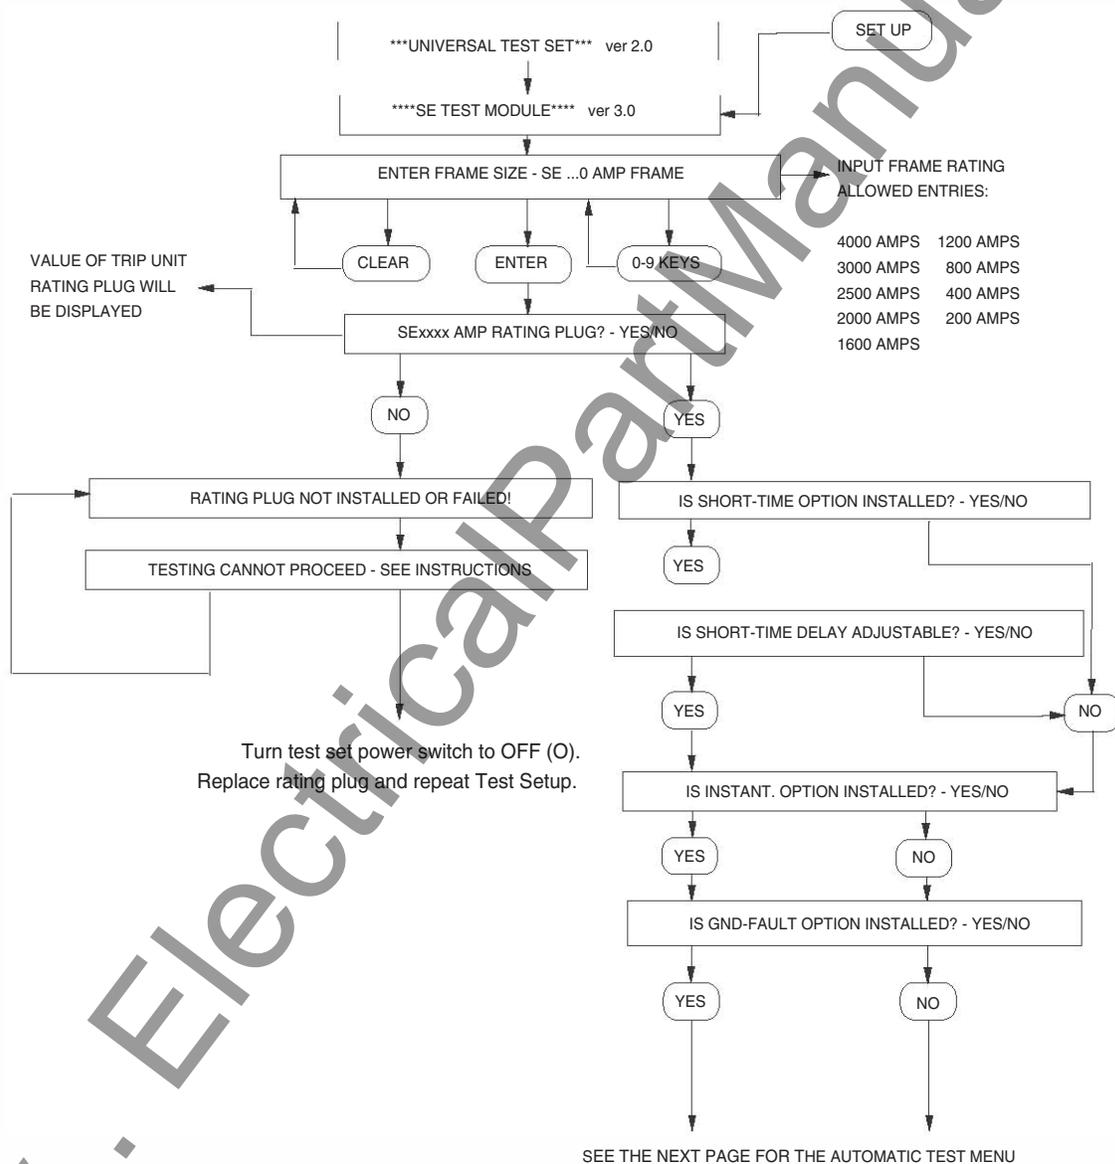

Universal Test Set
Section 6—SE CBTM1 Test Module


AUTOMATIC TEST MENU

056030182

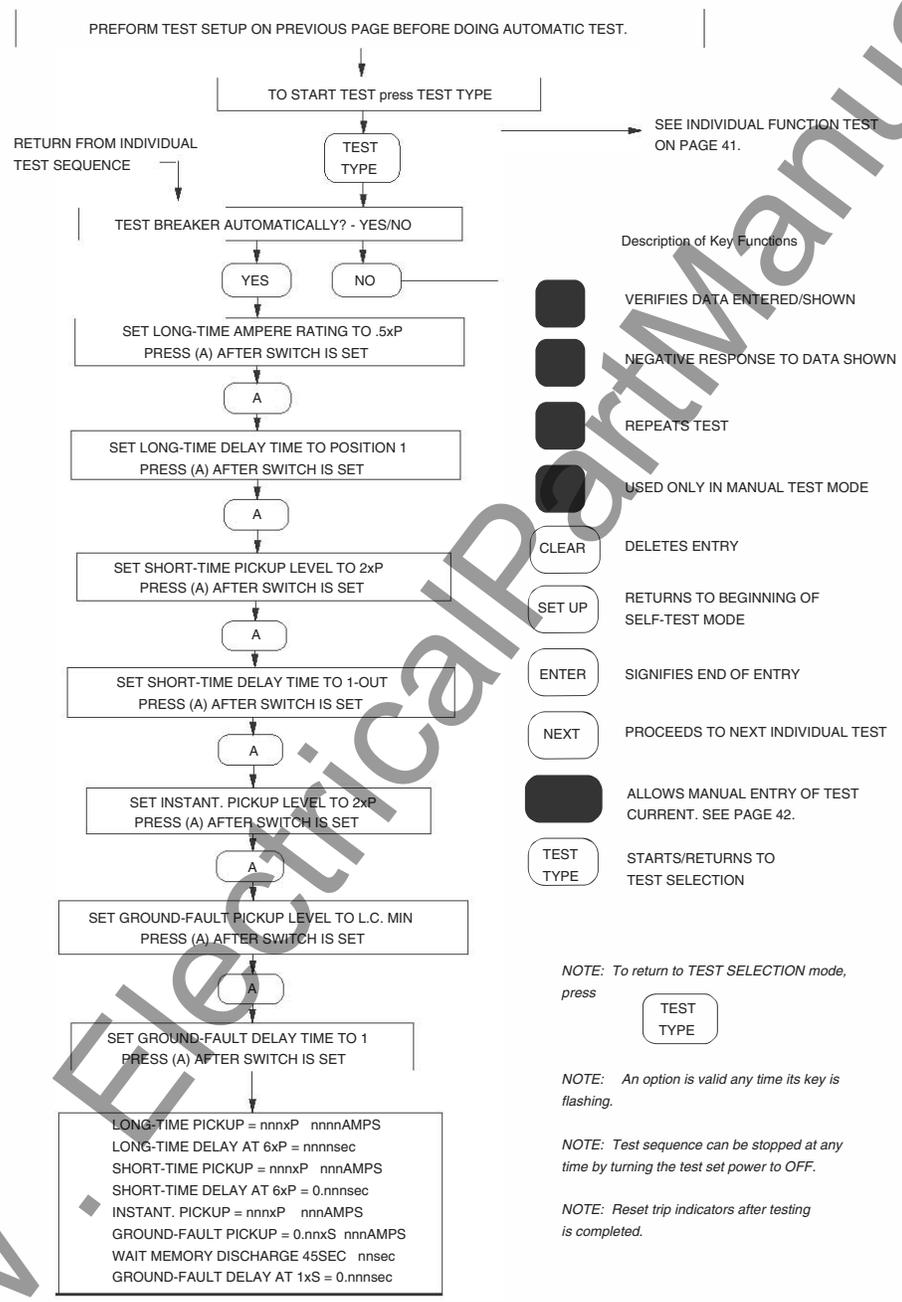

INDIVIDUAL-FUNCTION TEST MENU

069030463

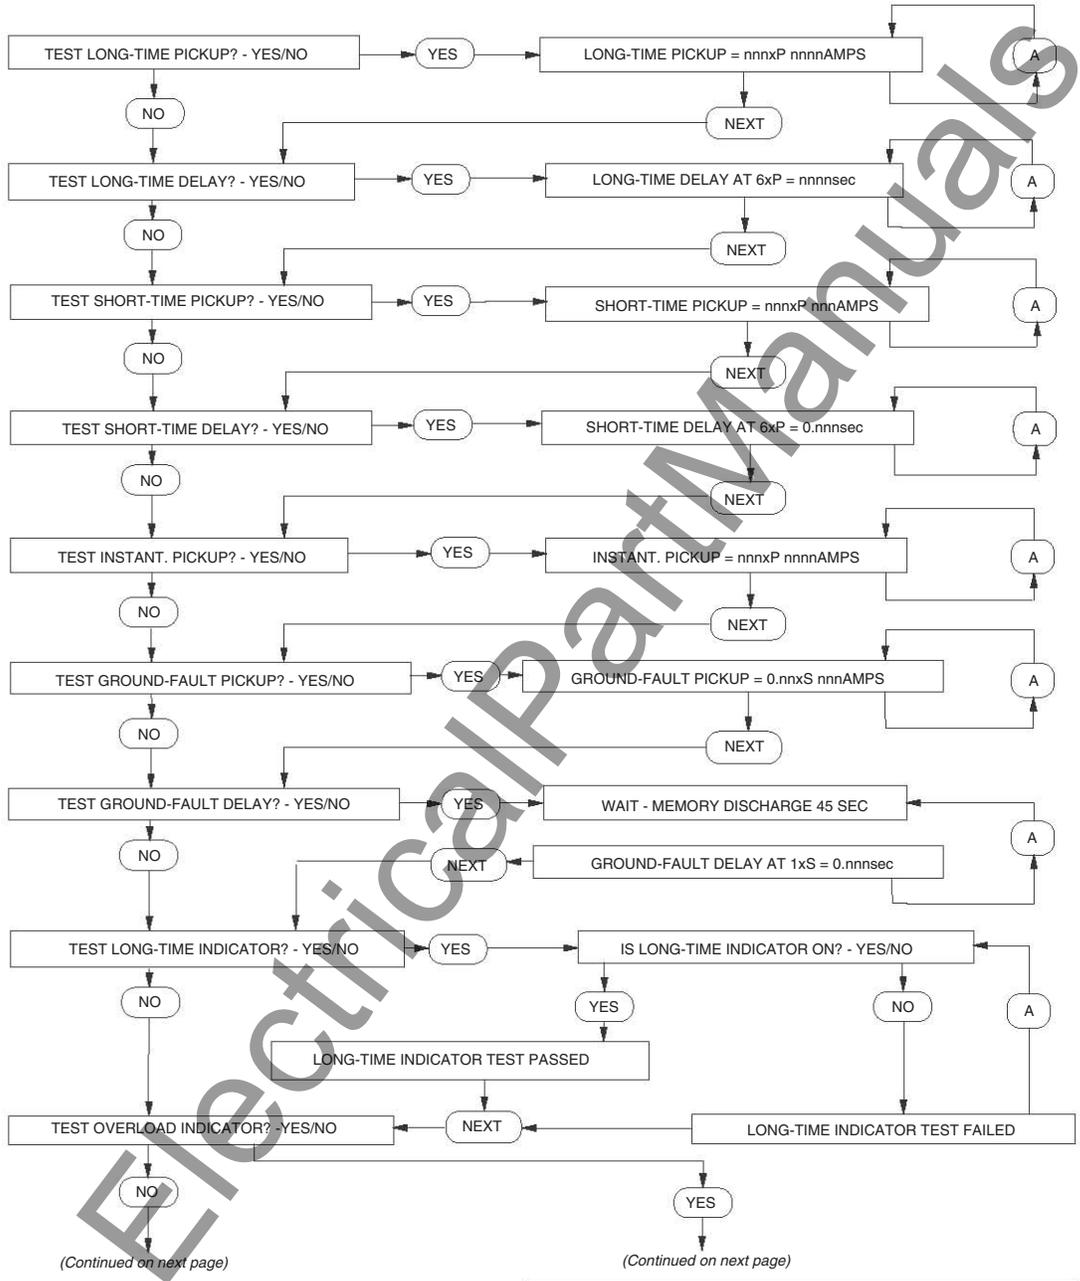

(Continued on next page)

(Continued on next page)

NOTE: To return to TEST SELECTION mode, press **TEST TYPE**


NOTE: An option is valid any time its key is flashing.

NOTE: Test sequence can be stopped at any time by turning the test set power to OFF.

NOTE: If "TEST FAILED" appears on display, press **A** to repeat test. If "TEST FAILED" appears again, consult with Square D (1-888-778-2733).


INDIVIDUAL-FUNCTION TEST MENU
—Continued

05903064

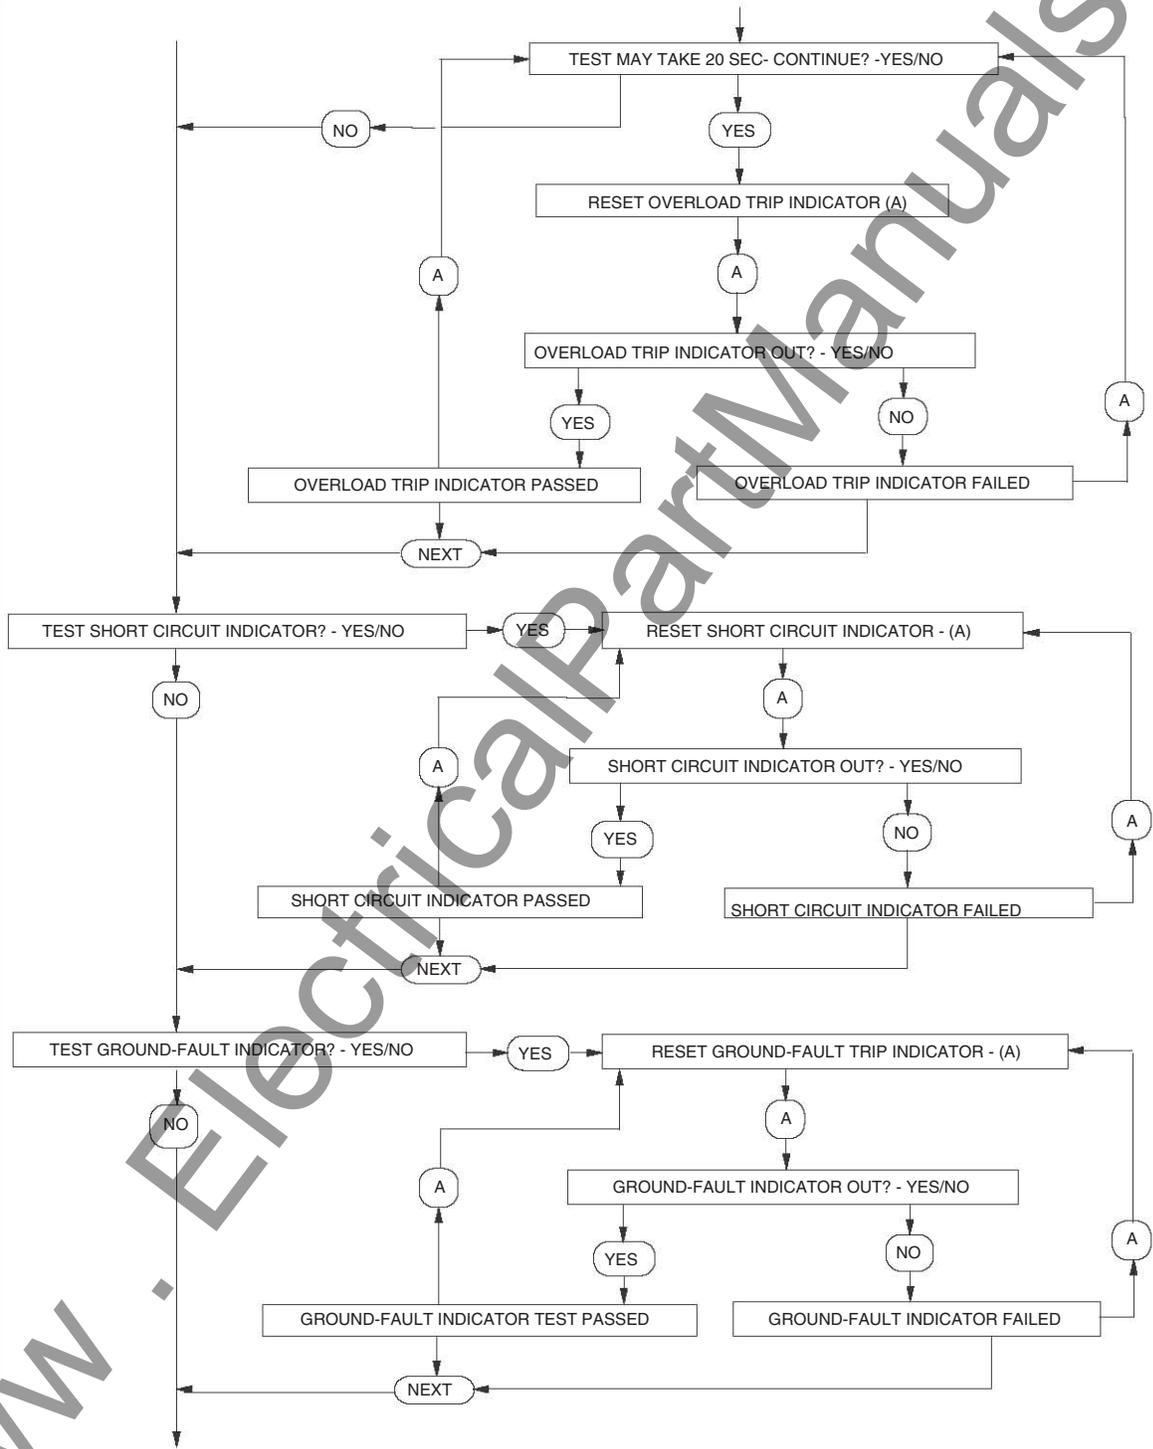

INDIVIDUAL-FUNCTION TEST MENU

—Continued

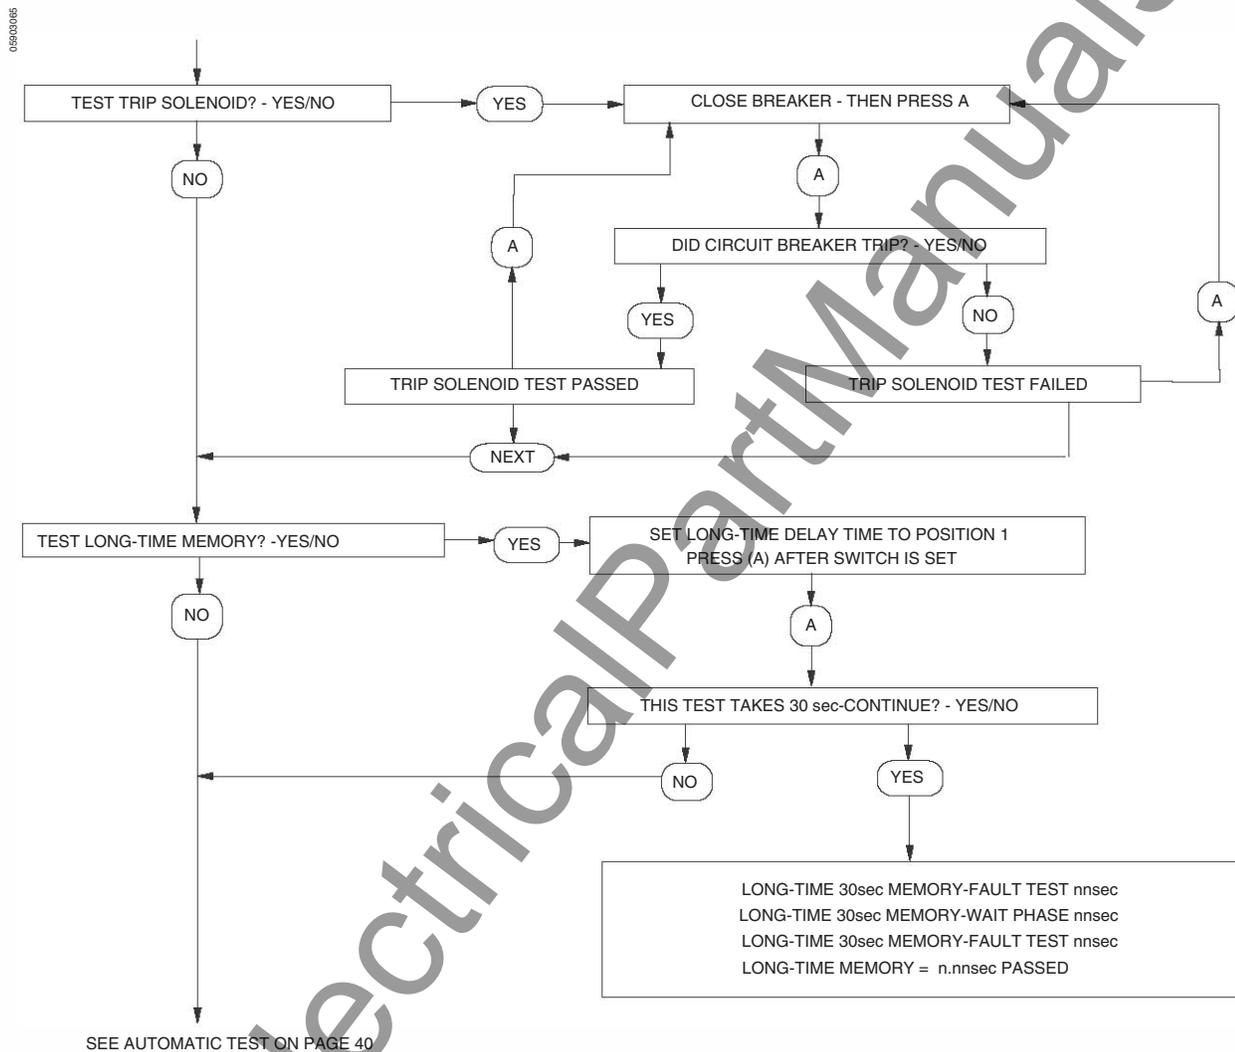

NOTE: To return to TEST SELECTION mode, press



NOTE: An option is valid any time its key is flashing.

NOTE: Test sequence can be stopped at any time by turning the test set power to OFF.

NOTE: Reset trip indicators after testing is completed.


NOTE: If "TEST FAILED" appears on display, press A to repeat test. If "TEST FAILED" appears again, consult with Square D (1-888-778-2733).



Universal Test Set
Section 6—SE CBTM1 Test Module

MANUAL TEST MENU

05903066

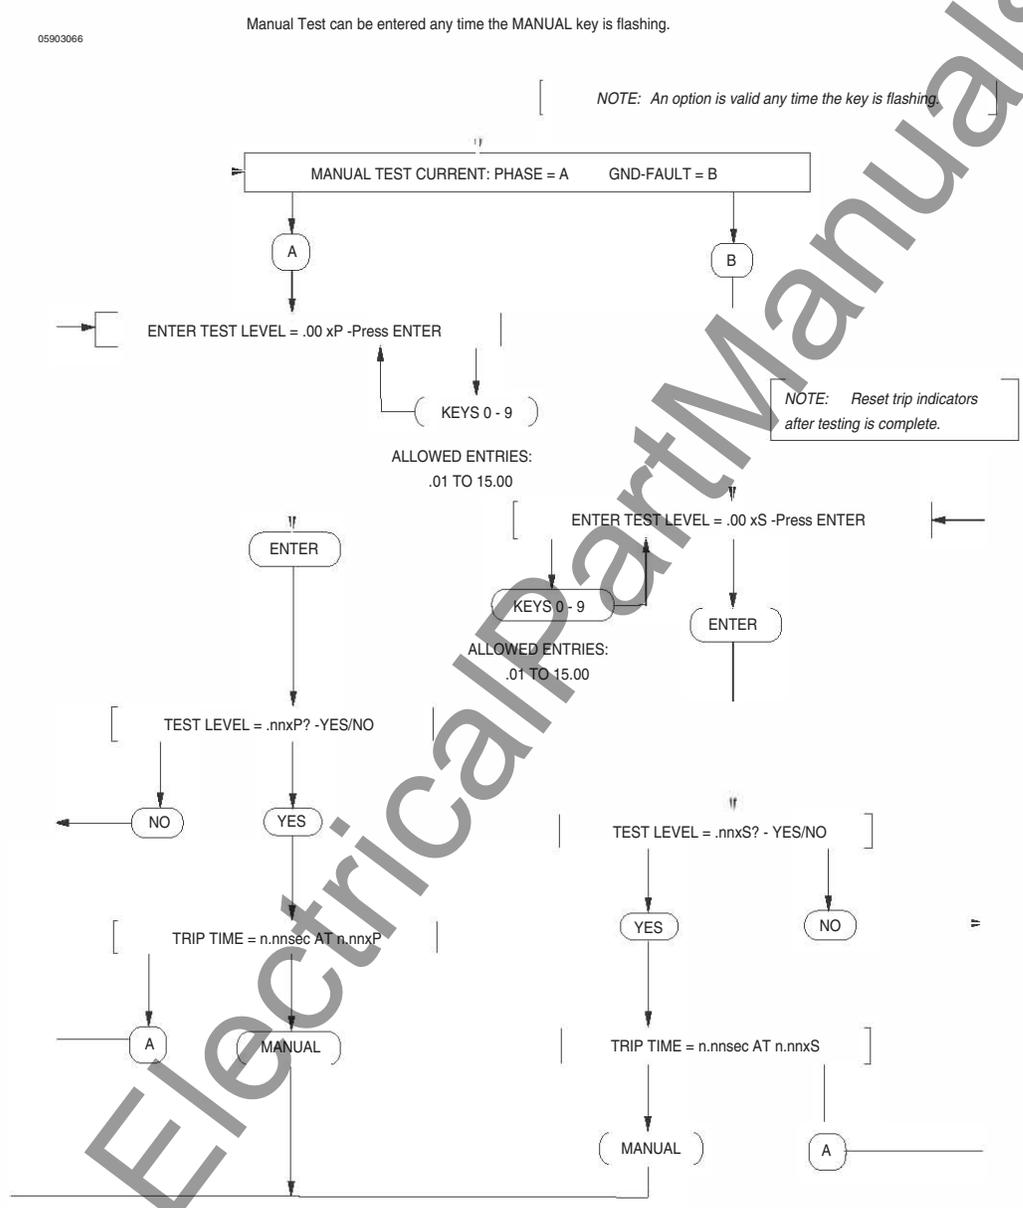

PHASE = Phase current which would be seen at each phase when current is in balance.
GND-FAULT = Ground-fault current flowing to ground.

NOTE: If current value entered is below the pickup values, the circuit breaker will not trip. The timer will continue to count. To stop the timing function, press MANUAL.

NOTE: To return to TEST SELECTION mode, press


NOTE: Test sequence can be stopped at any time by turning the test set power OFF.

Section 7—ME-NE-PE CBTM3 Test Module

TEST SETUP

05/03/067


TEST SETUP

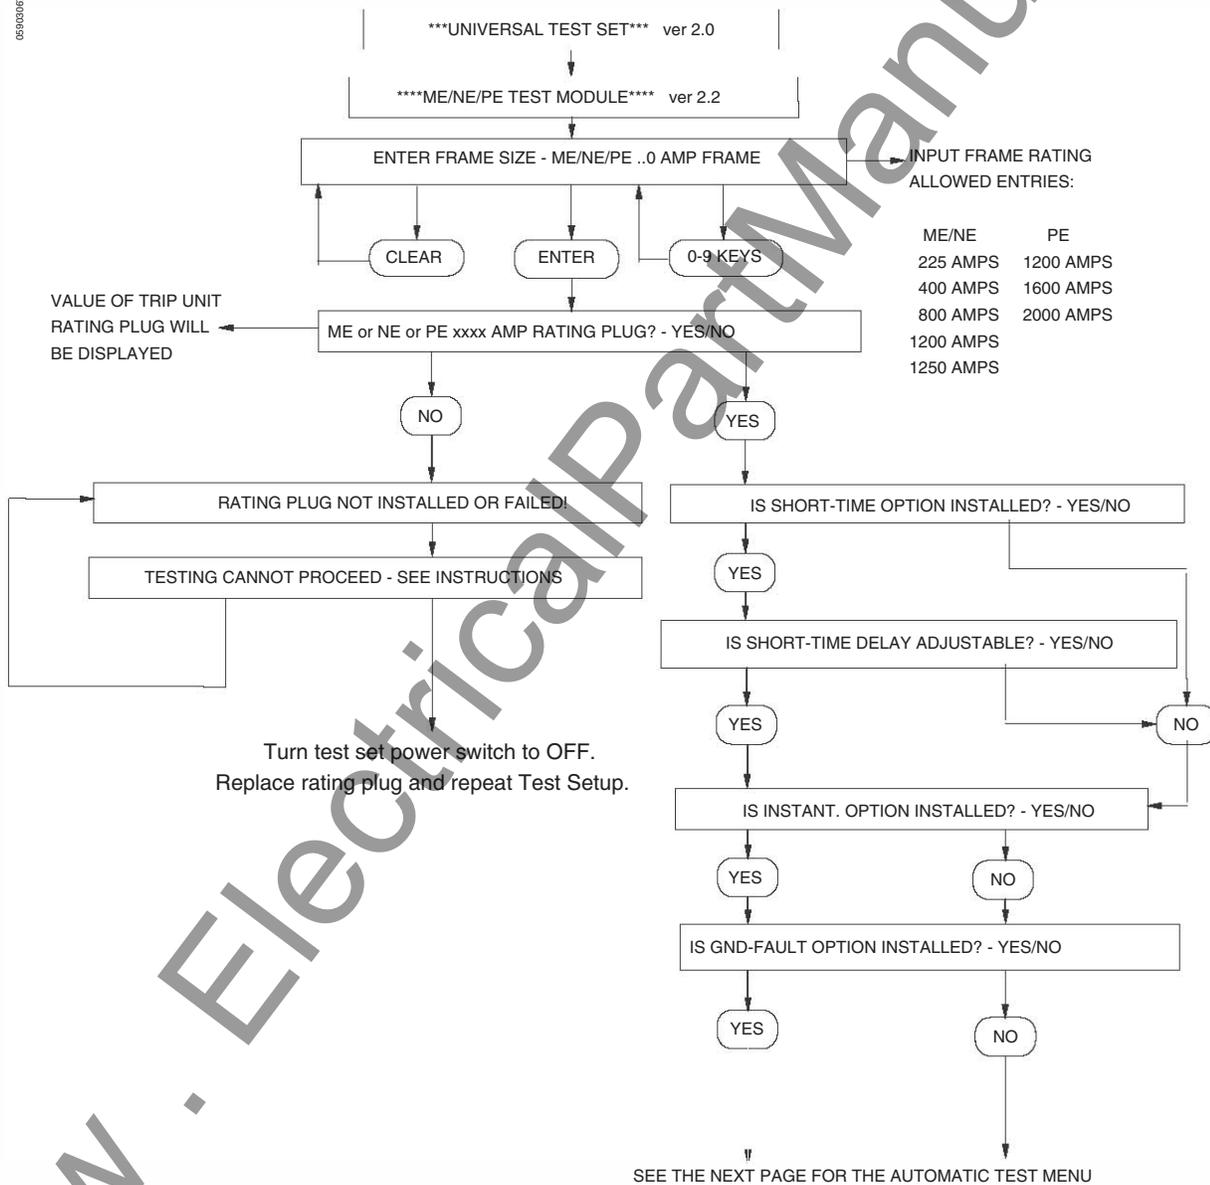

Universal Test Set
Section 7—ME-NE-PE CBTM3 Test Module

AUTOMATIC TEST MENU

PERFORM TEST SETUP ON PREVIOUS PAGE BEFORE DOING AUTOMATIC TEST.

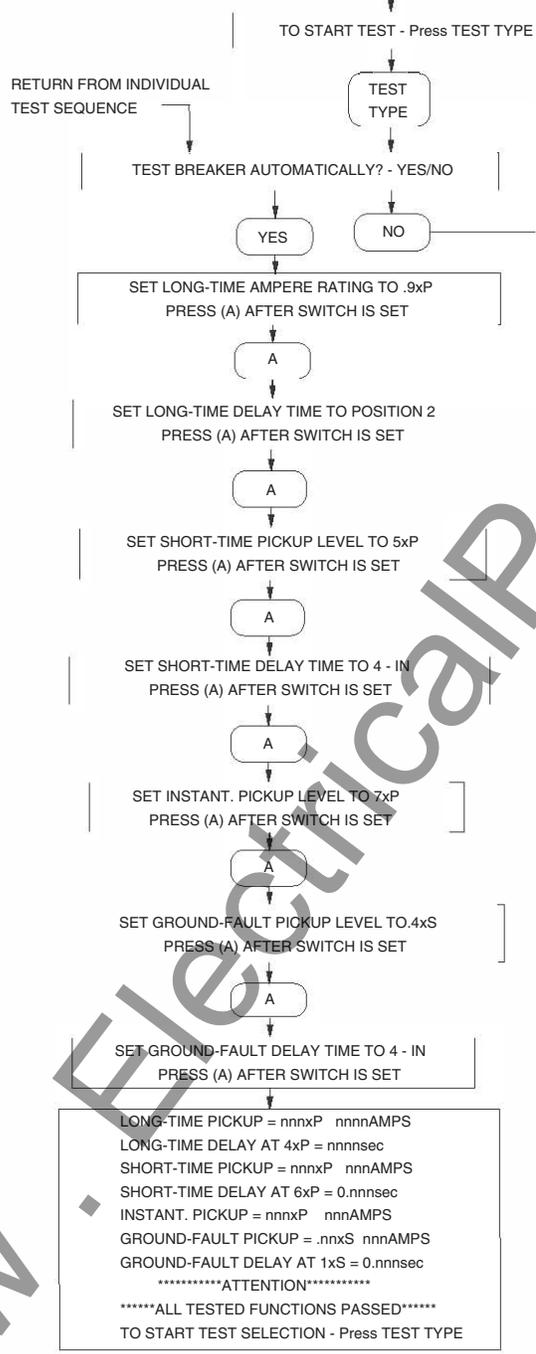

SEE INDIVIDUAL FUNCTION TEST ON PAGE 45.

Description of Key Functions

- YES VERIFIES DATA ENTERED/SHOWN
- NO NEGATIVE RESPONSE TO DATA SHOWN
- A REPEATS TEST
- B USED ONLY IN MANUAL TEST MODE
- CLEAR DELETES ENTRY
- SET UP RETURNS TO BEGINNING OF SELF-TEST MODE
- ENTER SIGNIFIES END OF ENTRY
- NEXT PROCEEDS TO NEXT INDIVIDUAL TEST
- TEST TYPE STARTS/RETURNS TO TEST SELECTION

NOTE: To return to TEST SELECTION mode, press




NOTE: An option is valid any time its key is flashing.

NOTE: Test sequence can be stopped at any time by turning the test set power to OFF.

NOTE: Reset trip indicators after testing is completed.

INDIVIDUAL-FUNCTION TEST MENU

05903069

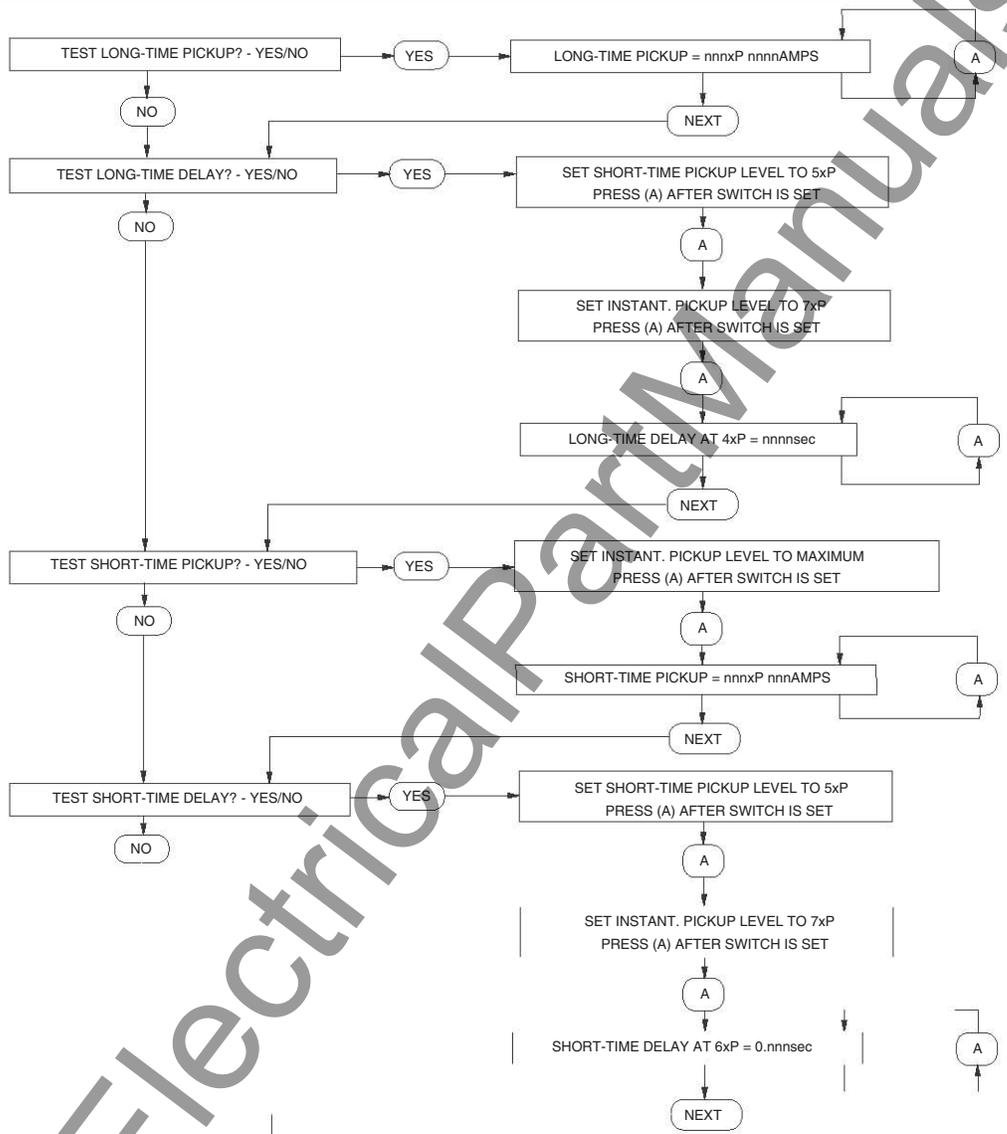

(Continued on next page)

NOTE: To return to TEST SELECTION mode, press **TEST** TYPE


NOTE: An option is valid any time its key is flashing.

NOTE: Test sequence can be stopped at any time by turning the test set power to OFF.

NOTE: If "TEST FAILED" appears on display, press A to repeat test. If "TEST FAILED" appears again, consult with Square D (1-888-778-2733).

INDIVIDUAL-FUNCTION TEST MENU
-Continued


05603070

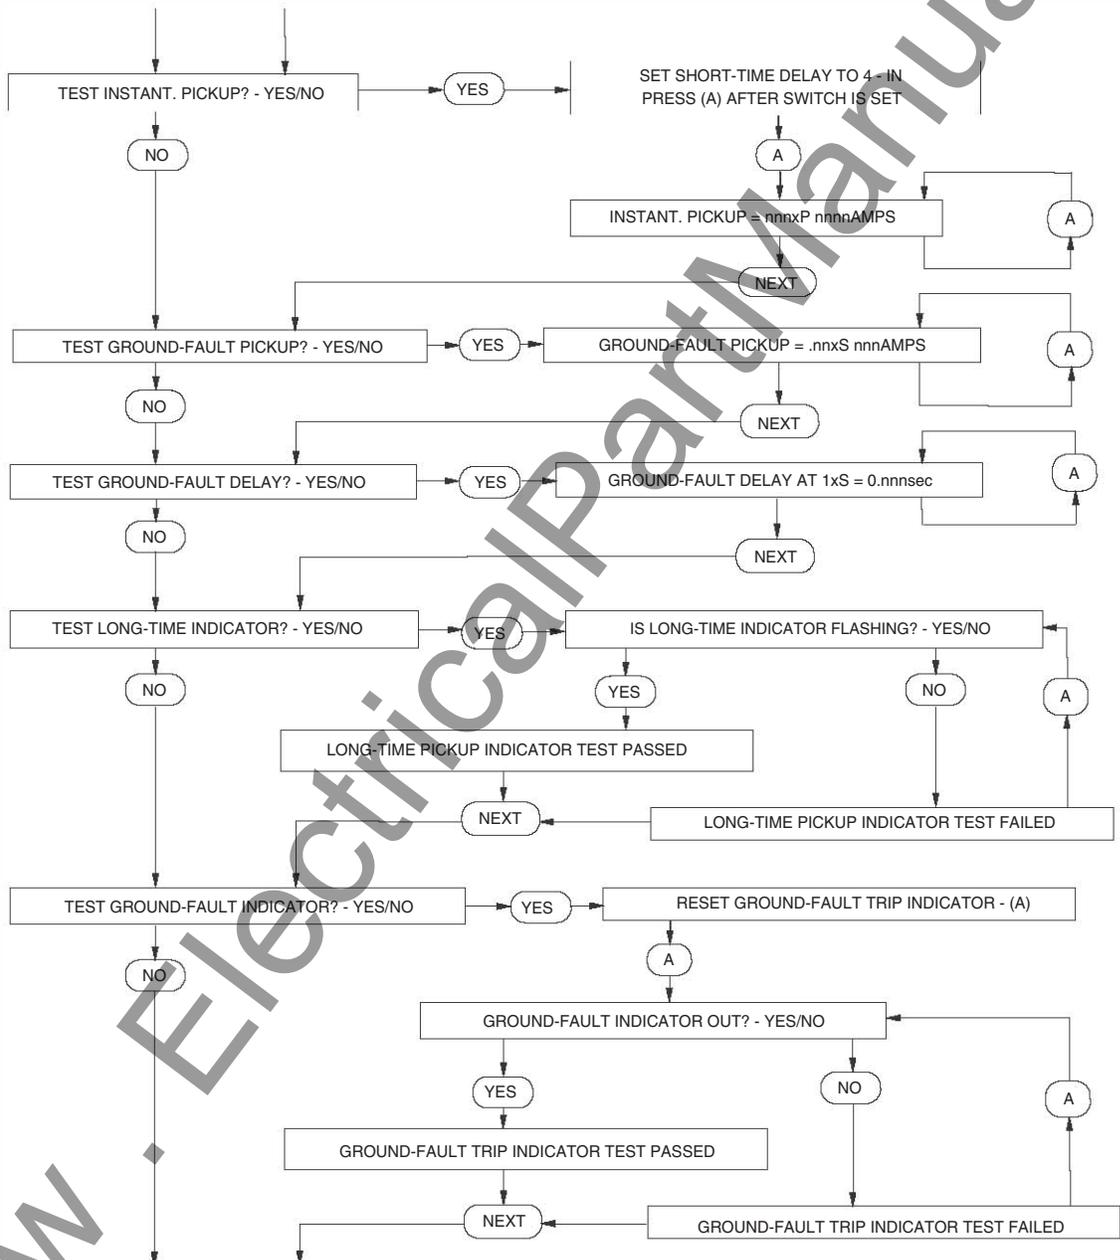

(Continued on next page)

INDIVIDUAL-FUNCTION TEST MENU
—Continued

05933076

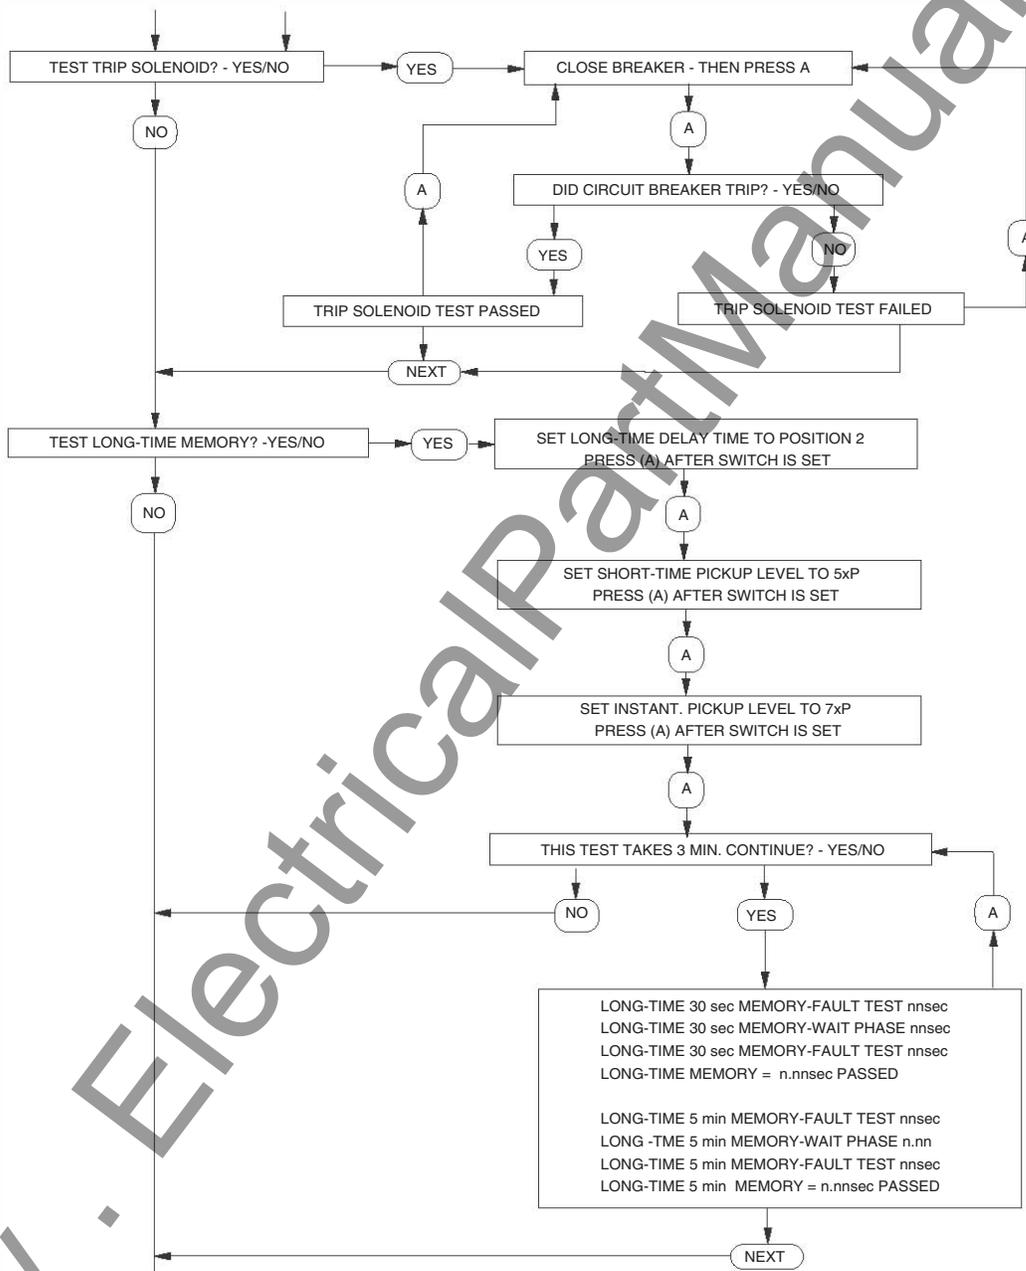


(Continued on next page)

Universal Test Set
Section 7—ME-NE-PE CBTM3 Test Module

INDIVIDUAL-FUNCTION TEST MENU
—Continued

05903071

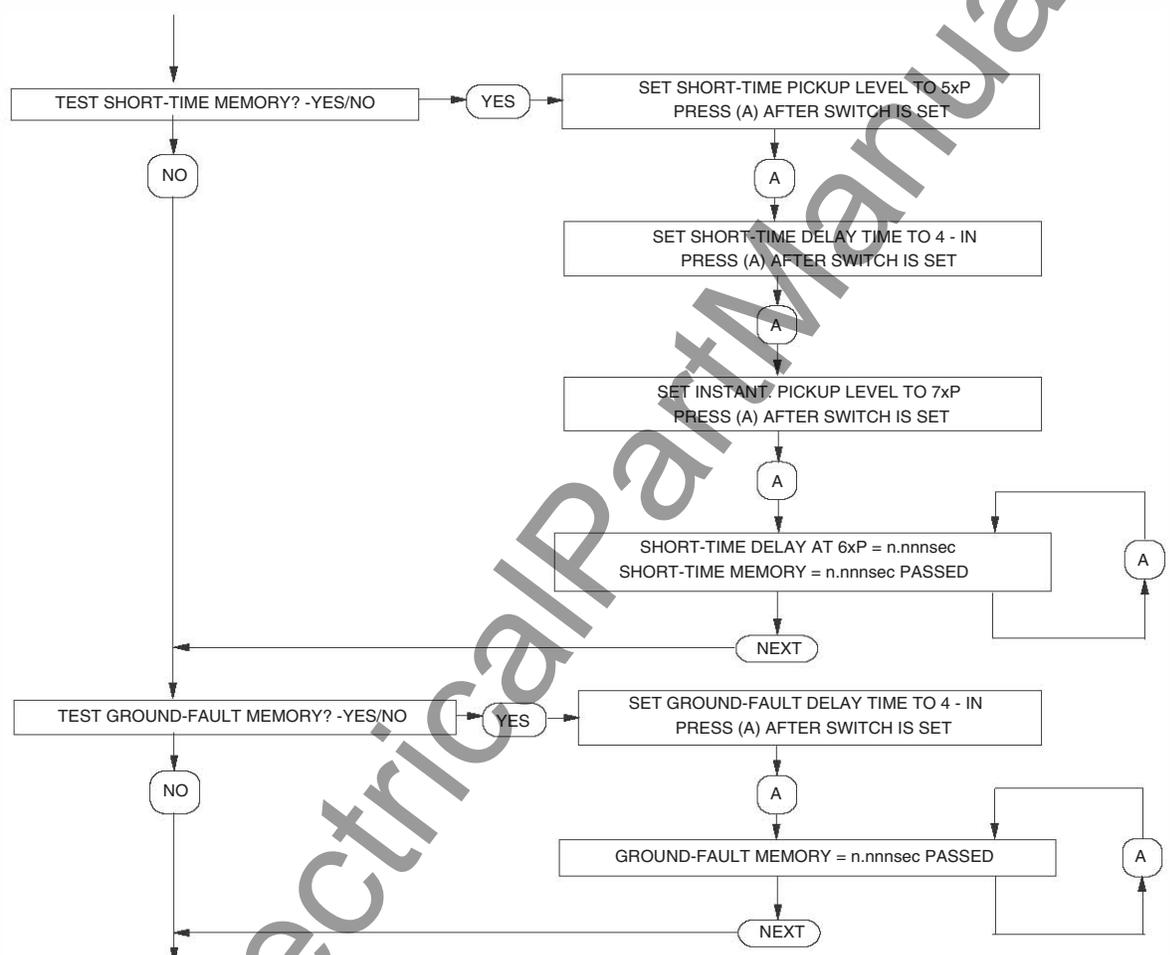

SEE AUTOMATIC TEST ON PAGE 46

NOTE: To return to TEST SELECTION mode, press **TEST TYPE**


NOTE: An option is valid any time its key is flashing.

NOTE: Test sequence can be stopped at any time by turning the test set power to OFF.

NOTE: Reset trip indicators after testing is completed.

NOTE: If "TEST FAILED" appears on display, press **A** to repeat test. If "TEST FAILED" appears again, consult with Square D (1-888-778-2733).

MANUAL TEST MENU

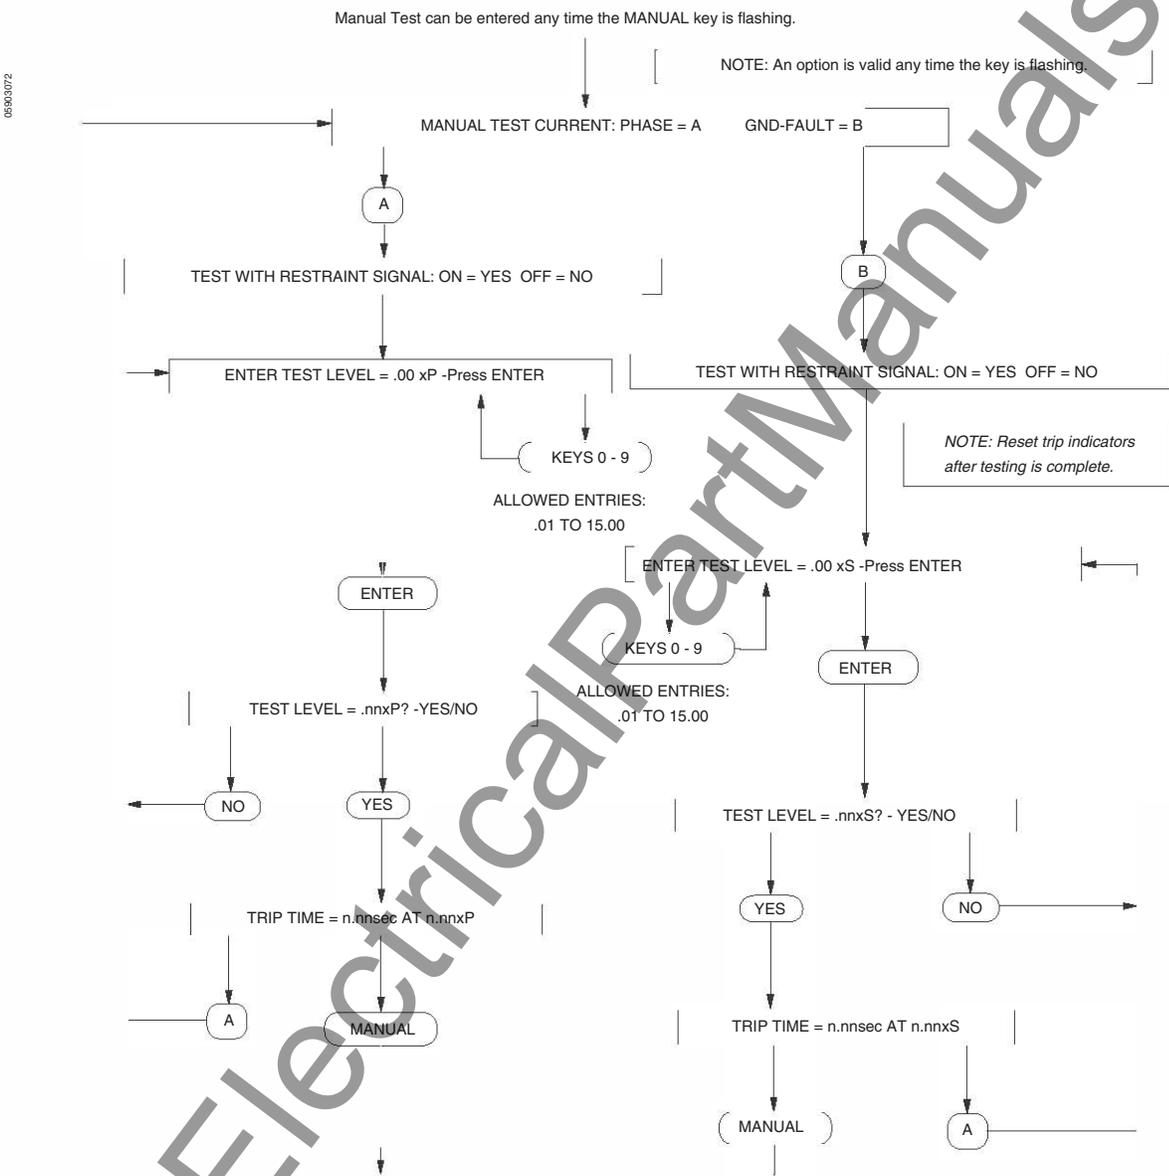

PHASE = Phase current which would be seen at each phase when current is in balance.
GND-FAULT = Ground-fault current flowing to ground.

NOTE: If current value entered is below the pickup values, the circuit breaker will not trip. The timer will continue to count. To stop the timing function, press MANUAL.

NOTE: To return to TEST SELECTION mode, press

NOTE: Test sequence can be stopped at any time by turning the test set power to OFF.

Index

A

- Adapter, rating plug 12
- Applications 4
- Automatic test menu
 - CBTM1 test module 40
 - CBTM3 test module 46
 - CBTM4A test module
 - full-function circuit breakers 32
 - standard-function circuit breakers 33
 - CBTMB test module
 - circuit breakers with ground-fault alarm ... 19
 - circuit breakers without ground-fault alarm 18
- Automatic test mode 5

C

- CBTM1 test module 39
- CBTM3 test module 45
- CBTM4A test module 29
- CBTMB test module 14

F

- Full-function trip unit
 - CBTM4A test module
 - test setup 29
 - CBTMB test module
 - test setup 15

G

- General information 4
- Ground-fault alarm 5
- Ground-fault delay 5
- Ground-fault pickup 5

I

- Individual test menu
 - CBTM4A test module
 - full-function circuit breakers 34
 - standard-function circuit breakers 36
 - CBTMB test module
 - full-function circuit breakers with ground-fault alarm 22
 - full-function circuit breakers without ground-fault alarm 20
 - standard-function circuit breakers 24
- Individual-function test menu
 - CBTM1 test module 41
 - CBTM3 test module 47
- Individual-function test mode 6
- Interlocking, zone 6

K

- Key light tests 9
- Keyboard tests 9

L

- Liquid crystal display test 9
- Long-time ampere rating 5
- Long-time delay 5
- Long-time pickup 5

M

- Main test menu
 - CBTM4A test module 31
 - CBTMB test module 17
- Manual test menu
 - CBTM1 test module 44
 - CBTM3 test module 51
 - CBTM4A test module
 - full-function circuit breakers 37
 - standard-function circuit breakers 38
 - CBTMB test module
 - full-function circuit breakers with ground-fault alarm 27
 - full-function circuit breakers without ground-fault alarm 26
 - standard-function circuit breakers 28
- Manual test mode 6
- ME-NE-PE CBTM3 test module
 - automatic test menu 46
 - individual-function test menu 47
 - manual test menu 51
 - test setup 45
- MICROLOGIC Series B CBTMB test module
 - automatic test menu for all circuit breakers
 - without ground-fault alarm 18
 - automatic test menu for circuit breakers with ground-fault alarm 19
 - individual test menu for full-function circuit breakers with ground-fault alarm 22
 - individual test menu for full-function circuit breakers without ground-fault alarm 20
 - individual test menu for standard-function circuit breakers 24
 - main test menu 17
 - manual test menu for full-function circuit breakers with ground-fault alarm 27
 - manual test menu for full-function circuit breakers without ground-fault alarm 26
 - manual test menu for standard-function circuit breakers 28
 - test module 4
 - test setup 14
 - test setup, full-function 15
 - test setup, standard-function 16

M-N-P-S CBTM4A test module

- automatic test menu for full-function circuit breakers32
- automatic test menu for standard-function circuit breakers33
- individual test menu for full-function circuit breakers34
- individual test menu for standard-function circuit breakers36
- main test menu31
- manual test menu for full-function circuit breakers37
- manual test menu for standard-function circuit breakers38
- test setup for full-function circuit breakers29
- test setup for standard-function circuit breakers30

P

- Power cord4
- POWERLOGIC® system7
- Preparation4

R

- Rating plug adapters13
- Rating plugs12

S

SE CBTM1 test module

- automatic test menu40
- individual-function test menu41
- manual test menu44
- test setup39

- Self-restraint6
- Self-test8
- Series A, B4
- Series, circuit breakers4
- Short-time delay5
- Short-time pickup5
- Standard-function trip unit
 - CBTM4A test module
 - test setup39
 - CBTMB test module
 - test setup14

T

- Terminology5
- Test
 - circuit breaker10
 - key lights9
 - keyboard9
 - liquid crystal display9
 - self8
- Test modes6

Test module

- application4
- ME-NE-PE CBTM345
- MICROLOGIC series B CBTMB14
- M-N-P-S CBTM4A29
- SE CBTM139

Test set4

Test setup

- CBTM1 test module39
- CBTM3 test module45
- CBTM4A test module
 - full-function circuit breakers29
 - standard-function circuit breakers30
- CBTMB test module
 - circuit breakers with ground-fault alarm16
 - circuit breakers without ground-fault alarm15

Test types5

Test, self8

Trip units

- covers11
- rating plug adapters12
- rating plugs11

U

- Umbilical cord4

Z

Zone interlocking

- LE, ME, NE and PE circuit breakers6
- SE circuit breakers6



Universal Test Set

www.ElectricalPartManuals.com

Square D Company
PO Box 3069
3700 Sixth St SW
Cedar Rapids IA 52406-3069 USA
1-888-SquareD (1-888-778-2733)
www.SquareD.com

Electrical equipment should be serviced only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

Bulletin No.4804097602 March 2001 Replaces 4804097602 dated 12/93.