

PRICE \$15.00

SERVICE BULLETIN 8804-10

November, 1987

SQUARE D®

omegapak®
Adjustable Frequency Controller

125 - 250 HORSEPOWER CONSTANT TORQUE
150 - 300 HORSEPOWER VARIABLE TORQUE

CONTENTS

NOTE: This service bulletin covers the installation, start-up and servicing of standard controllers and controllers with pre-engineered options. Controllers having variations or special options will be furnished with a set of record drawings which must be consulted to properly and safely install, start-up or service the controller.

1.0 GENERAL

- 1.1 PRECAUTIONS
- 1.2 PRELIMINARY INSPECTION
- 1.3 STORAGE
- 1.4 CONTROLLER IDENTIFICATION
- 1.5 KITS FOR FIELD INSTALLATION

2.0 INSTALLATION

- 2.1 MECHANICAL INSTALLATION
- 2.2 ELECTRICAL INSTALLATION
 - 2.2.1 INPUT POWER
 - 2.2.2.A INPUT WIRING
 - 2.2.2.B POWER BUS INSTALLATION
 - 2.2.2.C GROUND BUS INSTALLATION
- 2.3 OUTPUT POWER
- 2.4 CONTROL WIRING
- 2.5 WIRING PRACTICE

3.0 APPLICATION DATA

- 3.1 BASIC CONTROLLER
 - 3.1.1 INPUT
 - 3.1.2 OUTPUT
 - 3.1.3 PERFORMANCE
 - 3.1.4 ENVIRONMENTAL CONDITIONS
 - 3.1.5 ADJUSTMENTS
 - 3.1.6 PROTECTION
 - 3.1.7 DIAGNOSTIC AND STATUS INDICATORS
- 3.2 OPTIONS
 - 3.2.1 OPTION BOARDS
 - 3.2.2 OPTION BOARD RELAYS
 - 3.2.3 DYNAMIC BRAKING
 - 3.2.4 CONTROLLER MOUNTED PILOT DEVICES
 - 3.2.5 OUTPUT ISOLATION CONTACTOR
 - 3.2.6 ISOLATION AND BYPASS CONTACTORS
 - 3.2.7 ISOLATION AND TRANSFER CONTACTORS
 - 3.2.8 POWER AND GROUND BUS
 - 3.2.9 METERS

4.0 CONTROLLER PHOTOS

- 4.1 OMEGAPAK CONTROLLER
- 4.2 CONTROLLER WITH ELECTRONICS DOOR OPEN
- 4.3 CONTROLLER WITH MAIN DOOR OPEN
- 4.4 CONTROLLER WITH ELECTRONICS CONTROL COMPARTMENT SWUNG OUT
- 4.5 RESISTOR PANEL OPEN TO MAIN LUGS
- 4.6 CLOSE UP OF MAIN CONTROL WITH OPTION BOARD
- 4.7 CLOSE UP OF POWER INTERFACE BOARD
- 4.8 CLOSE UP OF REACTORS
- 4.9 CLOSE UP OF BUS INDICATOR BOARD
- 4.10 INVERTER POWER POLES
- 4.11 PRECHARGE CONTACTOR, TRANSFORMER AND FAN RELAY
- 4.12 DYNAMIC BRAKE UNIT

5.0 INITIAL START-UP PROCEDURE

- 5.1 CONTROLLER WITHOUT OPTION BOARD
- 5.2 CONTROLLER WITH OPTION BOARD

6.0 CONTROLLER ADJUSTMENTS

- 6.1 MAIN CONTROL BOARD ADJUSTMENTS
 - 6.1.1 INPUT VOLTAGE SELECTION
 - 6.1.2 INPUT FREQUENCY SELECTION
 - 6.1.3 CONTROLLER FAULT LOCK-OUT SELECTION
 - 6.1.4 ACCEL/DECEL TIME RANGE SELECTION
 - 6.1.5 MAXIMUM OUTPUT FREQUENCY SELECTION
 - 6.1.6 POTENTIOMETER ADJUSTMENTS
- 6.2 OPTION BOARD ADJUSTMENTS
 - 6.2.1 VOLTAGE/CURRENT FOLLOWER SELECTION

| | | | |
|---------|--|-------|--|
| 6.2.2 | INCOMPLETE SEQUENCE TIME SELECTION | 8.3.3 | ISOLATION AND TRANSFER CONTACTORS |
| 6.2.3 | POTENTIOMETER ADJUSTMENTS | 9.0 | CONTROLLER OPERATION |
| 6.2.3.A | ISOLATED OPTION BOARD | 9.1 | BLOCK DIAGRAM DESCRIPTION |
| 6.2.3.B | NON-ISOLATED OP- TION BOARDS | 9.2 | CONTROL CIRCUIT SEQUENCE |
| 6.2.3.C | PNEUMATIC OPTION BOARD | 9.2.1 | PILOT LIGHTS, ELAPSED TIME METER, FAN RELAY |
| 6.3 | METER ADJUSTMENTS | 9.2.2 | START-STOP PUSH BUTTONS |
| 6.3.1 | ANALOG SPEED METER | 9.2.3 | HAND/AUTO SELECTOR SWITCH AND START STOP |
| 6.3.2 | DIGITAL SPEED METER | 9.2.4 | HAND-OFF-AUTO SELECTOR SWITCH |
| 6.3.3 | ANALOG VOLTMETER | 9.2.5 | START-STOP, FAST STOP PUSH BUTTONS AND RUN-JOG FORWARD-REVERSE SELEC- TOR SWITCHES |
| 6.3.4 | DIGITAL VOLTMETER | 9.2.6 | HAND-OFF-AUTO SELECTOR SWITCH, DRIVE FAIL RELAY, AUXILIARY SEQUENCE RE- LAYS NO. 1 AND NO. 2, AUX- ILIARY VERTICAL SECTION AND INCOMPLETE SEQUENCE TIMER |
| 6.3.5 | ANALOG AMMETER | 10.0 | TROUBLESHOOTING AND MAINTENANCE GUIDE (REFER TO SECTION 10 FOR CONTENTS) |
| 6.3.6 | DIGITAL AMMETER | 11.0 | CONTROLLER DRAWINGS (REFER TO SEC- TION 11 FOR CONTENTS) |
| 7.0 | DIAGNOSTIC AND STATUS INDICATING LIGHTS | 12.0 | RENEWAL PARTS LIST |
| 7.1 | MAIN CONTROL BOARD | | |
| 7.3 | POWER INTERFACE BOARD | | |
| 7.4 | OPTION BOARD | | |
| 7.5 | DYNAMIC BRAKING BOARD | | |
| 7.6 | STANDBY MODE LAMP STATUS | | |
| 8.0 | COMPONENT PLACEMENT CHART | | |
| 8.1 | MAIN CONTROL BOARD | | |
| 8.2 | OPTION BOARD | | |
| 8.3 | AUXILIARY VERTICAL SECTIONS | | |
| 8.3.1 | ISOLATION CONTACTOR | | |
| 8.3.2 | ISOLATION AND BYPASS CONTACTORS | | |

1.0 GENERAL

1.1 PRECAUTIONS

The following list of "PRECAUTIONS" must be studied and followed during the installation, operation, and servicing of the equipment.

1. Read this service bulletin prior to installing or operating the equipment.
2. Service work should be performed only after becoming familiar with all listed danger and caution statements.
3. If OMEGAPAK controllers are to be stored prior to installation, they must be protected from the weather and kept free of condensation and dust.
4. Use extreme care when moving or positioning controllers (even if crated) as they contain devices and mechanisms which may be damaged by rough handling.
5. Only authorized personnel should be permitted to operate or service the controller.
6. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

DANGER

HAZARD OF ELECTRICAL SHOCK OR BURN BEFORE SERVICING, TURN OFF POWER SUPPLY(S) TO THIS EQUIPMENT. WAIT 5 MINUTES. MEASURE CAPACITOR VOLTAGES TO VERIFY THAT THEY ARE ZERO. DO NOT SHORT ACROSS CAPACITORS WITH VOLTAGE PRESENT.

The dc bus capacitors are discharged slowly when input power is removed from the OMEGAPAK controller. To ensure the capacitors are fully discharged, always test with a dc voltmeter (1000vdc scale) before doing any wiring, troubleshooting or work inside the controller enclosure. If no reading is shown on the voltmeter, reduce scale and test again.

If the capacitors are not fully discharged in 5 minutes, contact Square D — *Do not operate the controller.*

DANGER

HAZARD OF ELECTRICAL SHOCK OR BURN MANY PARTS, INCLUDING ELECTRONIC PRINTED WIRING BOARDS, IN THIS CONTROLLER OPERATE AT LINE VOLTAGE. DO NOT TOUCH. USE ONLY ELECTRICAL INSULATED TOOLS WHILE MAKING ADJUSTMENTS.

CAUTION

DO NOT CHANGE THE POSITION OF ANY PRINTED WIRING BOARD SWITCH OR REMOVE ANY PRINTED WIRING BOARD WITH THE DRIVE RUNNING. TO DO SO MAY CAUSE AN EQUIPMENT MALFUNCTION.

1.2 PRELIMINARY INSPECTION

Inspect for shipping damage upon receiving the OMEGAPAK controller. If any shipping damage is found, immediately notify the freight carrier and your Square D representative. Open the door on the controller and check inside for any visual damage. **DO NOT ATTEMPT TO OPERATE THE CONTROLLER IF ANY VISUAL DAMAGE IS NOTED.** All printed wiring boards should be in place and secure. Check all connectors to be sure they are locked and securely in place.

1.3 STORAGE

After the preliminary inspection repack and store the OMEGAPAK controller in a clean dry location. **DO NOT** store this equipment in any area where the ambient temperature will rise above 60°C (140°F) or go below — 17°C (0°F). **DO NOT** store this equipment in high condensation or corrosive atmospheres. Proper storage is required to prevent equipment damage.

1.4 CONTROLLER IDENTIFICATION

The 125-300 HP OMEGAPAK adjustable frequency controller is a combination controller with molded case switch and current limiting fuses in a floor mounted NEMA 1 enclosure. Optional power bus enables the controller to become part of a Square D motor control center

lineup. The controller nameplate is located on the inside surface of the electronics door. The nameplate is described in Figure 1.1 and carries the controller class, type and MOD (option) listing. When identifying the controller use the data from this nameplate.

To aid in identifying the controller, refer to Figure 1.3 and 1.5 for nameplate identification codes. When the controller has been defined, refer to the appropriate section of this service bulletin.

1.5 AUXILIARY VERTICAL SECTION IDENTIFICATION

The 125-300 HP OMEGAPAK controller with MOD X13 or Y13 is prepared to be used with an isolation contactor or isolation and

bypass/transfer contactors. These contactors will be mounted in a separate auxiliary vertical section. The nameplate for the auxiliary section is located on the outside of the enclosure. The nameplate is described in Figure 1.2 and carries the auxiliary section class, type and MOD (options) listing in addition to the factory order number and bus rating if optional power bus is furnished. When identifying the OMEGAPAK controller use the data from this nameplate in addition to the controller nameplate data to fully identify the controller package.

To aid in identifying the auxiliary section, refer to Figure 1.4 and 1.5 for nameplate identification codes. When the complete controller has been defined refer to the appropriate section of this service bulletin.

FIGURE 1.1
CONTROLLER NAMEPLATE

CONTROLLER NAMEPLATE
(LOCATED INSIDE THE DOOR)

- | | |
|---|----------------------------------|
| 1. CONTROLLER TYPE CODE* | 7. OUTPUT VOLTAGES |
| 2. MODIFICATION (MOD) CODE** | 8. OUTPUT FREQUENCY |
| 3. PERMISSIBLE INPUT VOLTAGES | 9. MAX. OUTPUT RATED CURRENT |
| 4. MAX. WITHSTAND SYM. AMPS. RMS | 10. SERVICE FACTOR OF CONTROLLER |
| 5. MAX. INPUT RATED CURRENT*** | 11. FACTORY ORDER NUMBER |
| 6. HORSEPOWER RATINGS AT INPUT VOLTAGES | 12. DATE CODE |
- * SEE FIGURE 1.3.
** SEE FIGURE 1.5.
*** SEE SECTION 2.0, FIGURE 2.1

FIGURE 1.2
AUXILIARY VERTICAL SECTION

AUXILIARY VERTICAL SECTION NAMEPLATE
(LOCATED OUTSIDE THE ENCLOSURE)

- | | |
|--------------------------------------|--|
| 1. HORIZONTAL BUS RATING | 5. HORIZONTAL BUS BAR SHORT CIRCUIT RATING |
| 2. PERMISSIBLE MAXIMUM INPUT VOLTAGE | 6. FACTORY ORDER NUMBER |
| 3. CONTROLLER TYPE CODE* | 7. DATE CODE |
| 4. MODIFICATION (MOD) CODE** | |
- * SEE FIGURE 1.4.
** SEE FIGURE 1.5.

FIGURE 1.3
IDENTIFICATION CODE

| | | | | | | |
|---|---|---|---|--|----|---|
| CLASS 8804, TYPE | | | | | -4 | |
| STYLE CONTROLLER | | | | | | |
| 3500 | 3 | | | | | |
| HORSEPOWER RANGE | | | | | | |
| 125-300 @ 460V | | D | | | | |
| CONTROLLER SYSTEM | | | | | | |
| CONSTANT TORQUE CONTROLLER | | | | | | |
| VARIABLE TORQUE CONTROLLER | | | C | | | |
| | | | V | | | |
| TYPE ENCLOSURE | | | | | | |
| NEMA 1 | | | | | G | |
| HORSEPOWER | | | | | | |
| 125 HP | | | | | | T |
| 150 HP | | | | | | U |
| 200 HP | | | | | | W |
| 250 HP | | | | | | X |
| 300 HP (AVAILABLE VARIABLE TORQUE ONLY) | | | | | | Y |

1.5 KITS FOR FIELD INSTALLATION

Controller modifications are available in kit form. Each kit contains necessary hardware and installation instructions.

| Description | Kit Number | Kit Installation Instructions | Description | Kit Number | Kit Installation Instructions |
|---|------------------------|-------------------------------|-------------------------------------|-------------------------------|-------------------------------|
| Isolated Option Board ^① | Class 8804, Type MC-12 | 50006-021-01 | Serial Communication Option Board | Class 8804, Type MC-16 | Service Bulletin 8804-52 |
| Non-Isolated Option Board With Run Relay ^① | Class 8804, Type MC-14 | 50006-021-01 | Status Monitor Board | Class 8804 Type MC-22 | Service Bulletin 8804-51 |
| Non-Isolated Option Board ^① | Class 8804, Type MC-11 | 50006-021-01 | Speed Meter (Analog) ^② | Class 8804, Type AM-1, -2, -3 | 50006-020-01 |
| Pneumatic Option Board ^① | Class 8804, Type MC-13 | 50006-021-01 | Speed Meter (Digital) ^② | Class 8804, Type DM-1 | 50006-020-01 |
| Multispeed Option Board | Class 8804 Type MC-15 | Service Bulletin 8804-54 | Dynamic Braking ^③ | Class 8804, Type DB68, DB69 | 50006-284-01 |
| | | | Control Cable Assembly ^④ | Class 8804, Type CK-16 | 50006-018-01 |

- ① Refer to Section 3.2.1 for Option Board Functions.
- ② Open type. For remote mounting or as a replacement device.
- ③ Includes DB module and an enclosed resistor for remote mounting.
- ④ Twelve conductor cable for wiring controller mounted pilot devices.

FIGURE 1.4

AUXILIARY VERTICAL SECTION^①
IDENTIFICATION CODE

CLASS 8804, TYPE

STYLE SECTION
MODEL 4

HORSEPOWER RANGE
125-300 @ 460V

TYPE OF AUXILIARY SECTION

ISOLATION AND BYPASS CONTACTORS
WITH FUSIBLE DISCONNECT

ISOLATION CONTACTOR

ISOLATION AND BYPASS CONTACTORS
WITH CIRCUIT BREAKER DISCONNECT

ISOLATION AND TRANSFER CONTACTORS

TYPE ENCLOSURE

NEMA 1

HORSEPOWER

125 HP

150 HP

200 HP

250 HP

300 HP

^① Available options (MODs) are Group 12 Power Bus, 600A Ground Bus (G16), and Power On Light (P16).
(See Fig. 1.5)

FIGURE 1.5
IDENTIFICATION CODE

[illegible]

- ① Refer to Section 3.2.1 for Option Board Functions.
- ② Requires the addition of Option Board MOD A07, B07, C07 or D07.
- ③ Requires the addition of Option Board MOD B07, C07, or D07.
- ④ Requires the addition of Option Board MOD A07, B07, C07 or D07 for "JOG AT PRESET SPEED". "JOG AT SET SPEED" is standard.
- ⑤ Requires auxiliary vertical section and the addition of Option Board MOD B07, C07, or D07, with MOD A08 or D08.

2.0 INSTALLATION

2.1 MECHANICAL INSTALLATION

The OMEGAPAK controller is mounted in a general purpose NEMA 1 enclosure. It is suitable for use in normal industrial environments:

Temperature range of 0°C to 40°C (32° - 104°F)

Humidity range of 0% to 95% maximum non-condensing

Altitude to 3300 ft. above sea level

Do not mount the OMEGAPAK controller in direct sunlight or on hot surfaces. The controller must be mounted vertically to allow for proper ventilation. When drilling for conduit entry, care must be exercised to prevent metal chips from falling on parts and electronic printed wiring boards. Mounting dimensions, conduit entry areas and controller weights are located in Section 11.0 of this service bulletin.


Controllers should be located on a concrete pad or equivalent and secured firmly in place using mounting holes provided in bottom channels of the enclosure. Adequate clearance must be provided to permit the door(s) to be fully opened for easy access.

LIFTING INSTRUCTIONS — FLOOR MOUNTED CONTROLLERS

The following instructions are provided to assist in the avoidance of personal injury and equipment damage during movement of the controller.

1. Use extra caution and very sound safety practice while moving the controller.
2. Exercise extreme care when lifting or lowering the controller using a fork lift truck or equivalent. Prevention of damage or injury due to dropping or jolting this equipment should be strictly observed.
3. When lifting enclosures, use an I beam sling or spreader bar as shown in Figure 2.1 to prevent distortion of the cabinet.

CAUTION
DO NOT PASS ROPES OR CABLES
THRU LIFT HOLES; USE SLINGS
WITH SAFETY HOOKS OR SHACKLES.

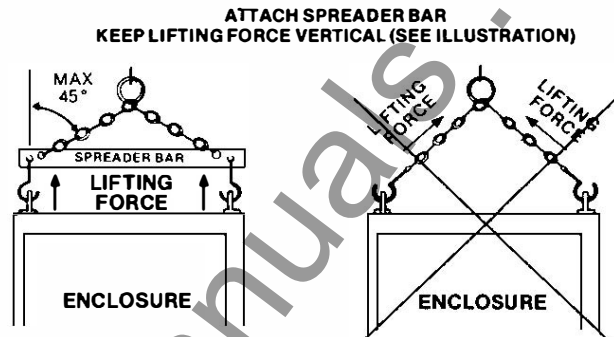

RIGHT WAY

WRONG WAY

FIGURE 2.1

2.2 ELECTRICAL INSTALLATION

DANGER
HAZARD OF ELECTRICAL SHOCK OR BURN
TURN OFF POWER (MAIN AND REMOTE)
PRIOR TO INSTALLING THIS EQUIPMENT

2.2.1 INPUT POWER

The OMEGAPAK controller operates from three phase 460/230/200vac, +10% -5%, 60/50 Hertz source. Current limiting fuses are installed in the controller input. These fuses are coordinated with the controller power circuit for a fault withstand capability of 65,000 RMS symmetrical amperes maximum.

The controller is factory set for 460vac, 60 Hertz input power. If the controller is connected to operate from 230vac, 200vac or 50 Hertz power, refer to the initial start-up procedure (Section 5.0) described in this service bulletin.

2.2.2 INPUT WIRING

The ampacity of power conductors feeding the OMEGAPAK controller should be sized for the maximum input currents listed in Figure 2.2, the National Electrical Code and applicable local electrical codes. Refer to Table 2.1 for lug data and maximum wire size.

FIGURE 2.2

| MAXIMUM CONTROLLER INPUT AND OUTPUT RATED CURRENTS | | | | |
|---|------|------------------|-------------------------------|---|
| MAXIMUM HORSEPOWER | | | INPUT AMPERES ^① | MAXIMUM CONTINUOUS RATED OUTPUT AMPERES ^③ |
| 200V | 230V | 460V | | |
| 50 | 60 | 125 | 237 | 156 |
| 60 | 75 | 150 | 277 | 192 |
| 75 | 100 | 200 | 364 | 248 |
| 100 | 125 | 250 | 453 | 302 |
| 125 | 150 | 300 ^② | 514 | 361 |

① Input currents are maximum values expected. Actual current values could be less depending on the input power source impedance.

② Variable torque loads only.

③ Motor nameplate load current must not exceed the maximum continuous output current rating of the controller. For multiple motor applications, the total of the connected motor nameplate load currents must not exceed the controller rated output current.

2.2.2.A CONTROLLER ONLY OR CONTROLLER WITH EITHER ISOLATION OR ISOLATION AND TRANSFER CONTACTOR(S) TYPE AUXILIARY SECTION

Input wiring to a controller without power bus should be connected to the power distribution block located in the top of the controller section, behind the hinged resistor panel (see Section 4 for resistor panel and power distribution block location). To open the resistor panel remove the two bolts on the left hand edge of the panel and swing the panel to the right. Cable size and torque required are shown in Table 2.1. Use of normal flexibility stranded conductors is recommended. High flexibility conductors with many fine strands should be avoided due to the increased possibility of a poor termination.

When an isolation and transfer section is used the input wiring for the transfer contactor will be from a remote power source. All applicable codes should be followed when wiring to this contactor.

Some controllers may be equipped with horizontal power bus. It will be necessary to connect the controller power bus to the power bus in other equipment using the splice bars furnished. Follow the procedure detailed in Section 2.2.2.C.

2.2.2.B CONTROLLER WITH ISOLATION BYPASS CONTACTORS TYPE AUXILIARY SECTION

Input wiring to a controller and isolation/


bypass contactor grouping without power bus should be connected to the auxiliary section power distribution blocks. Input cables should be connected to the top set of power distribution blocks. The input power for the controller section is to be wired from the bottom set of power distribution blocks (Refer to Drawing 11.3.3) in the auxiliary section to the controller power distribution blocks. To gain access to the power distribution blocks in the auxiliary section remove the panels covering the bus/lug section at the top of the auxiliary section.


2.2.2.C POWER BUS SPLICE BAR INSTALLATION

Splicing of the controller power bus to a line-up that is on the right hand side of the controller should be done in the section to the right of the controller. Splicing of the controller power bus to a lineup that is on the left hand side of the controller can be done in the controller. To gain access to the power bus the resistor panel must be opened as described in Section 2.2.2.A. Splicing will be as shown in Figure 2.3. When splicing is completed the panel should be reinstalled.

DANGER
HAZARD OF ELECTRICAL SHOCK OR BURN
BEFORE SPLICING TO EXISTING APPARATUS, DISCONNECT ALL POWER TO BUS OF EXISTING EQUIPMENT. DO NOT ATTEMPT TO WORK WHILE EXISTING EQUIPMENT IS ENERGIZED.

FIGURE 2.3
POWER BUS — SPLICE BAR
INSTALLATION

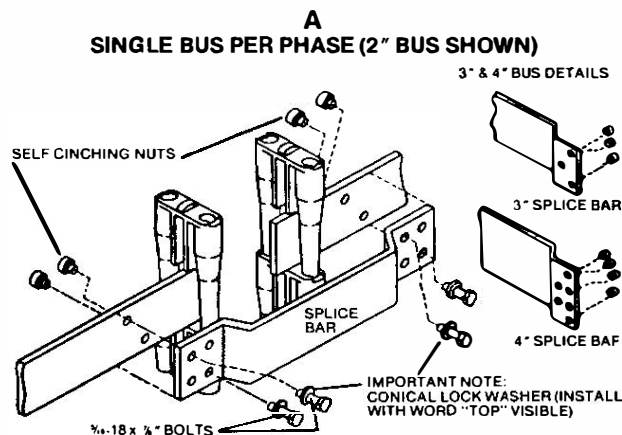

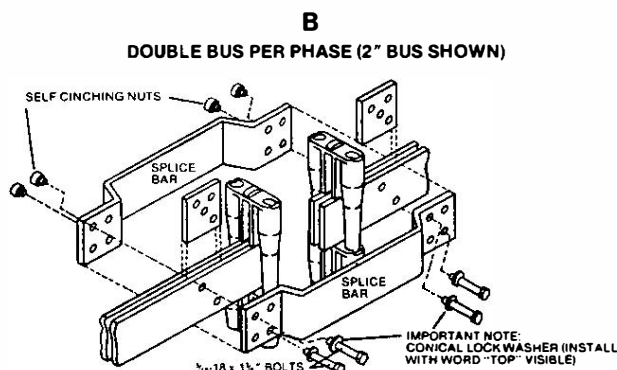


DANGER
HAZARD OF ELECTRICAL SHOCK OR BURN
CONTROLLER PANEL MUST BE PROPERLY
GROUNDED BEFORE APPLYING POWER.

2.2.2.D CONTROLLER GROUNDING

For safe operation the controller must be grounded. A ground bus is provided as standard (see Section 4 for ground bus location). For controllers with power bus or with an auxiliary section install the ground bus splice bar(s) provided as shown in Figure 2.4 to continue the ground bus. For standalone controllers attach the ground directly to the ground bus.

FIGURE 2.4
GROUND BUS — SPLICE BAR
INSTALLATION

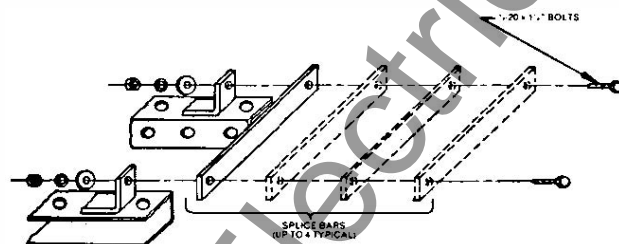

2.2.3 OUTPUT POWER

The output voltage is proportional to the output frequency to provide a constant Volts/Hertz ratio in the 20 to 60 Hertz operating range. Below 20 Hertz the Volts/Hertz ratio will vary depending on the setting of the voltage boost potentiometer.

The ampacity of motor power conductors should be sized according to the motor full load current, National Electrical Code and applicable local electrical codes.

For a controller without an auxiliary section, motor conductors should be connected to the motor terminals provided in the controller. Refer to Section 4 controller photos for terminal location.

For a controller with an auxiliary vertical section motor conductors should be connected to the motor terminals in the auxiliary section. The motor terminals in the controller section should be interconnected to the isolation contactor in the auxiliary section. Refer to Section 11.3 for the proper interconnection drawings.

Refer to Table 2.1 for data on lugs and maximum wire sizes.

Do not connect the output terminals of the controller (T1, T2, or T3) to the L1, L2, or L3 controller terminals or to any other source of voltage. To do so will cause controller damage. Should it become necessary to bypass a controller not equipped with an iso-bypass or iso-transfer option, the customer connections to the controller T1, T2, and T3 terminals must be disconnected to prevent back feeding the controller.

If a customer supplied isolating device is installed between the controller output and the motor (e.g. isolation contactor), the isolating device must not be switched to the open position and then back to the closed position, unless sufficient time is allowed for the motor open-circuit voltage to decay to less than 10% of the motor nameplate rated voltage. Re-connecting the motor to the operating controller without allowing the motor terminal voltage to decay may cause controller damage. When multiple motors are operated from one controller, several critical requirements must be met to assure proper controller and motor operation.

1. Individual motor overload protection must be provided in accordance with the National Electrical Code or applicable local codes.
2. The total of the connected motor nameplate load currents, as seen by the controller, must not exceed the controller rated output current.

3. If one or more of the motors are to be connected or disconnected from the controller while the controller is operating, the following conditions *must be met*.

- A) The motor isolating device must not allow reconnection of the motor to the controller without first allowing the motor open-circuit voltage to decay to less than 10% of the motor nameplate rated voltage.
- B) The summation of the running currents of the connected motors and the locked rotor current of the motor(s) being reconnected to the controller must be less than 130% of the controller rated output current for constant torque rated controllers (110% controller rated output current for variable torque controllers).

2.2.4 CONTROL WIRING

If the OMEGAPAK controller does not have pilot devices mounted in the door cover, refer to Section 11.5 for wiring of remote control operators station. Refer to Table 2.1 for data on maximum wire size.

If an auxiliary section is supplied some control wiring interconnection is required. Refer to Section 11.3 for the proper interconnection drawing.

NOTE: All remote Manual Speed potentiometers must be wired with insulated shielded cable. One end of the shield must be grounded at the controller per the wiring diagram. The other end must be insulated from ground and **unconnected**.

If an option board was supplied with the controller for automatic operation, refer to Section 11.6.1 thru 11.6.4 for wiring of analog follower input signals.

NOTE: All electrical analog input signals must be wired with insulated shielded cable. One end of the shield must be grounded. The other end of the cable must be insulated from ground and unconnected.

When wiring external control devices to the controller's sequencing circuitry the following guidelines should be considered:

Pilot Devices (push buttons, selector switches, relay contacts, etc.) — The maximum distance from the controller to an external pilot device is limited by the dc resistance of the wiring plus the remote device contact resistance and the leakage capacitance between the conductors. Wire size must be selected such that the maximum circuit resistance (wire plus remote contact) does not exceed 10.5 ohms. Higher resistance may result in failure to deliver sufficient voltage to pick up the controller sequencing relays. Maximum leakage capacitance of installed wire must not exceed 1.4 microfarads. Higher leakage capacitance may prevent the controller sequencing relays from dropping out.

Solid State Contacts — Many solid state control devices, such as programmable controllers, use solid state switches (Triacs) in the output stages. In addition to criteria stated above for resistance and leakage capacitance, the off state resistance must limit leakage current (with 24v applied) to not more than 3 ma.

OMEGAPAK Controller Relays — Some relays in the controller have extra contacts available for controlling the remote devices. These contacts are rated as described in Figure 2.5.

FIGURE 2.5

MAXIMUM ELECTRICAL RELAY CONTACT RATINGS

| Contact Material | AC Amperes | | | | | | DC Amperes | | | |
|-----------------------------|------------|--------------------|-------|------------|---------------------------------------|------|------------|-----------|-------|------------------------------|
| | AC Volts | Inductive 35% P.F. | | | Res. 75% P.F. Make Break & Continuous | HP | DC Volts | Inductive | | Res. Make Break & Continuous |
| | | Make | Break | Continuous | | | | Make | Break | |
| Silver Cadmium Gold Flashed | 120 | 15 | 1.5 | 5① | 5① | 1/10 | 28 | 1.5 | 1.5 | 5 |

- ① Limited by printed wiring board foil to 3 amperes continuous.

NOTE: To avoid electrical noise problems and nuisance tripping of the adjustable frequency controller, all remote controlled inductive loads (relay coils, contactor coils, solenoids, etc.) must be transient suppressed.

2.2.5 WIRING PRACTICE

Good wiring practice requires that control circuit wiring be separated from all power (line) wiring and all load wiring to the motor have the maximum possible separation from this power (line) wiring (whether from the same controller or other controllers). This minimizes the possibility of electrical transients being electrostatically or electromagnetically coupled from the power (line and load) circuits into the control circuits or from the load circuits onto the power (line) circuits.

The following general wiring practice is recommended in addition to that already prescribed in National Electrical Code and applicable local electrical codes.

Controllers are intended to be wired using conduit. Metallic conduit is preferred. Control and power wiring should never be run in the same conduit. Metallic conduits car-

rying power wiring and metallic conduits carrying low level control wiring should be separated by at least three inches. Non-metallic conduits or cable trays carrying power wiring and non-metallic conduits or cable trays carrying low level control wiring should be separated by at least twelve inches. If it is necessary to cross power and control wiring, the above spacing recommendations should be observed and conduits or trays should cross at right angles.

Stranded control wiring is recommended as it is necessary to wire to the main control board terminal strip.

All low level control wiring (start-stop circuits, manual speed potentiometer, etc.) may be run in the same conduit or tray. Remote mounted manual speed potentiometers must be wired using shielded cable. The shielded cable must be jacketed and the shield terminated only where shown on the connection diagram.

**TABLE 2.1
WIRE SIZE TABLE**

| Application | Number Conductors | Wire Size | | Tightening Torque |
|--|----------------------|-------------|-------------|----------------------|
| Incoming Power | 2① | Min. 4AWG | Max. 500MCM | 315 lb-in |
| Output Power (Motor) | 2② | 4AWG | 350MCM | 275 lb-in |
| | 2③ | 2AWG | 600MCM | 375 lb-in |
| Control Circuits (Main Control & Options Board) | 1 | N/A | 12AWG | 7 lb-in |
| | or 1 | N/A | 14AWG | |
| | or 2 | N/A | 16AWG | |
| | or 3 | N/A | 18AWG | |
| | or 5 | N/A | 20AWG | |
| CONTROLLER GROUND BUS | | | | |
| Dynamic Braking Module | 1 | 18AWG 4 AWG | | 45 lb-in |
| Dynamic Braking Resistor | 1 | 18AWG 4AWG | | 100 lb-in |

① For controllers equipped with standard power distribution block

② 125-150 HP controllers

③ 200-300 HP controllers

3.0 APPLICATION DATA**3.1 BASIC CONTROLLER****3.1.1 INPUT**

| | |
|--|---------------------------------|
| Voltage | 200/230/460vac +10%, -5% |
| Frequency | 50/60 Hertz |
| Maximum Continuous Input Current | See Section 2.0, Figure 2.2 |
| Three Phase Only | Phase Rotation Insensi- tive |
| Displacement Power Factor | .95 lagging @ rated load |
| Control Power | 24vac, 24vdc, and 120vac |
| Relays | 12vdc, 24vac |
| Pilot Lights | 24vac (Full Voltage Only) |

3.1.2 OUTPUT

| | |
|--|---|
| Frequency | 1 to 60 Hertz, selectable 1 to 90 Hertz or 1 to 120 Hertz |
| Voltage | 0 to 200vac, 0 to 230vac, 0 to 460vac, three phase |
| Waveform | Sine coded PWM (Pulse Width Modulated) |
| Maximum Continuous Output Rated Current | See Section 2.0, Figure 2.2 |
| Short Time Overload | 150% of maximum con- tinuous output rated current for 60 seconds. (120% for variable torque controllers). |
| Starting Current | 175% of maximum con- tinuous output rated current for 1/2 second or until output frequency reaches 5 Hertz. (140% for variable torque controllers). |

OUTPUT SIGNALS

| | |
|---------|--|
| Current | 0 to 5vdc proportional to output current, 5vdc equals 150% of maxi- mum continuous output current (120% for vari- able torque controllers). |
| Voltage | 0 to 5vdc proportional to the fundamental output |

Frequency

voltage, 4vdc equals 460
output voltage.

0 to 5vdc proportional to
output frequency/motor
speed, 2.5vdc equals
selected Hertz/motor
base (rated) speed.

**Relay
Contacts**

Form C contacts rated 5
amperes^② resistive at
115v ac maximum.

3.1.3 PERFORMANCE**Controller Linearity (Percent of F_{Base})**

| | F _{Base} = 60 Hz | F _{Base} = 90 Hz | F _{Base} = 120 Hz |
|--|---------------------------|---------------------------|----------------------------|
| OFC Pot Disabled: | | | |
| Hand Input ^① | ±.25 Typ. | ±.25 Typ. | ±.25 Typ. |
| Auto Input (A07) | ±1.1 Typ. | ±1.1 Typ. | ±1.1 Typ. |
| Auto Input (B07) | ±1.1 Typ. | ±1.1 Typ. | ±1.1 Typ. |
| Auto Input (C07) | ±1.2 Typ. | ±1.2 Typ. | ±1.2 Typ. |
| Auto Input (D07) | ±5.0 Typ. | ±5.0 Typ. | ±5.0 Typ. |
| OFC Pot Enabled: | | | |
| Hand Input ^① | ±.05 Typ., ±.2 max. | ±.05 Typ., ±.2 max. | ±.05 Typ., ±.2 max. |
| Auto Input (A07) | ±1.5 max. | ±1.5 max. | ±1.5 max. |
| Auto Input (B07) | ±1.5 max. | ±1.5 max. | ±1.5 max. |
| Auto Input (C07) | ±1.5 max. | ±1.5 max. | ±1.5 max. |
| Auto Input (D07) | ±7.5 max. | ±7.5 max. | ±7.5 max. |
| Frequency Stability At 25°C Ambient | ±.55 Hz Max. | | |
| Frequency Shift With Ambient Temperatures: | | | |
| Hand Input | ±.01 Hz/°C Typ., | ±.015 Hz/°C max. | |
| Auto Input (A07) | ±.01 Hz/°C Typ., | ±.015 Hz/°C max. | |
| Auto Input (B07) | ±.01 Hz/°C Typ., | ±.015 Hz/°C max. | |
| Auto Input (C07) | ±.07 Hz/°C Typ., | ±.15 Hz/°C max. | |
| Auto Input (D07) | ±.15 Hz/°C Typ., | ±.30 Hz/°C max. | |
| ① W/O Options Board Installed | | | |

**Speed
Regulation**

NEMA Design B induc-
tion motor ±0.5% of
base operating speed
with slip compensation.
Applicable only while
operating motor in fre-
quency range for which
constant motor torque is
possible.

Current Limit

Adjustable 75% to
150% of maximum con-
tinuous output rated
current (60% to 120%
for variable torque
controllers).

3.1.4 ENVIRONMENTAL CONDITIONS

| | |
|---------------------------------------|--|
| Storage Temperature | -17 °C to 60 °C (0 °F to 140 °F) |
| Operating (Ambient) Temperature | Enclosed 0 ° to 40 °C (32 °F to 104 °F) |
| Altitude | To 1,000 meters (3,300 feet) w/o derating |
| Relative Humidity | To 95% maximum non-condensing |

3.1.5 ADJUSTMENTS

| | |
|--------------------------------------|---|
| Current Limit | Adjustable 75-150% of maximum continuous output rated current (60-120% for variable torque controllers). |
| Voltage Boost | Adjustable 100% to 600% of nominal Volts/Hertz ratio. This boost is fully effective at 1 Hertz and decreases linearly to zero boost at 20 Hertz. |
| Output Frequency Range | Extended frequency operation to 90 Hertz or 120 Hertz. |
| Maximum Frequency | Adjustable 40 Hertz to maximum selected operating frequency. |
| Minimum Frequency | Adjustable 1.25 Hertz to 50% of maximum adjusted operating frequency. |
| Acceleration/Deceleration Time Range | Range selection switch for 1 to 10 seconds or 10 to 60 seconds for 60 Hertz maximum operating frequency. (Range times 1.5 for 90 Hertz or times 2 for 120 Hertz maximum operating frequency). |
| Acceleration Time | Adjustable over selected range. |
| Deceleration Time | Adjustable over selected range. |
| Slip Compensation | Adjustable 0% to 3% of base operating frequency from no load to full load. |
| Overload Threshold | Adjustable 0% to 115% of maximum continuous output rated current. |
| Input Voltage | 200vac, 230vac or 460vac operation. |
| Input Frequency | The controller is factory set to operate from 60 Hertz power. Adjustable for operation from a 50 Hertz power source. |
| System/Motor Voltage | Selection for base output voltage at base fre- |

Response to
Option Fault

One or Two
Fault Lockout

3.1.6 PROTECTION

Instantaneous
Overcurrent
Trip

Ground Fault

Full Time
Current Limit

Over-
temperature

Overload

quency to match base input voltage or 1/2 base output voltage at base frequency to permit extended constant torque frequency range.

Selection for controller shutdown and LED illumination or LED illumination only upon a fault condition occurring on an Option Board, Dynamic Braking Unit or Regenerative Braking Controller.

The controller is factory set for lock-out (manual reset) after first protective circuit trip. Selectable automatic reset after first trip and lockout after second trip within 65 seconds of the first.

Non-adjustable instantaneous peak current trip setting of 310% of peak maximum continuous output rated current for constant torque rated controllers, 250% for variable torque rated controllers.

Non-adjustable trip setting of 27 amperes peak. Trips in 20 microseconds when current settings are exceeded.

Adjustable 75% to 150% of maximum continuous output rated current (60% to 120% for variable torque controllers). Constant Volts/Hertz ratio is maintained as frequency is reduced.

Thermostats mounted on heatsinks, reactors and snubber resistors.

Adjustable 0% to 115% of maximum continuous output rated current.

| | |
|--------------------------|--|
| Overfrequency | Non-adjustable clamp limits output frequency to not more than 22% above maximum selected operating frequency. |
| Decel. Ramp Modification | Automatically extends deceleration ramp if dc bus voltage rises because of excessive regenerated energy. Deceleration ramp modification is automatically disabled if optional dynamic braking is used. |
| Overvoltage | Protects the controller against excessive dc bus voltage. Trips at 900vdc for 460vac systems or 450vdc for 200/230vac systems. |
| Undervoltage | Trips at 87.5% of rated input voltage. Automatically resets at 95% of rated input voltage. |
| Shoot-Through | Protects the controller against dc bus short circuits caused by missequencing of the inverter GTO switches. |
| Input Fuses | Three current limiting fuses provide coordinated protection of the controller power circuit for fault withstand capability of 65,000 RMS symmetrical amperes. |

3.1.7 DIAGNOSTIC AND STATUS INDICATORS

Light Emitting Diodes (LEDs) and a neon light are provided for the following:

On Main Control Board

- Undervoltage (UV)
- Overvoltage (OV)
- Ground Fault (GF)
- Instantaneous Overcurrent (IOC)
- Shoot Through (ST)
- Overtemperature (OT)
- Overload (OL)
- Overload Timer (OLT)
- Option Fault (OF)
- Drive Lockout (DL)
- +10V Power Supply OK (+10V)
- 10V Power Supply OK (-10V)

- Motor Current Limit (MCL)
- Regen Current Limit (RCL)
- Regenerating (REG)
- Power Up Delay (PUD)
- Drive Enabled (DE)
- On Bus Indicator Board
- DC Bus Voltage (IL1) (Neon)
- On Power Interface Board
- Control Power (PWR A or B)
- Gating (GD A or B)

NOTE: A detailed description of the diagnostic and status indicators is located in Section 7.0.

3.2 OPTIONS

There are a number of factory and/or field installed options for the Class 8804 OMEGAPAK controller. To determine which options (if any) were factory installed, refer to the controller nameplate for the MOD alphanumeric listing.

3.2.1 OPTION BOARDS①

There are four (4) option boards available to accept various follower input signals for automatic speed control. Other operational functions are also included on the option boards. All option boards provide the following functions:

- | | |
|--------------|---|
| Mode Select | Permits selection of Hand-Off-Auto, Hand-Auto logic or Run-Jog modes of operation. The motor speed is controlled by the manual speed potentiometer in the manual mode. With the appropriate option board installed, the motor speed will follow an external voltage, current or pneumatic signal in the auto mode. The Run/Jog mode is controlled by an external selector switch input. |
| Jog/Shutdown | Adjustable jog speed when the jog at preset speed option is used. Also provides adjustment of the shutdown |

| | | | |
|--|---|---------------------------|---|
| | speed for pumping applications. Adjustable from 1 Hertz to 30% (JogSpeed) or 1 Hertz to 90% (Shutdown Speed) of maximum output frequency. | Signal/Loss Detector | Detects loss of a live zero analog input signal and illuminates Fault LED on option board. |
| Relay Socket | One socket for the drive fail relay. | Rotation Direction Select | Provides automatic selection of direction of rotation as a function of dc input signal polarity. Zero to + signal causes increasing speed in the forward direction and zero to - signal causes increasing speed in the reverse direction. |
| MOD A07 (Kit Class 8804, Type MC-11) | | | |
| NON-ISOLATED OPTION BOARD - This option board provides a voltage follower function with Offset & Span adjustments. Will accept the following analog input signals: | | | |
| DC Voltage | 0-10vdc | Solid State Run Relay | Automatic start command for the controller from an external 4-33vdc signal. |
| MOD B07 (Kit Class 8804, Type MC-14) | | | |
| NON-ISOLATED OPTION BOARD W/RUN RELAY - This option board provides a voltage follower function with Offset & Span adjustments, plus a solid state run relay. Will accept the following analog input signals: | | | |
| DC Voltage | 0-10vdc | Sequence Timing Relay | Provides a selectable timing range. The timing range is switch adjustable in 10 second increments from 10 to 160 seconds. The sequence timer controls the optional Auxiliary Sequence Relay No. 1 (ASR1). |
| Solid State Run Relay | Automatic start command for the controller from an external 4-33vdc signal. | | |
| Sequence Timing Relay | Provides a selectable timing range. The timing range is switch adjustable in 10 second increments from 10 to 160 seconds. The sequence timer controls the optional Auxiliary Sequence Relay No. 1 (ASR1). | | |
| MOD C07 (Kit Class 8804, Type MC-12) | | | |
| ISOLATED OPTION BOARD — This option board provides a voltage/current follower function with Offset & Span adjustments, plus the following functions: | | | |
| DC Current | 1-5madc, 2-10madc, 4-20madc, 10-50 madc | | |
| DC Voltage/ DC Tachometer | 0-10vdc, 0-35vdc, 0-100vdc, 0-250vdc | | |
| AC Tachometer | 0-10vac, 0-35vac, 0-100vac, 0-250vac | | |
| MOD D07 (Kit Class 8804, Type MC-13) | | | |
| PNEUMATIC OPTION BOARD - This option board provides a pneumatic follower function plus a solid state run relay. | | | |
| Pneumatic | 3 to 15 psig. Input connection 5MM (0.20") O.D. male tubing slip on connector. Maximum pressure input is 45 psig. | Solid State Run Relay | Automatic start command for the controller from an external 4-33vdc signal. |
| | | Sequence Timing Relay | Provides a selectable timing range. The timing range is switch adjustable in 10 seconds increments from 10 to 160 seconds. The sequence timer controls the optional Auxiliary Sequence Relay No. 1 (ASR1). |

MOD S07 (Kit Class 8804, Type MC-16)

Serial Communication Option Board — This option board provides the capability of two-way serial communication between an OMEGAPAK controller and a Square D SY/MAX® or SY/MAX compatible programmable controller over an RS-422 link. A complete description of this option board is provided in Service Bulletin 8804-52.

MOD T07 (Kit Class 8804, Type MC-15)

Multispeed Option Board — This option board provides the capability of operating the controller at 5 preset speed points by closing remote contacts. The speed points are individually adjustable over the operating speed range of the controller. Typical applications include the use of a stepped master switch or where automatic speed control is desired and an analog follower signal is not available.

Refer to Service Bulletin 8804-54 for further information.

MOD H16 (Kit Class 8804, Type MC-21)

Status Monitor Option Board — This option board provides a means of visual indication of OMEGAPAK controller status external to the controller. It consists of printed wiring board and display unit. Capabilities include the display of controller operating parameters such as output frequency, voltage and current plus storage and indication of controller fault conditions. Service Bulletin 8804-51 provides a complete description of this option.

3.2.2 OPTION BOARD RELAYS**MOD F08**

Drive Fail Relay (DFR) Class 8501, Type RSD-14, 12vdc coil. Provides 1 form C contact to signal abnormal controller shut-down. Contact rated 5 amperes② resistive at 115vac maximum.

MOD S08

Auxiliary Sequence Relay No. 2 (ASR2) Class 8501, Type RSD-14, 12vdc coil. Provides 1 form C contact to signal that the drive is running. Contact rated 5 amperes② resistive at 115vac maximum.

MOD T08

Auxiliary Sequence Relay No. 1 (ASR1) Class 8501, Type RSD-14, 12vdc coil. Operates in conjunction with the sequence timing relay. Provides 1 form C contact to signal that the starting sequence was not successfully completed within the allotted time. This relay is normally used to monitor external activity such as Output Contactors, Pump Check Valves, and etc. Contact rated 5 amperes② resistive at 115vac maximum.

3.2.3 DYNAMIC BRAKING (DB)**MOD D09** (Kit Class 8804, Type DB-XX)

Dynamic braking provides a means of rapid deceleration or quick stopping by dissipating motor rotational energy as heat in the braking resistor. An electronic module with a gate turn-off thyristor (GTO) & resistor is included.

3.2.4 CONTROLLER MOUNTED PILOT DEVICES③**MOD A10**

| | |
|----------------------------|--------------------------------------|
| Hand-Auto-Selector Switch | Class 9001, Type KS11B-H2 |
| | Class 9001, Type KN 340 Legend Plate |
| Start Push Button | Class 9001, Type KR1B-H13 |
| | Class 9001, Type KN301 Legend Plate |
| Stop Push Button | Class 9001, Type KR1R-H13 |
| | Class 9001, Type KN302 Legend Plate |
| Manual Speed Potentiometer | Class 9001, Type K2107 |

MOD F10

| | |
|-------------------|--------------------------------------|
| Start Push Button | Class 9001, Type KR1B-H13 |
| | Class 9001, Type KN-301 Legend Plate |

Stop Push Button Class 9001, Type KR1R-H13
Class 9001, Type KN-302 Legend Plate

Fast Stop^④ Push Button Class 9001, Type KR1R-H13
Class 9001, Type KN-399 (FAST STOP) Legend Plate

Manual Speed Potentiometer Class 9001, Type K2107

MOD H10

Hand-Off-Auto Selector Switch Class 9001, Type KS43B-H2
Class 9001, Type KN-360 Legend Plate

Manual Speed Potentiometer Class 9001, Type K2107

MOD S10

Start Push Button Class 9001, Type KR1B-H13

Stop Push Button Class 9001, Type KR1R-H13

Class 9001, Type KN-302 Legend Plate

Manual Speed Potentiometer Class 9001, Type K2107

MOD B11

Forward-Reverse Selector Class 9001, Type KS11B-H1

Class 9001, Type KN339 Legend Plate

Run-Jog Selector Switch Class 9001, Type KS11B-H1

Class 9001, Type KN348 Legend Plate

MOD F11

Forward-Reverse Selector Switch Class 9001, Type KS11B-H1

Class 9001, Type KN339 Legend Plate

MOD J11

Run-Jog Selector Switch Class 9001, Type KS11B-H1

Class 9001, KN-348 Legend Plate

MOD F16

Drive Fail^⑥ Pilot Light Class 9001, Type KT35
Class 9001, Type KN399 (DRIVE FAIL)

MOD P16

Power On Pilot Light Class 9001, Type KP35
Class 9001 KN338 Legend Plate

MOD R16

Run Pilot Light Class 9001, Type KT35
Class 9001, Type KN324 Legend Plate

MOD S16

Incomplete^⑥ Sequence Pilot Light Class 9001, Type KT35
Class 9001, Type KN399 (INCOMPLETE SEQUENCE) Legend Plate

① For Option Board set-up procedure refer to Section 5.2 of this service bulletin.

② Limited by printed wiring board foil to 3 amperes continuous.

③ Refer to wiring diagram section of this service bulletin for terminal connections.

④ Fast Stop must not be used with two wire control or with automatic operation having a remote start contact.

⑤ Drive Fail Pilot Light Option requires a Drive Fail Relay (DFR).

⑥ Incomplete Sequence Pilot Light Option requires an Auxiliary Sequence Relay No. 1 (ASR1).

3.2.5**OUTPUT ISOLATION CONTACTOR AUXILIARY VERTICAL SECTION**

The isolation contactor section includes a contactor properly sized for the controller maximum continuous output current, a 200/230/460 - 120V control power transformer with two primary and one secondary fuse and 300 Amp ground bus. Also power bus if used.

3.2.6**ISOLATION AND BYPASS CONTACTORS AUXILIARY VERTICAL SECTION**

The isolation and bypass contactor section includes an isolation contactor mechanically and electrically interlocked with a full voltage non-reversing starter for bypass operation, an AFC-OFF-LINE selector switch, a 200/230/460V - 120V control power transformer with two primary and one secondary fuses, a transfer delay timer and 300 Amp ground bus.

A Class 8804 3DDG-4 () will also include a fusible disconnect for the bypass mode of operation. A Class 8804 3DMG-4 () will also include a circuit breaker disconnect for the bypass mode of operation.

3.2.7 ISOLATION AND TRANSFER CONTACTOR AUXILIARY VERTICAL SECTION

The isolation and transfer contactor section includes an isolation contactor electrically and mechanically interlocked with a transfer contactor, an AFC-OFF-LINE selector switch, a 200/230/460V - 120V control power transformer with two primary and one secondary fuses, a transfer delay timer and 300 Amp ground bus. The transfer contactor is to allow the customer's existing equipment to be used as a bypass starter or allows for the use of a reduced voltage bypass starter.

3.2.8 POWER BUS MOD A12 THROUGH T12, AND 600A GROUND BUS MOD G16.

Various combinations of power and ground bus are available to permit the OMEGAPAK controller to be arranged in a motor control center line-up. Power and ground bus matches that used in Square D motor control centers. The OMEGAPAK controller is supplied with 300 Amp ground bus as standard.

3.2.9 METERS

The meters described below are available in kit form for remote mounting or factory installed in the controller. Refer to Drawing 11.7.1 for connection diagram.

MOD A14 (Kit Class 8804, Type AM-1)

Analog Speed Meter - 3-1/2 inch meter with indicating scale of 0-100% speed. This

meter is connected to the Main Control Board. A 0-5vdc signal is used to drive this meter.

MOD D14 (Kit Class 8804, Type DM-1) ①

Digital Speed Meter - 3-1/2 inch meter selectable to indicate 0-100% speed or 0-1999 RPM (Maximum RPM indication is 1999). This meter is connected to the same terminal points as the analog meter (MOD A14) described above.

MOD T15

Elapsed Time Meter - 3-1/2 inch meter with indicating scale of 99999.9 hours maximum. This meter is connected to the Main Control Board.

MOD V15 (Kit Class 8804, Type AM-2)

Analog Voltmeter - 3-1/2 inch meter with indicating scale of 0-125% of rated output voltage. This meter is connected to the main control board. A 0-5 vdc signal drives this meter.

MOD F15 (Kit Class 8804, Type DM-1) ①

Digital Voltmeter - 3-1/2 inch meter adjustable to read 0-100.0% of rated output voltage. This meter is driven by the same 0-5 vdc signal as the analog voltmeter.

MOD A15 (Kit Class 8804, Type AM-3)

Analog Ammeter - 3-1/2 inch meter with indicating scale to read 0-150% of rated controller output current. This meter is connected to the main control board. A 0-5 vdc signal drives this meter.


MOD G15 (Kit Class 8804, Type DM-1) ①

Digital Ammeter - 3-1/2 inch meter adjustable to read 0-150.0% of rated controller output current. This meter is driven by the same 0-5 vdc signal as the analog ammeter.


① The Class 8804 Type DM-1 meter can be field adjusted to display speed, voltage or current.

4.0 CONTROLLER PHOTOS


4.1 OMEGAPAK CONTROLLER

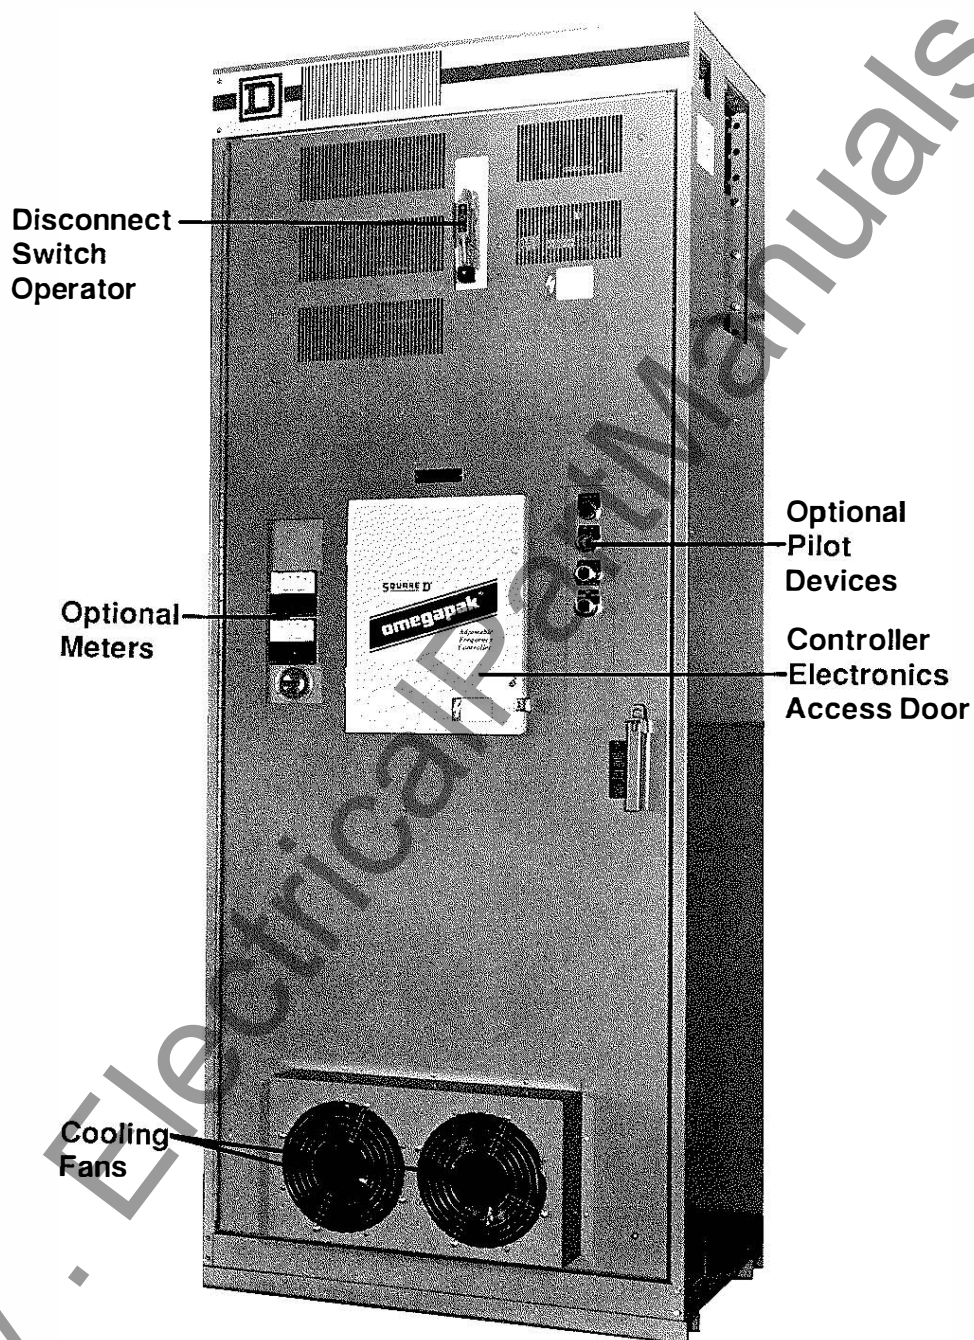


4.2 CONTROLLER WITH ELECTRONICS DOOR OPEN

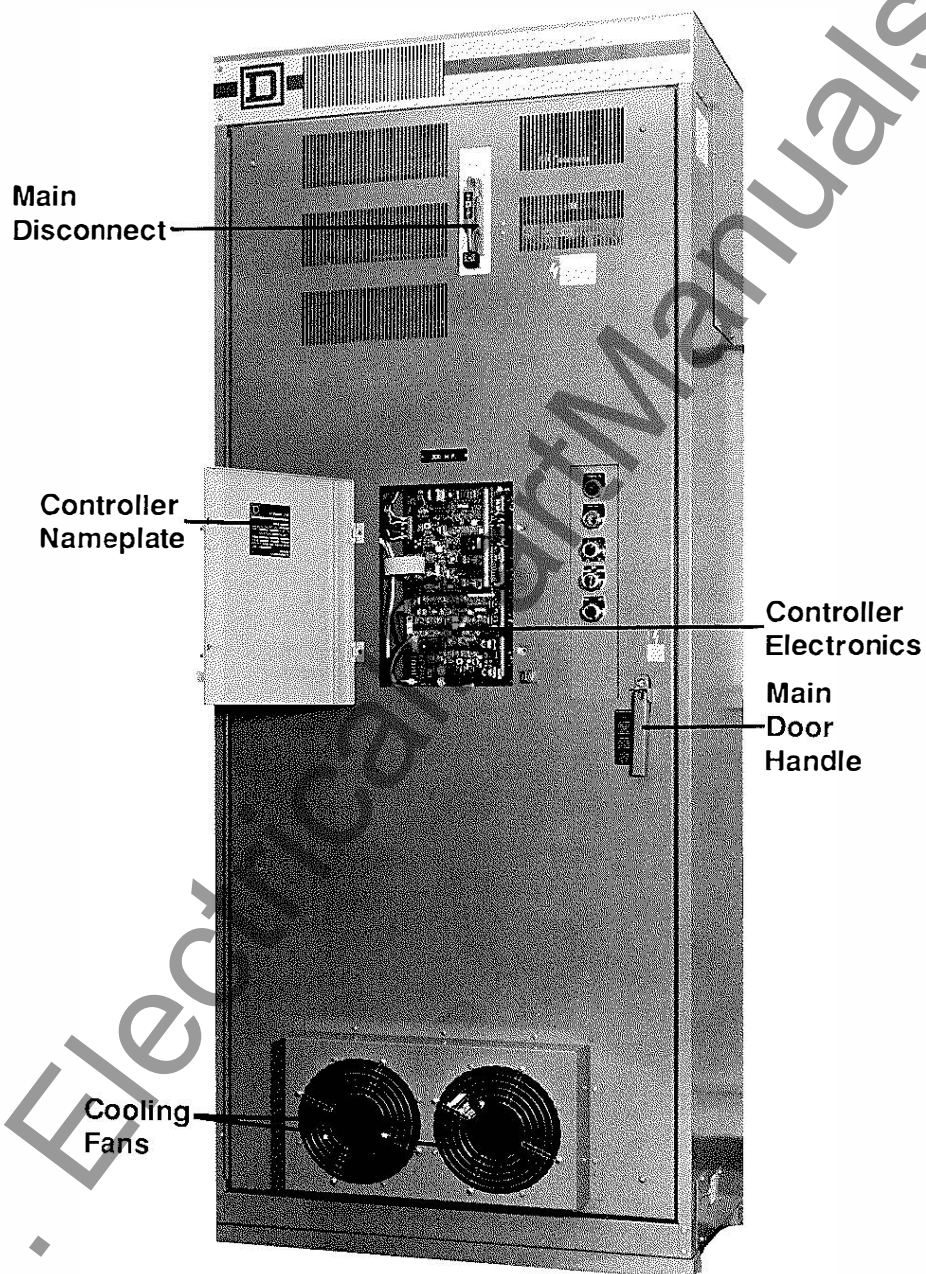


4.3 CONTROLLER WITH MAIN DOOR OPEN

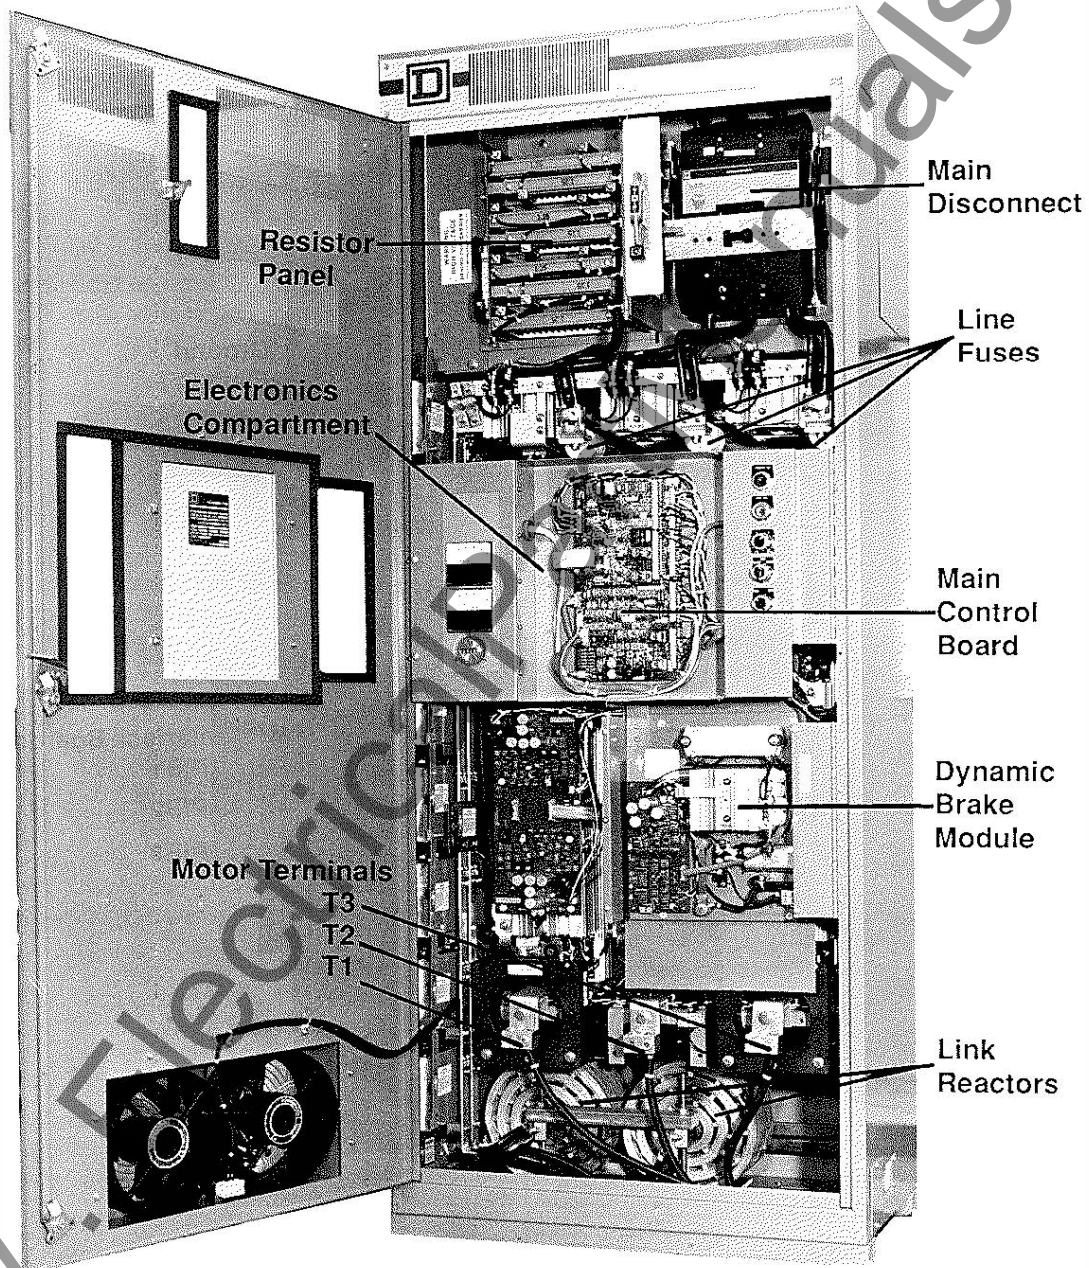


4.4 CONTROLLER WITH ELECTRONICS CONTROL COMPARTMENT SWUNG OUT

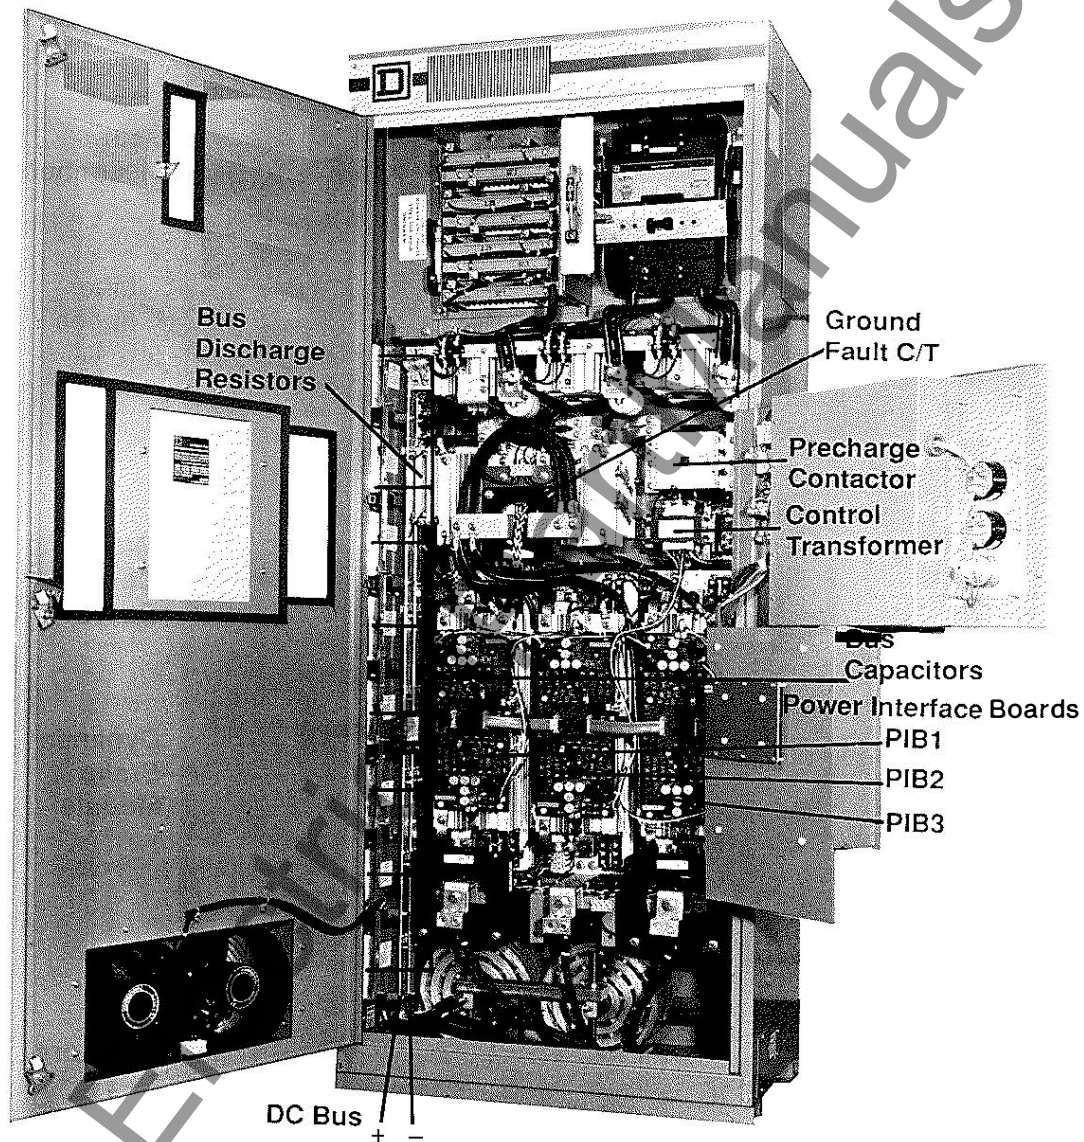


4.5 RESISTOR PANEL OPEN TO MAIN LUGS

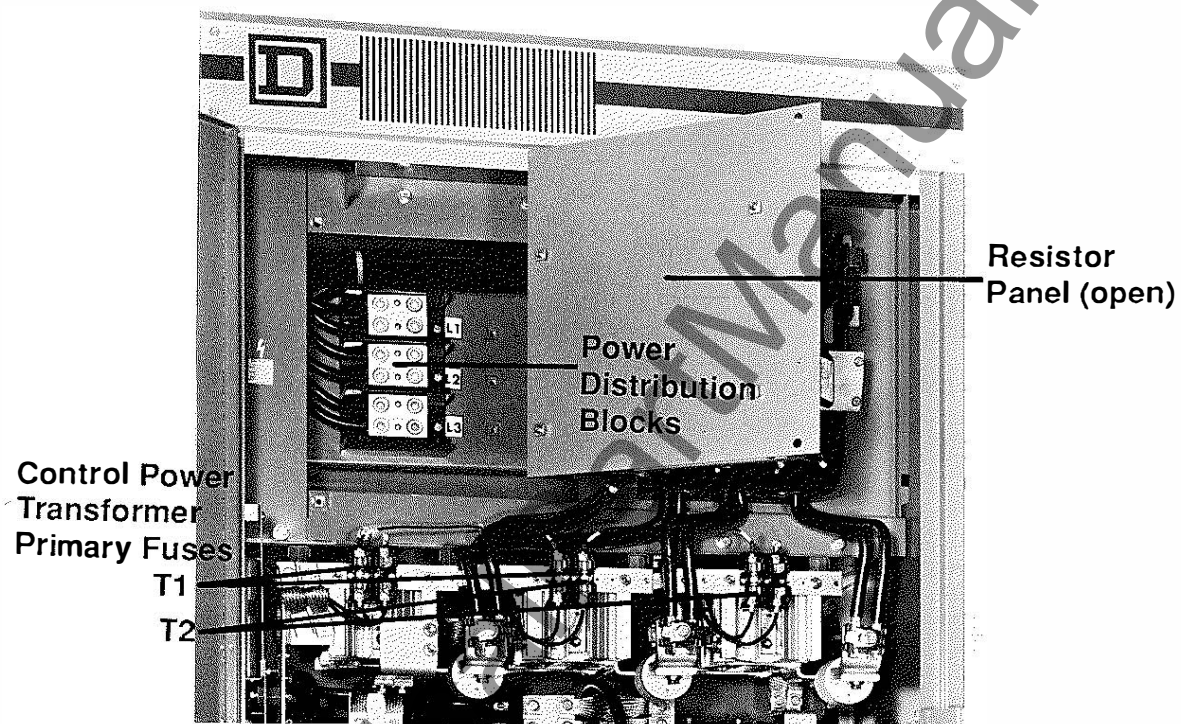


4.6 CLOSE UP OF MAIN CONTROL BOARD WITH OPTION CARD

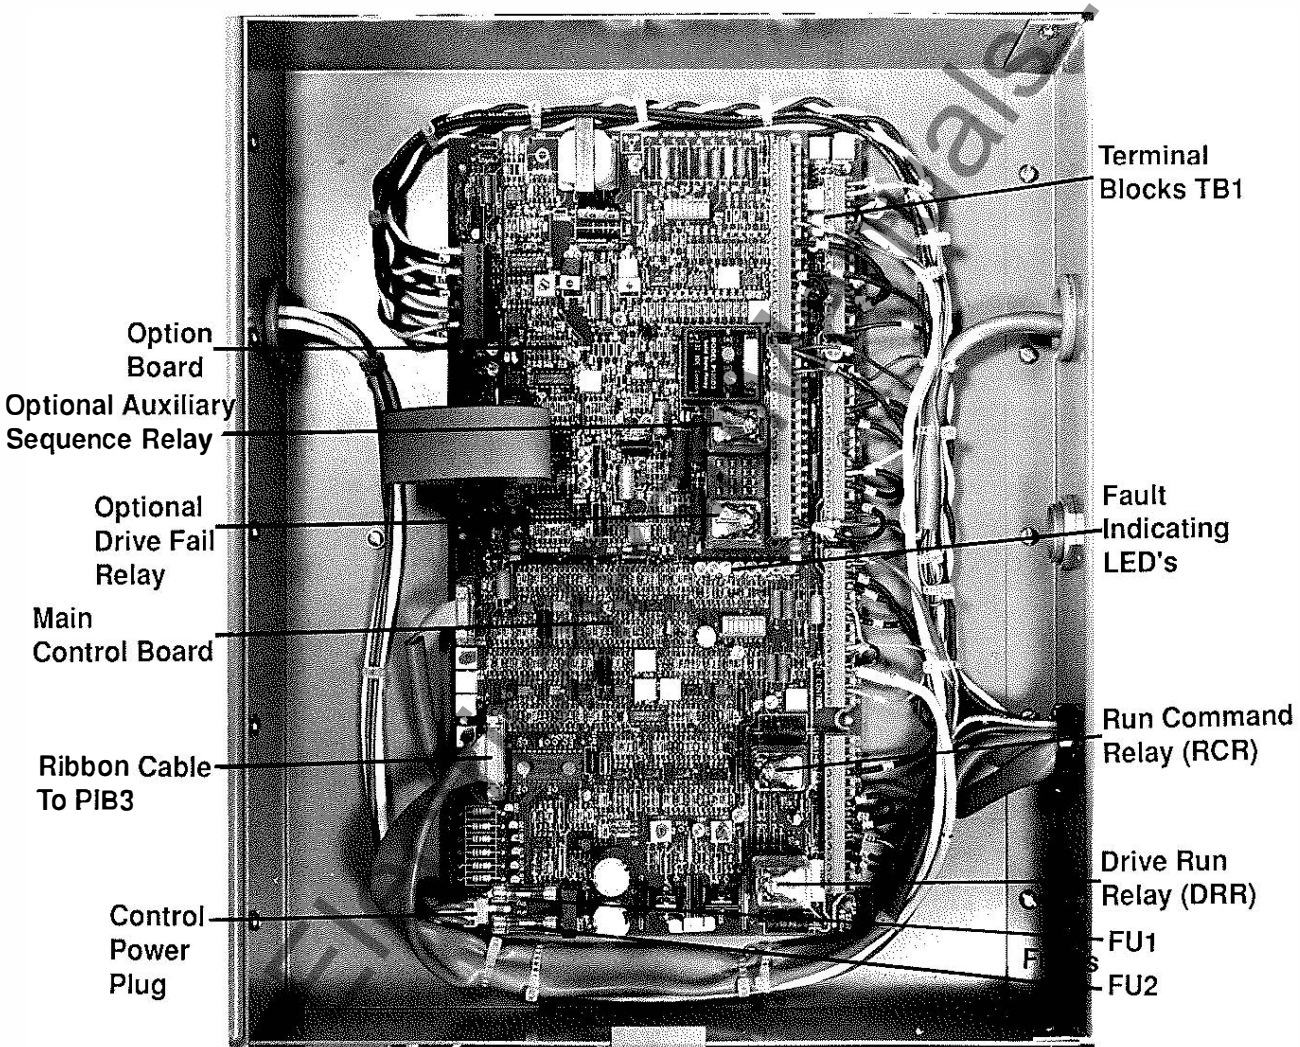


4.7 CLOSE UP OF POWER INTERFACE BOARD

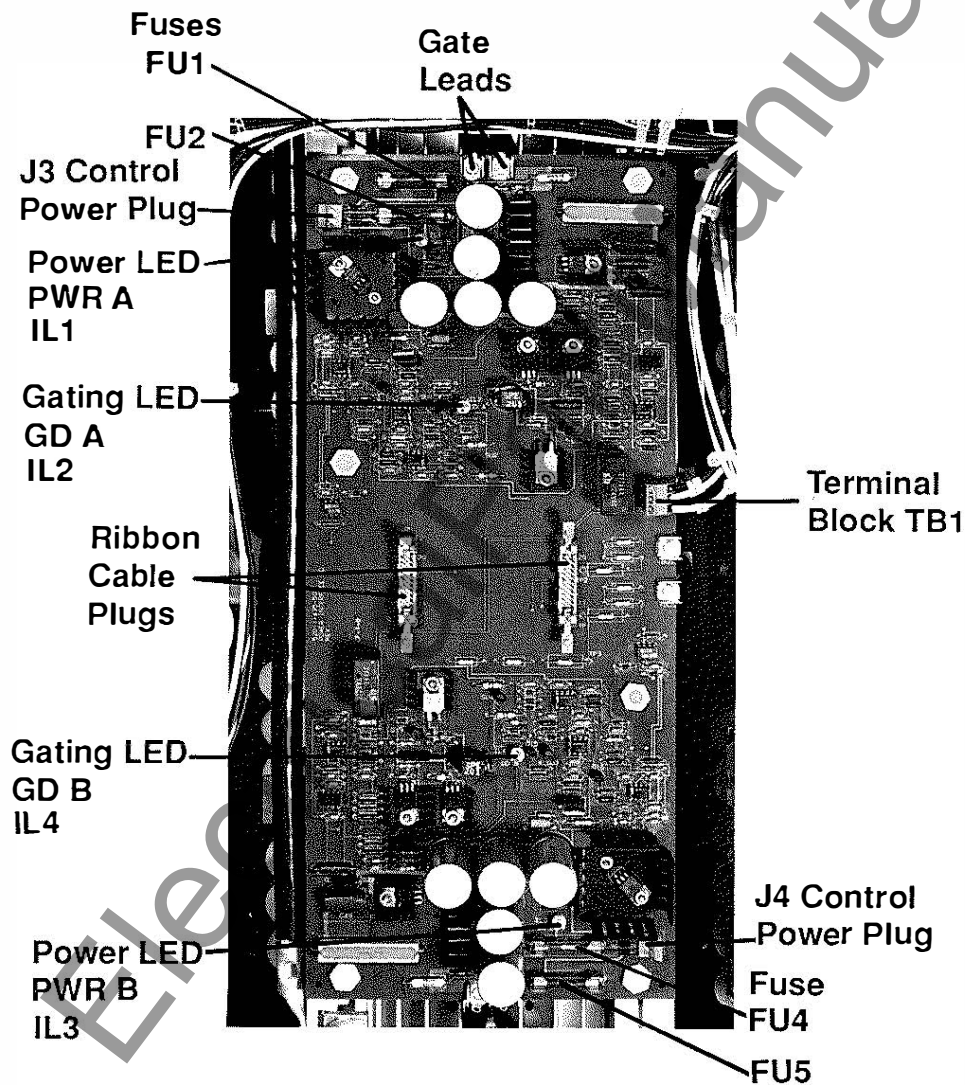

4.8 CLOSE UP OF REACTORS

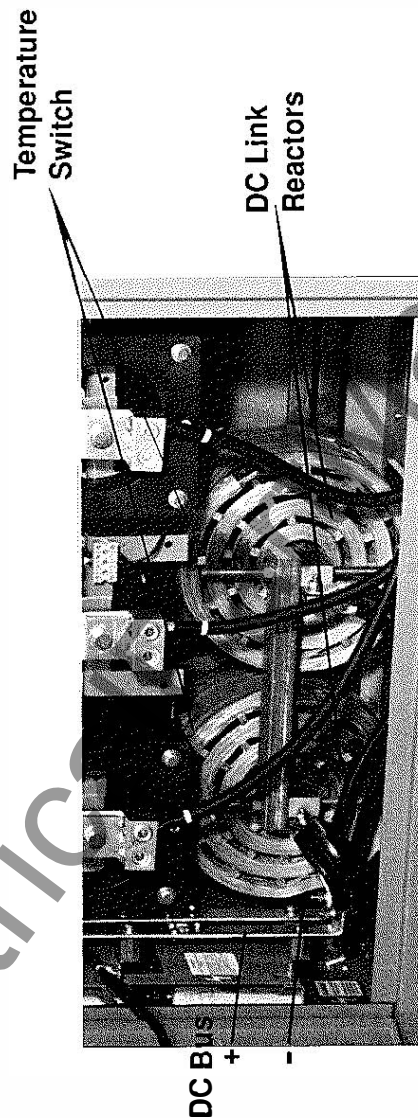

4.9 CLOSE UP OF BUS INDICATOR BOARD

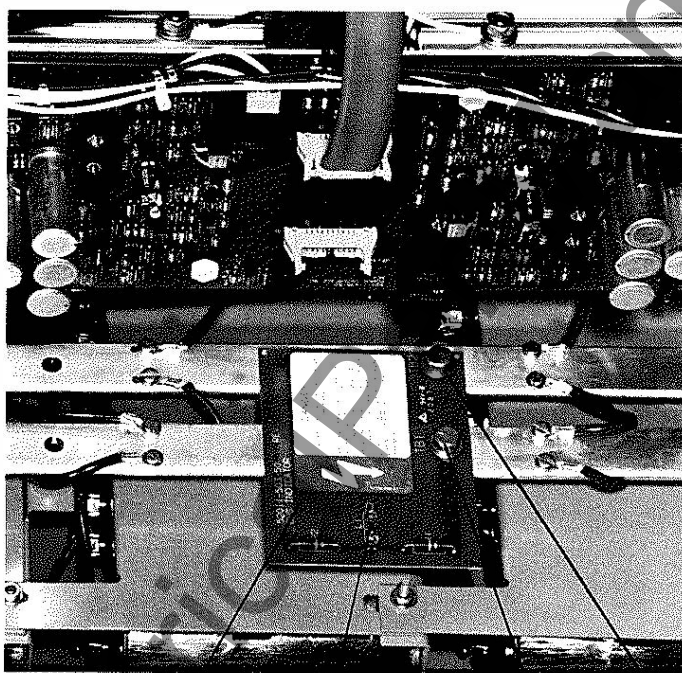
Bus Indicator
BoardBus Charge
Neon Light

+ Bus


- Bus

Bus
Connections


4.10 INVERTER POWER POLES

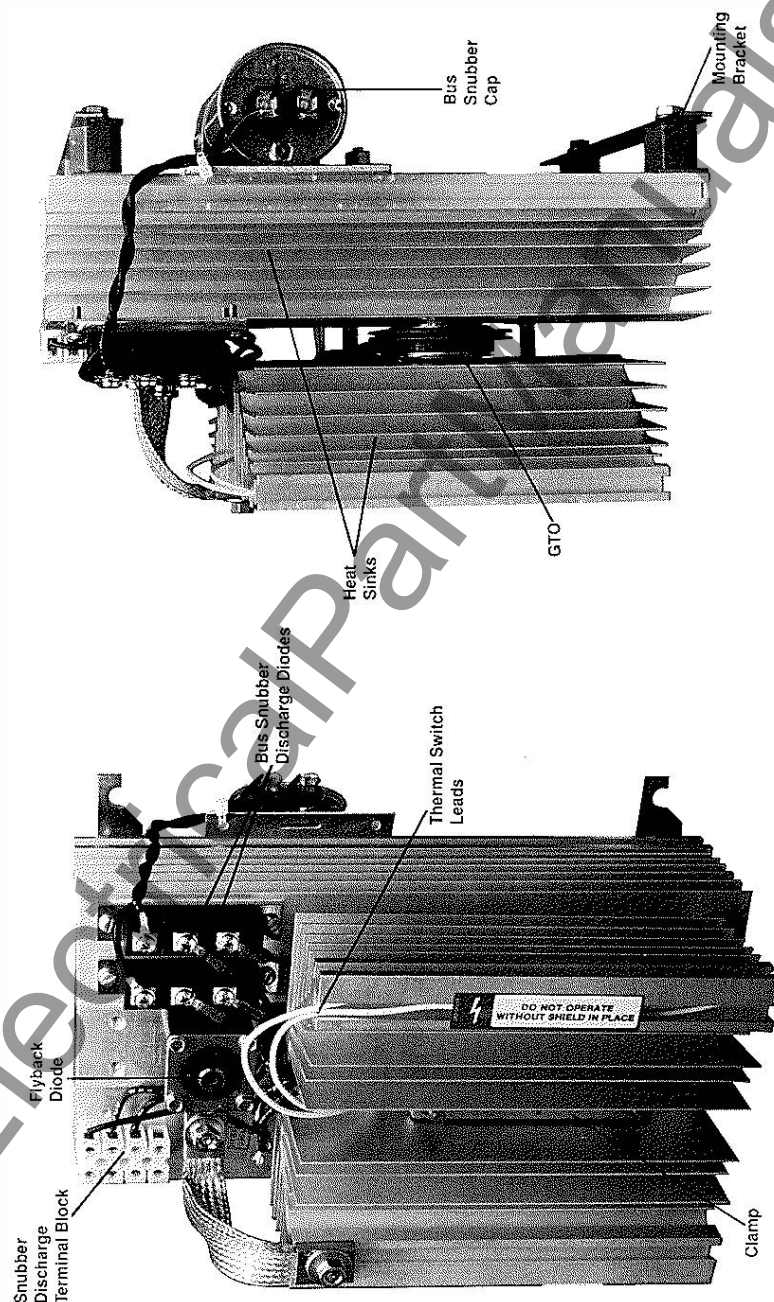

4.11 PRECHARGE CONTACTOR, TRANSFORMERS, AND FAN RELAY

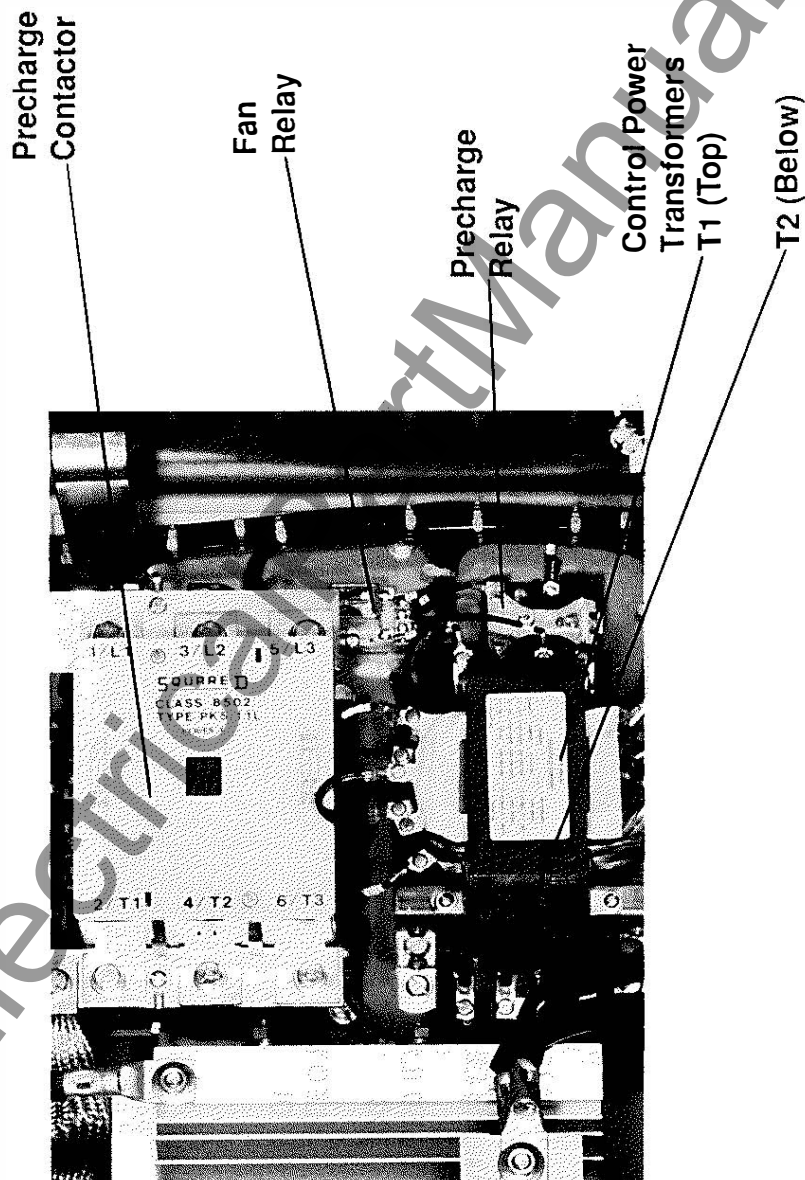

4.12 DYNAMIC BRAKE UNIT

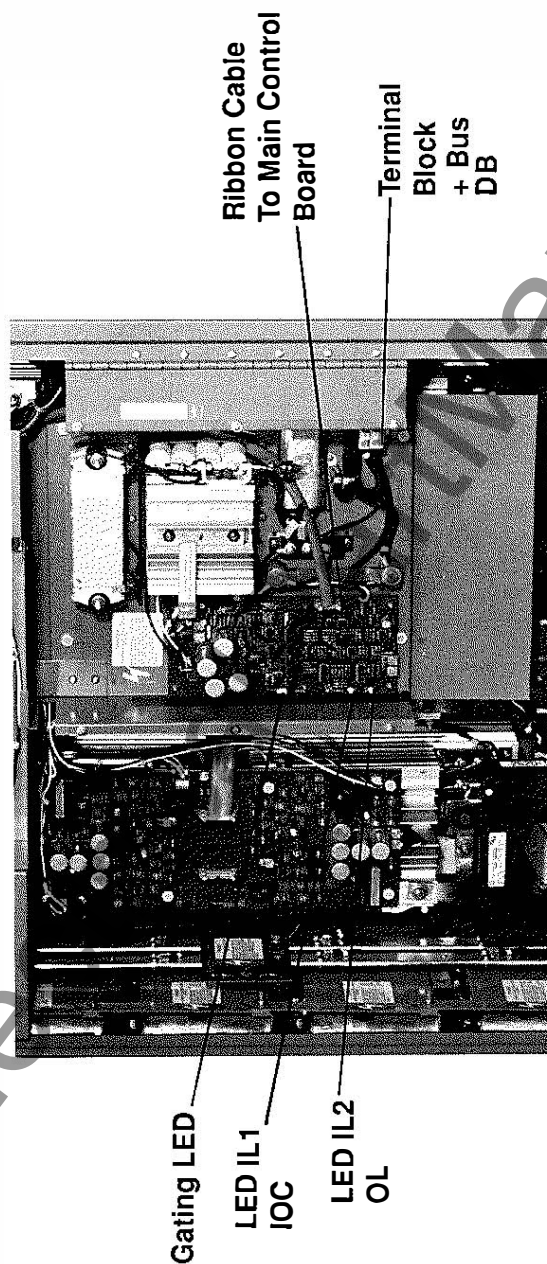

5.0 INITIAL START-UP PROCEDURE

5.1 INITIAL START-UP PROCEDURE WITHOUT OPTION BOARD

The OMEGAPAK controller has been tested at the factory and should require only minor adjustments to complete the field installation. This start-up procedure should be followed step by step. In case of difficulty refer to the TROUBLESHOOTING section of this service bulletin.

DANGER

HAZARD OF ELECTRICAL SHOCK OR BURN BEFORE SERVICING, TURN OFF POWER SUPPLY(S) TO THIS EQUIPMENT. WAIT FIVE MINUTES. MEASURE CAPACITOR VOLTAGES TO VERIFY THEY ARE ZERO. DO NOT SHORT ACROSS CAPACITORS WITH VOLTAGE PRESENT.

WITH ALL INCOMING POWER REMOVED, make the following equipment settings and adjustment:

- A. Verify that all equipment disconnect means are open.
- B. Connect the Control Power Transformer primary taps of both control power transformers as illustrated in Section 6.0, Figures 6.1 and 6.2, for the system input voltage. Refer to Section 4.0, OMEGAPAK Controller Photo for location of the control power transformers.
- C. Connect the Dynamic Braking Resistors (if used) as illustrated in Section 11.0, Drawing 11.8.1, for the system input voltage.
- D. Set selection switches SW1 through SW8 on the main control board as required. See Section 6.0, Figure 6.3. Refer to Section 8.0, Selection Switch Placement chart, for location of switch.
- E. Configure the snip-out resistors on the main control board as required. See Section 6.0, Figure 6.4. Refer to Section 8.0,

Snip-Out Resistor Placement chart, for location of resistors.

- F. The following adjustments on the main control board were factory set as follows. Refer to Section 8.0, Potentiometer Placement chart, for location of potentiometers. *Do not adjust any potentiometers unless directed in the start-up procedure.*

| | |
|--------------------------------|--|
| +10VDC SUPPLY ADJUST (P1)* | +10vdc |
| -10VDC SUPPLY ADJUST (P2)* | -10vdc |
| REGEN CURRENT LIMIT (P3) | Maximum (full clockwise) |
| MOTOR CURRENT LIMIT (P4) | Maximum (full clockwise) |
| OVERLOAD THRESHOLD (P5) | Maximum (full clockwise) |
| GAIN ADJUST (P6)* | Optimized for controller |
| FREQUENCY CLOCK OFFSET (P7) | Disabled |
| HAND MINIMUM SPEED (P8) | Minimum 1.25 Hz (full counterclockwise) |
| ACCELERATION TIME (P9) | Maximum (full clockwise) |
| DECELERATION TIME (P10) | Maximum (full clockwise) |
| SLIP COMPENSATION (P11) | Minimum (full counterclockwise) |
| VOLTS/HERTZ TRIM (P12)* | Optimized for standard motor |
| VOLTAGE BOOST (P13) | Minimum (full counterclockwise) |
| MAXIMUM SPEED (P14) | 60 Hz Output with nominal speed ref. |
| OFFSET NULL (P15)* | Optimized for controller |

* Designates potentiometers that have been factory sealed. **DO NOT ADJUST!**

- G. Place the Start switch (controller mounted or remote mounted) to the off position.
- H. Set the Manual Speed adjustment potentiometer (controller mounted or remote mounted) to minimum (full counterclockwise).
- I. Check wiring of input power panel ground, motor, manual speed potentiometer (if remote) and Start-Stop circuit connections, (if remote). Refer to Section 11.0 for

the controller connection diagram and wiring diagram for remote control operators station.

- J. Verify that the incoming line voltage at the line side of the disconnecting means is within +10% to -5% of the controller nameplate input voltage.

DANGER

**HAZARD OF ELECTRICAL SHOCK OR BURN
CONTROLLER PANEL MUST BE PROPERLY
GROUNDED BEFORE APPLYING POWER.
CLOSE AND SECURE ENCLOSURE DOOR
BEFORE APPLYING POWER.**

WITH INCOMING POWER PRESENT**DANGER**

**HAZARD OF ELECTRICAL SHOCK OR BURN
CERTAIN ADJUSTMENTS AND TEST PRO-
CEDURES REQUIRE THAT POWER BE AP-
PLIED TO THIS CONTROLLER. WHEN WORK-
ING WITH ENERGIZED EQUIPMENT, EX-
TREME CAUTION MUST BE EXERCISED AS
HAZARDOUS VOLTAGES EXIST. THE
ENCLOSURE DOOR MUST BE CLOSED AND
SECURED WHILE TURNING ON POWER,
OR STARTING AND STOPPING THIS
CONTROLLER.**

- K. Close and secure the enclosure door. Close the equipment disconnect means. The Power On lamp (if used) should light. Other lamps (if used) may be tested by pushing their lenses (if push to test lamps are used).
- L. Open the electronics compartment door to verify that **only** LED's (IL1) and (IL2) on the Main Control Board are lighted. Refer to Section 8.0, LED Placement Chart for location of LED's.
- M. Initiate the Start circuit. Slowly turn the Manual Speed adjustment potentiometer clockwise to accelerate the drive motor. Check the direction of motor rotation. If correct, proceed to step Q. If incorrect, stop drive①. **REMOVE ALL POWER!**

DANGER

**HAZARD OF ELECTRICAL SHOCK OR BURN
BEFORE SERVICING, TURN OFF POWER
SUPPLY(S) TO THIS EQUIPMENT. WAIT FIVE
MINUTES. MEASURE CAPACITOR VOLTAGES
TO VERIFY THAT THEY ARE ZERO. DO NOT
SHORT ACROSS CAPACITORS WITH
VOLTAGE PRESENT.**

- N. Correct the direction of motor rotation by one of the following methods:
1. If a Forward-Reverse selector switch is not used, place a jumper from TB1-22 to TB1-27 on the main control board.
 2. If a Forward-Reverse selector switch is used, change the contact arrangement on the Forward-Reverse selector switch. Refer to Section 11.0, wiring diagrams, for controller mounted or remote mounted pilot devices.
- O. Reset the Manual Speed adjustment potentiometer setting to minimum speed (full counter clockwise). Close and secure the enclosure door then, reapply power and restart the controller.
- P. Slowly increase the Manual Speed adjustment potentiometer setting to maximum (full clockwise). The motor speed should follow. If the motor will not accelerate refer to Section 6.0, Controller Adjustments, for setting of the Voltage Boost Potentiometer (P13).
- Q. Check the maximum motor speed. Adjust the Max Speed Potentiometer (P14) on the main control board to obtain motor rated speed.
- R. Return the Manual Speed adjustment potentiometer to minimum setting (full counterclockwise). The motor speed① should follow.
- S. Slowly adjust the Hand Minimum Reference Potentiometer (P8) on the main control board to obtain the desired minimum speed.
- T. Using the Manual Speed adjustment potentiometer adjust the motor speed for the point of maximum motor current. (This must not exceed the motor or controller nameplate current.) Slowly turn the Overload Threshold Adjust Potentiometer (P5) on the main control board counter-

clockwise until the Overload Timer LED (IL11) lights. Now, slowly turn P5 clockwise until the Overload Timer LED (IL11) just extinguishes. Then turn P5 an additional 5 degrees clockwise rotation.

NOTE: If the motor cannot be loaded refer to Section 6.0, Controller Adjustments, for alternate method of adjusting the Overload Threshold Adjust Potentiometer (P5).

CAUTION

THIS CONTROLLER DOES NOT PROVIDE OVERTEMPERATURE PROTECTION FOR THE MOTOR AT ALL SPEEDS OR LOADING CONDITIONS. A MOTOR THERMAL SENSOR IS RECOMMENDED.

U. The Acceleration Time (P9) and Deceleration Time (P10) potentiometers on the main control board may be adjusted to suit individual applications. If a high inertia load is present, then the drive may require extremely long times to decelerate if no dynamic braking or regenerative control options are used. If an overvoltage trip occurs during deceleration, increase the deceleration time setting.

V. This completes the initial start-up procedure. The controller is now setup for most applications.

The settings listed above are suitable for most applications. If your application requires different operating characteristics, refer to Section 6.0, Controller Adjustment, in this service bulletin.

Abnormal Operation

Refer to Section 7.0, Diagnostic Indicating Lights, if any of the following LEDs on the main control board are illuminated.

- IL3 Undervoltage (UV)
- IL4 Overvoltage (OV)
- IL5 Shoot Through (ST)
- IL6 Ground Fault (GF)
- IL7 Instantaneous Overcurrent (IOC)
- IL8 Overload (OLD)
- IL9 Overtemperature (OT)
- IL10 Option Fault (OF)
- IL11 Overload Timer (OLT)
- IL13 Drive Lockout (DL)

5.2 INITIAL START-UP PROCEDURE WITH OPTION BOARD

The OMEGAPAK controller has been tested at the factory and should require only minor adjustments to complete the field installation. This start-up procedure should be followed step by step. In case of difficulty refer to the TROUBLESHOOTING section of this service bulletin.

CAUTION

THE TERM "DISCONNECTING MEANS" IN THIS START-UP PROCEDURE REFERS TO BOTH THE CONTROLLER DISCONNECTING MEANS AND THE AUXILIARY VERTICAL SECTION POWER SOURCE DISCONNECTING MEANS. THE TERM "ENCLOSURE DOOR" IN THIS START-UP PROCEDURE REFERS TO BOTH THE CONTROLLER AND AUXILIARY VERTICAL SECTION ENCLOSURE DOORS.

DANGER

HAZARD OF ELECTRICAL SHOCK OR BURN BEFORE SERVICING, TURN OFF POWER SUPPLY(S) TO THIS EQUIPMENT. WAIT FIVE MINUTES. MEASURE CAPACITOR VOLTAGES TO VERIFY THEY ARE ZERO. DO NOT SHORT ACROSS CAPACITORS WITH VOLTAGE PRESENT.

WITH ALL INCOMING POWER REMOVED, make the following equipment settings and adjustment:

- A. Verify that all equipment disconnect means are open.
- B. Connect the Control Power Transformer primary taps of both control power transformers as illustrated in Section 6.0, Figures 6.1 and 6.2, for the system input voltage. Refer to Section 4.0, OMEGAPAK Controller Photo, for location of the control power transformers.
- C. Connect the Control Power Transformer primary taps for the Auxiliary Vertical Section as illustrated in Section 6.0, Figure 6.2, for the system input voltage. Refer to Section 8.3 Auxiliary Vertical Section Component Placement for location of Control Power Transformer.
- D. Connect the Dynamic Braking Resistors (if used) as illustrated in Section 11.0, drawing 11.8.1 for the system input voltage.

E. Temporarily place a jumper from TB1-89 to TB1-91 on the option board. If TB1-89 and TB1-91 not present on option board, disregard this step.

F. Determine the type of option board installed and if the shutdown reference (SPEED) mode of operation is used, then proceed as follows:

Non-Isolated or Isolated Option Board
(Mod. A07, B07, C07)

Temporarily disconnect and isolate the analog follower input signal wiring from TB1 of the option board.

Pneumatic Option Board (Mod. D07)

Connect an automatic follower pneumatic signal to the pressure sensor PS1.

Shutdown Reference (Speed) (if used)

The jumper between TB1-12 (+10vdc) on the main control board and TB1-80 (Jog Ref.) on the option board must be moved. Remove the jumper from TB1-80 (Jog Ref.) and re-connect to TB1-82 (Shutdown Ref.) on the option board. Leave the jumper connected to TB1-12 (+10vdc) on the main control board.

G. Set selection switches SW1 through SW8 on the main control board as required. See Section 6.0, Figure 6.3. Refer to Section 8.0, Selection Switch Placement chart, for location of switch. If MOD C07 is used temporarily set SW4 to the open position. This will prevent nuisance shutdowns due to option fault when adjusting.

H. Configure the snip-out resistors on the main control board as required. See Section 6.0, Figure 6.4. Refer to Section 8.0, Snip-Out Resistor Placement chart, for location of resistors.

I. Set selection switches SW1-1 through SW1-4 or switches SW1-5 through SW1-8 on the option board (if used) as required. See Section 6.0, Figure 6.5. Refer to Section 8.0, Selection Switch Placement chart, for location of switch.

J. Set selection switches SW2-1 through SW2-4 on the option board for the Sequence Timing Relay (STR), time delay as required (if used). See Section 6.0, Figure 6.5. Refer to Section 8.0, Selection Switch Placement chart for location of switch. For controllers equipped with check valves, the incomplete sequence timing relay must be set for a time greater than that required for the check valve to operate.

K. The following adjustments on the main control board were factory set as follows. Refer to Section 8.0, Potentiometer Placement chart, for location of potentiometers. (Do not adjust any potentiometers unless directed in the start-up procedure).

| | |
|-----------------------------|---|
| +10VDC SUPPLY ADJUST (P1)* | +10vdc |
| -10VDC SUPPLY ADJUST (P2)* | -10vdc |
| REGEN CURRENT LIMIT (P3) | Maximum (full clockwise) |
| MOTOR CURRENT LIMIT (P4) | Maximum (full clockwise) |
| OVERLOAD THRESHOLD (P5) | Maximum (full clockwise) |
| GAIN ADJUST (P6)* | Optimized for controller |
| FREQUENCY CLOCK OFFSET (P7) | Disabled |
| HAND MINIMUM SPEED (P8) | Minimum 1.25 Hz (full counterclockwise) |
| ACCELERATION TIME (P9) | Maximum (full clockwise) |
| DECELERATION TIME (P10) | Maximum (full clockwise) |
| SLIP COMPENSATION (P11) | Minimum (full counterclockwise) |
| VOLTS/HERTZ TRIM (P12)* | Optimized for standard motor |
| VOLTAGE BOOST (P13) | Minimum (full counterclockwise) |
| MAXIMUM SPEED (P14) | 60 Hz Output with nominal speed ref. |
| OFFSET NULL (P15)* | Optimized for controller |

* Designates potentiometers that have been factory sealed. **DO NOT ADJUST!**

L. The following adjustments on the option board were factory set as follows. Refer to Section 8.0 Potentiometer Placement chart, for location of potentiometers. (Do not adjust any potentiometers unless directed in the start-up procedure).

| | |
|----------------------|--|
| ZERO (P3) (if used)* | Optimized for Option Board |
| MIN SP/OFFSET (P2)** | Zero output with 3 PSI input or zero offset. |

* Designates potentiometers that have been factory sealed. **DO NOT ADJUST!**

** Factory sealed on Pneumatic Option Board (MOD D07) only.

Adjust the potentiometers on the option board as follows:

| | |
|-----------------------|---------------------------------|
| SPAN 1 (P1) (if used) | Minimum (full counterclockwise) |
| SPAN 2 (P4) (if used) | Minimum (full counterclockwise) |
| JOG/SHUTDOWN REF (P5) | Minimum (Full counterclockwise) |

- M. Set the HAND-OFF-AUTO switch to OFF^③.
- N. Set the MANUAL SPEED adjustment potentiometer to minimum (full counter-clockwise)
- O. If the controller is used with either an Isolation and Bypass, or Isolation and Transfer Auxiliary Vertical Section confirm that the AFC-OFF-LINE selector switch is in the OFF position.
- P. Check wiring of input power, panel ground, motor, manual speed potentiometer (if remote) and Hand-Off-Auto circuit connections, (if remote). Refer to Section 11.0 for the controller connection diagram and wiring diagram for remote control station.
- Q. Verify that the incoming line voltage at the line side of the disconnecting means is within +10% to -5% of the controller nameplate input voltage.

DANGER
HAZARD OF ELECTRICAL SHOCK OR BURN
CONTROLLER PANEL MUST BE PROPERLY
GROUNDED BEFORE APPLYING POWER.
CLOSE AND SECURE ENCLOSURE DOOR
BEFORE APPLYING POWER.

WITH INCOMING POWER PRESENT

DANGER
HAZARD OF ELECTRICAL SHOCK OR BURN
CERTAIN ADJUSTMENTS AND TEST PRO-
CEDURES REQUIRE THAT POWER BE AP-
PLIED TO THIS CONTROLLER. WHEN WORK-
ING WITH ENERGIZED EQUIPMENT, EX-
TREME CAUTION MUST BE EXERCISED AS
HAZARDOUS VOLTAGES EXIST. THE
ENCLOSURE DOOR MUST BE CLOSED AND
SECURED WHILE TURNING ON POWER,
OR STARTING AND STOPPING THIS
CONTROLLER.

- R. Close and secure the enclosure door. Close the equipment disconnect means. The Power On lamp (if used) should light. Other lamps (if used) may be tested by pushing their lenses (if push to test lamps are used).
- S. Open the electronics compartment door to verify that **only** the following lamps are

lighted: LED's (IL1) and (IL2) on the Main Control Board, IL2 and IL3 (if an isolated follower MOD C07 is used), and IL7 on the Option Board.

Refer to Section 8.1 and 8.2, LED Placement chart, for location of LED's.

NOTE: It is possible that LED (IL10) on the main control board may be lighted if an isolated follower (MOD C07) board is being adjusted.

- T. If an Isolation-Bypass or Isolation-Transfer Section is not used proceed to Step X.
- U. If the Isolation-Bypass or Isolation-Transfer Section is used, turn the AFC-Off-Line selector switch to the Line position. If necessary, adjust the disconnect means trip setting to the lowest value that will not result in nuisance tripping. The motor should accelerate to full speed. Check the motor rotation. If it is incorrect, stop the drive by turning the AFC-Off-Line selector switch to Off. **REMOVE ALL POWER!**
- V. Correct the phase sequence of the motor by reversing motor leads T1 and T2 at the output of the Isolation-Bypass unit. Reapply power.
- W. Turn the Isolation-Bypass or Isolation-Transfer Section (if used) AFC-Off-Line selector switch to AFC.
- X. Close and secure the enclosure door. Turn the Hand-Off-Auto^③ Selector Switch to Hand. Slowly turn the Manual Speed adjustment potentiometer clockwise to accelerate the drive motor. Check the direction of motor rotation. If correct, proceed to Step AA. If incorrect, stop drive^②. **REMOVE ALL POWER!**

DANGER
HAZARD OF ELECTRICAL SHOCK OR BURN
BEFORE SERVICING, TURN OFF POWER
SUPPLY(S) TO THIS EQUIPMENT. WAIT FIVE
MINUTES. MEASURE CAPACITOR VOLTAGES
TO VERIFY THAT THEY ARE ZERO. DO NOT
SHORT ACROSS CAPACITORS WITH
VOLTAGE PRESENT.

- Y. Correct the direction of motor rotation by one of the following methods:

1. If a Forward-Reverse selector switch is not used, place a jumper from TB1-22 to TB1-27 on the main control board. Proceed to Step AA.
2. If a Forward-Reverse selector switch is used, change the contact arrangement on the Forward-Reverse selector switch. Refer to Section 11.0, wiring diagrams for controller mounted or remote pilot devices.
- Z. Reset the Manual Speed adjustment potentiometer setting to minimum speed (full counterclockwise). Close and secure the enclosure door then, reapply power and restart the controller.
- AA. Slowly increase the Manual Speed adjustment potentiometer setting to maximum (full clockwise). The motor speed should follow. If the motor will not accelerate refer to Section 6.0, Controller Adjustment, for setting of the Voltage Boost Potentiometer (P13).
- BB. Check the maximum motor speed. Adjust the Maximum Speed Potentiometer (P14) on the main control board to obtain motor rated speed.
- CC. Return the Manual Speed adjustment potentiometer to minimum setting (full counterclockwise). The motor speed^① should follow.
- DD. Slowly adjust the Hand Minimum Speed potentiometer (P8) on the main control board to obtain the desired minimum speed.
- EE. Using the Manual Speed adjustment potentiometer adjust the motor speed for the point of maximum motor current. (This must not exceed the motor or controller nameplate current.) Slowly turn the Overload Threshold Adjust Potentiometer (P5) on the main control board counterclockwise until the Overload Timer LED (IL11) lights. Now, slowly turn P5 clockwise until the Overload Timer LED (IL11) just extinguishes. Then turn P5 an additional 5 degrees clockwise rotation.
NOTE: If the motor can not be loaded refer to Section 6.0, Controller Adjustment, for alternate method of adjusting the Overload Threshold Adjust Potentiometer (P5).

FF. The Acceleration Time (P9) and Deceleration Time (P10) Potentiometers on the main control board may be adjusted to suit individual applications. If a high inertia load is present, then the drive may require extremely long times to decelerate if no dynamic braking or regenerative control options are used. If an over-voltage trip occurs during deceleration, increase the deceleration time setting.

GG. Turn the Hand-Off-Auto^③ switch to Auto. Proceed to the section which corresponds to the type of option board installed.

CAUTION

THIS CONTROLLER DOES NOT PROVIDE OVERTEMPERATURE PROTECTION FOR THE MOTOR AT ALL SPEEDS OR LOADING CONDITIONS. A MOTOR THERMAL SENSOR IS RECOMMENDED.

GGA. Pneumatic Option Board Mod. D07 (Kit Class 8804, type MC-11)

Apply a 0% automatic follower pneumatic (3 PSIG) signal to the pressure sensor (PS1). The drive should accelerate to minimum speed. Increase the signal to 15 PSIG. The motor speed should increase to rated speed. Proceed to Step HH.

GGB. Isolated Option Board Mod. C07 (Kit Class 8804, type MC-12)

Refer to the two paragraphs below for the type of analog follower input signal used.

"Zero-Based Signal" (Zero Offset)

A Zero-based signal is an analog follower input signal that does not use an offset level. A 0-10V signal is one form of a zero-based signal.

Apply 0% of the zero-based follower input signal to TB1-75 (+) and TB1-74 (–) (dc current input) or TB1-71 (+) and TB1-74 (–) (dc voltage input) or TB1-73 and TB1-72 (ac voltage input). The drive should accelerate to intermediate speed. Adjust P2 (MIN SP/OFFSET) on the option board for the desired minimum motor speed. Increase the analog follower input signal to 100% of the

zero-based signal. The drive should accelerate to intermediate speed. Adjust P1 (SPAN 1) on the option board for the rated motor speed. Proceed to Step HH.

"Live Zero" (Offset) Signal (Above Zero Offset)

A live-zero signal is an analog follower input signal that uses an offset level. A 4-20 MA signal is one form of a live-zero signal.

For adjustment purposes, an equivalent zero-based signal must be used. To create this signal, subtract the offset from the "Live Zero" signal (i.e. a 4-20 MA signal will be converted to a 0-16 MA signal). Use the proper equivalent zero based signal in the following procedure:

Apply 0% of the equivalent zero-based analog follower input signal to TB1-75 (+) and TB1-74 (dc current input) or TB1-71 (+) and TB1-74 (-) (dc voltage input) or TB1-73 and TB1-72 (ac voltage input). The drive should accelerate to intermediate speed. Adjust P2 (MIN SP/OFFSET) on the option board to obtain absolute minimum motor speed. Increase the analog follower input signal to 100% of the equivalent zero-based signal. The drive should accelerate to intermediate speed. Adjust P1 (SPAN 1) on the option board for the rated motor speed. At this point, a "Live Zero" signal is necessary to complete the adjustment. Decrease the analog follower input signal to the live-zero offset level. Readjust P2 (MIN SP/OFFSET) to obtain the desired minimum speed. Proceed to Step HH.

GGC. Non-Isolated Option Board (with or without Run Relay) (Mod A07, B07) (Kit Class 8804, Type MC-11) or (Kit Class 8804, Type MC-14)

The non-isolated option board can be used with a potentiometer input, voltage input, or current input. If the input signal is isolated from ground, minimum speed/offset adjustments and span adjustments may be made.

The set-up procedure for two of the most common input strategies is described below. For input signals not described below, refer to Section 6.2.3. for set-up adjustment.

"Zero Based" Signal (Zero Offset)

A zero-based signal is an analog input that does not use an offset level. A 0-10 volt signal from a potentiometer is one form of a zero based signal. Zero volts input may be adjusted for absolute minimum speed or a minimum speed greater than absolute.

With the controller deenergized, connect a 5 K ohm potentiometer as shown in Figure 5.1 and remove snip out resistor R92 from the option board. Energize the controller. Turn P2 (MIN SP/OFFSET) full CW. Turn the input potentiometer full CW and adjust P4 (SPAN 2) for base (60 Hz) speed. Turn input potentiometer full CCW and adjust P2 (MIN SP/OFFSET) CCW until the desired minimum speed is obtained.

"Live Zero" (Offset) Signal (Above Zero Offset)

A live zero signal is an analog input signal that uses an offset level. For example, a 2 to 10 V voltage supply could be used to control the output from absolute minimum speed to base speed. For this application, the supply must be connected as shown in Figure 5.2.

Turn P2 (MIN SP/OFFSET) full CW. Apply 0% of live zero reference as measured from TB1-71 to test point TP4 on the option board (refer to Section 8, Figure 8.2 to determine the location of TP4). Adjust P2 (MIN SP/OFFSET) CCW until zero volts is measured from TB1-71 to TP4. Apply 100% of live zero reference as measured from TB1-71 to TB1-74 and adjust P4 (SPAN 2) for base (60 Hz) speed.

HH. Turn the Hand-Off-Auto® selector switch to Off. If check valve limit switches (pumping applications only) are used, the drive will continue to run when the Hand-Off-Auto® switch is switched Off until the check valve closes or until

FIGURE 5.1

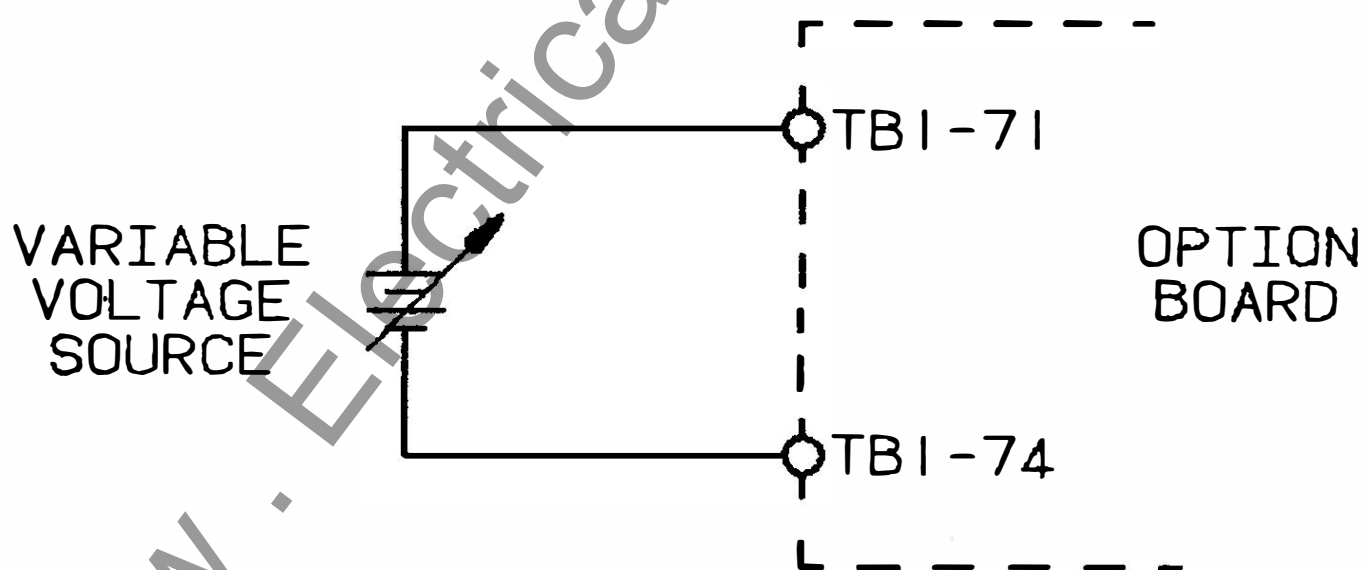
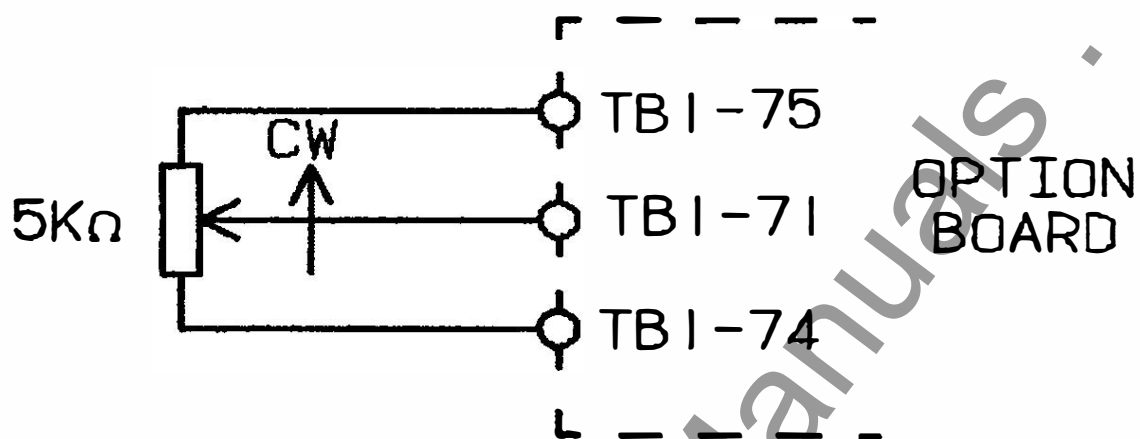


FIGURE 5.2

the Incomplete Sequence Timer times out (if used). The drive speed during this time is controlled by P5 (JOG/SHUTDOWN REF.) on the option board. Adjust P5 (JOG/SHUTDOWN REF.) to obtain the desired shutdown speed.

- II. Return SW4 to the closed position. If annunciation only of option faults is desired, SW4 can be left in the open position. Refer to Section 6, Figure 6.3 for a description of main control board switch functions.

- JJ. Turn the Jog/Run selector switch (if used) to Jog. Depress the Start push button to run the drive. The drive speed at this time is controlled by the option board. Adjust P5 (JOG/SHUTDOWN REF.) to obtain the desired Jog speed. After the drive has stopped, **REMOVE ALL POWER!**

DANGER
HAZARD OF ELECTRICAL SHOCK OR BURN
BEFORE SERVICING, TURN OFF POWER
SUPPLY(S) TO THIS EQUIPMENT. WAIT 5
MINUTES. MEASURE CAPACITOR VOLTAGES
TO VERIFY THAT THEY ARE ZERO. DO NOT
SHORT ACROSS CAPACITORS WITH
VOLTAGE PRESENT.

Remove all the jumpers installed in Step E. Reconnect any wires removed in Step F. Confirm that all wiring is per the option board used. Refer to Section 11.0, Option Board Wiring Diagrams.

- KK. This completes the initial start-up and adjustment procedure. The controller is now set for most applications. If your application requires different operational characteristics, refer to Section 6.0, Controller Adjustment Description, in this service bulletin.

Abnormal Operation

Refer to Section 7.0, Diagnostic Indicating Lights, if any of the following LED's on the Main Control Board or Option Board are illuminated.

- A. Undervoltage (UV)
- B. Overvoltage (OV)
- C. Shoot Through (ST)
- D. Ground Fault (GF)
- E. Instantaneous overcurrent (IOC)
- F. Overload (OLD)
- G. Overtemperature (OT)
- H. Option Fault (OF)
- I. Overload Timer (OLT)
- J. Drive Lockout (DL)

- ① The drive may require as long as 60 seconds to decelerate or stop. If a high inertia load is present, then the drive may require extremely long times to decelerate unless the Dynamic Braking option is installed.
- ② If pump check valve limit switches are used the drive will continue to run, until the check valve closes, when the Hand-Off-Auto^③ selector switch is turned to Off.
- ③ The Hand-Off-Auto selector switch may not always be used. Refer to Section 11.0, for other control configurations, either controller mounted or remote mounted.

6.0 CONTROLLER ADJUSTMENTS

A number of adjustments have been provided in the OMEGAPAK controller for modifying the controller operating characteristics. These adjustments include Printed Wiring Board mounted Selection Switches, Snip-Out Resistors and Potentiometers. If the controller contains optional equipment there may be adjustments associated with these too. Each adjustment is described in the following paragraphs.

CAUTION

DO NOT CHANGE THE POSITION OF ANY PRINTED WIRING BOARD SWITCH OR REMOVE ANY PRINTED WIRING BOARD WITH THE DRIVE RUNNING. TO DO SO MAY CAUSE AN EQUIPMENT MALFUNCTION.

6.1 MAIN CONTROL BOARD ADJUSTMENTS

The adjustments on the main control board are:

INPUT VOLTAGE SELECTION

INPUT FREQUENCY SELECTION

CONTROLLER FAULT LOCKOUT SELECTION

ACCEL/DECEL TIME RANGE SELECTION

MAX. OUTPUT FREQUENCY SELECTION

POTENTIOMETER ADJUSTMENTS

6.1.1 INPUT VOLTAGE SELECTION

The controller is factory set to operate from 460vac. To operate the OMEGAPAK controller from 200vac or 230vac, the control power transformers jumper connections and selection switches must be repositioned. If optional isolation, isolation and by-pass contactor, isolation and transfer, or dynamic braking unit is used, there are wiring jumper changes necessary to operate from 200vac or 230vac. The procedure is as follows:

1. Set the selection switches SW1, SW2, SW3, SW6, SW7, and SW8 on the main control board for the desired system input voltage, motor voltage, and motor base frequency as illustrated in Figure 6.3. Additional system configurations are available as shown in Figure 6.7. (Refer to Section 8.1, selection switch placement chart, main control board, for selection switch location).
2. Release quarter-turn fasteners securing the electronic compartment and swing out.


3. Reconnect the control power transformers jumper connections for the desired system input voltage as illustrated in Figures 6.1 and 6.2.

4. Swing electronics control compartment back into place and secure quarter turn fasteners.

FIGURE 6.1 (A)


| CONTROL TRANSFORMER CONNECTION ELECTRONICS CONTROL POWER (T1) | | |
|--|-----------------|-----------------------|
| SYSTEM INPUT VOLTAGE | PRIMARY TAPS | JUMPER CONNECTIONS |
| 200 | H1, H5 | H1 TO H4, H2 TO H5 |
| 230 | H1, H6 | H1 TO H4, H3 TO H6 |
| 460 | H1, H6 | H3 TO H4 |

FIGURE 6.1 (B)

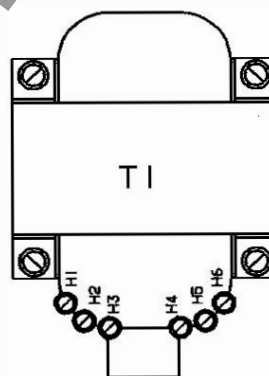

TERMINAL & JUMPER LOCATIONS
460V OPERATION

FIGURE 6.1 (C)


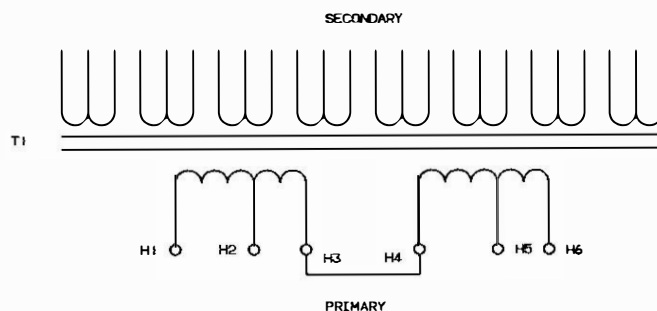


CONNECTION DIAGRAM
460V OPERATION

FIGURE 6.2 (A)

| CONTROL TRANSFORMER CONNECTION FANS AND PRECHARGE CONTACTOR CONTROL POWER (T2) | | | |
|---|-----------------|-------------------|-----------------------|
| SYSTEM INPUT VOLTAGE | PRIMARY TAPS | SECONDARY TAPS | JUMPER CONNECTIONS |
| 200 | H1, H4 | X1, X3 | H1 TO H3, H2 TO H4 |
| 230 | H1, H4 | X1, X2 | H1 TO H3, H2 TO H4 |
| 460 | H1, H4 | X1, X2 | H2 TO H3 |

FIGURE 6.2 (B)

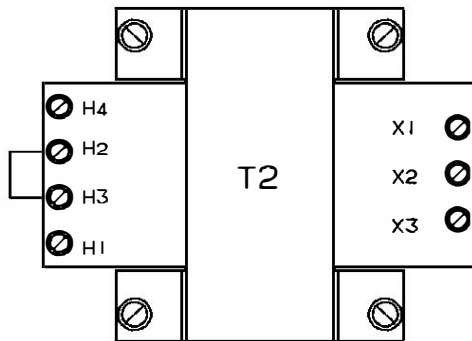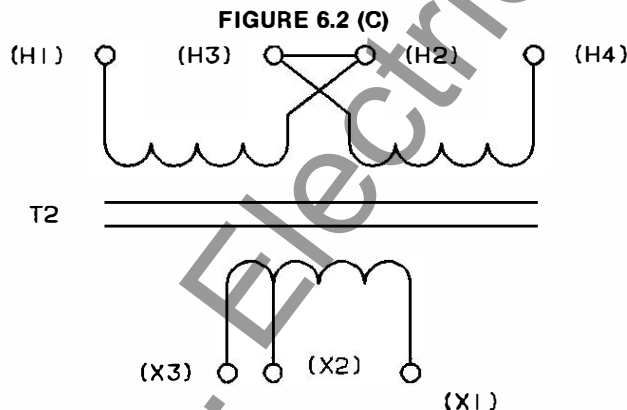TERMINAL AND JUMPER LOCATIONS
460V OPERATIONCONNECTION DIAGRAM
460V OPERATION

5. If an Auxiliary Vertical Section is used with the OMEGAPAK controller, their control power transformer jumper connections must be reconnected to operate from 200vac or 230vac as illustrated in Figure 6.2. (Refer to Section 8.3 for control power transformer location.)

6. If optional dynamic braking unit is used with the OMEGAPAK controller, the dynamic braking resistors must be reconnected to operate from 200vac or 230vac. (Refer to Section 11.0, drawing 11.8.1, for resistor connections).

6.1.2 INPUT FREQUENCY SELECTION

The controller is factory set to operate from 60 Hertz power. To operate the controller from 50 Hertz power, four (4) Main Control Board Snip-Out Resistors (R28, R25, R152, R15) must be removed as illustrated in Figure 6.4. (Refer to Section 8.0, Snip-Out Resistor Placement chart, Main Control Board, for snip-out resistors location).

6.1.3 CONTROLLER FAULT LOCKOUT SELECTION

The controller is factory set to Lockout, requiring manual reset, on the first fault detected. Controller faults that will cause lockout are:

- Overvoltage (OV)
- Shoot Through (ST)
- Ground Fault (GF)
- Overload (OLD)
- Instantaneous Overcurrent (IOC)
- Overtemperature (OT)
- Option Fault (OF)

If first fault lockout is not desired, the controller can be set up for second fault lockout. When the controller is set up for second fault lockout operation, the drive will stop for 5 seconds, or the duration of the fault (whichever is longer), upon the first fault then restart automatically if two-wire control is used. If a second fault occurs within 65 seconds after the first fault the drive will stop and lockout.

To adjust the controller for two fault operation, one (1) Main Control Board Snip-Out Resistor (R172) must be removed as illustrated in Figure 6.4. (Refer to Section 8.1, Snip-Out Resistor Placement chart, Main Control Board, for snip-out resistor location).

NOTE: All controller faults can be manually reset by depressing the Reset Button (PB1) on the main control board (see component placement chart for PB1 location) or by interrupting power to the controller input.

An undervoltage (UV) trip condition will stop the drive but will not cause a controller lockout. After the undervoltage (UV) fault subsides the drive will immediately restart on two wire control systems. Systems with three wire control will require a manual restart.

6.1.4 ACCEL/DECAL TIME RANGE SELECTION

The controller is factory set for an Accel/Decel Time Range Selection of 1 to 10 seconds. If longer accel/decel times are desired, the controller must be adjusted.

To adjust the controller for 10 to 60 seconds accel/decel time range, one (1) Main Control Board Selection Switch (SW5) must be set as illustrated in Figure 6.3. (Refer to Section 8.1, Selection Switch Placement chart, Main Control Board, for selection switch location).

NOTE: After the Accel/Decel Time Range has been selected, individual acceleration and deceleration times are adjustable by potentiometers. (Refer to Section 6.1.6, Potentiometer Adjustments).

6.1.5 MAXIMUM OUTPUT FREQUENCY SELECTION

The controller is factory set for 60 Hertz maximum output frequency. If higher output frequencies are desired, the controller must be adjusted.

CAUTION

SOME MOTORS AND/OR LOADS MAY NOT BE SUITED FOR OPERATION AT HIGHER THAN NAMEPLATE MOTOR SPEED AND FREQUENCY. TO AVOID DANGER OF OVERSPEED, CONSULT THE MOTOR MANUFACTURER AND EQUIPMENT MANUFACTURER BEFORE OPERATING THE MOTOR ABOVE 60 HERTZ.

After determining that the motor and its load are suitable for operation with an output frequency greater than 60 Hertz, the maximum output frequency range can be selected.

To adjust the controller for 90 Hertz or 120 Hertz maximum output frequency, certain main control board snip-out resistors must be removed. For 90 Hertz maximum output frequency, Snip-Out Resistor (R251) must be removed as illustrated in Figure 6.4 and the Maximum Speed (MSD) potentiometer must be adjusted as described in Section 6.1.6. For 120 Hertz maximum output frequency, Snip-Out Resistors (R250 and R251) must be removed as illustrated in Figure 6.4 and the Maximum Speed (MSD) potentiometer must be adjusted as described in Section 6.1.6. (Refer to Section 8.1, Snip-Out Resistor Placement chart, Main Control Board, for snip-out resistor location).

When the maximum output frequency has been selected, the connected motor will have the capability of driving a constant torque load to 60 Hertz and a load where the torque decreases as a function of the $(V/Hz)^2$ from 60 Hertz to 90 Hertz or 120 Hertz.

Some applications may require constant torque output of the motor to 90 Hertz or 120 Hertz. For these applications the controller input voltage must be 460V ac, with a motor connected for 230V ac. The controller output must be rated for the 230V ac connected motor nameplate rated current.

To adjust the controller for constant torque applications operating above 60 Hertz output frequencies, one (1) Main Control Board Selection Switch (SW2) must be repositioned as illustrated in Figure 6.3. (Refer to Section 8.1, Selection Switch Placement chart, Main Control Board, for selection switch location).


FIGURE 6.3
MAIN CONTROL BOARD DIP SWITCH SETTINGS

| Switch | Function | | | | | | | |
|--------------------------|--|-----|-----|-----|---|-----|-----|------|
| SW5 | Accel/Decel Range Select | | | | | | | |
| | 1-10 Sec. (Adjustable) X* | | | | 10-60 Sec. (Adjustable) O | | | |
| SW1 SW3 SW6 SW7 | Controller Input/Motor Nameplate (Base) Voltage Select | | | | | | | |
| | Input (V) | 200 | 230 | 230 | 460 | 460 | 460 | 460② |
| | Base (V) | 200 | 200 | 230 | 200 | 230 | 400 | 460② |
| | | X | X | X | X | X | O | O* |
| | | X | X | O | X | O | O | O* |
| | | O | O | O | X | X | X | X* |
| | O | O | O | O | O | X | O* | |
| SW2 | Volts Per Hertz Characteristic | | | | | | | |
| | Base Voltage At Base Freq. | | | | Base Voltage At 2X Base Freq. | | | |
| | X* | | | | O | | | |
| SW8 | Nameplate (Base) Frequency Select② | | | | | | | |
| | 60 Hertz X* | | | | 50 Hertz O | | | |
| SW4 | Drive Stop On Option Fault | | | | | | | |
| | Dynamic braking unit, regen unit and/or option card failure will annunciate and stop drive upon fault. | | | | Dynamic braking unit, regen unit and/or option card failure will only annunciate fault. | | | |
| | X* | | | | O | | | |

① This switch setting also applies to 380 volts input and a 380 V motor. It is necessary to select 50 Hertz operation on SW8 to get the correct volts/Hertz relationship and adjust potentiometer P14, maximum speed (MSD) per section 6.1.6 to achieve a base frequency of 50 Hertz.

② Operation from a 50 Hertz supply also requires removal of snip-out resistors per section 6, Figure 6.4.

Typical Printed Wiring Board Switch



Depress this end to close (ON) switch

Depress this end to open (OFF) switch

X = Closed Switch (ON)
O = Open Switch (OFF)
* = Factory Setting

FIGURE 6.4
MAIN CONTROL BOARD SNIP-OUT RESISTORS

| Snip-Out Resistors | Function | Condition |
|---------------------------|--|---|
| R28 R25 R152 R15 | 50 Hz or 60 Hz operation ^① | Installed: 60 Hz operation Removed: 50 Hz operation |
| R172 | One or two fault lockout — all faults except UV and Regen. | Installed: Drive will lockout upon one fault. Removed: Drive will stop for 5 sec. upon 1st fault and will lockout upon 2nd fault occurring 65 sec. after 1st fault. |
| R251 R250 | Normalizing maximum speed | Installed: With both resistors installed maximum output frequency is 60 Hz. Removed: R251-90 Hz maximum R251 and R250-120 Hz maximum. |
| R299 | FCT linearity adjust | Installed: P7 (OFC) has no effect on circuit. Removed: P7 (OFC) may be adjusted to cancel offset in FCT reference. |
| R373 | Power-up delay | Installed: 1.5 sec. delay. Removed: 6.5 sec. delay. |
| R420 | Drive Restart after regen unit failure | Installed: Drive will restart immediately after fault subsides. Removed: Drive will restart 5 sec. after fault is initiated or immediately after fault subsides (whichever is longer). |
| R169 | Hand reference input | Installed: Single ended input with minimum potentiometer. Note: R317 must not be present. Removed: Differential input. Note: R317 must be installed. |

① Switch SW8 on the the main control board must also be positioned per Figure 6.3 if a 50 Hertz base frequency is also desired.

6.1.6 POTENTIOMETER ADJUSTMENTS

The potentiometer adjustments were factory set as described in the initial start-up procedure. Certain potentiometers are not expected to ever require adjustment. These have been factory sealed.

If further adjustments are necessary, adjust potentiometers one at a time in the following order.

P14- Maximum Speed (MSD) — This potentiometer is used to control the controller output frequency when the Manual Speed potentiometer (controller mounted or remote mounted) is set at its maximum level (full clockwise). This potentiometer is factory set so that the output frequency will be 60 Hertz when the Manual Speed potentiometer is set full clockwise. The Maximum Speed (MSD) potentiometer has an adjustment range of 40 Hertz to the selected maximum output frequency.

The maximum controller output frequency is selectable between 40 to 60 Hertz, 90 Hertz or 120 Hertz. (40-50 Hertz, 75 Hertz or 100 Hertz if a 50 Hz base frequency is selected per Section 6 Figures 6.3 and 6.4.) Refer to Section 6.1.5, Maximum Output Frequency Selection, in this service bulletin.

The Maximum Speed (MSD) potentiometer must be adjusted if a maximum frequency other than 60 Hertz is required. Clockwise rotation increases output frequency.

CAUTION

SOME MOTORS AND/OR LOADS MAY NOT BE SUITED FOR OPERATION AT HIGHER THAN NAMEPLATE MOTOR SPEED AND FREQUENCY. TO AVOID DANGER OF OVERSPEED, CONSULT THE MOTOR MANUFACTURER AND EQUIPMENT MANUFACTURER BEFORE OPERATING THE MOTOR ABOVE 60 HERTZ.

P7- Frequency Clock Offset(OFC) — This potentiometer is used to improve the linearity of output frequency vs input speed reference. For most applications, improved linearity is not required; however, should greater

linearity be required, the OFC potentiometer and the MSD potentiometer may be used to trim offset and gain errors in the voltage to frequency conversion.

ADJUSTMENT PROCEDURE

A. Snip-out resistor R299 must be removed before the OFC potentiometer has any effect on circuit operation. Place the OFC potentiometer at midscale.

B. Determine the voltage to frequency conversion required. For example, a 10 V input that would produce 60 Hz on the motor would be a voltage/frequency ratio of 1/6.

C. Remove the T1, T2, and T3 motor leads from the controller.

D. Connect a frequency counter from TP7 to TP12. (Note: TP designates test point. Refer to Section 8, Figure 1 for the location of test points.) This is a 0 to 10 V signal with a 1 to 2 microsec logic low pulse occurring 3360 times a cycle of motor frequency. Connect a voltmeter (0 to 20 VDC) from TB1-2 to TP12.

E. Energize the controller. Turn the manual speed potentiometer full CW. Adjust the maximum speed (MSD) potentiometer until the frequency measured at TP7 equals f_1 as calculated below.

$$f_1 = \frac{-3360 \times (\text{voltage at TB1-2 to TP12})}{(\text{voltage to frequency ratio})}$$

F. Turn the manual speed potentiometer CCW until the voltage, measured from TB1-2 to TP12 equals V_2 as calculated below.

$$V_2 = -3.5 \times (\text{voltage to frequency ratio})$$

G. Adjust the OFC potentiometer until a frequency of 11.76 KHZ is measured.

H. Repeat step E if necessary.

P11-Slip Compensation (SC) — This adjustment potentiometer is used to improve motor speed regulation. Adjustment range covers 0 to 3% of max-

imum controller output frequency. The Slip Compensation (SC) potentiometer can be adjusted to provide speed regulation up to $\pm 0.5\%$ of base speed of a standard NEMA design B squirrel cage motor for operation from 1 to 60 Hertz.

This potentiometer is factory set for zero (0) slip compensation. If improved speed regulation is not required, this potentiometer should not be adjusted.

If improved speed regulation is required, this potentiometer must be adjusted. The adjustment procedure must be followed:

ADJUSTMENT PROCEDURE

- A. Energize the controller with no load on the motor and adjust the Manual Speed potentiometer (controller mounted or remote mounted) to the motor base (60 Hertz) maximum speed position. Measure the actual motor shaft speed and record the value.

Note: For controllers adjusted for extended constant torque operation (refer to Section 6.1.5, Maximum Output Frequency Selection), adjust the Manual Speed potentiometer to the maximum speed position.

- B. Load the motor.

- C. Measure the motor shaft speed with the load applied and adjust the Slip Compensation (SC) potentiometer so that the speed matches the value recorded in Step A.

If the Slip Compensation (SC) potentiometer is not adjusted correctly, the motor output will oscillate. Do not attempt to operate the controller if the condition exists.

- P13- Voltage Boost (EB) — This potentiometer increases the Volts per Hertz (V/Hz) ratio at frequencies 20 Hertz and below. In high starting torque or

rapid acceleration applications the V/Hz ratio must be increased at low frequencies to compensate for IR losses in the motor windings. This potentiometer is factory set for zero (0) voltage boost. If the motor accelerates normally, this potentiometer should not be adjusted.

If the motor will not accelerate normally, this potentiometer must be adjusted.

Energize the controller with the motor loaded and adjust the Manual Speed potentiometer (controller mounted or remote mounted) to the maximum speed position. Turn the Voltage Boost (EB) potentiometer clockwise until the motor accelerates. Do not turn the potentiometer any further than necessary to accelerate the motor.

NOTE: If the VOLTAGE BOOST (EB) potentiometer is set too high, the controller will lock up in current limit and inhibit the acceleration ramp. If this condition occurs it will be necessary to reduce the setting of the Voltage Boost (EB) potentiometer until the motor will accelerate.

- P8- Hand Minimum Reference (HMR) — This potentiometer controls the minimum speed the motor will run, when the Manual Speed potentiometer (controller mounted or remote mounted) is set at minimum level (full counterclockwise). This potentiometer is factory set to produce an output frequency of 1 Hertz when the Manual Speed potentiometer is set full counterclockwise. The Hand Minimum Reference (HMR) potentiometer has an adjustable range of 1 Hertz to 50% of the controller maximum operating frequency.

CAUTION

THIS CONTROLLER DOES NOT PROVIDE OVER-TEMPERATURE PROTECTION FOR THE MOTOR AT ALL SPEEDS OR LOADING CONDITIONS. A MOTOR THERMAL SENSOR IS RECOMMENDED.

The minimum speed is set by rotating the Manual Speed potentiometer to the minimum level (full counterclockwise) and adjusting the Hand Minimum Reference (HMR) clockwise for desired minimum motor speed. The Maximum Speed (MSD) potentiometer and snip out resistors for extended frequency range operation will affect the Hand Minimum Reference (HMR) setting, therefore the controller maximum frequency output should be preset before adjusting the Hand Minimum Reference (HMR) potentiometer.

- P9- Acceleration Time (ACC) — The potentiometer controls the amount of time for the output frequency to increase from 1 Hertz to 60 Hertz. The time is adjustable in two ranges, 1 to 10 seconds and 10 to 60 seconds. The timing range is controlled by a selection switch on the main control board. Refer to Section 6.14, Acceleration/Deceleration Time Range Selection. This potentiometer is factory set for 10 second acceleration time.

If output frequencies above 60 Hertz have been selected the acceleration timing range will change. The acceleration timing range will be:

| Maximum Output Frequency Selection | Acceleration Timing Range |
|---------------------------------------|-------------------------------------|
| 1-90 Hertz | 1.5 to 15 sec. and 15 to 90 sec. |
| 1-120 Hertz | 2 to 20 sec. and 20 to 120 sec. |

With the motor stopped, turn the Manual Speed potentiometer to the maximum setting. Start the motor and observe the length of time that it takes to accelerate to full speed. Clockwise rotation of the Acceleration Time (ACC) potentiometer increases acceleration ramp time.

- P10- Deceleration Time (DEC) — This potentiometer controls the amount of time for the output frequency to decrease from 60 Hertz to 1 Hertz. The Deceleration Time (DEC) potentiometer operates in the same man-

ner as the Acceleration Time (ACC) potentiometer. This potentiometer is factory set for 10 second deceleration time.

If output frequencies above 60 Hertz have been selected the deceleration timing range will change in the same manner as listed for the Acceleration Time (ACC) potentiometer.

With the motor running at full speed, stop the motor and observe the length of time that it takes to decelerate to zero speed. Clockwise rotation of the Deceleration Time (DEC) potentiometer increases deceleration time.

If a high inertia load is present two conditions could occur, if dynamic braking or regeneration unit options are not installed.

1. Deceleration time set too fast could cause an overvoltage trip. If this occurs increase the deceleration time setting.
2. The ramp modification feature will automatically override the deceleration time setting and extend the deceleration time.

- P4- Motor Current Limit (MCL) — This potentiometer limits the maximum motor running current in the range of 75-150% of the controller maximum output rated current for constant torque rated controllers. Variable torque rated controllers have an adjustment range of 60 to 120%. The Motor Current Limit (MCL) potentiometer is factory set full clockwise to allow maximum current to be delivered to the motor.

During motor starting this potentiometer setting is automatically rescaled to provide a higher current limiting range of 87-175% for constant torque controllers (70-140% for variable torque controllers). This feature maximizes motor starting torque.

If less than 150% current limit setting is required for a particular application the potentiometer can be adjusted counterclockwise.

- P5- Overload Adjust (OLA) — This potentiometer is used to set the threshold at which the overload timer will be activated. The Overload Adjust (OLA) potentiometer is factory set full clockwise which corresponds to 115% of the controller output rated current.

If the motor current exceeds 115% of the controller output rated current, an overload timer will activate and the Overload Timer (OLT) LED will light. If the controller is to be used with a motor whose full load current is less than the controller output rated current, an adjustment will be required.

CAUTION

THIS CONTROLLER DOES NOT PROVIDE OVER-TEMPERATURE PROTECTION FOR THE MOTOR AT ALL SPEEDS OR LOADING CONDITIONS. A MOTOR THERMAL SENSOR IS RECOMMENDED.

All main control board potentiometer adjustments should be made before attempting to adjust the Overload Adjust (OLA) potentiometer. The adjustment procedure must be followed:

Adjustment Procedure

- A. Start the motor
- B. Adjust the Manual Speed potentiometer for the point of maximum motor current. (This must not exceed 100% of motor nameplate current or controller rated output current)
- C. Slowly turn the Overload Adjust (OLA) potentiometer counterclockwise until the Overload Timer (OLT) LED lights.
- D. Slowly turn the Overload Adjust (OLA) potentiometer until the Overload timer (OLT) LED extinguishes.
- E. Turn Overload Adjust (OLA) potentiometer clockwise an additional 5 degrees.

Alternate Adjustment Procedure:

- A. Calculate the Overload Adjust (OLA) potentiometer voltage setting per the following method:

$$V_{OL} = \frac{M}{C} \times 10V$$

Where: V_{OL} = New voltage setting for OLA potentiometer

M = Motor Full Load Amperes (from motor nameplate)

C = Controller Maximum Output Amperes (from controller nameplate)

New Overload Adjust (OLA) voltage setting

- B. Slowly turn the Overload Adjust (OLA) potentiometer counterclockwise until the calculated new voltage setting in step A is measured between test point 12 (OV) and test point 14 (+) on the main control board. (Refer to Section 8.0 for location of test points).

The Overload Adjust (OLA) potentiometer is now set and any motor current exceeding that level will cause the controller to trip out in one minute.

- P3- Regeneration Current Limit (RCL) — This potentiometer is factory set to allow 100% (80% for variable torque controllers) regenerative current to flow from the motor if the optional dynamic braking unit is installed. If dynamic braking is not installed this potentiometer has no effect on the controller operation. If less than 100% regeneration current is required this potentiometer can be adjusted counterclockwise to lower the current limit setting.

- P12- Volts/Hertz (VHZ) — This potentiometer allows trimming of the volts per Hertz ratio of the controller output. The Volts/Hertz (P12) potentiometer is factory adjusted and sealed. **This potentiometer should not be adjusted in the field.**

- P1- Positive 10V (+10V) — This potentiometer allows adjustment of the +10 volts regulated power supply. Potentiometer (P1) is factory adjusted and sealed. **This potentiometer should not be adjusted in the field.**

P2- Negative 10V (–10V) — This potentiometer allows adjustment of the –10 volt regulated power supply. Potentiometer (P2) is factory adjusted and sealed. **This potentiometer should not be adjusted in the field.**

P15- Offset Null (OSN) - Permits cancellation of offset in the current feedback circuit to compensate for component tolerances. This potentiometer is factory adjusted and sealed. **It must not be field adjusted. Warranty will be voided if factory seal is broken.**

P6- GAIN (GA) — Sets the gain in the current feedback circuit to compensate for component tolerances. This potentiometer is factory adjusted and sealed. **It must not be field adjusted. The warranty is voided if the seal is broken.**

6.2 OPTION BOARD ADJUSTMENTS

The adjustments of the option boards are:

VOLTAGE/CURRENT FOLLOWER SELECTION
INCOMPLETE SEQUENCE TIME SELECTION
POTENTIOMETER ADJUSTMENTS

6.2.1 VOLTAGE/CURRENT FOLLOWER SELECTION

There are three (3) option boards for use with analog input follower signals. These option boards are:

Non-Isolated Option Board (MOD A07)
Non-Isolated Option Board W/Run Relay (MOD B07)
Isolated Option Board (MOD C07)

The non-isolated option boards share the same common (reference ground) as the input signal source. An isolated option board is optically isolated from the input signal source common (reference ground). The isolated option board reduces ground currents that could otherwise occur.

These option boards will accept a wide range of analog input signals. The range of signals each will accept are:

Non-Isolated Option Board With or Without Run Relay Input signals:
0-10vdc

Isolated Option Board Input signals:

1-5 MA DC, 2-10 MA DC, 4-20 MA DC,
10-50 MA DC, 0-10 V DC or AC, 0-35 V
DC or AC, 0-100 V DC or AC, 0-250 V DC
or AC.

Note: Motor rotation can be controlled (on the Isolated Option Board only) by changing the polarity of the analog input follower signal. Zero to + signal causes increasing speed in the forward direction and zero to – signal causes increasing speed in the reverse direction. If this function is used snip-out Diodes D37 and D39 and Resistor R39 on the isolated option board must be removed. (Refer to Section 8.0, Snip-Out Components Placement chart, on the Option Board.)

The option boards are not factory set for any particular signal input value. After determining what signal input is desired, reposition the appropriate Option Board Selector Switch (SW1) as illustrated in Figure 6.5. (Refer to Section 8.0, Selection Switch Placement chart, Option Board, for selector switch location).

6.2.2 INCOMPLETE SEQUENCE TIME SELECTION

Option Boards (Mod B07, C07 and D07) include a sequence timing relay. This is a solid state timer with an adjustable time setting from 10 seconds to 160 seconds, in 10 second increments.


The sequence timing relay time delay can be initiated by an external contact or by starting the controller. If optional Auxiliary Sequence Relay (ASR1) (MOD T08) is installed, it will signal that the starting sequence was not successfully completed within the selected time. This timer and relay ASR1 combination is normally used to monitor external activity such as optional isolation contactor, isolation and bypass contactor operation, pump check valve sequencing and etc.

The option board sequence timing relay is not factory set for any particular time delay. After determining the desired time delay, reposition the appropriate Option Board Selector Switch (SW2) as illustrated in Figure 6.5. (Refer to Section 8.0, Selection Switch Placement chart, Option Board, for selector switch location).

FIGURE 6.5

| Option Board Switch | Switch Settings | | | | | | | | | | | | | | | |
|------------------------|------------------------------------|------------|------------|-------------|---------------|---------------|----------------|----------------|------------------------|-----|-----|-----|-----|-----|-----|-----|
| | Auto Reference Gain Adjustment | | | | | | | | | | | | | | | |
| | Current Input | | | | | | | | AC or DC Voltage Input | | | | | | | |
| | 1-5 MA | 2-10 MA | 4-20 MA | 10-50 MA | 0-10 Volts | 0-35 Volts | 0-100 Volts | 0-250 Volts | | | | | | | | |
| SW1-1 | X | O | O | O | | | | | | | | | | | | |
| SW1-2 | O | X | O | X | | | | | | | | | | | | |
| SW1-3 | O | O | X | O | | | | | | | | | | | | |
| SW1-4 | O | O | O | X | | | | | | | | | | | | |
| SW1-5 | | | | | | X | X | X | | O | | | | | | |
| SW1-6 | | | | | | X | X | O | | O | | | | | | |
| SW1-7 | | | | | | X | O | X | | O | | | | | | |
| SW1-8 | | | | | | X | X | X | | O | | | | | | |
| | | | | | | | | | | | | | | | | |
| Input Impedance (ohms) | 1K | 500 | 250 | 100 | 100K | 350K | 1.0M | 2.5M | | | | | | | | |
| | | | | | | | | | | | | | | | | |
| | Incomplete Sequence Time (Seconds) | | | | | | | | | | | | | | | |
| | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 | 110 | 120 | 130 | 140 | 150 | 160 |
| SW2-4 | X | O | X | O | X | O | X | O | X | O | X | O | X | O | X | O |
| SW2-3 | X | X | O | O | X | X | O | O | X | X | O | O | X | X | O | O |
| SW2-2 | X | X | X | X | O | O | O | O | X | X | X | X | O | O | O | O |
| SW2-1 | X | X | X | X | X | X | X | X | O | O | O | O | O | O | O | O |

Typical Printed Wiring Board Switch



Depress this end to close (ON) switch

Depress this end to open (OFF) switch

X = Closed Switch (ON)

O = Open Switch (OFF)

FIGURE 6.6

| Snip-Out Component | Function | Condition |
|---------------------------------|--|---|
| R92 ^① | Fixed or adjustable minimum speed. Also, non-grounded or grounded follower signal transmitter. | <p>Installed: Controller minimum speed in the automatic mode is fixed at absolute minimum speed. Also, follower signal must be isolated from ground on the transmitter end.</p> <p>Removed: Minimum speed in the automatic mode is adjustable (refer to Section 5.2 paragraph GGC and Section 6.2.3). Also, allows follower signal transmitter to be grounded without damage to the option board.</p> |
| D37 ^{②③} D39 R39 | AC follower input or auto reversing from polarity change of input follower. | <p>Installed: Controller will accept ac follower signal with output frequency proportional to follower signal magnitude.</p> <p>Removed: Signal polarity reversal. With a negative (-) to 0 to positive (+) follower signal, direction of rotation is selected by the polarity of the input signal. Positive (+) selects forward rotation, negative (-) selects reverse rotation. Output frequency is proportional to signal magnitude.</p> |

① Located on non-isolated follower boards (MOD A07, kit MC-11 and B07, kit MC-14) only.

② Located on isolated follower board (MOD C07, kit MC-12) only.

③ Refer to section 6.2.1.

6.2.3 POTENTIOMETER ADJUSTMENTS

The potentiometer adjustments were factory set as described in the initial start-up procedure for controllers with an option board. Certain potentiometers are not expected to ever require field adjustment. These have been factory sealed.

The option board potentiometer adjustment set-up procedure is described in Section 5.2 of this service bulletin. The function of each potentiometer adjustment is listed below:

P5- (Jog/Shutdown Ref) — This potentiometer is on all option boards. It controls the jog speed when the jog at preset speed option is used or when the shutdown reference (Speed) for check valve control in pumping applications is used.

JOG FUNCTION

A Run/Jog selector switch must be added to the control circuit so that the START push button will either initiate maintained operation or a momentary Jog function for the controller.

The jog speed is adjusted by potentiometer P5 (Jog/Shutdown Ref) located on the option board. It has an adjustable range of 1 Hertz to 30% of the maximum output frequency. During the Jog mode of operation the acceleration and deceleration time is fixed at one second.

SHUTDOWN REF FUNCTION

If the shutdown reference (Speed) mode of operation is used, the jumper between TB1-12 (+ 10vdc) on the main control board and TB1-80 (Jog Ref) on the option board must be moved. Remove the jumper from TB1-80 (Jog Ref) and re-connect to TB1-82 (Shutdown Ref) on the option board. Leave the jumper connected to TB1-12 (+ 10vdc) on the main control board.

When the controller is commanded to stop,① the Run Command Relay (RCR) is deenergized. When deenergized, this relay switches the normal speed reference signal to the shutdown speed reference signal.

The shutdown reference (Speed) is adjusted by potentiometer P5 (Jog/Shutdown Ref) located on the option board. It has an adjustable range of 1 Hertz to 90% of the maximum output frequency.

① If pump check valve limit switches are used the drive will continue to run until the check valve closes.

6.2.3.A ISOLATED OPTION BOARD

Both P1 (SPAN 1) and P2 (MIN SP/OFFSET) potentiometers are included on the isolated option board.

P1 (SPAN 1) — This potentiometer controls the slope or gain of the analog input follower signal. For example, an input follower signal of 4-20 ma dc can be used for automatic speed control. Normally P1 (SPAN 1) would be adjusted to provide motor rated speed at 20 ma dc input. In some applications it may be desired that motor rated speed occur at some value other than 20 ma dc input.

P1 (SPAN 1) has a span adjustment range of 40% to 140% of the nominal 20 ma input follower signal. This means that the controller can be set-up to produce motor rated speed over a range of input signal from 8 ma to 28 ma.

P2 (MIN SP/OFFSET) — This potentiometer can be used on the isolated option board as an offset adjustment as was described in Section 5.2 in live zero signal adjustments or as a minimum speed adjustment as was described in zero based signal adjustments. When used as an offset adjustment, as in the case of a 4-20 ma input, 4 ma will correspond to the absolute minimum speed (minimum controller output frequency). When used as a minimum speed adjustment, as in the case of a 0-10V dc input, 0V dc may correspond to a desired minimum speed greater than the absolute minimum speed.

P2 (MIN SP/OFFSET) has an adjustment range of zero to 30%. In the offset mode 0 to 30% of the nominal input can be adjusted to obtain absolute minimum frequency. For a 4-20 ma input, 20 ma is the nominal input value. In the minimum speed mode, 0 to 30% of rated speed can be obtained with zero input signal.

On the isolated option board, if the input signal drops below the offset setting, the option board fault LED (IL1) will light and shutdown the drive if the main control board selection switch SW4 has been set to its closed position.

6.2.3.B NON-ISOLATED OPTION BOARD (with or without Run Relay) Both P4 (SPAN 2) and P2 (MIN SP/OFFSET) potentiometers are included on the non-isolated option board.

P4 (SPAN 2) — This potentiometer controls the slope or gain of an analog input follower signal. Its function is the same as P1 (SPAN 1) on the isolated option board. The adjustment range is 60 to 160% of nominal. For example, for a 0-10V input, 60 to 160% of 10V may be adjusted for rated speed.

P2 (MIN SP/OFFSET) This potentiometer can be used on the non-isolated option board as an offset adjustment as was described in Section 5.2 (Live Zero Signal) adjustments or as a minimum speed adjustment as was described in Zero Based Signal adjustments. On the non-isolated option board, this potentiometer has an adjustment range of 0 to 40%.

Section 5.2 described two typical set-ups for the non-isolated input; 1) potentiometer input with zero based signal and 2) isolated voltage input with live zero signal. However, the non-isolated option board can be used with any of the following inputs:

1) Potentiometer input (5K ohm). Refer to Figure 6.7.


2) Isolated voltage input. Refer to Figure 6.8.

3) Isolated current input. Refer to Figure 6.9.

1) Potentiometer input (refer to Figure 6.7). The minimum speed adjustment for the potentiometer input was described in Section 5.2. An offset adjustment may also be made with the potentiometer input so that a given potentiometer wiper position will correspond to absolute minimum speed. To make this adjustment, turn P2 (MIN SP/OFFSET)

full CW. Apply 100% of nominal input and adjust P4 (SPAN 2) for base speed. Apply 0% of live zero reference and adjust P2 (MIN SP/OFFSET) CCW slowly until absolute minimum speed is obtained. Over adjusting P2 (MIN SP/OFFSET) will cause the speed to be non-linear with respect to wiper position.

FIGURE 6.7

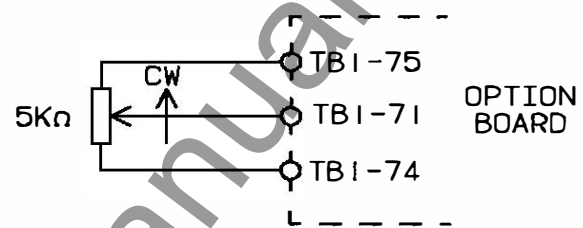


2) Isolated voltage input (refer to Figure 6.8). The offset adjustment was described in Section 5.2. A minimum speed adjustment may also be made with the isolated voltage input by removing snip out resistor R92 and installing a 5K ohm, 1/4W resistor between TB1-74 and TB1-75 as shown in Figure 6.8. To make the min speed adjustment, turn P2 (MIN SP/OFFSET) full CW. Calculate the desired offset voltage.

$$\text{Offset Voltage} = (100\% \text{ Zero Based Input}) \frac{(\text{Desired Min Freq})}{(\text{Base Freq})}$$

Apply an input equal to the 100% zero based input plus the calculated offset voltage. Adjust P4 (SPAN 2) until base speed is obtained. Apply 0% input from TB1-71 to TB1-74 and adjust P2 (MIN SP/OFFSET) CCW until desired minimum speed is obtained. Apply 100% zero based input and re-adjust P4 (SPAN 2) for base speed. Apply 0% zero based input and re-adjust P2 (MIN SP/OFFSET) for desired minimum speed. Several iterations may be required.


FIGURE 6.8

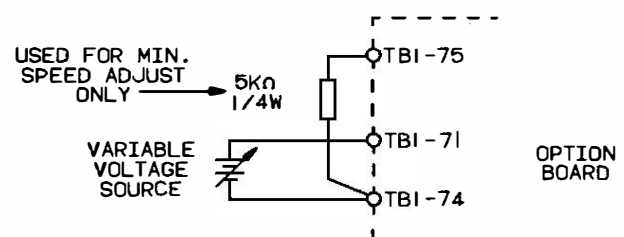

3) Isolated current input (refer to Figure 6.9). The non-isolated option board will accept a current input by connecting a 1/2W resistor between TB1-71 to TB1-74 as shown in Figure 6.9. The value of this resistor can be calculated by

$$R_I = 10 / (\text{Nominal Input Current in Amperes})$$

FIGURE 6.9

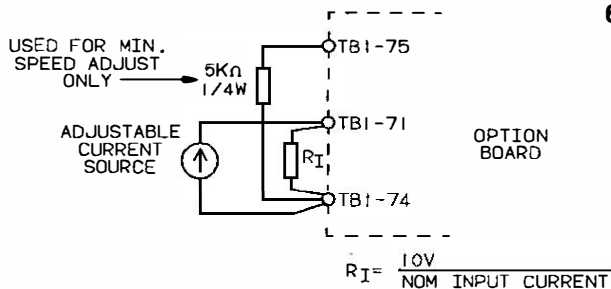

The adjustment procedure for the isolated current input is the same as the isolated voltage input.

6.2.3.C PNEUMATIC OPTION BOARD

The pneumatic option board is designed for a 3-15 PSI input. P2 (MIN SP/OFFSET) has been sealed at the factory for a 3 PSI offset. No field adjustments are necessary.

6.3 METER ADJUSTMENTS

Analog or digital speed indicating meters can be furnished factory installed on OMEGAPAK controllers or furnished in kit form for remote mounting.

6.3.1 ANALOG SPEED INDICATING METER (MOD A14) (Kit Class 8804, Type AM-1) (Scale 0-100%)

STANDARD FREQUENCY RANGE (0-60 Hz) — A factory installed analog speed indicating meter is set to indicate 100% (full scale) at 60 Hertz output frequency. If the controller is to operate over the range of 0-60 Hertz no field adjustment will be necessary. A meter reading of 100% corresponds to 100% of motor rated speed.

EXTENDED FREQUENCY RANGE (0-90 Hz or 0-120 Hz) — If extended frequency range operation is selected as described in Section 6.0, Controller Adjustments, it will be

necessary to adjust the speed indicating meter calibration potentiometer on the rear of the meter. Set up the controller for the desired maximum operating speed and adjust the meter calibration potentiometer to produce a meter reading of 100%. The meter is now calibrated in percent of maximum operating speed, not percent of motor rated speed.


6.3.2 DIGITAL SPEED INDICATING METER (MOD D14) (Kit Class 8804, Type DM-1) (Scale 0-199.9 or 0-1999)

STANDARD FREQUENCY RANGE (1-60 Hz) — A factory installed digital speed indicating meter is factory set to indicate 100.0 at 60 Hertz output frequency. This corresponds to 100% of motor rated speed. If the controller is to operate over the range of 0-60 Hertz and percent of motor rated speed is the desired indication, no adjustment is necessary.

EXTENDED FREQUENCY RANGE (0-90 Hz or 0-120 Hz) — If extended frequency range operation is selected as described in Section 6.0, Controller Adjustments, the digital speed indicating meter will read out in percent of maximum operating speed to a maximum of 199.9 percent which would correspond to a controller output frequency of 120 Hertz. No adjustment is necessary.

FIGURE 6.10

PRINTED WIRING BOARD FOR DIGITAL INDICATING METER

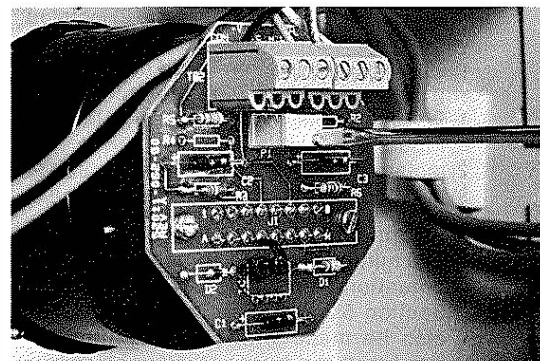

CONVERSION TO FREQUENCY READOUT

— To change calibration of the speed meter to indicating **approximate** output frequency it is only necessary to adjust the Calibration Potentiometer (P1) on the rear of the meter. With the controller operating at maximum speed as factory set (60 Hertz output), adjust the meter calibration potentiometer to produce a meter reading of 60.0. If extended frequency range is used, the meter will read properly up to maximum adjusted controller output frequency (90 or 120 Hertz).

If the controller maximum speed has been changed from the factory set maximum speed, the meter can be calibrated using a dc voltmeter. Measure the voltage between terminals MTR (+) and COM (–) on the Printed Wiring Board (see Figure 6.10) and adjust the controller Manual Speed Adjust potentiometer until the voltmeter reads exactly 2.5vdc. This voltage corresponds to 60 Hertz output. Adjust the Meter Calibration potentiometer to read 60.0

NOTE: The meter provides only a relative indication of output frequency. Operation of the slip compensation feature will cause changes in output frequency of up to $\pm 3\%$ which will not be indicated.

CONVERSION TO RPM READOUT — The digital speed meter is capable of displaying RPM over the range of 0-1999 RPM. To convert the meter to RPM readout it is necessary to clip out resistor R6 located on the Printed Wiring Board on the rear of the meter (see Figure 6.10). This disables the decimal point. The controller should then be operated at 60 Hertz and the motor speed measured with a tachometer. The Meter Calibration potentiometer located on the rear of the meter should be adjusted until the meter indication corresponds to the tachometer reading.

Alternate method — Measure the voltage between terminal MTR (+) and COM (–) on the Speed Indicating Meter Printed Wiring Board. Adjust the controller speed to produce a voltmeter reading of 2.5vdc. This corresponds to a controller operating frequency of 60 Hertz. Adjust the Meter Calibration potentiometer until the meter reads the motor rated speed as shown on the motor nameplate.

6.3.3 ANALOG VOLTMETER (MOD V15) (Kit Class 8804 Type AM-2) (Scale 0-125%)

Factory installed analog voltmeters are set to read 100% with 460 volts output from the controller. This meter operates from a 0-5 vdc signal from the controller. Meter output signals correspond to controller output voltages as follows:

$$\begin{aligned} 4 \text{ vdc} &= 460\text{V} \\ 2 \text{ vdc} &= 230\text{V} \\ 1.74 \text{ vdc} &= 200\text{V} \end{aligned}$$

If the controller is to be used on 230V or 200V systems, it will be necessary to recalibrate the meter. The meter can be calibrated by the following procedure:

1. Connect a DC Voltmeter between terminals TB1-26 (+) and TB1-31 (–) on the Main Control Board. Energize the controller and increase the output frequency until a reading of 4.0 vdc is obtained for 460V operation, 2.0 vdc is obtained for 230V operation or 1.74 vdc is obtained for 200V operation. This indicates the controller is operating at rated output voltage.
2. Adjust the potentiometer on the meter's printed wiring board, for 100% voltage output indication.
3. Remove the DC Voltmeter from the Main Control Board. The Voltmeter is now calibrated and should read all intermediate voltages accurately.

Note: Due to the complex output waveform from the controller, attempts to measure the controller output terminal voltage will produce erroneous readings and is therefore not recommended.

6.3.4 DIGITAL VOLTMETER (MOD F15) (Kit Class 8804 Type DM-1) (Scale 0-100.0%)

Follow the procedure for adjusting the analog voltmeter described in Section 6.3.3.

6.3.5 ANALOG AMMETER (MOD A15) (Kit Class 8804 Type AM-3) (Scale 0-150%)

Factory installed analog ammeters are set to read 100% when the controller delivers rated output current as stamped on the controller nameplate. This meter operates from a 0-5 vdc signal from the controller (5 vdc = 150% of rated output current)

for constant torque rated controllers or 120% of rated output current for variable torque rated controllers). The meter can be calibrated by the following procedure:

1. Connect a D.C. Voltmeter between terminals TB1-30 (+) and TB1-31 (–) on the Main Control Board. Energize the controller, with a connected motor load, and increase the controller frequency until a reading of at least 1.0 vdc is obtained.
2. Calculate the percent controller rated output current using the following formula.

3. Percent rated current = $30 \times \text{Measured voltage in Step 1.}$
4. Adjust the potentiometer on the meter's printed wiring board, for the percent rated current output indication as calculated in Step 2.
5. Remove the D.C. Voltmeter from the Main Control Board. The Ammeter is now calibrated and should read all the intermediate currents accurately.

6.3.6 DIGITAL AMMETER (MOD G15) (Kit Class 8804 Type DM-1) (Scale 0-150.0%.)

Follow the procedure for adjusting the analog ammeter described in Section 6.3.5.

7.0 DIAGNOSTIC AND STATUS INDICATING LIGHTS

There are twenty-nine (29) diagnostic and status indicating, Light Emitting Diodes (LED's) & one Neon light in a basic controller. If the controller contains optional equipment there will be LED's associated with each assembly. The LED's and Neon light are located on the following printed wiring boards:

Basic Controller:

- Main Control Board — Seventeen (17) LED's
- Power Interface Board — Four (4) LED's on each board
- Bus Indicator Board — One (1) Neon Light

Optional Equipment:

- Non-Isolated Option Board (MOD A07) — 4 LED's
- Non-Isolated Option board W/Run Relay (MOD B07) — 4 LED's
- Isolated Option Board (MOD C07) — 7 LED's
- Pneumatic Option Board (MOD D07) — 4 LED's
- Dynamic Braking Module (MOD D09) — 3 LED's

These LED's provide a visual indication of protective functions and circuit status. When diagnosing a controller operational problem the prospective LED will illuminate to indicate what protective function was activated. There are some LED's lighted when power is applied to the controller. The function of each indicator is described in the following 7.1 through 7.5 paragraphs. (Refer to Section 8.0, LED Placement chart, Main Control Board and Option Board for location of LED's and Section 4.0, Controller Photo, for location of Bus Indicator Board and Power Interface Boards.)

7.1 MAIN CONTROL BOARD LED'S

- IL1- (+10 V) dc power supply voltage. Should be illuminated whenever there is power applied to the controller.
- IL2- (-10 V) dc power supply voltage. Should be illuminated whenever there is power applied to the controller.

IL3- Undervoltage (UV). Will illuminate whenever line voltage to the controller is less than 87.5% of the rated voltage. This LED will extinguish when line voltage is 95% of the rated voltage.

IL4- Overvoltage (OV). Will illuminate whenever the bus voltage exceeds 900vdc or 450vdc, the level is determined by the System Voltage Selection switch (SW6). To extinguish this LED will require the controller to be reset.

IL5- Shoot Through (ST). Will illuminate when the dc bus voltage falls below 100v or 50v, the level being determined by the system voltage selection switch (SW6). To extinguish this LED will require the controller to be reset.

IL6- Ground Fault (GF). Will illuminate when there is current flowing from the controller output to ground. When ground current is detected, trip out will be instantaneous. To extinguish this LED will require the controller to be reset.

IL7- Instantaneous Overcurrent (IOC). Will illuminate when instantaneous peak current is 310% of peak maximum continuous output rated current for constant torque rated controllers, 250% for variable torque rated controllers. To extinguish this LED will require the controller to be reset.

IL8- Overload (OLD). Will illuminate when the controller output current has exceeded the current setting of the Overload Adjustment Potentiometer (P5) for one minute. To extinguish this LED will require the controller to be reset.

IL9- Overtemperature (OT), precharge contactor failure, or loss of power to PIB. Will illuminate if any of the following occurs:

1. Controller subjected to excessive ambient temperature or loss of cooling air.
2. Precharge contactor fails to pickup when power is applied to the controller.
3. Control power is absent from any of the power interface boards.

To extinguish this LED will require the controller to be reset. If the fault is due to excessive temperature the controller may take as much as one half hour to cool.

IL10- Option Fault (OF). Will illuminate when a fault occurs on the option board, or dynamic braking option. If option fault selection switch (SW4) is closed any of these faults will cause a controller lockout, and a controller reset will be required to extinguish the LED. If option fault selection switch (SW4) is open (IL10) will illuminate, but the controller will not shut-down and lockout.

IL11- The Overload Timer LED (OLT). Illuminates whenever the controller output current exceeds the level determined by potentiometer P5 (overload adjust). If this level is exceeded for 1 minute the controller faults on Overload (OLD) and the Overload (OLD) LED (IL8) will light. It is important to recognize that the overload timing circuitry has an electronic memory characteristic much as a thermal overload unit possesses a thermal memory. The memory characteristic functions such that it requires approximately the same amount of time for the timer to reset as was required to accumulate that amount of time. For example, after faulting on OLD approximately 1 minute is required to reset the timer. If the Main Control Board fault reset button was depressed 10 seconds after faulting on OLD and the controller was started with an overload condition present (IL11 illuminated) it would be only 10 seconds before the controller faulted on OLD (as opposed to 60 seconds initially). Along the same lines the OLT (IL11) does not have to be activated continuously for 60 seconds, but rather, must only average on for 60 seconds. The above comments relating to the electronic memory characteristic are valid only if power to the controller is not removed and reapplied. The removal of power from the controller results in the immediate reset of the OLT.

IL12- Power Up Delay (PUD). Illuminates nominally for 1.5 seconds when power is initially applied to the controller. During controller power up the shoot through fault and the overvoltage circuit is disabled.

IL13- Drive Lockout (DL). Will illuminate whenever a fault occurs that requires a controller reset. The controller can be set-up to lockout on either one or two faults by a snipout resistor (R172).

IL14- Regenerating (REG). Illuminates whenever power flow is from the motor to the controller. Regenerative power flow will occur when decelerating high inertia loads or controlling overhauling loads.

IL15- Regenerating Current Limit (RCL). Will illuminate whenever the current from the motor is at the level determined by the Regeneration Current Limit Adjustment Potentiometer (P3).

IL16- Motor Current Limit (MCL). Will illuminate whenever the current to the motor is at the level determined by the Motor Current Limit Adjustment Potentiometer (P4).

IL17- Drive Enable (DE). Will illuminate whenever the drive run relay (DRR) and run command relay (RCR) are both energized.

7.2 POWER INTERFACE BOARD LED's

IL1- (PWR A) This LED illuminates when proper control voltage is applied to the minus Channel of the PIB.

IL2- (GD A) This LED will not illuminate until the controller is operating. During controller operation the LED will illuminate continuously. This LED indicates the proper gating of the minus Channel.

IL3- (PWR B) This LED illuminates when proper control voltage is applied to the plus Channel of the PIB.

IL4- (GD B) This LED will not illuminate until the controller is operating. During controller operation the LED will illuminate continuously. This LED indicates the proper gating of the plus Channel.

7.3 BUS INDICATOR BOARD

- IL1- This Neon indicates presence of dc bus voltage at the inverter. This Neon should be illuminated anytime power is applied to the controller. The Neon will remain illuminated after power is removed from the controller until the voltage across the dc bus is less than 100vdc.

7.4 OPTIONS BOARD LED'S

- IL1① -(Fault). The purpose of this LED is to indicate loss of voltage or current follower signal. If the input follower signal drops below the Min SP/Offset Adjustment Potentiometer (P2) setting (if minimum speed is 1 Hertz), this LED will illuminate. To extinguish the LED will require the input follower signal to be restored and the controller to be reset.

- IL2① -(+ VISO) dc power supply voltage. Should be illuminated whenever there is power applied to the controller.

- IL3① -(- VISO) dc power supply voltage. Should be illuminated whenever there is power applied to the controller.

- IL4- (Jog). Will illuminate whenever the Jog mode of operation is selected.

- IL5- (Auto). Will illuminate whenever the automatic mode of operation is selected.

- IL6- (Shutdown). Will illuminate whenever the shutdown speed reference is selected.

- IL7- (Hand). Will illuminate whenever the Hand mode of operation is selected.

① Present on Isolated Option Board.

7.5 DYNAMIC BRAKING MODULE LED'S

- IL1- Will not illuminate until dynamic braking action is necessary to reduce motor speed. (This LED is located on the plug-in Gate Driver Board.)

- IL1- (IOC). Instantaneous Overcurrent. Will illuminate whenever the dynamic braking current is at or above the instantaneous trip level. Resetting the controller will extinguish this LED.

- IL2- (Overload). Will illuminate whenever the dynamic braking current is above the long term trip level for a time which could cause damage to the DB Module. Resetting the controller will extinguish this LED.


7.6 STAND-BY MODE LAMP STATUS

There are a large variety of possible lamp indications while the controller is operating, however it is possible to predict the condition of most of the lamps while in a stand-by condition. Standby is defined as "Power applied with the drive stopped". The following tabulation contains the lamp conditions for the stand-by mode.


| Lamps | On | Off | Indeterminate | Comments |
|-------------------------------|----|-----|---------------|--|
| Main Control Board | | | | |
| IL1 | X | | | |
| IL2 | X | | | |
| IL3 | | X | | May flicker momentarily when power is applied |
| IL4 | | X | | |
| IL5 | | X | | |
| IL6 | | X | | |
| IL7 | | X | | |
| IL8 | | X | | |
| IL9 | | X | | |
| IL10 | | X | | |
| IL11 | | X | | May glow dimly with no overload present |
| IL12 | | X | | Illuminates for approximately 1.5 sec when power is applied and then extinguishes |
| IL13 | | X | | |
| IL14 | | | X | May change states randomly |
| IL15 | | X | | |
| IL16 | | X | | |
| IL17 | | X | | |
| Option Boards | | | | |
| LEDs | | | | |
| IL1 | | X | | |
| IL2 | X | | | Both IL2 and IL3 are illuminated for C07 (MC-12). Lamps are not present on A07, B07, D07 (MC-11, MC-13, ML-14) |
| IL3 | X | | | |
| IL4 | | | X | |
| IL5 | | | X | These 4 depend on external select logic |
| IL6 | | | X | |
| IL7 | | | X | |
| Dynamic Braking Module | | | | |
| IL1 (Gate Driver) | | X | | |
| IL1 (Dynamic Brake Board) | | X | | |
| IL2 (Dynamic Brake Board) | | X | | |
| Power Interface Board | | | | |
| 3 Boards in the Controller | | | | |
| IL1 | X | | | |
| IL2 | | X | | |
| IL3 | X | | | |
| IL4 | | X | | |
| Bus Indicator Board | | | | |
| IL1 | X | | | |

8.0 COMPONENT PLACEMENT CHART

8.1 MAIN CONTROL BOARD

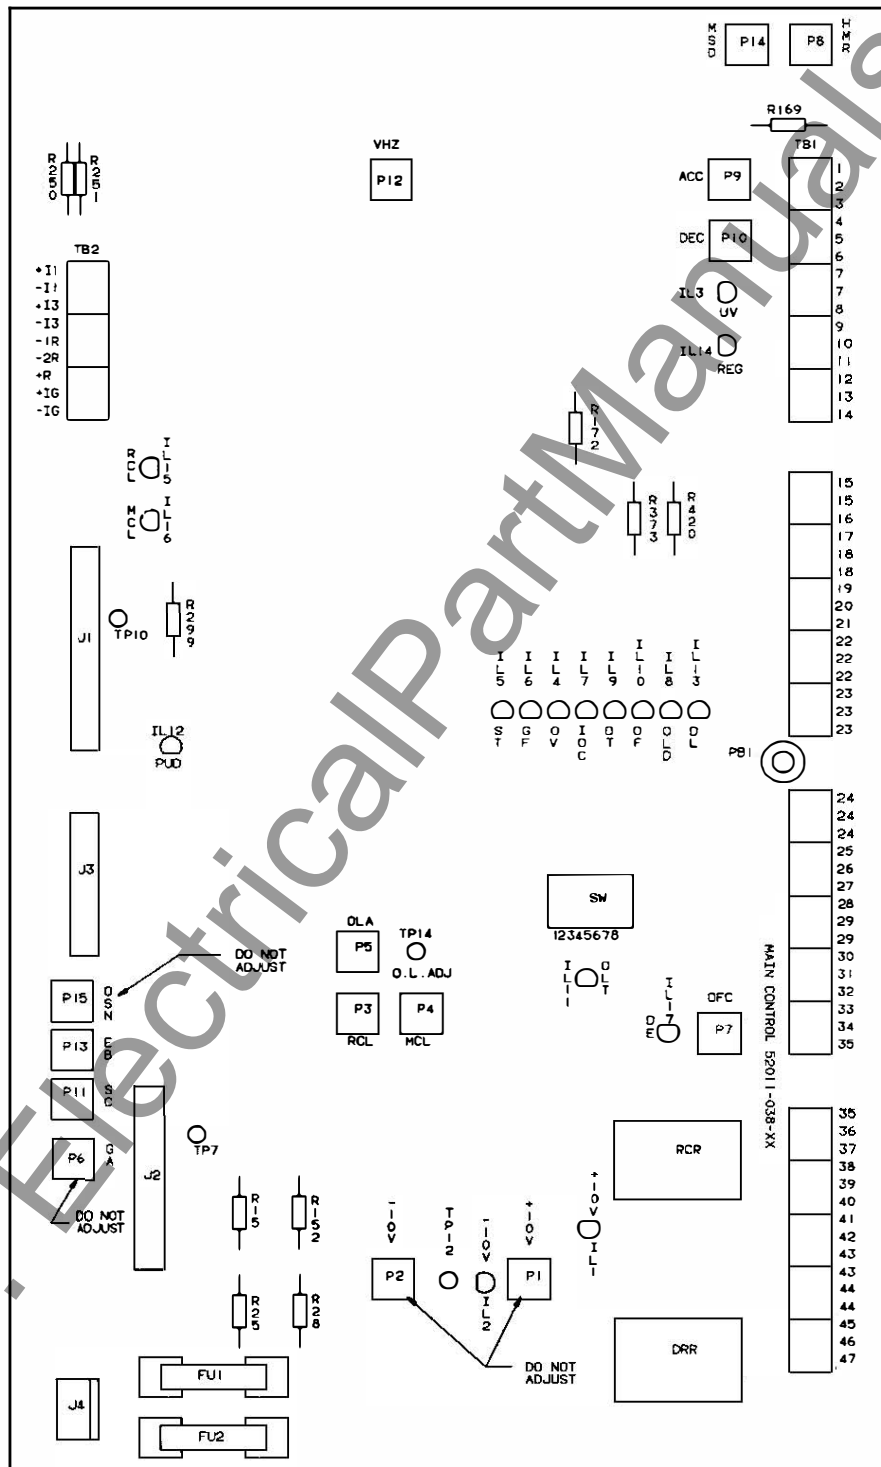


8.2 OPTION BOARD

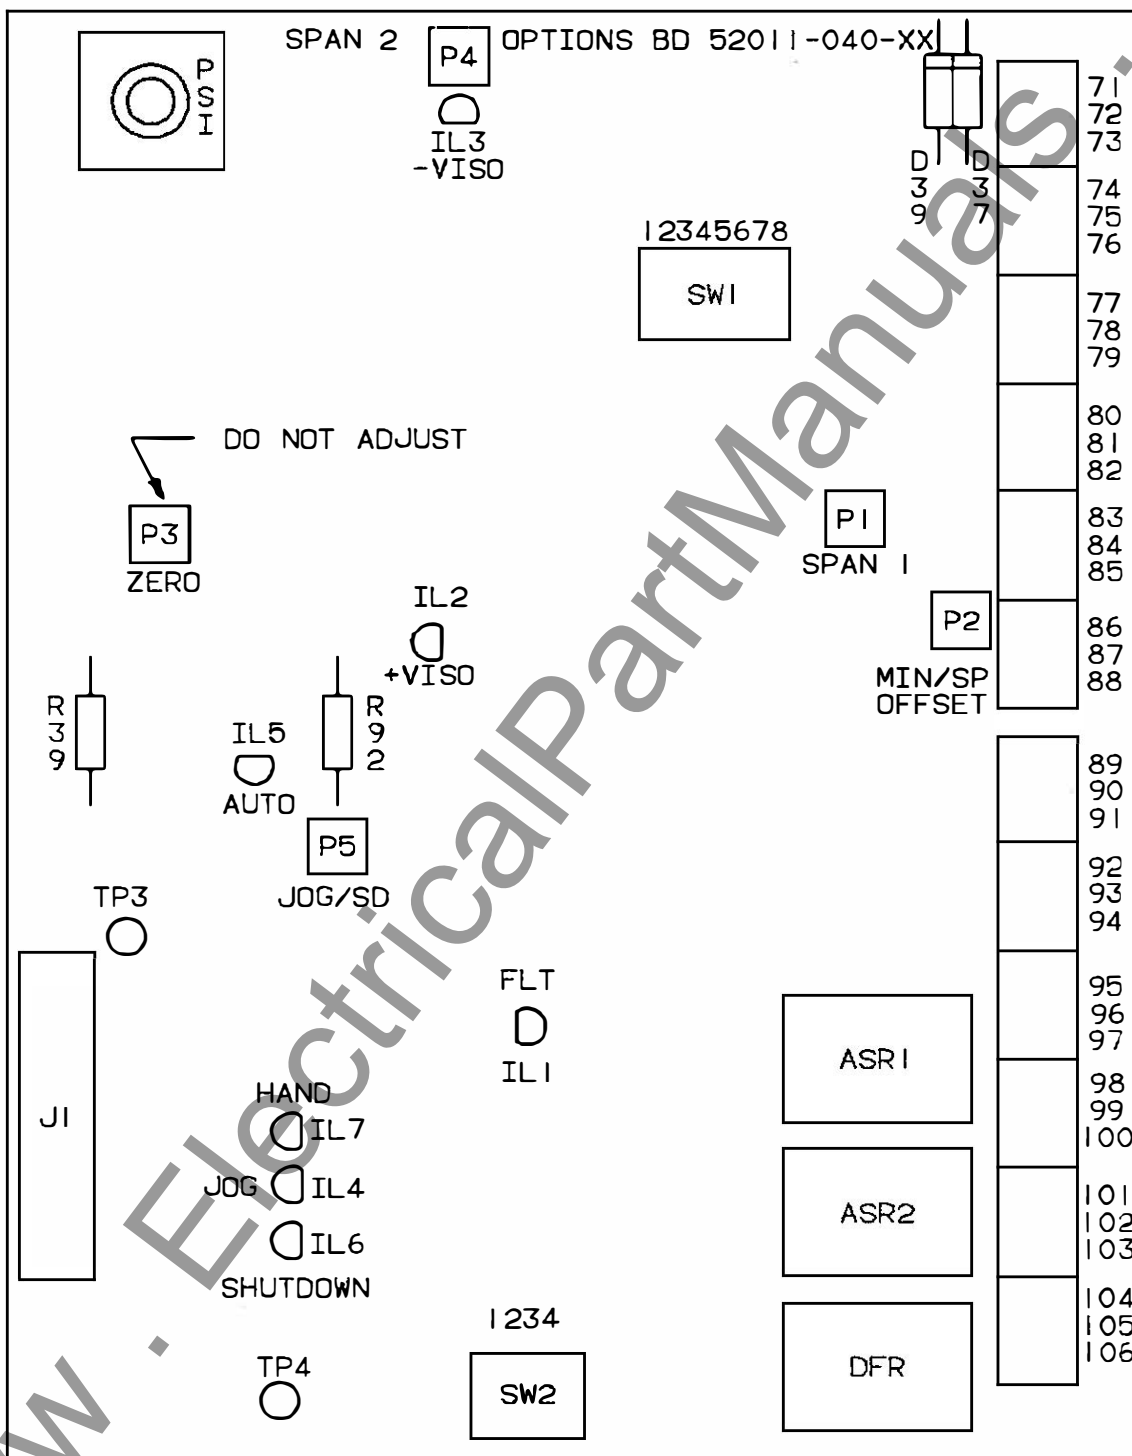


8.3 AUXILIARY VERTICAL SECTION


8.3.1 ISOLATION CONTACTOR

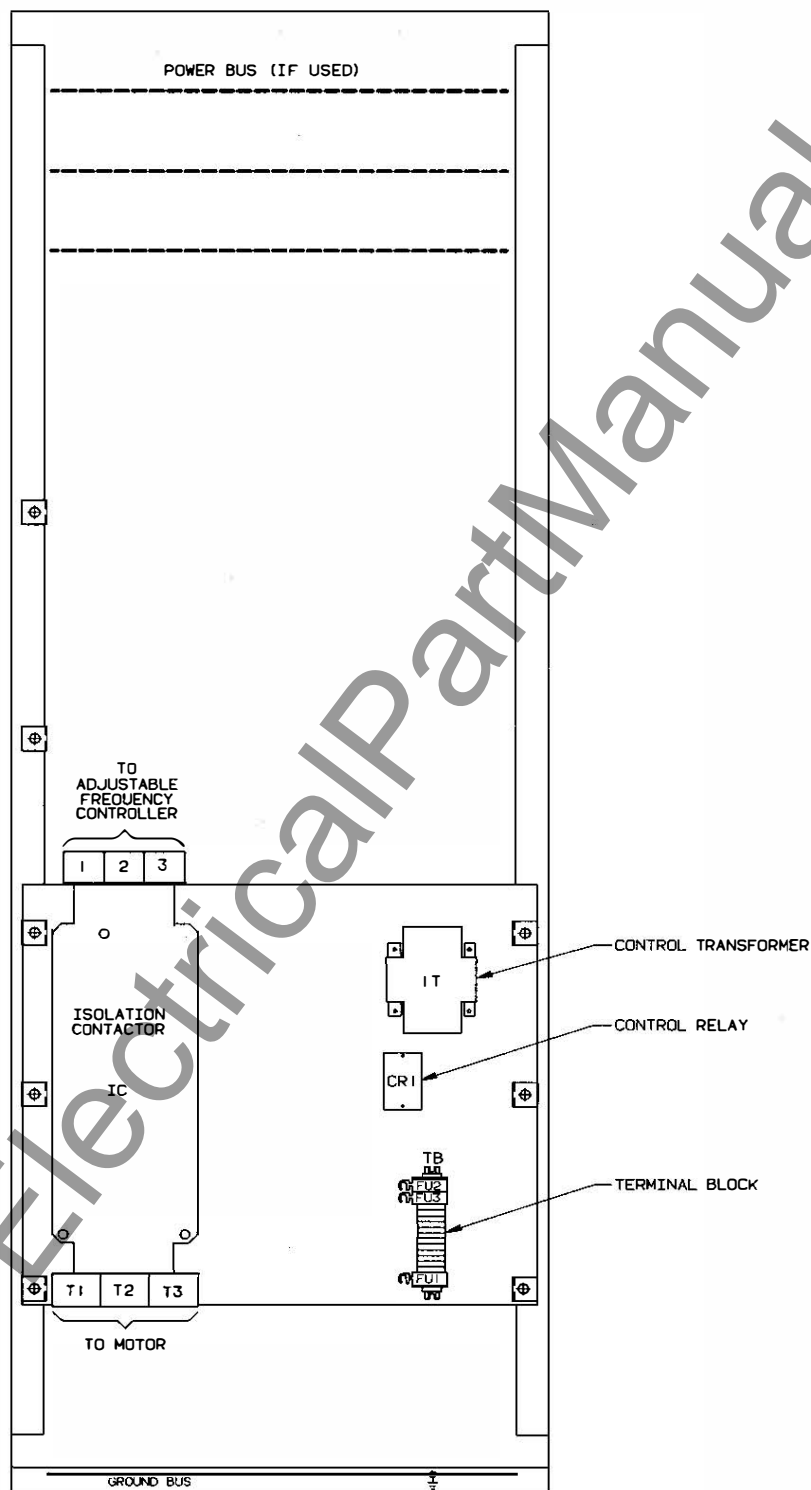

8.3.2 ISOLATION/BYPASS CONTACTORS

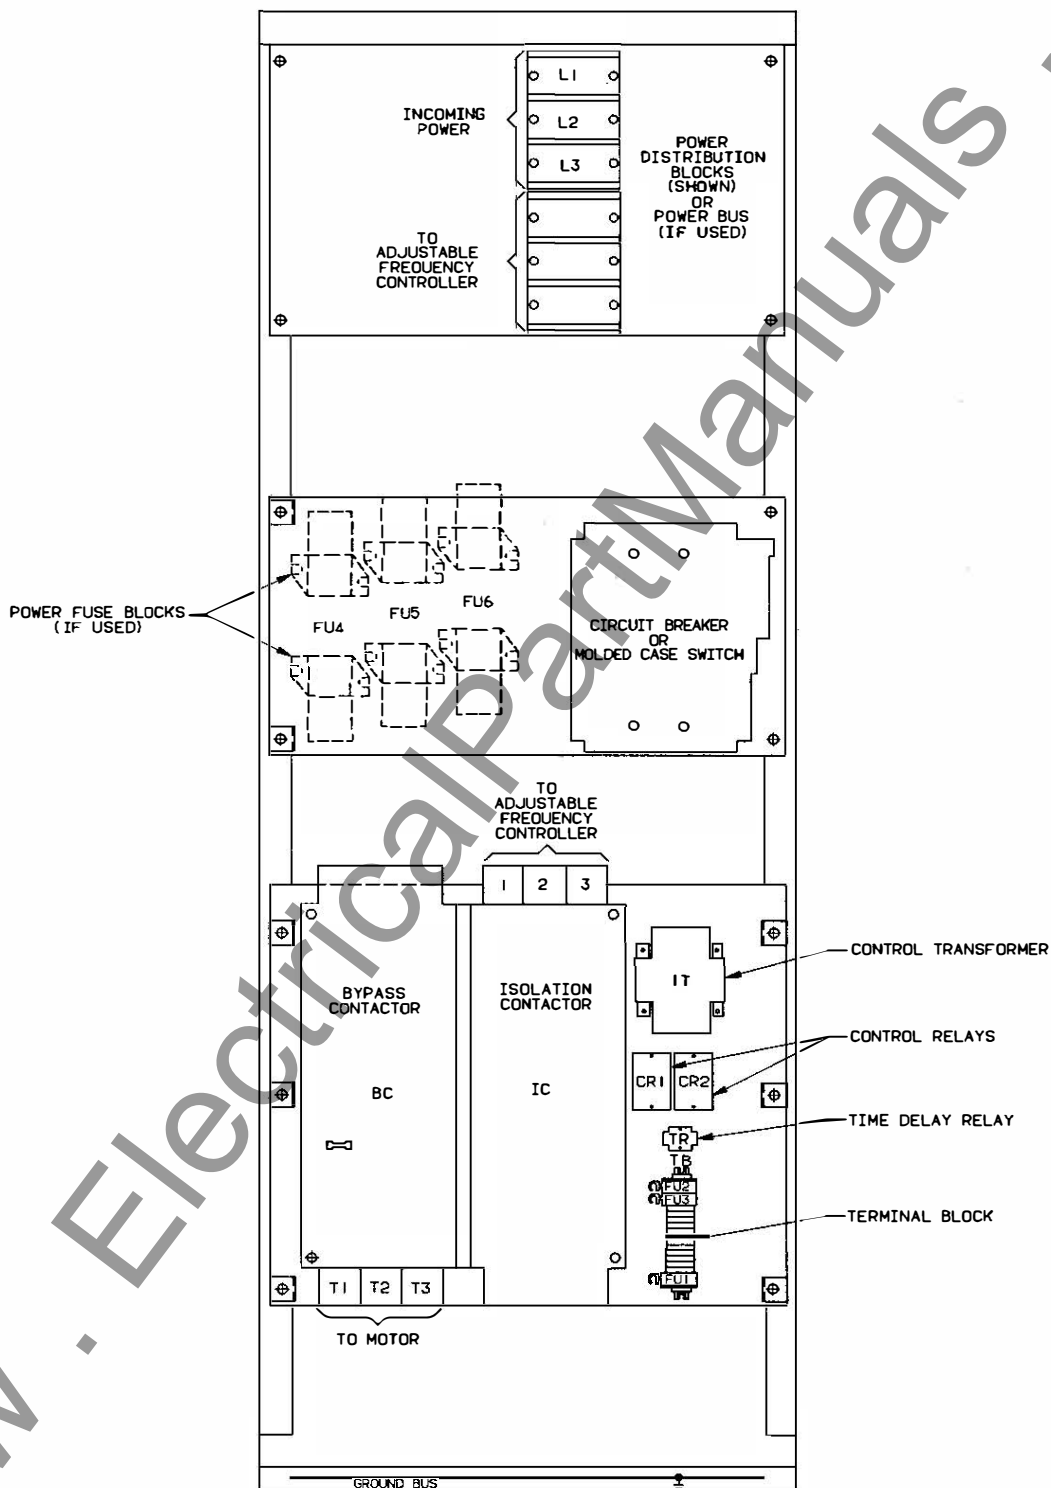


8.3.3 ISOLATION/TRANSFER CONTACTORS

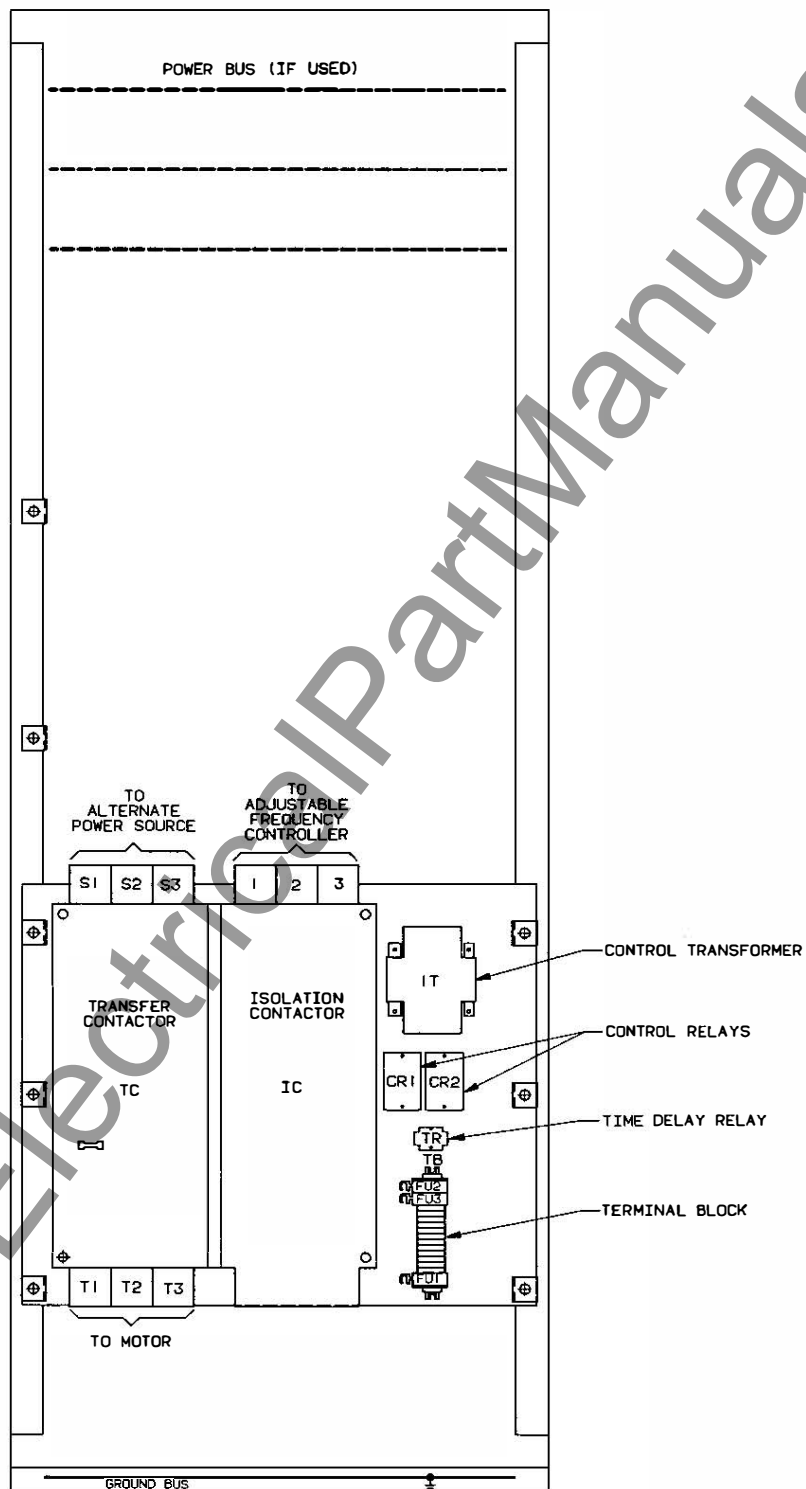

9.0 CONTROLLER OPERATION

9.1 BLOCK DIAGRAM DESCRIPTION

**FIGURE 9.1
OMEGAPAK CONTROLLER
BLOCK DIAGRAM**

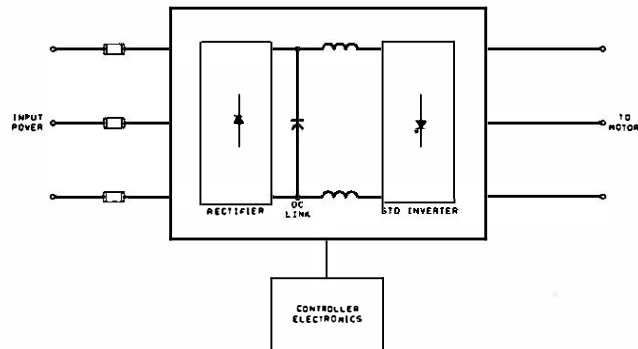

RECTIFIER

The rectifier section consists of six power diodes arranged in a three phase, full wave bridge configuration. Its purpose is to change fixed voltage, fixed frequency ac voltage to dc voltage.

DC LINK

The dc link couples the rectifier output to the Inverter input. The dc link includes capacitors to smooth the voltage present on the rectifier output plus inductors to limit the rate of change of current during output short circuit conditions.

INVERTER

The inverter section consists of six Gate Turn-Off (GTO) Thyristors which, under control of the OMEGAPAK controller electronics, reconstruct a three phase ac waveform for application to a standard three phase ac motor. A Sine Coded Pulse Width Modulation (PWM) switching technique is used.

CONTROLLER ELECTRONICS

Electronic circuitry located on a main control board generates all signals necessary to control the turn-on and turn-off of the Inverter GTOs for controlling the output frequency and voltage. The electronics also contains circuitry to protect the controller against various fault conditions and Light Emitting Diodes (LEDs) to indicate controller status.

9.2 CONTROL CIRCUIT SEQUENCE

The flexibility of available pilot devices to control the OMEGAPAK controller makes possible a wide range of control circuit sequences. The descriptions of operation have been limited to those which are most commonly used.

9.2.1 Pilot Lights, Elapsed Time Meter, and Fan Relay

For pilot lights, elapsed time meter and fan relay control circuit sequence, refer to the description below, and Section 11.0 diagram 11.2.6.

MOD P16

The Power On light (if used) will illuminate when power is applied to the controller.

MOD R16

The Run light (if used) will illuminate when the Drive Run Relay (DRR) N.O. contact closes. This same relay contact will also energize the heat sink fan relay.

MOD F16

The Drive Fail light (if used) will illuminate when the Drive Fail Relay (DFR) (if used) N.C. contact closes. This light is normally not lighted until a controller protective circuit has caused an abnormal shutdown, dropping out the drive fail relay (DFR).

MOD S16

The Incomplete Sequence light (if used) will illuminate when the Auxiliary Sequence Relay 1 (ASR1) (if used) N.O. contact closes. If the controller has been unable to successfully complete the start sequence in a time less than the Incomplete Sequence Timer setting, relay (ASR1) will be energized.

MOD T15

The Elapsed Time Meter (if used) will be energized when the Drive Run Relay (DRR) N.O. contact closes.

FAN RELAY

The Fan Relay will be energized when the Drive Run Relay (DRR) N.O. contact closes. The Fan Relay controls all the cooling fans in the controller.

9.2.2 Start-Stop Push Buttons and Manual Speed Potentiometer (MOD S10) (Class 9001, Type CA-31 Assembled Control Station)

For operation of the control circuit sequence, refer to the description below:

Starting Sequence

A. Pressing the Start push button will energize the Run Command Relay (RCR) causing the following:

- 1) The RCR N.O. contact between terminals 40 and 36 will close to seal around the Start push button.
- 2) The RCR N.C. contact between terminal 38 and the Shutdown Enable input opens removing the negative voltage ($-V$ unreg.) from the Shutdown Enable input causing the controller to switch from the shutdown mode.
- 3) The RCR N.O. contact between terminal 38 and the Drive Run Relay (DRR) N.O. closes preparing to enable the controller when the DRR N.O. contact closes.
- 4) The RCR N.O. contact between terminals 44 and 41 closes to energize the Drive Run Relay (DRR).

B. Energizing the DRR causes the following:

- 1) The DRR N.O. contact between RCR N.O. and the Drive Enable input closes applying $-V$ unreg. to the enable input to place the electronics in the run mode.
- 2) The DRR N.O. contact between terminal 44 and the DRR coil closes to seal around RCR.

C. The controller should now be operating with the output frequency controlled by the manual speed potentiometer.

Normal Stopping Sequence

A. Pressing the Stop push button deenergizes the RCR causing the following:

- 1) The RCR N.O. contact between terminals 40 and 36 opens to break the seal around the Start push button.
- 2) The RCR N.O. contact between terminal 38 and the DRR N.O. opens to take the electronics out of the run mode.
- 3) The RCR N.C. contact between terminal 38 and the Shutdown Enable input closes causing the controller

to switch to the shutdown mode and begin ramping the output frequency to minimum.

- 4) The RCR N.O. contact between terminals 44 and 41 opens, removing the pick-up circuit from the DRR. Note DRR does not drop out due to the seal in contact.

B. When the deceleration ramp has returned the output frequency to minimum, the electronic circuitry will pulse the silicon controlled rectifier (SCR) in parallel with the DRR coil to drop out the DRR.

C. The controller is now stopped.

Abnormal Stopping Sequence

A. Operation of a protective circuit will cause immediate controller shutdown upon occurrence of a fault condition. The electronic circuitry will trigger the SCRs in parallel with the RCR and DRR coils and keep them triggered until the controller is reset.

B. The RCR and DRR relays will drop out returning all contacts to their deenergized state.

C. The controller will stop immediately and the motor will coast to a stop.

9.2.3

Hand-Automatic Selector Switch, Start-Stop Push Buttons and Manual Speed Potentiometer (Mod. No. A10) (Class 9001, Type CA-42 Assembled Control Station)

For operation of the control circuit sequence, refer to the description below:

Hand Mode

A. Placing the Hand-Auto (H-A) Selector Switch in the Hand position causes the following:

- 1) Opens the circuit between terminals 91 and 34 disabling the automatic start contacts.
- 2) Closes the circuit between terminal 89 and the Stop push button enabling the Start-Stop push buttons.
- 3) Opens the circuit between terminal 22 ($-V$ unreg.) and terminal 78 (Hand/Auto) reference select on

the option board to switch control of the output frequency to the manual speed potentiometer.

- 4) Closes the circuit between terminals 22 (–V unreg.) and 16 (RCR Short Pulse) to momentarily pulse the SCR in parallel with the Run Command Relay. This ensures that the RCR will drop out and cause a controller shutdown if switching from the Auto to Hand modes.

Starting Sequence

A. Pressing the Start push button will energize the Run Command Relay (RCR) causing the following:

- 1) The RCR N.O. contact between terminals 40 and 36 will close to seal around the Start push button.
- 2) The RCR N.C. contact between terminal 38 and the Shutdown Enable input opens removing the negative voltage (–V unreg.) from the Shutdown Enable input causing the controller to switch from the shutdown mode.
- 3) The RCR N.O. contact between terminal 38 and the Drive Run Relay (DRR) N.O. closes preparing to enable the controller when the DRR N.O. contact closes.
- 4) The RCR N.O. contact between terminals 44 and 41 closes to energize the Drive Run Relay (DRR).

B. Energizing the DRR causes the following:

- 1) The DRR N.O. contact between RCR N.O. and the Drive Enable input closes applying –V unreg. to the enable input to place the electronics in the run mode.
- 2) The DRR N.O. contact between terminal 44 and the DRR coil closes to seal around RCR.

C. The controller should now be operating with the output frequency controlled by the manual speed potentiometer.

Normal Stopping Sequence

A. Pressing the Stop push button deenergizes the RCR causing the following:

- 1) The RCR N.O. contact between terminals 40 and 36 opens to break the seal around the Start push button.

- 2) The RCR N.O. contact between terminal 38 and the DRR N.O. opens to take the electronics out of the run mode.

- 3) The RCR N.C. contact between terminal 38 and the Shutdown Enable input closes causing the controller to switch to the shutdown mode and begin ramping the output frequency to minimum.

- 4) The RCR N.O. contact between terminals 44 and 41 opens, removing the pick-up circuit from the DRR. Note DRR does not drop out due to the seal in contact.

B. When the deceleration ramp has returned the output frequency to minimum, the electronic circuitry will pulse the Silicon Controlled Rectifier (SCR) in parallel with the DRR coil to drop out the DRR.

C. The controller is now stopped.

Abnormal Stopping Sequence

A. Operation of a protective circuit will cause immediate controller shutdown upon occurrence of a fault condition. The electronic circuitry will trigger the SCRs in parallel with the RCR and DRR coils and keep them triggered until the controller is reset.

B. The RCR and DRR relays will drop out returning all contacts to their deenergized state.

C. The controller will stop immediately and the motor will coast to a stop.

Auto Mode

A. Placing the Hand-Auto (H-A) selector switch in the Auto position causes the following:

- 1) Opens the circuit between terminal 89 and the Stop push button disabling the Start-Stop push buttons.
- 2) Closes the circuit between terminals 91 and 34 enabling the automatic start contact.
- 3) Closes the circuit between terminal 22 (–V unreg.) and terminal 78 (Hand/Auto) reference select on the option board to switch control of the output frequency to an analog input follower signal.

- 4) Opens the circuit between terminals 22 (– V unreg.) and 16 (RCR SHORT PULSE) to prevent triggering of the RCR shorting SCR.

Start Sequence

A. Closing the user supplied contact between terminals 44 and 91 energizes the Run Command Relay (RCR). NOTE: On option boards so equipped, a 4 to 33vdc signal can be used to pickup a Solid State Run Relay (RR) to start the controller. Refer to the option boards connection diagram for input terminals for the 4 to 33vdc signal. Energizing the RCR causes the following:

- 1) The RCR N.O. contact between terminals 40 and 36 closes but has no effect since power to the Stop push button has been disabled.
- 2) The RCR N.C. contact between terminal 38 and the Shutdown Enable input opens removing the negative voltage (– V unreg.) from the Shutdown Enable input causing the controller to switch from the shutdown mode.
- 3) The RCR N.O. contact between terminal 38 and the Drive Run Relay (DRR) N.O. closes preparing to enable the controller when the DRR N.O. contact closes.
- 4) The RCR N.O. contact between terminals 44 and 41 closes to energize the Drive Run Relay (DRR).

B. Energizing the DRR causes the following:

- 1) The DRR N.O. contact between RCR N.O. and the Drive Enable input closes applying – V unreg. to the enable input to place the electronics in the run mode.
- 2) The DRR N.O. contact between terminal 44 and the DRR coil closes to seal around RCR.

C. The controller should now be operating with the output frequency controlled by the analog input follower signal.

Normal Stopping Sequence

A. Opening the automatic start contact deenergizes the RCR causing the following:

- 1) The RCR N.O. contact between terminals 40 and 36 opens, however, this contact has no effect in the auto mode.
- 2) The RCR N.O. contact between terminal 38 and the DRR N.O. opens to take the electronics out of the run mode.
- 3) The RCR N.C. contact between terminal 38 and the Shutdown Enable input closes causing the controller to switch to the shutdown mode and begin ramping the output frequency to minimum.
- 4) The RCR N.O. contact between terminals 44 and 41 opens, removing the pick-up circuit from the DRR. Note DRR does not drop out due to the seal in contact.

B. When the deceleration ramp has returned the output frequency to minimum, the electronic circuitry will pulse the silicon controlled rectifier (SCR) in parallel with the DRR coil to drop out the DRR.

C. The controller is now stopped.

Abnormal Stopping Sequence

A. Operation of a protective circuit will cause immediate controller shutdown upon occurrence of a fault condition. The electronic circuitry will trigger the SCRs in parallel with the RCR and DRR coils and keep them triggered until the controller is reset.

B. The RCR and DRR relays will drop out returning all contacts to their deenergized state.

C. The controller will stop immediately and the motor will coast to a stop.

9.2.4

Hand-Off-Automatic selector switch, and Manual Speed potentiometer (Mod. No. H10)

For operation of the control circuit sequence, refer to the description below:

Hand Mode

A. Placing the Hand-Off-Auto (H-O-A) selector switch in the Off position disables controller operation.

B. Placing the Hand-Off-Auto (H-O-A) selector switch in the Hand position causes the following:

- 1) The H-O-A contact between terminals 91 and 34 opens disabling the Automatic Start contact.
- 2) The H-O-A contact between terminals 22 (–V unreg.) and 78 (Hand-Auto) located on an option board opens causing the output frequency to respond to the manual speed potentiometer.
- 3) The H-O-A contact between terminals 89 and 34 closes, energizing the Run Command Relay (RCR) coil. If the H-O-A switch is rapidly moved from Auto to Hand, the RCR will momentarily drop out but will immediately pick up and the controller will continue to operate but with the speed controlled by the manual speed potentiometer.

C. Energizing RCR causes the following:

- 1) The RCR N.C. contact between terminal 38 and the Shutdown Enable input opens removing the negative voltage (–V unreg.) from the Shutdown Enable input causing the controller to switch from the shutdown mode.
- 2) The RCR N.O. contact between terminal 38 and the Drive Run Relay (DRR) N.O. closes preparing to enable the controller when the DRR N.O. contact closes.
- 3) The RCR N.O. contact between terminals 44 and 41 closes to energize the Drive Run Relay (DRR).

D. Energizing the DRR causes the following:

- 1) The DRR N.O. contact between RCR N.O. and the Drive Enable input closes applying –V unreg. to the enable input to place the electronics in the run mode.
- 2) The DRR N.O. contact between terminal 44 and the DRR coil closes to seal around RCR.

E. The controller should now be operating with the output frequency controlled by the manual speed potentiometer.

Normal Stopping Sequence

A. Moving the H-O-A selector switch to the Off position deenergizes the RCR causing the following:

- 1) The RCR N.O. contact between terminal 38 and the DRR N.O. opens to take the electronics out of the run mode.
- 2) The RCR N.C. contact between terminal 38 and the Shutdown Enable input closes causing the controller to switch to the shutdown mode and begin ramping the output frequency to minimum.
- 3) The RCR N.O. contact between terminals 44 and 41 opens, removing the pick-up circuit from the DRR. Note DRR does not drop out due to the seal in contact.

B. When the deceleration ramp has returned the output frequency to minimum, the electronic circuitry will pulse the silicon controlled rectifier (SCR) in parallel with the DRR coil to drop out the DRR.

C. The controller is now stopped.

Abnormal Stopping Sequence

A. Operation of a protective circuit will cause immediate controller shutdown upon occurrence of a fault condition. The electronic circuitry will trigger the SCRs in parallel with the RCR and DRR coils and keep them triggered until the controller is reset.

B. The RCR and DRR relays will drop out returning all contacts to their deenergized state.

C. The controller will stop immediately and the motor will coast to a stop.

Auto Mode

A. Placing the Hand-Off-Auto (H-O-A) selector switch in the Auto mode causes the following:

- 1) The H-O-A contact between terminals 91 and 34 closes to enable the controller to start when the automatic start contact closes.
- 2) The H-O-A contact between terminals 89 and 34 opens preventing the controller from being manually started.

- 3) The H-O-A contact between terminals 22 (–V unreg.) and 78 (Hand-Auto) located on an options card closes causing the output frequency to respond to an analog input follower signal.
- B. Closing the automatic start contact energizes the Run Command Relay (RCR) causing the following:
- 1) The RCR N.C. contact between terminal 38 and the Shutdown Enable input opens removing the negative voltage (–V unreg.) from the Shutdown Enable input causing the controller to switch from the shutdown mode.
 - 2) The RCR N.O. contact between terminals 38 and the Drive Run Relay (DRR) N.O. closes preparing to enable the controller when the DRR N.O. contact closes.
 - 3) The RCR N.O. contact between terminals 38 and the Drive Run Relay (DRR) N.O. closes preparing to enable the controller when the DRR N.O. contact closes.
 - 4) The RCR N.O. contact between terminals 44 and 41 closes to energize the Drive Run Relay (DRR).
- C. Energizing the DRR causes the following:
- 1) The DRR N.O. contact between RCR N.O. and the Drive Enable input closes applying –V unreg. to the enable input to place the electronics in the run mode.
 - 2) The DRR N.O. contact between terminal 44 and the DRR coil closes to seal around RCR.
- D. The controller should now be operating with the output frequency controlled by the analog input follower signal.
- 2) The RCR N.C. contact between terminal 38 and the Shutdown Enable input closes causing the controller to switch to the shutdown mode and begin ramping the output frequency to minimum.
 - 3) The RCR N.O. contact between terminals 44 and 41 opens, removing the pick-up circuit from the DRR. Note DRR does not drop out due to the seal in contact.
- B. When the deceleration ramp has returned the output frequency to minimum, the electronic circuitry will pulse the silicon controlled rectifier (SCR) in parallel with the DRR coil to drop out the DRR.
- C. The controller is now stopped.

Abnormal Stopping Sequence

- A. Operation of a protective circuit will cause immediate controller shutdown upon occurrence of a fault condition. The electronic circuitry will trigger the SCRs in parallel with the RCR and DRR coils and keep them triggered until the controller is reset.
- B. The RCR and DRR relays will drop out returning all contacts to their deenergized state.
- C. The controller will stop immediately and the motor will coast to a stop.

9.2.5. Start-Stop Push buttons, Fast Stop Push button, Manual Speed Potentiometer (MOD F10), Forward Reverse Selector Switch, Run-Jog Selector Switch (MOD F11, J11)

For operation of the control circuit sequence, refer to the description below:

Forward-Reverse Selection

Selection of forward or reverse rotation is independent of Start-Stop or Run-Jog functions and is described separately.

- A. Placing the Forward-Reverse selector switch in the Forward position opens the contact between terminals 22 (–V unreg.) and 27 (Reverse) causing the output frequency to assume an A, B, C phase rotation.
- B. Placing the Forward-Reverse selector

Normal Stopping Sequence

- A. Opening the automatic start contact or moving the H-O-A switch to the OFF position deenergizes the RCR causing the following:
 - 1) The RCR N.O. contact between terminal 38 and the DRR N.O. opens to take the electronics out of the run mode.

switch in the Reverse position closes the contact between terminals 22 (–V unreg.) and 27 (Reverse) causing the output frequency to electronically reverse phase rotation.

- C. Moving the Forward-Reverse selector switch from Forward to Reverse or Reverse to Forward while the controller is operating is permissible. The controller will decelerate to minimum frequency under control of the deceleration ramp, electronically switch phase rotation and accelerate back to the set speed under control of the acceleration ramp.

Run Mode

- A. Placing the Run-Jog selector switch in the Run position causes the following:

- 1) The Run-Jog switch contact between the Stop push button and terminal 40 closes permitting the Run Command Relay (RCR) N.O. contact to seal around the Start push button.
- 2) The contact between terminals 22 (–V unreg.) and 79 (Jog Select) opens causing the output frequency to respond to the manual speed potentiometer.

- B. Pressing the Start push button will energize the Run Command Relay (RCR) causing the following:

- 1) The RCR N.O. contact between terminals 40 and 36 will close to seal around the Start push button through the closed Run-Jog selector switch contact.
- 2) The RCR N.C. contact between terminal 38 and the Shutdown Enable input opens removing the negative voltage (–V unreg.) from the Shutdown Enable input causing the controller to switch from the shutdown mode.
- 3) The RCR N.O. contact between terminal 38 and the Drive Run Relay (DRR) N.O. closes preparing to enable the controller when the DRR N.O. contact closes.
- 4) The RCR N.O. contact between terminals 44 and 41 closes to energize the Drive Run Relay (DRR).

- C. Energizing the DRR causes the following:

- 1) The DRR N.O. contact between RCR N.O. and the Drive Enable input closes applying –V unreg. to the enable input to place the electronics in the run mode.
- 2) The DRR N.O. contact between terminal 44 and the DRR coil closes to seal around RCR.

- D. The controller should now be operating with the output frequency controlled by the manual speed potentiometer.

Normal Stopping Sequence

- A. Pressing the Stop push button deenergizes the RCR causing the following:

- 1) The RCR N.O. contact between terminals 40 and 36 opens to break the seal around the Start push button.
- 2) The RCR N.O. contact between terminal 38 and the DRR N.O. opens to take the electronics out of the run mode.
- 3) The RCR N.C. contact between terminal 38 and the Shutdown Enable input closes causing the controller to switch to the shutdown mode and begin ramping the output frequency to minimum.
- 4) The RCR N.O. contact between terminals 44 and 41 opens, removing the pick-up circuit from the DRR. Note DRR does not drop out due to the seal in contact.

- B. When the deceleration ramp has returned the output frequency to minimum, the electronic circuitry will pulse the silicon controlled rectifier (SCR) in parallel with the DRR coil to drop out the DRR.

- C. The controller is now stopped.

Fast Stop

- A. Pressing the Fast Stop push button opens the circuit between terminals 22 (–V unreg.) and 3 (Fast Stop) causing the output frequency to ramp to minimum frequency as quickly as possible regardless of the time setting of the Deceleration Ramp Potentiometer. If optional Dynamic Braking is used, the

minimum ramp time will be 1 second for 60 Hertz operation (2 seconds for 120 Hertz). If DB is not used, the minimum ramp time will be determined by the load inertia.

- B. When the output frequency reaches minimum, the electronic circuitry will pulse the SCR in parallel with RCR and DRR causing them to drop out.

- C. The controller is now stopped.

Abnormal Stopping Sequence

- A. Operation of a protective circuit will cause immediate controller shutdown upon occurrence of a fault condition. The electronic circuitry will trigger the SCRs in parallel with the RCR and DRR coils and keep them triggered until the controller is reset.

- B. The RCR and DRR relays will drop out returning all contacts to their deenergized state.

- C. The controller will stop immediately and the motor will coast to a stop.

Jog Mode

- A. Placing the Run-Jog selector switch in the Jog position causes the following:

- 1) The Run-Jog switch contact between the Stop push button and terminal 40 opens breaking the seal-in path for the Run Command Relay (RCR).
- 2) The Run-Jog switch contact between terminals 22 (-V unreg.) and 79 (Jog Select) closes to enable the jog speed reference on the option board. Jog speed is controlled by the jog speed adjust potentiometer. NOTE: If an option board is not used, the controller will jog at the speed set by the manual speed potentiometer.

- B. Pressing the Start push button will energize the Run Command Relay (RCR) causing the following:

- 1) The RCR N.O. contact between terminals 40 and 36 will close to seal around the Start push button but the seal-in path is broken by the open Run-Jog selector switch contact.

- 2) The RCR N.C. contact between terminal 38 and the Shutdown Enable input opens removing the negative voltage (-V unreg.) from the Shutdown Enable input causing the controller to switch from the shutdown mode.

- 3) The RCR N.O. contact between terminal 38 and the Drive Run Relay (DRR) N.O. closes preparing to enable the controller when the DRR N.O. contact closes.

- 4) The RCR N.O. contact between terminals 44 and 41 closes to energize the Drive Run Relay (DRR).

- C. Energizing the DRR causes the following:

- 1) The DRR N.O. contact between RCR N.O. and the Drive Enable input closes applying -V unreg. to the enable input to place the electronics in the run mode.
- 2) The DRR N.O. contact between terminal 44 and the DRR coil closes to seal around RCR.
- 3) If an option board is used, the output frequency follows the minimum ramp time (1 sec) to the setting called for by the jog pre-set speed potentiometer.
- 4) If an option board is not used, the output frequency follows the normal acceleration ramp time to the setting called for by the manual speed potentiometer.

- D. Releasing the Start push button deenergizes the RCR causing the following:

- 1) The RCR N.O. contact between terminal 38 and the DRR N.O. opens to take the electronics out of the run mode.
- 2) The RCR N.C. contact between terminal 38 and the Shutdown Enable input closes causing the controller to switch to the shutdown speed reference and begin ramping the output frequency to minimum.
- 3) The RCR N.O. contact between terminals 44 and 41 opens, removing the pick-up circuit from the DRR. Note DRR does not drop out due to the seal in contact.

- 4) If an option board is used, the output frequency follows the minimum ramp time (1 second) to minimum frequency.
 - 5) If an option board is not used, the output frequency follows the normal deceleration time ramp to minimum frequency.
- E. When the deceleration ramp has returned the output frequency to minimum, the electronic circuitry will pulse the silicon controlled rectifier (SCR) in parallel with the DRR coil to drop out the DRR.

F. The controller is now stopped.

Abnormal Stopping Sequence

- A. Operation of a protective circuit will cause immediate controller shutdown upon occurrence of a fault condition. The electronic circuitry will trigger the SCRs in parallel with the RCR and DRR coils and keep them triggered until the controller is reset.
- B. The RCR and DRR relays will drop out returning all contacts to their deenergized state.
- C. The controller will stop immediately and the motor will coast to a stop.

9.2.6 OMEGAPAK controller with Auxiliary Vertical Section and Hand-Off-Auto Selector Switch and Manual Speed Potentiometer (Mod H10), and Option Board relays (Mod's F08, T08, S08).

For operation of the control circuit sequence, refer to Section 11.0 diagram 11.2.5 and the description below

Operation With Isolation Contactor

(Diagram 11.2.5) Note: AFC-Off-Line switch is not used and a jumper is installed between terminals 22 and 3.

Hand Mode

- A. Placing the Hand-Off-Auto (H-O-A) selector switch in the Hand position causes the following:
 - 1) The H-O-A contact between terminal 91 and 34 opens disabling the Automatic Start contact.

- 2) The H-O-A contact between terminals 22 (-V unreg.) and 78 (Hand-Auto) located on an options card opens causing the output frequency to respond to the manual speed potentiometer.
- 3) The H-O-A contact between terminals 89 and 34 closes, energizing the Run Command Relay (RCR) coil. If the H-O-A switch is rapidly moved from Auto to Hand, the RCR will momentarily drop out but will immediately pick up and the controller will continue to operate but with the speed controlled by the manual speed potentiometer.

B. Energizing RCR causes the following:

- 1) The RCR N.C. contact between terminal 38 and the Shutdown Enable input opens removing the negative voltage (-V unreg.) from the Shutdown Enable input causing the controller to switch from the shutdown mode.
- 2) The RCR N.O. contact between terminal 38 and the Drive Run Relay (DRR) N.O. closes preparing to enable the controller when the DRR N.O. contact closes.
- 3) The RCR N.O. contact between terminals 37 and 39 closes to energize the Isolation Contactor (IC) (refer to diagram 11.3.5 or 11.3.6).
- 4) The RCR N.O. contact between terminals 44 and 41 closes preparing to energize the Drive Run Relay (DRR), and Auxiliary Sequence Relay No. 2 (ASR2), when the isolation contactor (IC) N.O. contact closes. This contact also energizes the Sequence Timing Relay (STR) through the IC N.C. contact between terminals 41 and 86.

C. Energizing the Isolation Contactor (IC) shown on 11.3.5 or 11.3.6 causes the following:

- 1) The IC N.O. contact between terminal 41 and 42 closes energizing the Drive Run Relay (DRR) and Auxiliary Sequence Relay No. 2 (ASR2).
- 2) The IC N.C. contact between terminals 41 and 86 opens to disable STR. This must take place before STR times out to prevent Incomplete Sequence Shutdown of the controller.

D. Energizing the DRR causes the following:

- 1) The DRR N.O. contact between RCR N.O. and Drive Enable input closes applying -V unreg. to the enable input to place the electronics in the run mode.
- 2) The DRR N.O. contact between terminal 44 and the DRR coil closes to seal around RCR.

E. The controller should now be operating with the output frequency controlled by the Manual Speed Potentiometer.

F. Energizing ASR2 provides a form C contact in addition to the one provided by the DRR which can be used for external control or annunciation.

G. If the Isolation Contactor does not pick up before STR times out, Auxiliary Sequence Relay No. 1 (ASR1) will be energized causing the following:

H. Energizing ASR1 will cause the following:

- 1) The ASR1 N.O. contact in parallel with the Drive Fail Relay (DFR) coil will close causing DFR to drop out.
- 2) The ASR1 N.O. contact between terminal 87 and the STR coil closes to seal in STR and ASR1 until the H-O-A switch is moved to the Off position.
- 3) The ASR1 N.O. contact between J1-23 and terminal 85 will close illuminating the Incomplete Sequence pilot light (if used). Refer to wiring diagram 11.2.6.

I. Dropping out the Drive Fail Relay (DFR) will cause the following:

- 1) The DFR N.C. Contact in parallel with the RCR coil will close causing RCR to drop out.
- 2) DFR N.C. contact in parallel with the ASR2 coil will close causing ASR2 and DRR to drop out. This along with the RCR drop out from Step 1 will shutdown the controller.
- 3) The DFR N.C. contact between terminals 105 and 106 will close to illuminate the Drive Fail pilot light (if used).

Normal Stopping Sequence

A. Moving the H-O-A selector switch to the OFF position deenergizes the RCR causing the following:

- 1) The RCR N.O. contact between terminal 38 and the DRR N.O. opens to take the electronics out of the run mode.
- 2) The RCR N.C. contact between terminal 38 and the Shutdown Enable input closes causing the controller to switch to the shutdown mode and begin ramping the output frequency to minimum.
- 3) The RCR N.O. contact between terminals 44 and 41 opens, removing the pick-up circuit from the DRR. Note DRR does not drop out due to the seal in contact. This contact also deenergizes the STR circuit causing STR to reset.
- 4) The RCR N.O. contact between terminal 37 and 39 opens but the Isolation Contactor does not drop out because the DRR N.O. contact between terminals 45 and 46 remains closed.

B. When the deceleration ramp has returned the output frequency to minimum, the electronic circuitry will pulse the silicon controlled rectifier (SCR) in parallel with the DRR coil to drop out the DRR and ASR2, thereby stopping the controller.

C. Dropping out DRR also causes IC to be deenergized.

Abnormal Stopping Sequence

A. Operation of a protective circuit will cause immediate controller shutdown upon occurrence of a fault condition. The electronic circuitry will trigger the SCRs in parallel with the RCR, DRR and DFR coils and keep them triggered until the controller is reset.

B. The RCR, DRR, ASR2 and DFR relays will drop out returning all contacts to their deenergized state.

C. The controller will stop immediately and the motor will coast to a stop.

D. The DFR N.C. contact in parallel with the RCR coil will close keeping RCR dropped out.

- E. An additional DFR N.C. contact will close illuminating the Drive Fail pilot light (if used). Refer to wiring diagram 11.2.6.

Auto Mode

- A. Placing the Hand-Off-Auto (H-O-A) selector switch in the Auto mode causes the following:

- 1) The H-O-A contact between terminals 91 and 34 closes to enable the controller to start when the automatic start contact closes.
- 2) The H-O-A contact between terminals 89 and 34 opens preventing the controller from being manually started.
- 3) The H-O-A contact between terminals 22 (-V unreg.) and 78 (Hand/Auto) located on an option board closes causing the output frequency to respond to an analog input follower signal.

- B. Closing the automatic start contact energizes the Run Command Relay (RCR) causing the following:

- 1) The RCR N.C. contact between terminal 38 and the Shutdown Enable input opens removing the negative voltage (-V unreg.) from the Shutdown Enable input causing the controller to switch from the shutdown mode.
- 2) The RCR N.O. contact between terminals 38 and the Drive Run Relay (DRR) N.O. closes preparing to enable the controller when the DRR N.O. contact closes.
- 3) The RCR N.O. contact between terminals 37 and 39 closes to energize the Isolation Contactor (IC). Refer to diagram 11.2.5 and 11.3.5 or 11.3.6.
- 4) The RCR N.O. contact between terminals 44 and 41 closes preparing to energize the Drive Run Relay (DRR), Auxiliary Sequence Relay No. 2 (ASR2), and Sequence Timer (STR) through IC N.C. between terminals 41 and 86.

- C. Energizing the Isolation Contactor (IC) causes the following:

- 1) The IC N.O. contact between terminal 41 and 42 closes energizing

the Drive Run Relay (DRR) and Auxiliary Sequence Relay No. 2 (ASR2).

- 2) The IC N.C. contact between terminals 41 and 86 opens to disable STR. This must take place before STR times out to prevent Incomplete Sequence Shutdown of the controller.

- D. Energizing the DRR causes the following:

- 1) The DRR N.O. contact between RCR N.O. and the Drive Enable input closes applying -V unreg. to the enable input to place the electronics in the run mode.
- 2) The DRR N.O. contact between terminal 44 and the DRR coil closes to seal around RCR.

- E. The controller should now be operating with the output frequency controlled by the analog input signal.

- F. Energizing ASR2 provides a form C contact in addition to the one provided by the DRR which can be used for external control or annunciation.

- G. If the Isolation Contactor does not pick up before STR times out, Auxiliary Sequence Relay No. 1 (ASR1) will be energized causing the following:

- H. Energizing ASR1 will cause the following:

- 1) The ASR1 N.O. contact in parallel with the Drive Fail Relay (DFR) coil will close causing DFR to drop out.
- 2) The ASR1 N.O. contact between terminal 87 and the STR coil closes to seal in STR and ASR1 until the H-O-A switch is moved to the Off position or until the automatic start contact opens.
- 3) The ASR1 N.O. contact between J1-23 and terminal 85 will close illuminating the Incomplete Sequence pilot light if used. Refer to diagram 11.2.6.

- I. Dropping out the Drive Fail Relay (DFR) will cause the following:

- 1) The DFR N.C. Contact in parallel with the RCR coil will close causing RCR to drop out.

- 2) The DFR N.C. contact in parallel with the ASR2 coil will close causing ASR2 and DRR to drop out. This along with the RCR drop out from Step 1 will shutdown the controller.
- 3) The DFR N.C. contact between terminals 105 and 106 will close to illuminate the Drive Fail pilot light (if used). Refer to diagram 11.2.6.

Normal Stopping Sequence

- A. Opening the automatic start contact deenergizes the RCR causing the following:
 - 1) The RCR N.O. contact between terminal 38 and the DRR N.O. opens to take the electronics out of the run mode.
 - 2) The RCR N.C. contact between terminal 38 and the SHUTDOWN ENABLE input closes causing the controller to switch to the shutdown mode and begin ramping the output frequency to minimum.
 - 3) The RCR N.O. contact between terminals 44 and 41 opens, removing the pick-up circuit from the DRR. Note DRR does not drop out due to the seal in contact. This contact also deenergizes the STR circuit causing STR to reset.
 - 4) The RCR N.C. contact between terminal 37 and 39 opens but the Isolation Contactor does not drop out because the DRR N.O. contact between terminals 45 and 46 remains closed. Refer to drawing.
- B. When the deceleration ramp has brought the output frequency to minimum, the electronic circuitry will pulse the silicon controlled rectifier (SCR) in parallel with the DRR coil to drop out the DRR and ASR2, thereby stopping the controller.
- C. Dropping out DRR also causes IC to be deenergized.

Abnormal Stopping Sequence

- A. Operation of a protective circuit will cause immediate controller shutdown upon occurrence of a fault condition. The electronic circuitry will trigger the SCRs in parallel with the RCR, DRR and DFR coils and keep them triggered until the controller is reset.

- B. The RCR, DRR, ASR2 and DFR relays will drop out returning all contacts to their deenergized state.
- C. The controller will stop immediately and the motor will coast to a stop.
- D. The DFR N.C. contact in parallel with the RCR coil will close keeping RCR dropped out.
- E. An additional DFR N.C. contact will close illuminating the Drive Fail pilot light (if used).

Operation With Isolation/Bypass Contactors or Isolation/Transfer Contactors

(Diagrams 11.2.5 and 11.3.7 or 11.3.8 or 11.3.9 or 11.3.10). Note: AFC-Off-Line switch used - jumper between terminals 22 and 3 removed.

AFC (Adjustable Frequency Controller) Mode

- A. Placing the AFC-Off-Line selector switch in the AFC position causes the following:
 - 1) The AFC contact between terminals 22 (-V unreg.) and 3 (Fast Stop) closes taking the controller out of the stop mode and permitting normal operation.
 - 2) The Line contact opens preventing the Bypass or Transfer contactor from being energized.
- B. The controller operation is now as described for the Isolation Contactor.

Line (Bypass or Transfer source) Mode

- A. Placing the AFC-Off-Line selector switch in the Line position causes the following:
 - 1) The AFC contact between terminals 22 (-V unreg.) and 3 (Fast Stop) opens to place the controller in the stop mode.
 - 2) The AFC contact to the time delay relay (TR) opens which keeps control relay CR1 from energizing. The N.O. CR1 contact remains open and does not allow the Isolation Contactor to be energized. The N.C. CR1 contact is closed allowing CR2 to be energized.

- 3) The Line contact closes to energize CR2 which will energize the bypass or transfer contactor.
- B. With the bypass contactor option the motor will now line start. With the

transfer contactor option the motor will now be connected to the transfer source which will control the motor starting. With either option the motor is operated at the source voltage and frequency independent of the adjustable frequency controller.

10.0 TROUBLESHOOTING & MAINTENANCE GUIDE**CONTENTS****10.0.1 MAINTENANCE****10.0.2 TROUBLESHOOTING, GENERAL COMMENTS****10.1 GENERAL SYMPTOMS**

- *1. Will not start
- *2. Will not accelerate load
- *3. Accelerates load too slowly
- 4. Decelerates too slowly
- 5. Excessive motor temperature

10.2 LED ANNUNCIATED FAULTS

- *1. Shoot through (ST) — IL5
- *2. Instantaneous Overcurrent (IOC) — IL7
- *3. Overvoltage (OV) — IL4
- *4. Ground Fault (GF) — IL6
- *5. Option Fault (OF) — IL10
- *6. Overload (OLD) — IL8
- *7. Overtemperature (OT) — IL9

10.3 MISCELLANEOUS

- 1. Undervoltage (UV) — IL3
- *2. Dynamic braking module

10.4 TROUBLESHOOTING PROCEDURES

- *1. Gating
- 2. Voltage output
- *3. Control power supply
- 4. Shorted inverter GTO
- 5. Voltage feedback
- 6. Bus capacitor

10.5 TROUBLESHOOTING DATA

*Designates Troubleshooting Flow Charts — located at end of Section 10.

10.0.1 MAINTENANCE

During normal use, the drive controller will require minimum maintenance. However, good maintenance practice requires periodic inspection of the controller. The maintenance periods should be scheduled based on the particular operating environment of the controller, but should not exceed one year.

CAUTION

ONLY AUTHORIZED SERVICE PERSONNEL FAMILIAR WITH THIS EQUIPMENT SHOULD BE ALLOWED TO SERVICE THE CONTROLLER.

General maintenance procedures for Square D control gear are covered in Square D publication 30072-200-50. Procedures specific to this controller are as follows.

1. Standby lamp status should be verified per Section 7.6.
2. Drive controller operation should be observed. Any deviations from normal operation may be an indication of a controller malfunction. A thorough investigation should be made to determine the cause.
3. Check operation of any push-to-test pilot lamps.
4. Remove all power

DANGER**HAZARD OF ELECTRICAL SHOCK OR BURN**

BEFORE SERVICING, TURN OFF POWER SUPPLY(S) TO THIS EQUIPMENT. WAIT 5 MINUTES. MEASURE CAPACITOR VOLTAGES TO VERIFY THAT THEY ARE ZERO. DO NOT SHORT ACROSS CAPACITORS WITH VOLTAGE PRESENT.

5. Swing-out Electronic Control Compartment. (See Photo Section 4)
6. Inspect and clean all air passageways in controller using a vacuum cleaner. *Do not* use a compressed air source.
7. Inspect and clean all insulation systems within the controller using a vacuum cleaner. *Do not* use a compressed air source. *Do not "megger" controller!*
8. Check integrity of all mechanical fasteners.
9. Check integrity of all electrical fasteners and joints.
10. Check controller grounding means.
11. Check capacitor bank for damaged or bulging cans. Replace as required.
12. Inspect all electrical components for damage.
13. Reclose Electronic Control Compartment.

DANGER**HAZARD OF ELECTRICAL SHOCK OR BURN**

DO NOT ENERGIZE OR ATTEMPT TO OPERATE THE CONTROLLER WITH THE SEMICONDUCTOR ASSEMBLY IN THE SERVICE POSITION. ALL HEATSINK ASSEMBLIES ARE ELECTRICALLY HOT WHEN THE CONTROLLER IS ENERGIZED AND WHILE THE DC BUS CAPACITORS ARE CHARGED.

CAUTION

CONSULT YOUR LOCAL SQUARE D REPRESENTATIVE BEFORE ATTEMPTING ANY MAINTENANCE ON THE POWER SEMICONDUCTOR ASSEMBLY.

10.0.2 TROUBLESHOOTING, GENERAL

A number of diagnostic and status indicating lights (refer to Section 7.0, Diagnostic Indicating LED's and Neon Light) have been included on the Main Control Board, Power Interface Boards, Bus Indicator Board, Option Boards, and Optional Dynamic Braking module. The intent of these lights is to provide visual indication of a number of controller operating and protective circuit functions to assist in maintenance and troubleshooting.

The following troubleshooting guide can best be utilized by observing the status of the lights and reviewing the symptoms listed to determine which possible problems could cause the observed light pattern. To view the lights, the controller door must be open with power applied to the controller. If the controller trips while operating, the lights must be viewed before power is removed because removing and re-applying power resets the fault indicators.

CAUTION

ONLY AUTHORIZED SERVICE PERSONNEL FAMILIAR WITH THIS EQUIPMENT SHOULD BE ALLOWED TO SERVICE THE CONTROLLER.

DANGER**HAZARD OF ELECTRICAL SHOCK OR BURN**

MANY PARTS INCLUDING ELECTRONIC PRINTED WIRE BOARDS IN THIS CONTROLLER OPERATE AT LINE VOLTAGE. DO NOT TOUCH. USE ONLY ELECTRICALLY INSULATED TOOLS WHILE MAKING ADJUSTMENTS.

DANGER**HAZARD OF ELECTRICAL SHOCK OR BURN**

CERTAIN ADJUSTMENTS AND TEST PROCEDURES REQUIRE THAT POWER BE APPLIED TO THIS CONTROLLER. WHEN WORKING WITH ENERGIZED EQUIPMENT, EXTREME CAUTION MUST BE EXERCISED AS HAZARDOUS VOLTAGES EXIST. THE ENCLOSURE DOOR MUST BE CLOSED AND SECURED WHILE TURNING ON POWER, OR STARTING AND STOPPING THIS CONTROLLER.

When used in conjunction with the diagnostic and status indicating lights this guide facilitates troubleshooting to the individual printed wiring board level.

The troubleshooting procedure is organized into 4 basic units. The first unit (10.1) covers general problems which are identified by a basic description (e.g. — "Controller will not start"). The second section (10.2) consists of specific faults annunciated by LED illuminations (e.g. — "Instantaneous Overcurrent (IL7)"). The third section (10.3) attempts to include those items not covered in 1 or 2 such as the dynamic braking module or LED illuminations which contain useful problem-solving information but are not fault indicators. The fourth and last section (10.4) is comprised of troubleshooting techniques which support the first 3 sections.

If troubleshooting indicates the necessity of component replacement, observe all precautions.

DANGER**HAZARD OF ELECTRICAL SHOCK OR BURN**

BEFORE SERVICING, TURN OFF POWER SUPPLY(S) TO THIS EQUIPMENT. WAIT 5 MINUTES. MEASURE CAPACITOR VOLTAGES TO VERIFY THAT THEY ARE ZERO. DO NOT SHORT ACROSS CAPACITORS WITH VOLTAGE PRESENT.

When contacting Square D for troubleshooting assistance or requesting service, it is necessary to have the information requested on the controller trouble sheet. If the controller is to be returned to Square D, a completed copy of the sheet must be inserted in the controller before packing for shipment. Several copies of the controller trouble sheet are provided at the end of the troubleshooting section.

10.1.1-3 SEE TROUBLESHOOTING FLOW CHARTS

10.1.4 MOTOR DECELERATES TOO SLOWLY

Depending on load inertia, the ramp modification circuit may be automatically extending the deceleration rate. To verify that controller ramp circuits are functioning properly and that the ramp modification circuit is extending the deceleration rate perform the following:

1. Remove all power.
2. Disconnect motor leads from terminals T1, T2, and T3. Read and observe caution notes concerning controller servicing.
3. While measuring the voltage between terminals TB1-4(+) and TB1-6 (common) start the controller and monitor the voltage change. This DC voltage is a signal proportional to drive output frequency with a scaling factor of $2.5 \text{ VDC} = \text{Base Frequency (F}_{\text{base}})$. Compare the time required for this voltage to fall from 2.5 VDC to OVDC with the desired deceleration time as determined by Main Control Board selector switch SW5 and potentiometer P10 (Dec) (refer to Section 6.0 to verify these settings). This step confirms the deceleration circuitry is operable. If the deceleration rate cannot be controlled by P10 and SW5 (per 6.0) replace the Main Control Board.
4. Remove all power. Read and observe caution notes concerning controller servicing.
5. With the open-circuit ramp operation verified and with all power removed, connect the motor leads and perform the voltage check described in (2). Read and observe caution notes concerning controller servicing. If the time required to decelerate with load attached is greater than the time required to decelerate with the load disconnected, the ramp modification circuit is being activated. If a faster deceleration time is required, reduce the load inertia or install dynamic braking.

10.1.5 EXCESSIVE MOTOR TEMPERATURE

Motor Overheating can result from the following items:

1. Motor incorrectly sized for load. Measure motor current and compare to nameplate rating.
2. Since most motors are cooled by internal shaft-mounted fans, the motor rated current capacity will decrease with speed due to decreased fan speed. If substantial motor torque is required at low speed, motor overtemperature may occur. The motor manufacturer should be consulted to determine the correct motor selection for such applications.
3. Verify that voltage output is correct per 10.4.2.

NOTE: With the advent of modern insulation materials, many motors are capable of operating at relatively high winding temperatures. Therefore, motors which seem hot-to-the-touch may be operating well within their temperature limits. The motor nameplate should be consulted as to the class of the motor's insulation system. To properly determine a motor's temperature, the procedures described in NEMA MG-1 should be followed.

10.2.1-7 SEE TROUBLESHOOTING FLOW CHARTS

10.3.1 UNDERVOLTAGE (UV) LED IL3

The undervoltage LED is illuminated whenever the controller input line voltage falls below 87.5% of rated line voltage (per Section 3.1.1). There is hysteresis in this circuitry so that voltage must

rise back to a level of 95% of rated voltage before the undervoltage condition is removed. While in a UV condition the precharge relay is de-energized and the drive is inhibited from running. In the event of an undervoltage condition consider the following items:

1. Low AC input per specifications of Section 3.1.1.
2. Momentary AC line dip — controller will automatically reset and run if 2-wire control is used. Three-wire control circuits will require that the start button be depressed.
3. Verify that frequency selection snip-out resistors on the Main Control Board and control transformer jumpers are set properly per Section 6.0.
4. Refer to 10.4.3 and perform a control power supply check.

10.3.2 SEE TROUBLESHOOTING FLOW CHART

10.4.1 SEE TROUBLESHOOTING FLOW CHART

10.4.2 VOLTAGE OUTPUT

Improper voltage output may cause Overload, Instantaneous Over Current, or insufficient torque. Also, controller output voltage can indicate a potential gating problem. Perform the following to verify that the voltage output is correct:

1. **Remove all power. Read and observe caution notes concerning controller servicing.**
2. With all power removed, remove motor leads from T1, T2, and T3 so that controller output is open circuited. Read and observe caution notes concerning controller servicing.
3. Start the controller and adjust the output frequency to 60 HZ by varying input speed signal until the DC voltage between TB1-4(+) and TB1-6 (common) is 2.5VDC (see Section 8.1 for location of TB1). Note: if the controller is capable of hand or automatic operation, the hand mode should be used and speed should be varied with the manual speed potentiometer.
4. Measure the line to line output voltages from T1 to T2, T2 to T3, and T1 to T3 (See Section 4.0 for location). These voltages should be within 5% of each other. The actual voltage reading is not important. Because of the complex output waveform, different voltmeters may read different values. The major concern is that all three readings indicate balanced voltages. If not, this indicates a problem in a gating channel. The output which is common to the two lowest line-to-line readings is driven by the two suspect gating channels. As an example, suppose $V(T1-T2) = 400V$, $V(T2-T3) = 500V$, and $V(T1-T3) = 400$. Since T1 is common to $V(T1-T2)$ and $V(T1-T3)$, the two lowest readings, there is a problem in the gating circuitry or GTOs that drive that terminal.

To correct the problem, the following items should be replaced sequentially. Read and observe caution notes concerning controller servicing.

1. The ribbon cable between the Power Interface Boards.
2. The ribbon cable between the Main Control Board and the Power Interface Board.
3. The Power Interface Board associated with that output terminal.
4. Main Control Board.
5. If no imbalance is found and with the motor leads disconnected from terminals T1, T2, and T3, adjust the input speed signal until the voltage between TB1-4(+) and TB1-6 (common) on the Main Control Board is 1.25 VDC.
6. With the controller at this frequency, measure the voltage between TB1-26(+) and TB1-6 (common). Compare this measured voltage (V) to the voltage listed in Table 1 for the switch configuration of the controller under examination. The measured voltage should be within $\pm 10\%$ of the tabulated value.
7. If the conditions of (6) are not satisfied, confirm the integrity of the voltage feedback per 10.4.5.

8. If voltage feedback is functioning properly, replace the Main Control Board.

TABLE 1

Main Control Board Dip Switch Settings^①

| Controller Input | Motor Nameplate | Voltage | SW1 | SW2 | SW3 | SW4 | SW5 | SW6 | SW7 | SW8 | V(±5%) |
|------------------|-----------------|---------|-----|-----|-----|-----|-----|-----|-----|-----|--------|
| 200V | 200V | 200V | X | X | X | * | * | O | O | * | .87V |
| 230V | 200V | 200V | X | X | X | * | * | O | O | * | .87V |
| 230V | 230V | 230V | X | X | O | * | * | O | O | * | 1.00V |
| 460V | 200V | 200V | X | X | X | * | * | X | O | * | .87V |
| 460V | 230V | 230V | X | X | O | * | * | X | O | * | 1.00V |
| 460V | 400V | 400V | O | X | O | * | * | X | X | * | 1.74V |
| 460V | 460V | 460V | O | X | O | * | * | X | O | * | 2.00V |

X-Closed Switch (On)

O-Open Switch (Off)

* -Either position is acceptable

① Refer to Section 6, controller adjustments for additional information on the proper setting of the dip switches.

10.4.3 SEE TROUBLESHOOTING FLOW CHART

10.4.4 SHORTED INVERTER GATE TURN-OFF THYRISTOR (GTO)

Remove all power from the controller. Read and observe caution notes concerning controller servicing. Disconnect the motor leads at T1, T2 and T3. With an ohmmeter on the RX10 scale perform the measurements in Table 2. If a low resistance measurement is encountered where a high resistance measurement is expected, a shorted GTO is indicated. The terms high and low resistance are relative and comparison with the other measurements should clarify a questionable reading. Note: A shorted GTO could be the result of some other problem. Failure to determine the cause may result in failure of the replacement GTO. Contact your local Square D representative if a shorted GTO is suspected.

TABLE 2

| Ohmmeter* + Lead | Ohmmeter* - Lead | Measurement (Resistance) |
|---------------------|---------------------|--------------------------|
| + Bus | T1 | High |
| + Bus | T2 | High |
| + Bus | T3 | High |
| T1 | + Bus | Low |
| T2 | + Bus | Low |
| T3 | + Bus | Low |
| - Bus | T1 | Low |
| - Bus | T2 | Low |
| - Bus | T3 | Low |
| T1 | - Bus | High |
| T2 | - Bus | High |
| T3 | - Bus | High |

* Refer to Section 4, controller photos to determine the location of the measuring points.

10.4.5 VOLTAGE FEEDBACK

This procedure verifies the integrity of the controller output voltage sense resistors, both DC bus voltage and motor terminal voltages and the ribbon cables which convey voltage feedback information from the Power Interface Boards to the Main Control Board. Defective voltage feedback usually results in Instantaneous Over Current (IL7) or Shoot Through trips (IL5).

1. Remove all power. Read and observe caution notes concerning controller servicing.
2. With all power removed, disconnect the motor leads from terminals T1, T2 and T3.

3. Remove the ribbon cable between the Main Control Board and Power Interface Board 3 (PIB3).
4. Verify that gate and cathode leads are properly connected between the PIB and GTO.
5. Place one lead of an ohmmeter on test point TP3 of PIB1 and the other lead on terminal T1. The meter should read 3 meg ohms. If not, replace the PIB.
6. Repeat Step 5 for PIB2 and terminal T2.
7. Repeat Step 5 for PIB3 and terminal T3.
8. Repeat Step 5 for test point TP1 and + bus terminal for PIB1.
9. Repeat Step 5 for test point TP2 and – bus terminal for PIB1.
10. Place the meter on the RX1 scale and check the continuity of the ribbon cables. Each conductor should read two ohms or less. If any are of a higher value, replace the ribbon cable.

10.4.6 BUS CAPACITOR

An open bus capacitor may result in overvoltage (OV) or shoot through (ST). A shorted bus capacitor will result in blown incoming line fuses. Capacitors which initially fail shorted, blowing the input line fuses, will generally open-circuit after the internal protective mechanism operates to clear the capacitor's internal short circuit. This condition can be visually detected by examining the top of the capacitor. The top of the capacitor will be bulged outward creating a dome shape. This failed capacitor and any blown input line fuses should be replaced and the possible loss of input lines to the controller should be investigated. If a failed capacitor is suspected, but is not visually detectable, a general indication of capacitor condition can be obtained with an analog ohmmeter. **Remove power from the controller. Read and observe caution notes concerning controller servicing. WAIT 5 MINUTES TO ALLOW BUS CAPACITORS TO DISCHARGE.** The Bus Capacitors are connected in groups of three to the + Bus and – Bus (See Section 4 for location of capacitors, + Bus, – Bus, and connections). Disconnect each group of capacitors from either the + Bus or – Bus then check. With the meter on the RX1000 scale connect the meter leads across the disconnected wire terminals for the group of capacitors. A shorted capacitor will indicate low resistance, an open capacitor will indicate infinity, and a good capacitor will deflect the meter momentarily and then return to infinity. Continue checking the other groups of capacitors until a short or open is found. Then individually check the capacitors within the group with the failed capacitor. Replace all failed capacitors.

10.5 TROUBLESHOOTING DATA

PLACE THE TROUBLE SHEET WITH THE AUTHORIZED RETURN PAPER RECEIVED FROM YOUR LOCAL SQUARE D REPRESENTATIVE.

The purpose of the "Trouble Sheet" is to obtain as much pertinent information about the controller as possible. By fully filling out the following form the time to repair the controller and the cost of troubleshooting the controller are reduced. The following is an explanation of the type of information needed on this form.

USER NAME AND ADDRESS: Where the controller is installed

PERSON TO CONTACT: Someone at the user who is familiar with the problem and application. Contact for additional information may be required.

CONTROLLER DATA: Completely fill in the sample nameplate given on the bottom of the form.

MOTOR DATA: Fill in the requested information. If you have multiple motors give the information for all the motors controlled by the AFC.

APPLICATION DATA:

- Ambient temperature
- Type of load being controlled (i.e. conveyor, mixer, pump, fan, etc.)
- Basic power flow from supply to motor. Indicate if any contactors or circuit breakers are installed before the motor, or between the controller and motor. Is there any line bypass or across-the-line start capabilities?
- Is this a multiple motor scheme? Are the motors started all at the same time or sequenced?
- Type of speed control
 - Hand pot, analog input signal (4-20 ma, 0-10V dc, etc.) or pneumatic signal
- Braking options installed? Record status of D.B. LED's.
- If remote control wiring is installed detail the functions (start-stop, run-jog, etc.) and the terminals to which your wiring is connected.

PROBLEM INFORMATION:

Description of Symptoms:

- Does fault occur
 - When only power is on the controller
 - When start button is pushed
 - When changing speeds
 - When running at constant speed
 - When stopping
 - When motor load changes
- Does problem have a pattern (I.E. does problem occur at **same time** during day?) or is the problem random?
- Signs of visual damage (bulging capacitor cans, blown fuses, discoloration on boards).

— NOTES —

CONTROLLER TROUBLE SHEET

DETAIL TROUBLESHOOTING STEPS TAKEN

In the service bulletins there are a number of troubleshooting steps to be taken. List the steps taken and the results of those steps. If you have done any troubleshooting on your system detail those steps and results also.

USER NAME _____

ADDRESS _____

CITY, STATE, ZIP _____



PERSON TO CONTACT _____

PHONE _____

PURCHASER (DISTRIBUTOR) _____ P.O. # (IF AVAILABLE) _____

CONTROLLER DATA: (FILL IN NAMEPLATE INFORMATION)

CONTROLLER NAMEPLATE

| | | | |
|---|----------------------------|----------|------|
|  | | | |
| OMEGAPAK | | | |
| ADJUSTABLE FREQUENCY CONTROLLER | | | |
| CLASS 8804 | TYPE | SER | |
| | | | |
| INPUT | | | |
| VOLTS | | | |
| MAX. WITHSTAND SYM. AMPS RMS | | | |
| MAX. AMPS | 3PH | 1PH | 60HZ |
| OVERLOAD CAP. % FOR 1 MIN | | | |
| OUTPUT | | | |
| H.P. | | | |
| VOLTS | 0- | 0- | 0- |
| 3-60/90/120HZ | 3PH | S.F. 1.0 | |
| MAX. AMPS | O.L. SETTING REFER TO S.B. | | |
|  | | 87 | |
| 51140-291-01 | | | |

MOTOR DATA:

HP _____ VOLTAGE _____ FULL LOAD CURRENT _____

SERVICE FACTOR _____ NEMA DESIGN _____ SPEED _____

APPLICATION DATA:

APPLICATION (DESCRIBE) _____

SPEED RANGE: MAX. SPEED _____ MIN. SPEED _____ DUTY CYCLE _____


SQUARED _____ 86

CONTROLLER TROUBLE SHEET (continued)

PROBLEM INFORMATION:

LED'S THAT ARE ILLUMINATED (MARK ON DRAWING)

NO. OF GATE DRIVER LED'S ON_____

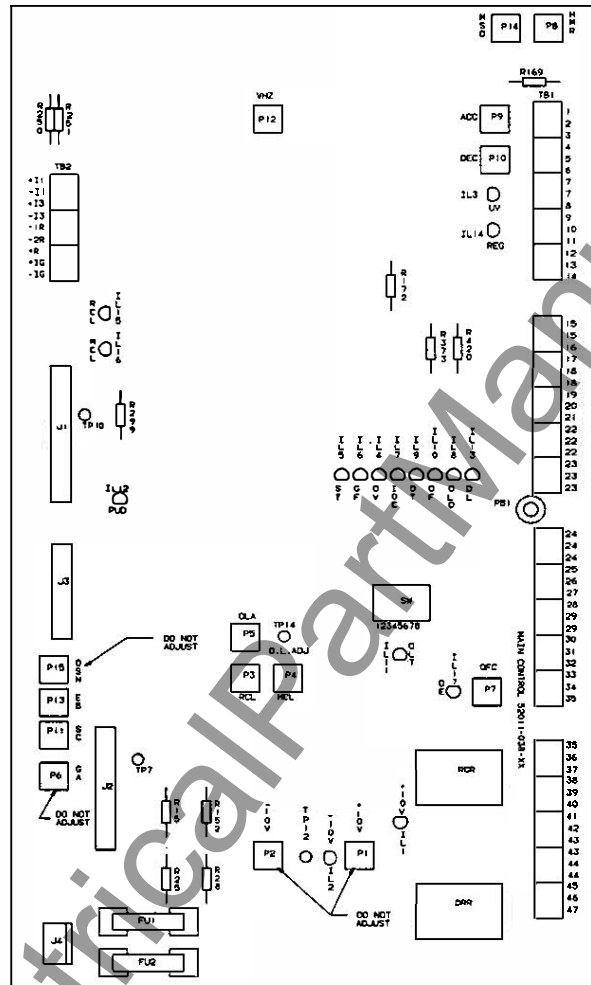


LENGTH OF TIME CONTROLLER HAS OPERATED PROPERLY:


____ MONTHS, OR PROBLEM OCCURRED AT START-UP _____


DESCRIPTION OF SYMPTOMS_____


DETAIL TROUBLESHOOTING STEPS TAKEN_____


— NOTES —

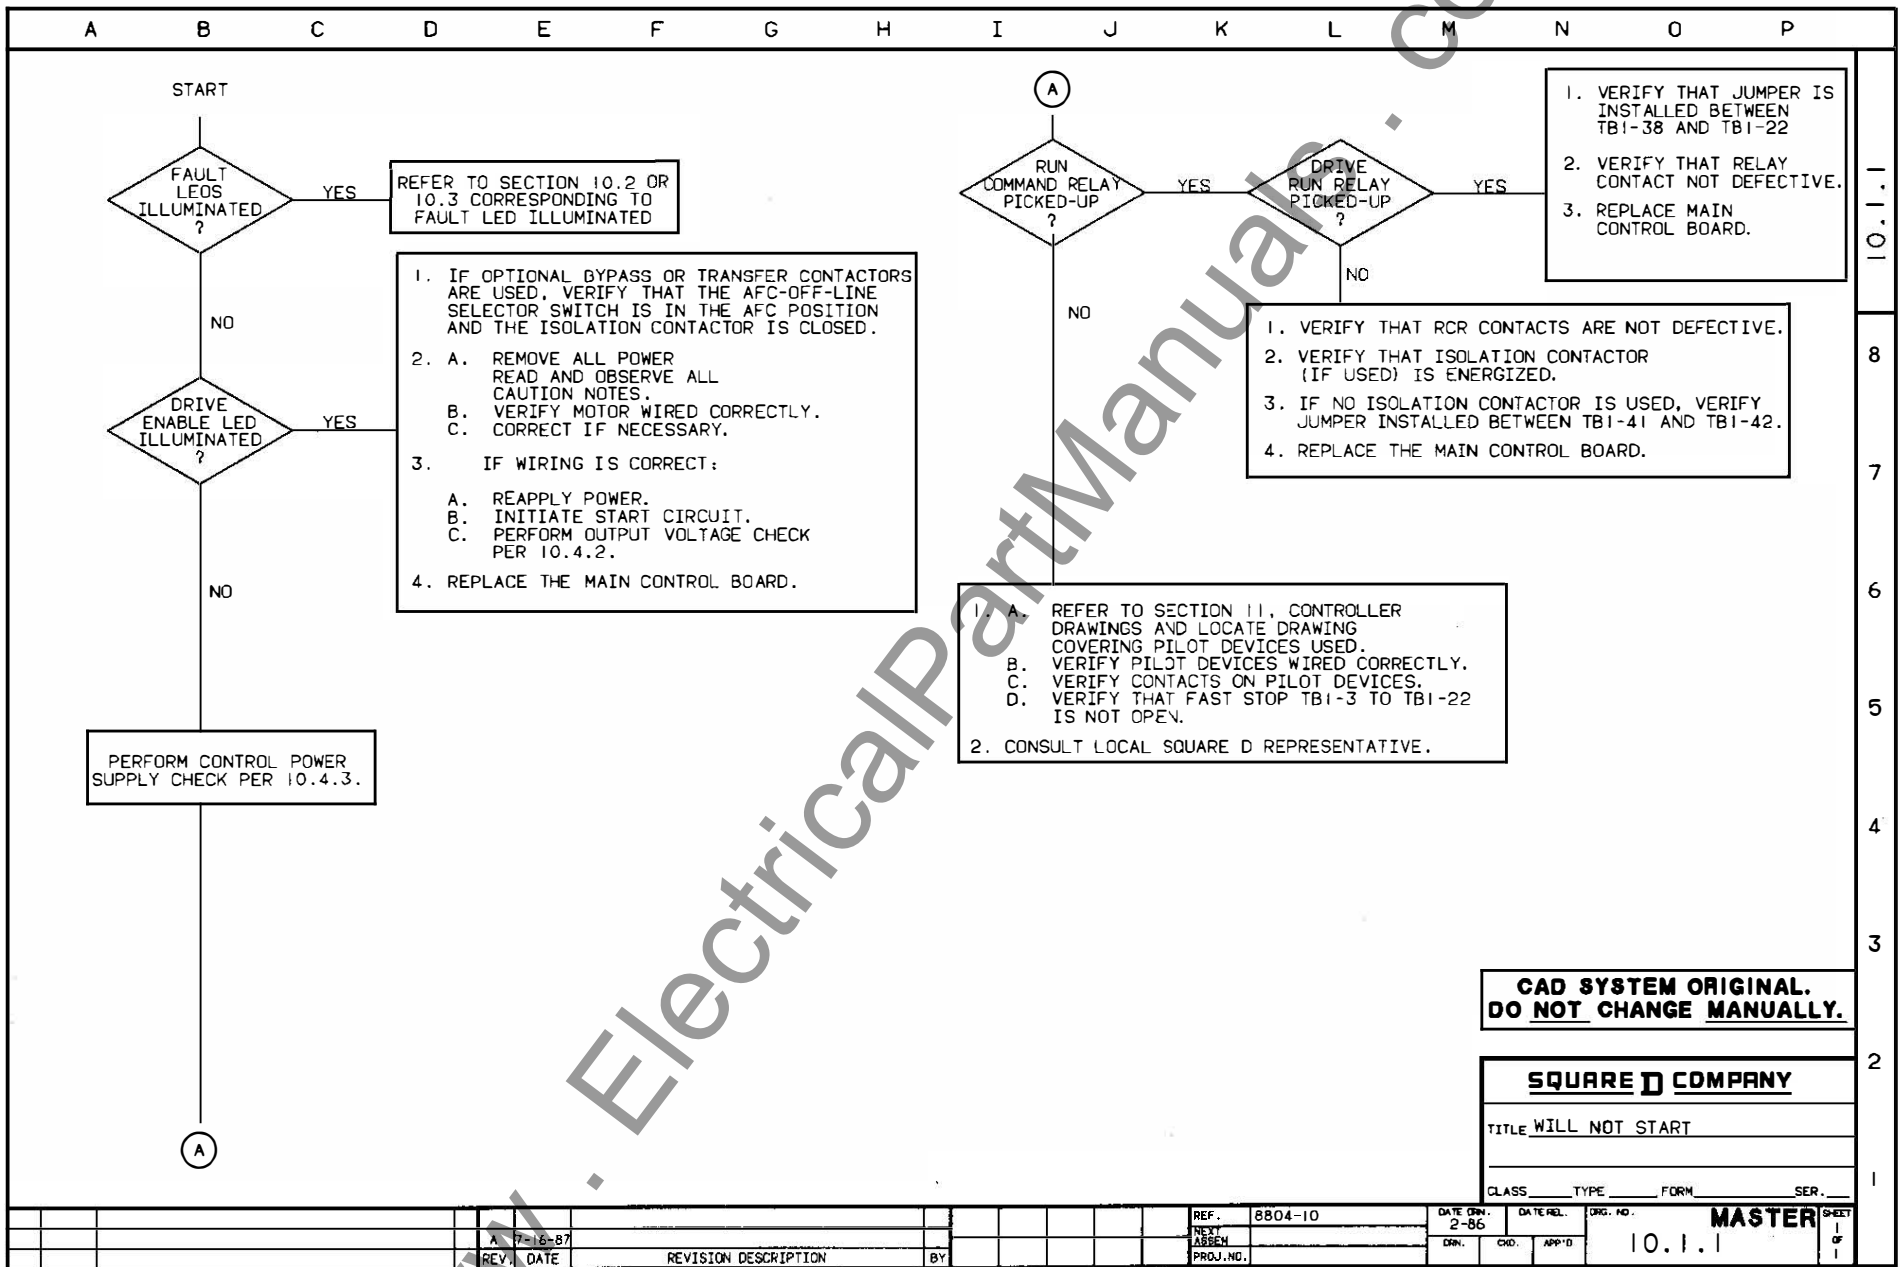


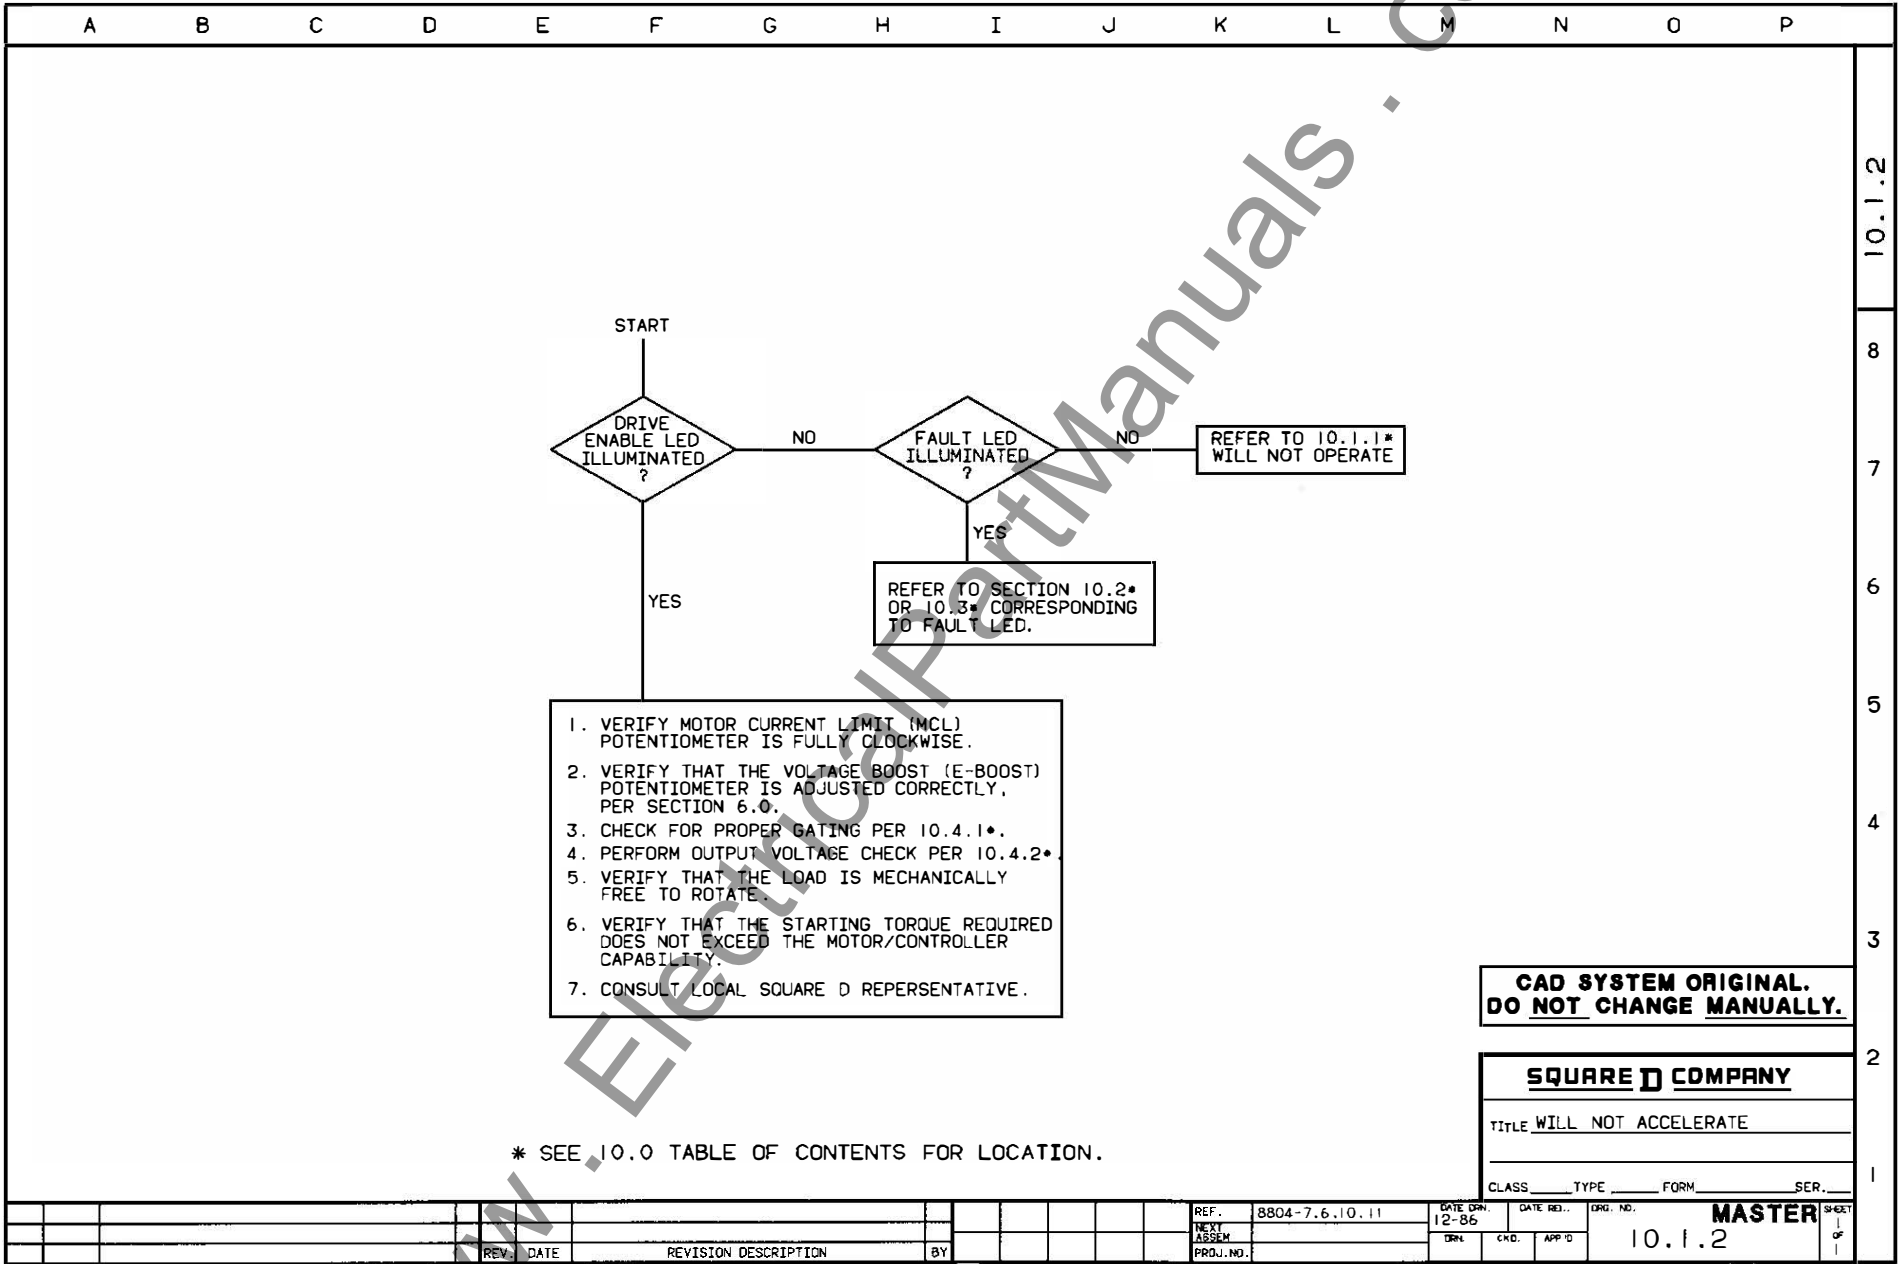


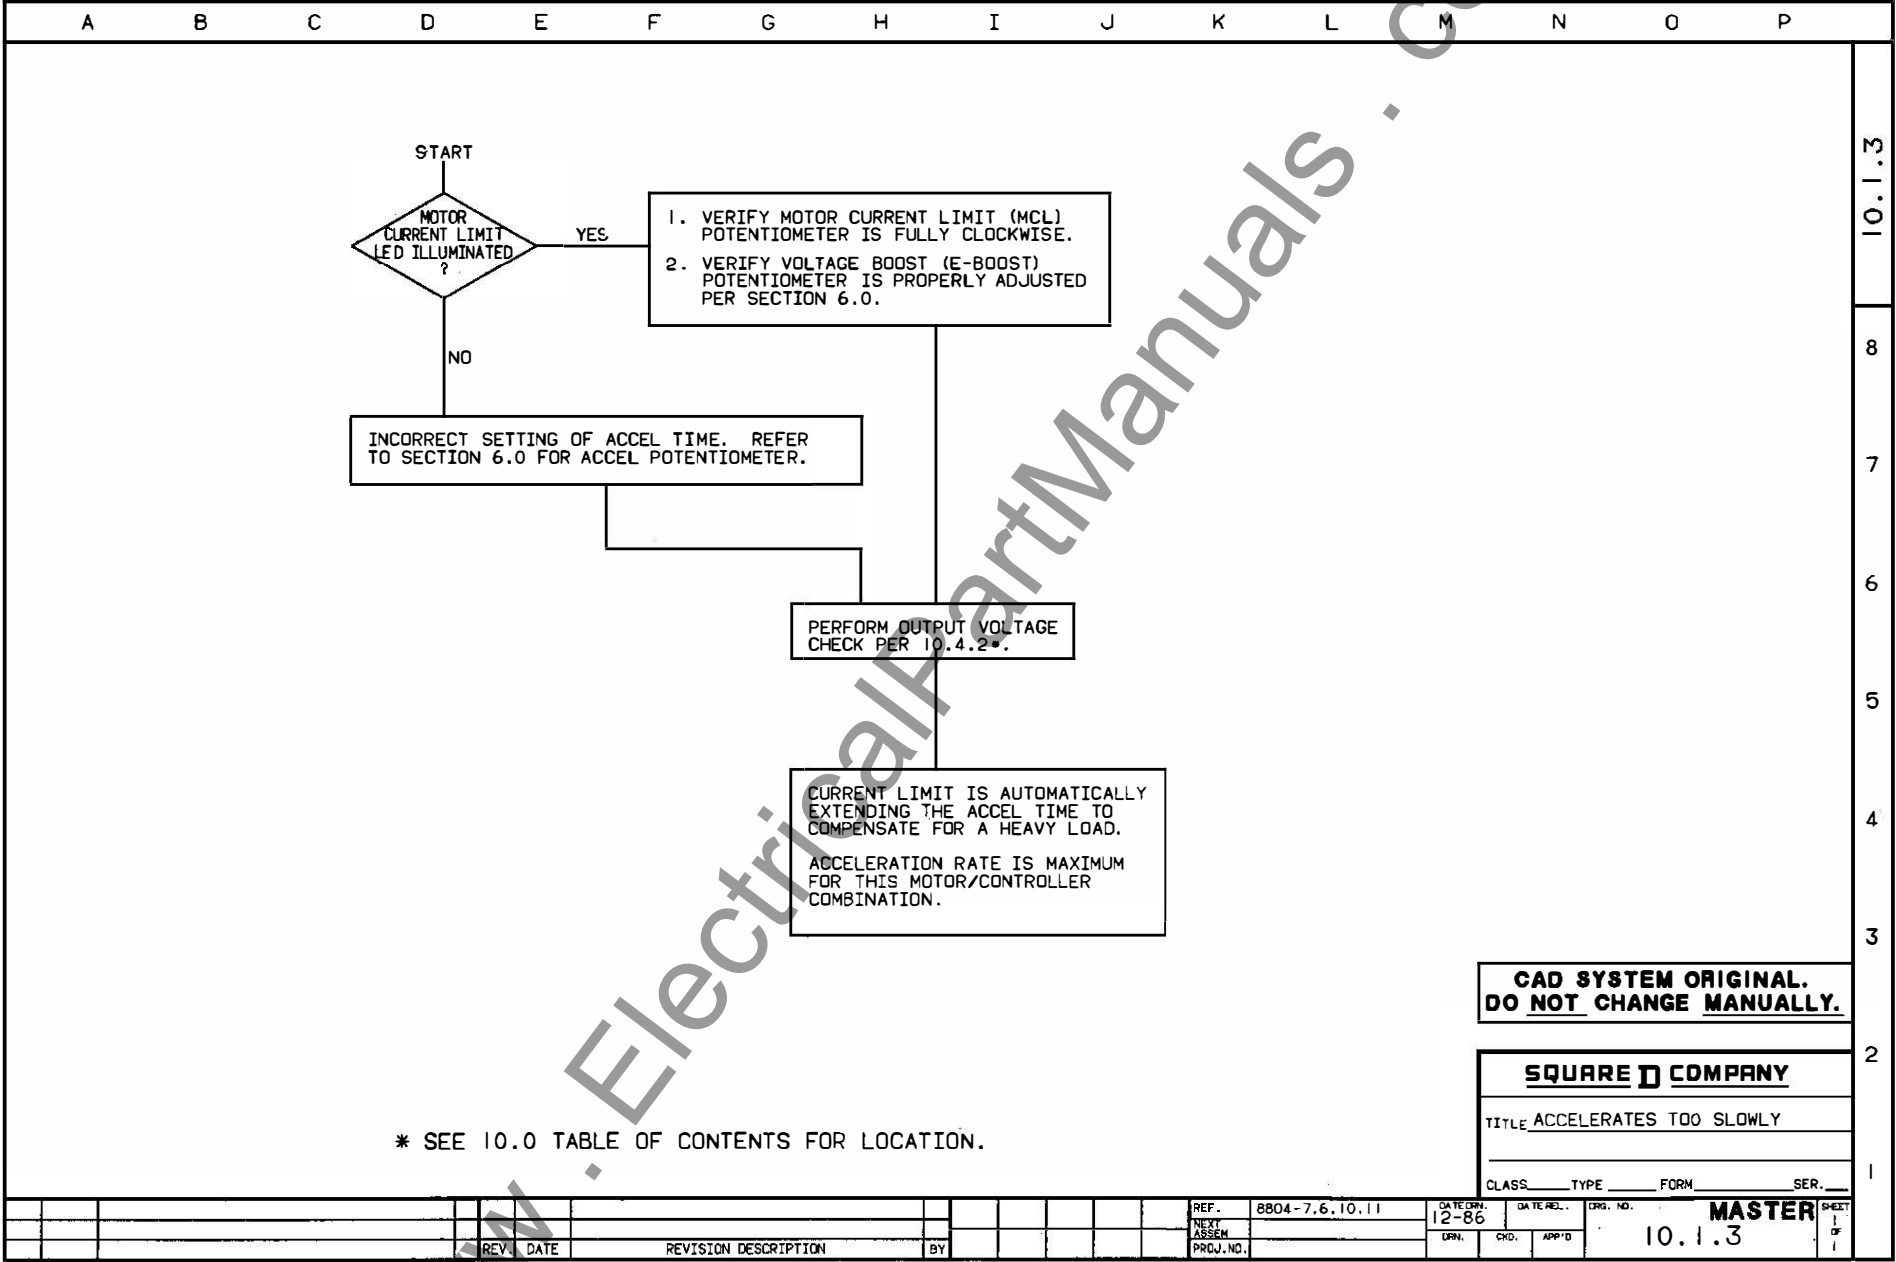


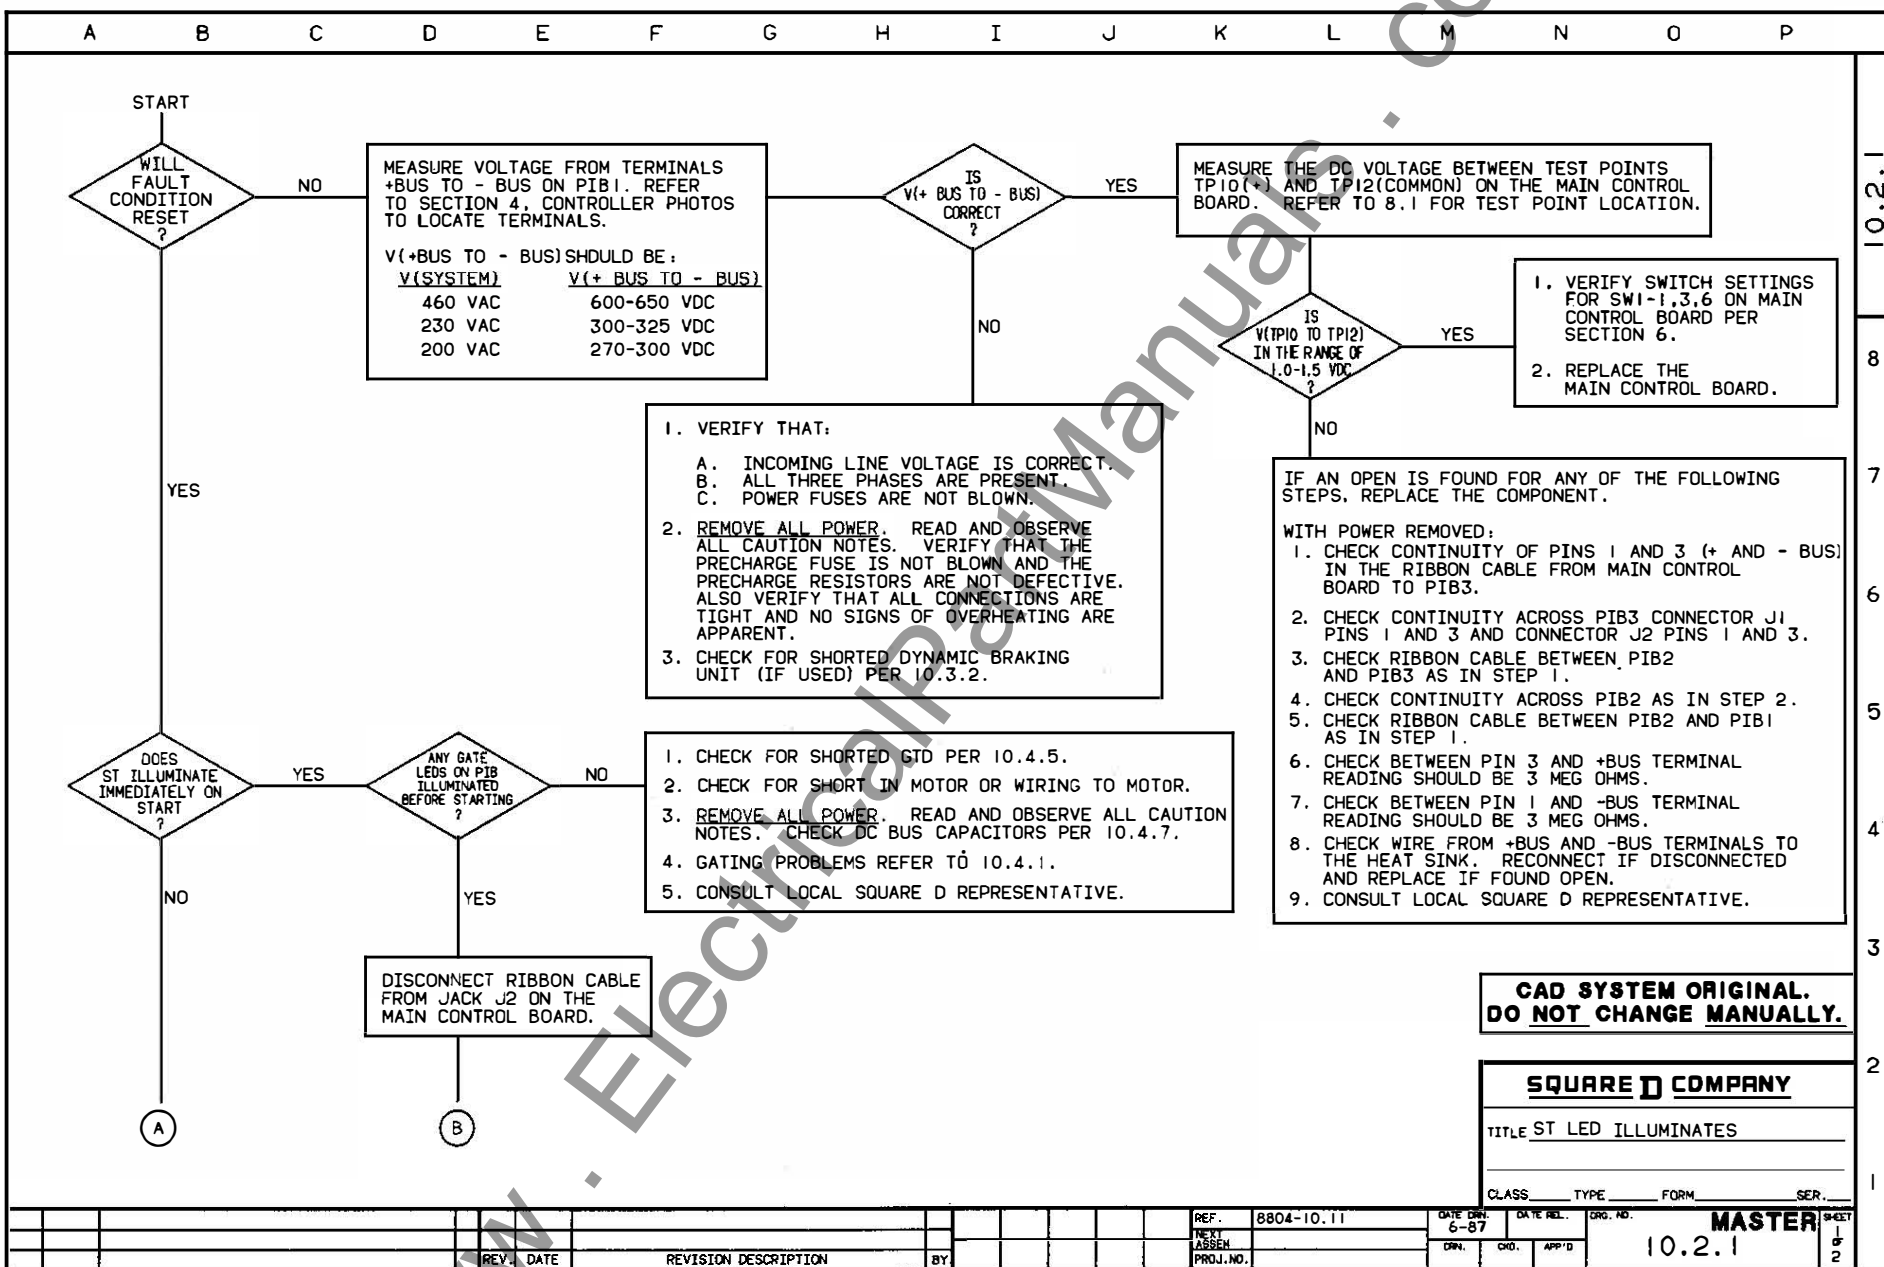

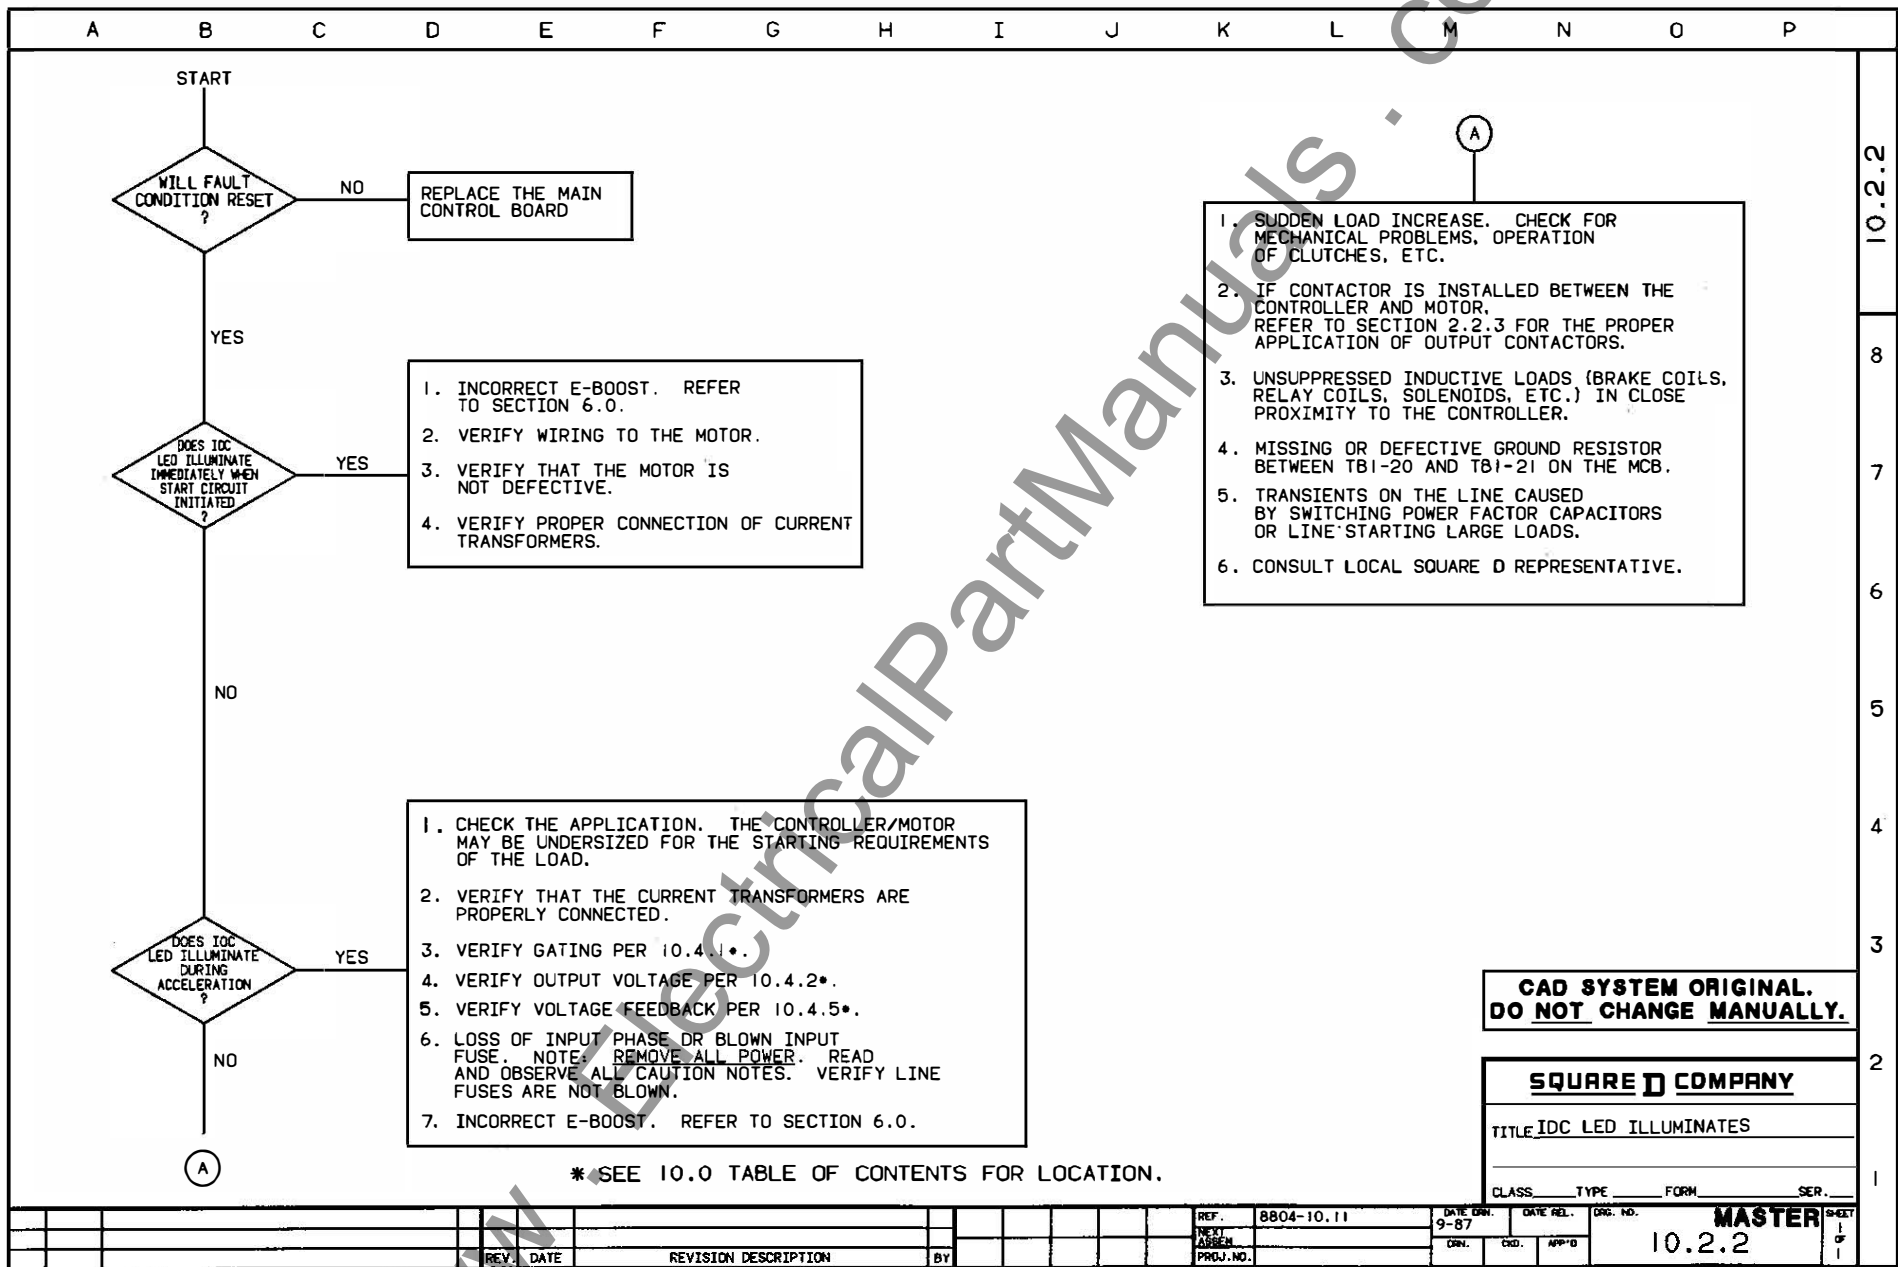

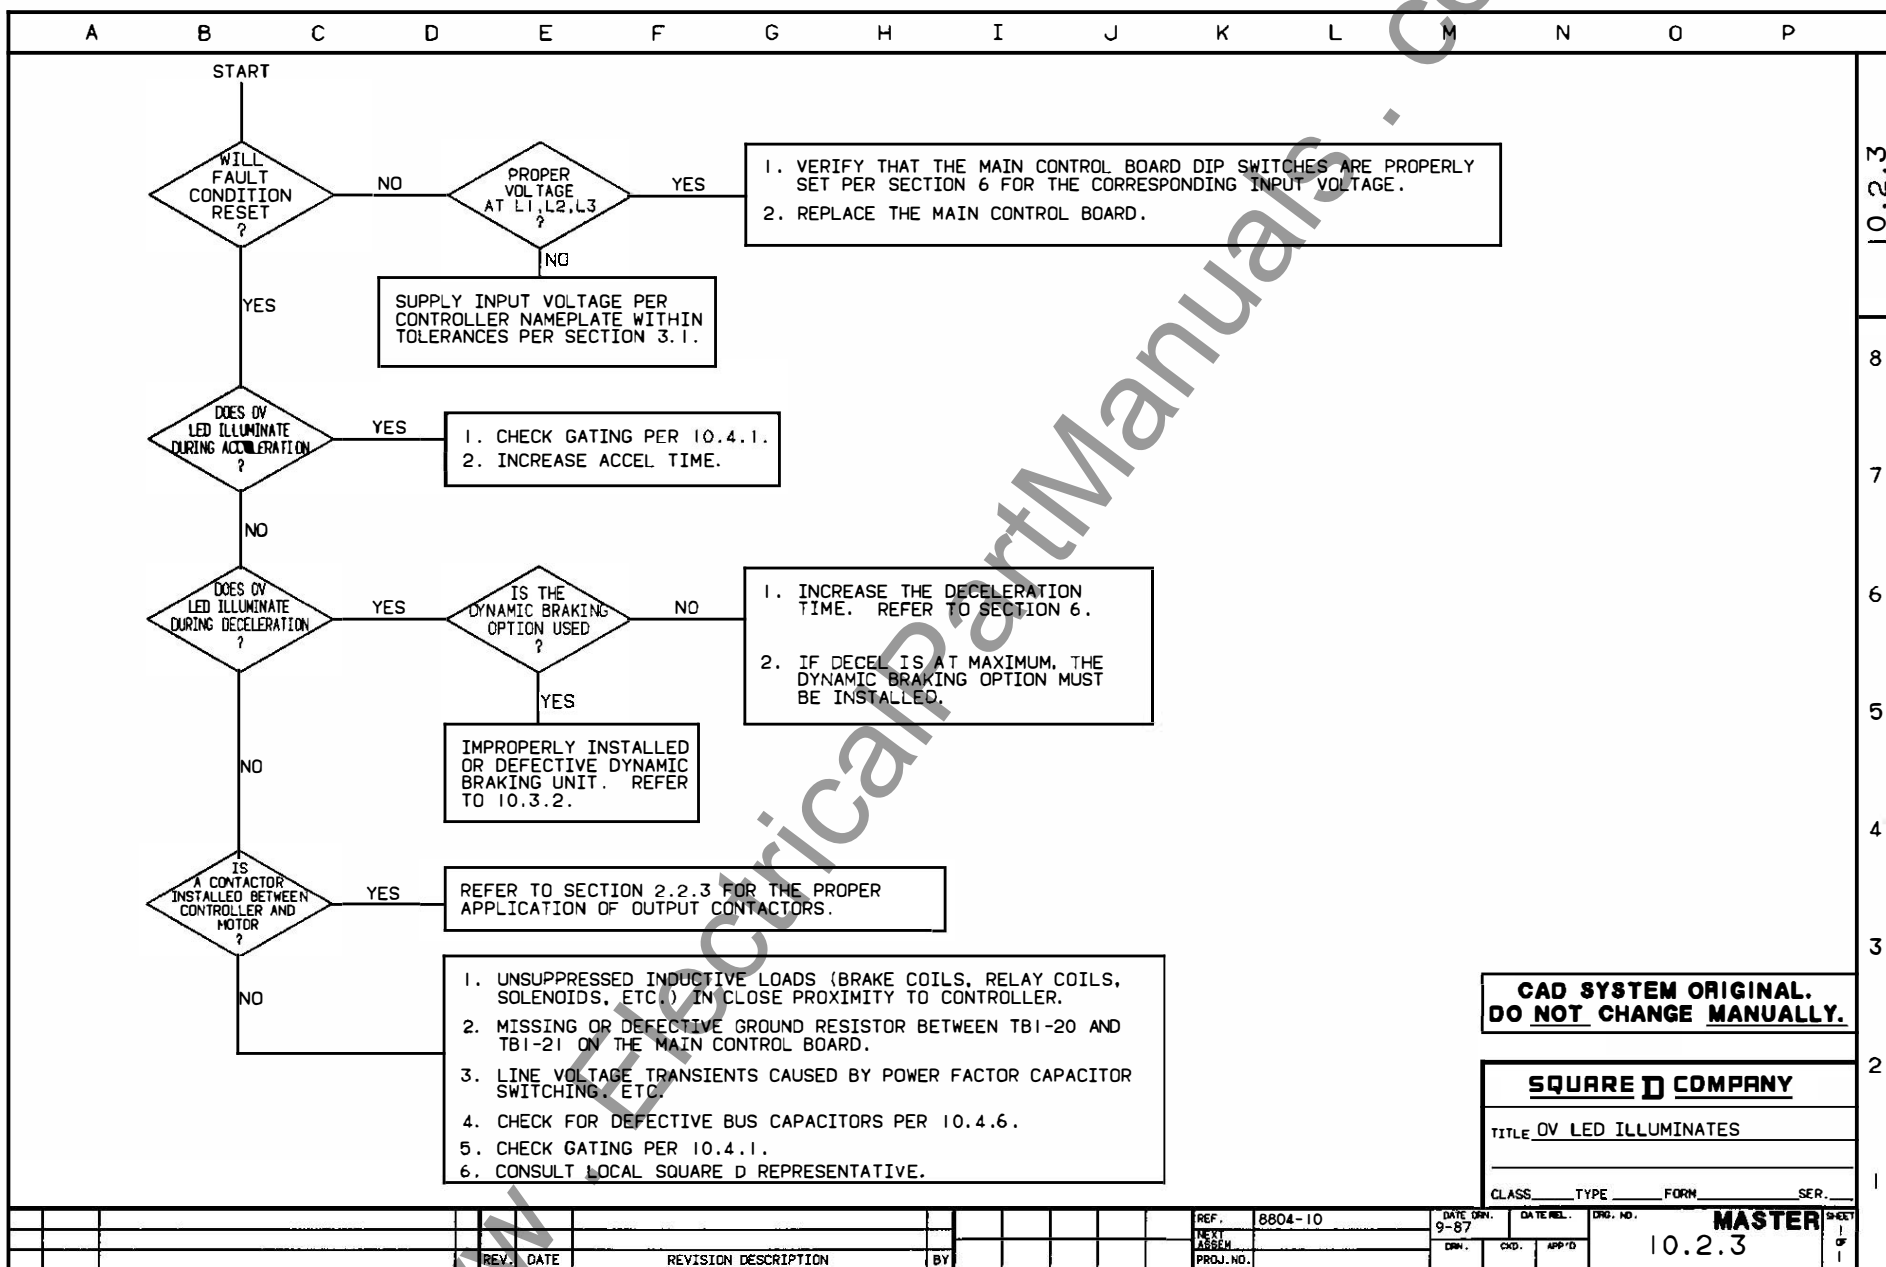

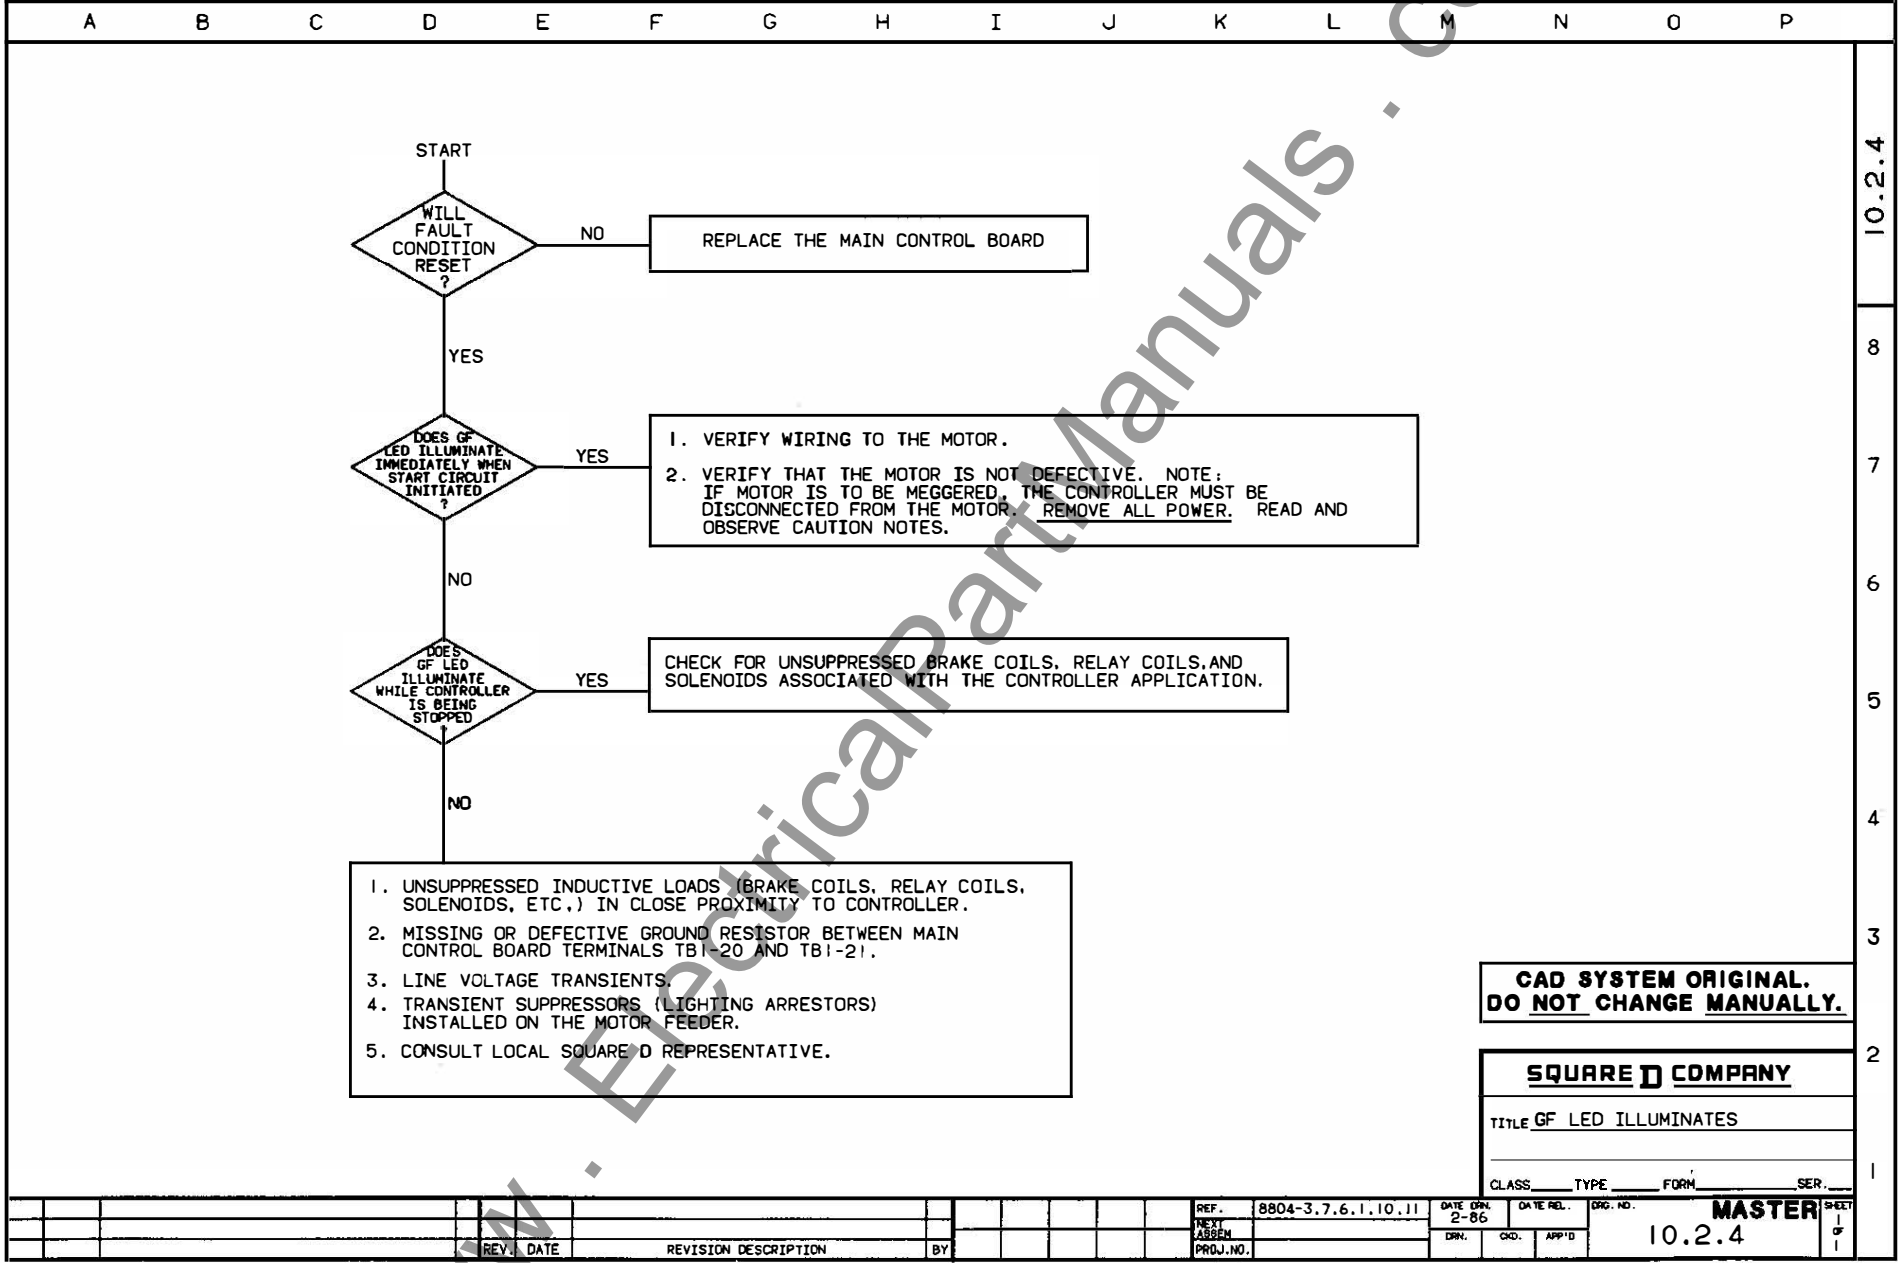

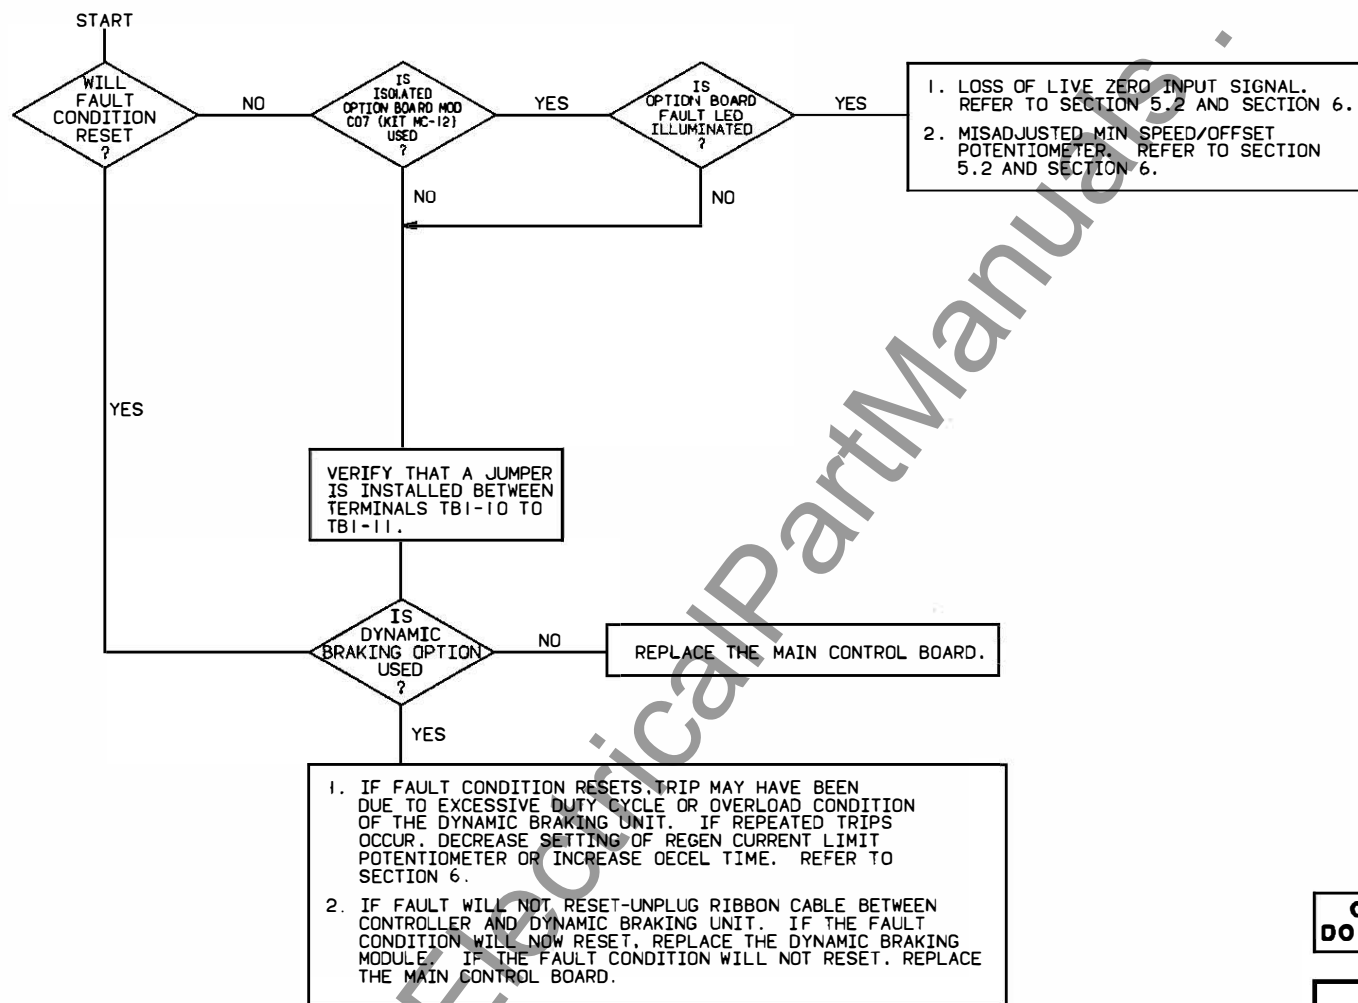

**CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.**

SQUARE D COMPANY

TITLE OF (OPTION FAULT) LED
ILLUMINATED

CLASS TYPE FORM SER.

MASTER

10.2.5

REV. DATE REVISION DESCRIPTION BY

REF. 8804-10
NEXT ASSEM.
PROJ. NO.

DATE DES. 6-87

DATE REL.

ORG. NO.


DRN.


CHD.

APP'D

SHEET

1

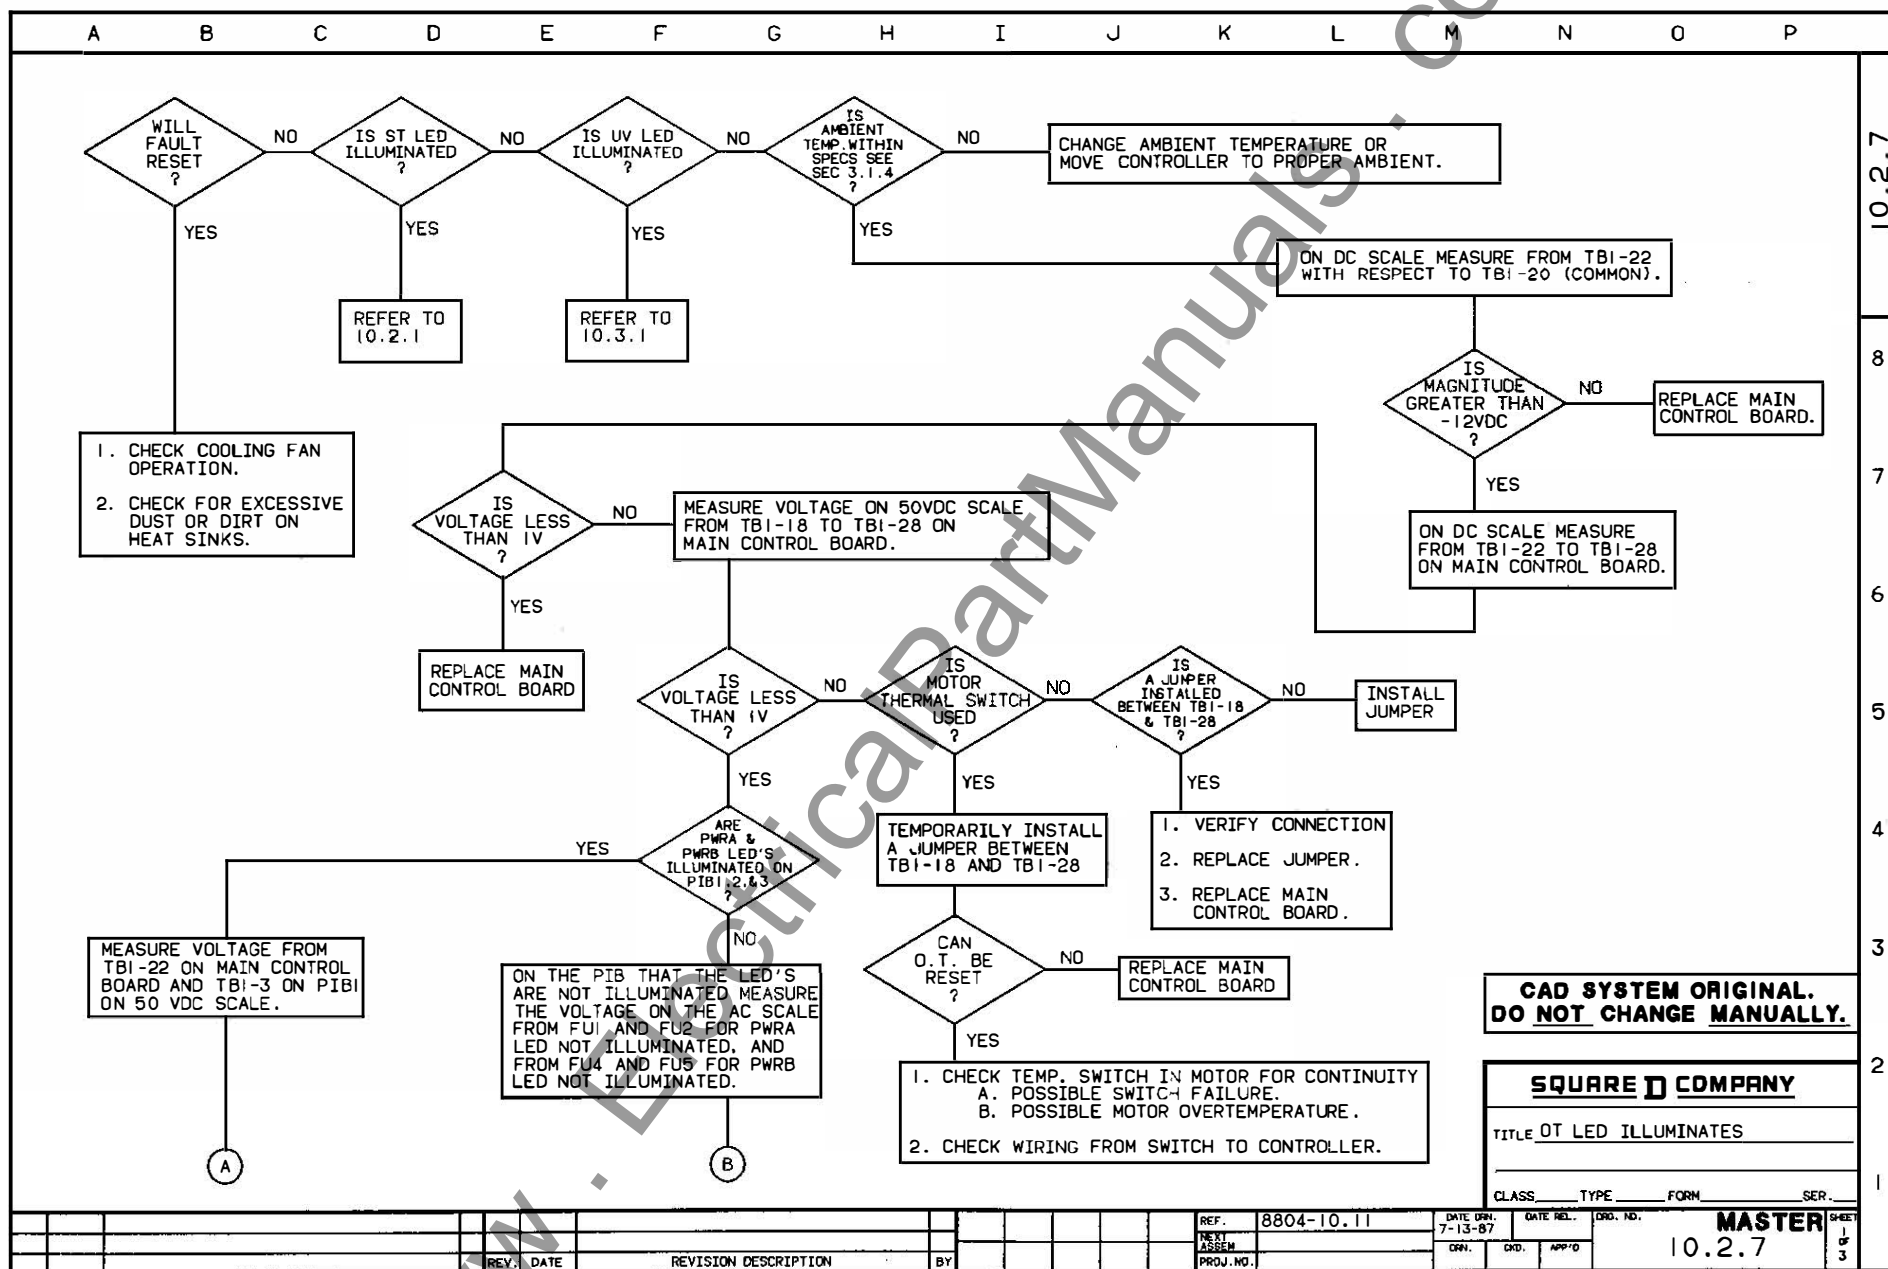

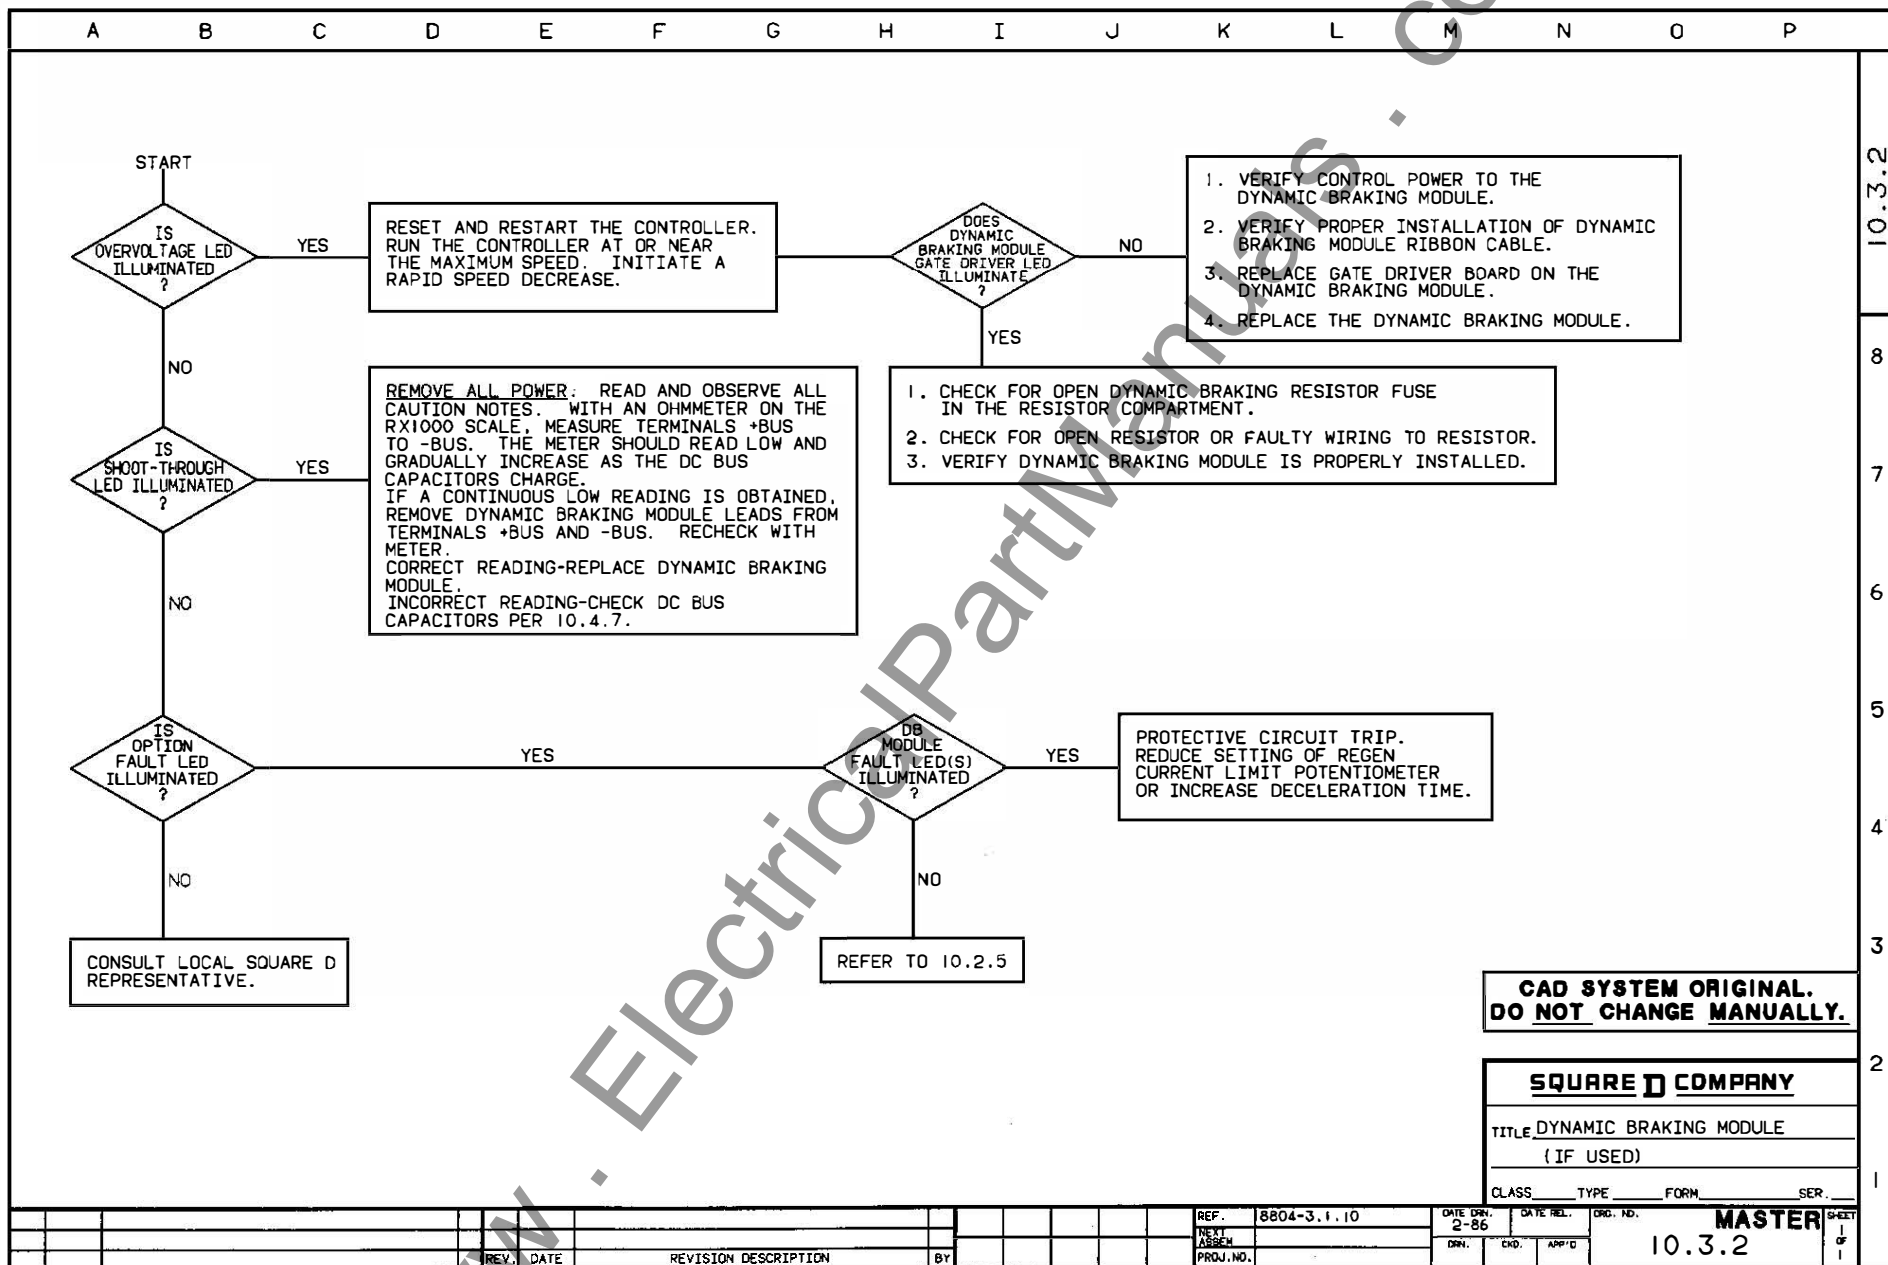

| A | B | C | D | E | F | G | H | I | J | K | L | M | N | O | P |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--------|
| | | | | | | | | | | | | | | | 10.4.1 |
| | | | | | | | | | | | | | | | 8 |
| | | | | | | | | | | | | | | | 7 |
| | | | | | | | | | | | | | | | 6 |
| | | | | | | | | | | | | | | | 5 |
| | | | | | | | | | | | | | | | 4 |
| | | | | | | | | | | | | | | | 3 |
| | | | | | | | | | | | | | | | 2 |
| | | | | | | | | | | | | | | | 1 |
| | | | | | | | | | | | | | | | 10.4.1 |

A

1. CHECK CONTINUITY OF THE RIBBON CABLE BETWEEN MCB AND PIB, OR THE NEXT PIB IN THE CHAIN. REPLACE ANY CABLE WITH A READING EXCEEDING 2 OHMS.

2. REPLACE THE PIB WITH GATE LED NOT ILLUMINATING.

3. IF PROBLEM STILL PERSISTS, REPLACE MCB.

**CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.**


SQUARE D COMPANY

TITLE GATING

CLASS _____ TYPE _____ FORM _____ SER. _____

10.4.1

| REV. | DATE | REVISION DESCRIPTION | BY | REF. | 8804-10.11 | DATE CHG. | DATE REL. | ORG. NO. | MASTER | SHEET |
|------|------|----------------------|----|-----------|------------|-----------|-----------|----------|--------|-------|
| | | | | REF. | 8804-10.11 | DATE CHG. | DATE REL. | ORG. NO. | MASTER | SHEET |
| | | | | REV. | | DATE CHG. | DATE REL. | ORG. NO. | MASTER | SHEET |
| | | | | PROJ. NO. | | DATE CHG. | DATE REL. | ORG. NO. | MASTER | SHEET |

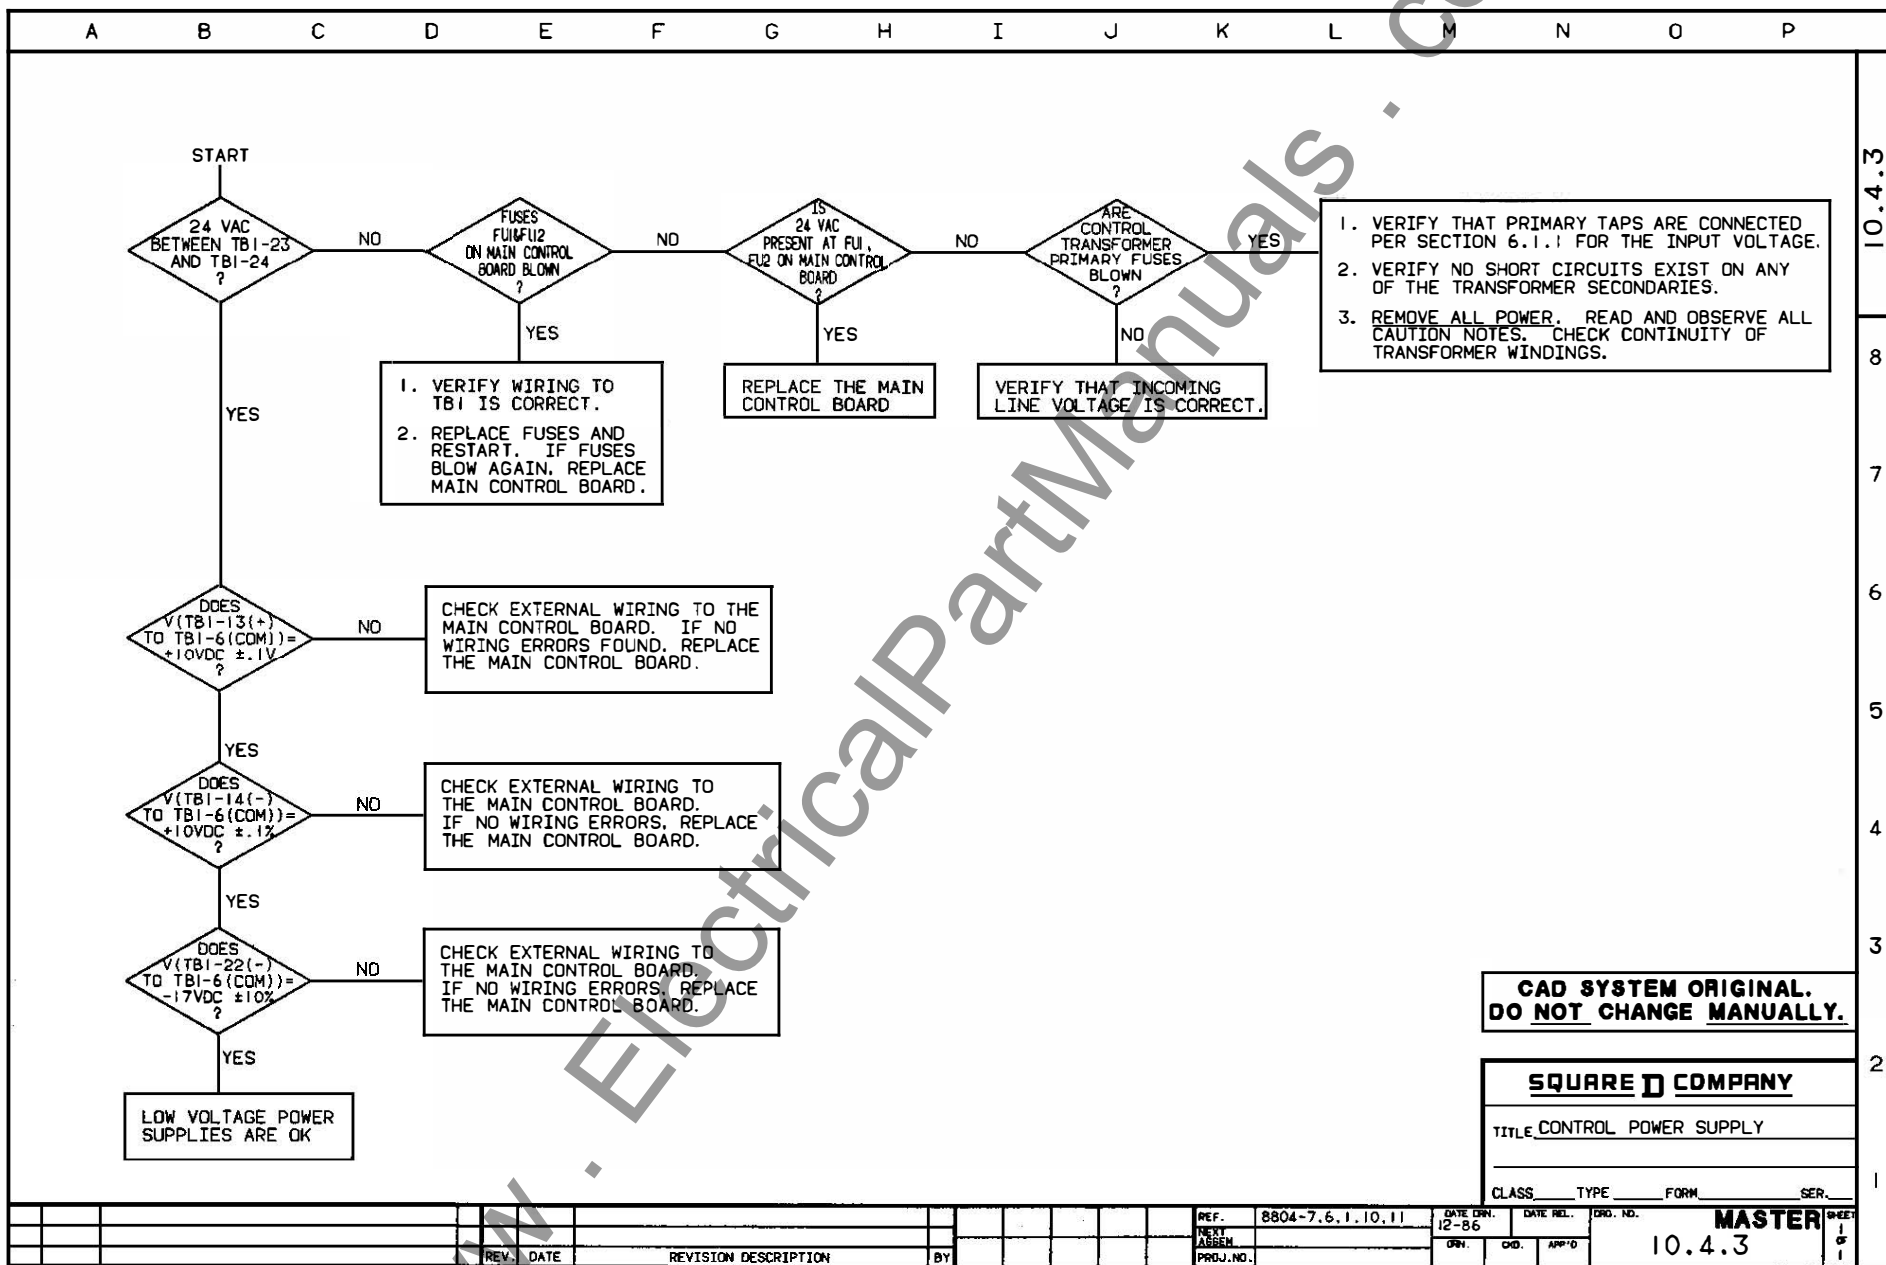

NOTE: Any reference to horsepower is at 460V unless stated otherwise. All controllers can be reconnected for 230V or 200V operation as detailed in Section 6.

CONTENTS

11.1 OMEGAPAK CONTROLLER DRAWINGS

- 11.1.1 Power elementary diagram 125 to 250 HP CT
- 11.1.2 Power elementary diagram 150 to 300 HP EVT
- 11.1.3 Control elementary diagram 125 to 250 HP CT
- 11.1.4 Control elementary diagram 150 to 300 HP EVT
- 11.1.5 Component connection diagram
- 11.1.6 Outline diagram

11.2 CONTROL CIRCUIT ELEMENTARY DIAGRAMS

- 11.2.1 MOD S10, start-stop push buttons
- 11.2.2 MOD A10, hand-auto selector switch and start-stop push buttons
- 11.2.3 MOD H10, hand-off-auto selector switch
- 11.2.4 MODS S10 or F10, F11, J11 or B11, start-stop, fast stop push button, forward-reverse, run-jog selector switches
- 11.2.5 MODS H10, X13 or Y13, F08, T08, S08, A08, B08, C08, D08, hand-off-auto selector switch, isolation, bypass/isolation or transfer/isolation contactor, drive fail and auxiliary sequence relays no. 1 and no. 2
- 11.2.6 Fan relay and MODS P16, R16, F16, S16 power on, run, fail, incomplete sequence lights

11.3 OMEGAPAK CONNECTION DIAGRAMS

- 11.3.1 Connection diagram controller
- 11.3.2 Connection diagram controller with isolation contactor
- 11.3.3 Connection diagram controller with isolation/bypass
- 11.3.4 Connection diagram controller with isolation/transfer
- 11.3.5 Elementary and connection diagram, isolation contactor (Size 5)
- 11.3.6 Elementary and connection diagram, isolation contactor (Size 6)

11.3.7 Elementary and connection diagram, isolation and bypass contactors (Size 5)

11.3.8 Elementary and connection diagram, isolation and bypass contactors (Size 6)

11.3.9 Elementary and connection diagram isolation and transfer contactors (Size 5)

11.3.10 Elementary and connection diagram isolation and transfer contactors (Size 6)

11.4 OPTIONAL DOOR MOUNTED PILOT DEVICES

11.4.1 Cable routing

11.4.2 Connection diagram MOD S10, start-stop push buttons and manual speed potentiometer

11.4.3 Connection diagram MOD F10, start-stop and fast stop push buttons and manual speed potentiometer

11.4.4 Connection diagram MOD A10, hand-auto selector switch, start-stop push buttons and manual speed potentiometer

11.4.5 Connection diagram MOD H10, hand-off-auto selector switch and manual speed potentiometer

11.4.6 Connection diagram MODS S10 (or F10) and F11 start-stop push buttons (or fast stop and start-stop push buttons) forward-reverse selector switch and manual speed potentiometer

11.4.7 Connection diagram MODS S10 (or F10) and J11 start-stop push buttons (or fast stop and start-stop push buttons) run-jog selector switch and manual speed potentiometer

11.4.8 Connection diagram MODS S10 (or F10), J11 and F11 (B11) start-stop push buttons (or fast stop and start-stop push buttons) run-jog and forward reverse selector switch and manual speed potentiometer

11.4.9 Connection diagram MODS P16, R16, F16 and S16 power on, run, drive fail and incomplete sequence lights

11.5 CONNECTION DIAGRAMS REMOTE OPERATOR STATIONS (OMEGAPAK 1500 AND 3500 CONTROLLERS)

- 11.5.1 Type CA-31 start-stop push buttons and manual speed potentiometer
- 11.5.2 Type CA-41 start-stop push buttons, run light and manual speed potentiometer
- 11.5.3 Type CA-42 hand-auto selector switch, start-stop push buttons and manual speed potentiometer
- 11.5.4 Type CA-43 start-stop push buttons, forward-reverse selector switch and manual speed potentiometer
- 11.5.5 Type CA-44 start-stop push buttons, forward-reverse selector switch and manual speed potentiometer
- 11.5.6 Type CA-61 start-stop push buttons, forward-reverse and run-jog selector switches and manual speed potentiometers
- 11.5.7 Type CA-62 start-stop push buttons, forward-reverse selector switch, run light and manual speed potentiometer
- 11.5.8 Type CA-63 start-stop push buttons, run-jog selector switch, run light and manual speed potentiometer

- 11.5.9 Type CA-64 start-stop push buttons, forward-reverse and run-jog selector switches, run light and manual speed potentiometer

- 11.5.10 Type CA-65 hand-auto selector switch, start-stop push buttons, run light and manual speed potentiometer

11.6 OPTION BOARD CONNECTION DIAGRAMS

- 11.6.1 MOD C07 (kit type MC-12) isolated follower
- 11.6.2 MOD A07 (kit type MC-11) non-isolated follower
- 11.6.3 MOD D07 (kit type MC-13) pneumatic follower
- 11.6.4 MOD B07 (kit type MC-14) non-isolated follower with run relay


11.7 MISCELLANEOUS

- 11.7.1 Meter connection diagram
- 11.7.2 Main control board terminal designation
- 11.7.3 Main control board block diagram

11.8 OPTIONAL DYNAMIC BRAKING

- 11.8.1 Connection diagram, dynamic braking resistor

| DRIVE H.P. | CB | F3 F14 F10 | # OF CAP CANS:1 F14 F10 | MOTOR CURRENT AMPS:2 RATIO | DO FUEL CABLE RATIO:3 | POWER SEMI-CONDUCTORS | | | | | | | | | | ④ INDUCTORS L1 AND L2 100 MICROHMS | DYNAMIC BRAKING MODULE (IF USED) | D10 SNUBBER CAP ASSEMBLY | | GTD SNUBBER DIODES | | L100 SNUBBER CAP ASSEMBLY | | ⑤ PRECHARGE CONTACTOR PCC |
|---------------|------------|------------------|----------------------------------|-------------------------------------|-----------------------------|-----------------------|--------------|--------------|--------------|--------------|--------------|--------------|----------|--------------|--------------|---|---|-----------------------------|--------|-----------------------|--|------------------------------|--|------------------------------------|
| | | | | | | GTOS | | | | | DIODES | | | | | | | S1-S16 | | D15-D17 | | D18-C20 | | |
| | | | | | | THY1-THY6 | D1-D6 | D7, D8 | D9-D14 | P81-PB12 | | | | | | | | | | | | | | |
| 125 | LAL 36000 | A50P400 | 18 | 1425:5 | 6:00:5 | 52915-033-5001 | 52914-028-52 | 52914-038-50 | 52914-028-52 | 52914-036-50 | 51:75:-61:50 | 52011-026-53 | 1.88 MFD | 52011-441-50 | 52914-037-60 | 52914-037-50 | 52011-192-50 | 8502 P.K. | 11L800 | | | | | |
| 150 | LAL 36000 | A50P400 | 21 | 1745:5 | 6:00:5 | 52915-033-5001 | 52914-028-52 | 52914-038-50 | 52914-028-52 | 52914-036-50 | 51:75:-61:50 | 52011-026-53 | 1.88 MFD | 52011-441-50 | 52914-037-60 | 52914-037-50 | 52011-192-50 | 8502 P.K. | 11L800 | | | | | |
| 200 | MAL 36000H | A50P500 | 30 | 2255:5 | 6:00:5 | 52915-033-5001 | 52914-038-50 | 52914-038-50 | 52914-028-52 | 52914-036-50 | 51:75:-61:50 | 52011-026-53 | 2.35 MFD | 52011-441-51 | 52914-037-60 | 52914-037-50 | 52011-192-50 | 8502 P.K. | 11L800 | | | | | |
| 250 | MAL 36000H | A50P700 | 39 | 2620:5 | 6:00:5 | 52915-033-5001 | 52914-038-50 | 52914-038-50 | 52914-028-52 | 52914-036-50 | 51:75:-61:50 | 52011-026-53 | 2.82 MFD | 52011-441-52 | 52914-037-60 | 52914-037-50 | 52011-192-50 | 8502 P.K. | 11L800 | | | | | |

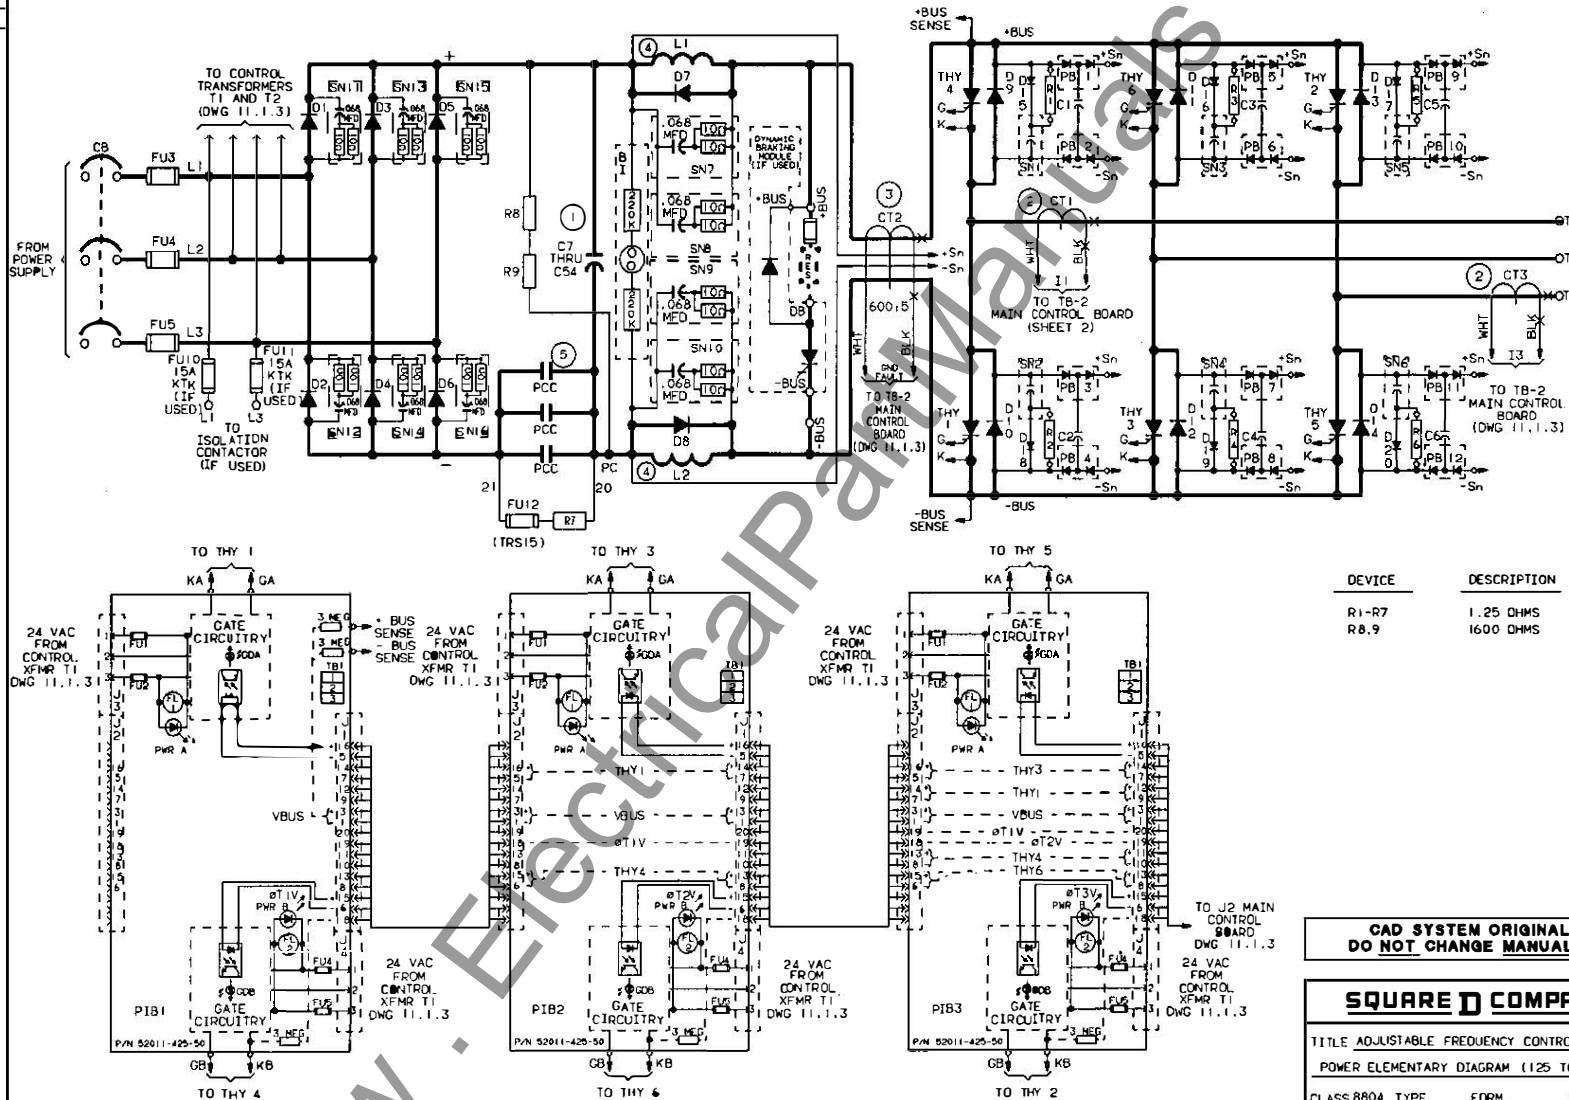

| DEVICE | DESCRIPTION |
|--------|-------------|
| R1-R7 | 1.25 OHMS |
| R8,9 | 1600 OHMS |

**CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.**


SQUARE D COMPANY

TITLE ADJUSTABLE FREQUENCY CONTROLLER CT
POWER ELEMENTARY DIAGRAM (125 TO 250 HP)

CLASS 8804 TYPE _____ FORM _____ SER. _____

MASTER

| DRIVE H.P. | CB | FU3 FU4 FU5 | # OF CAP CANS 90MFD PER CAN | MOTOR CURRENT XFRM T1 RATIO | 90 FAULT CURRENT XFRM T1 RATIO | POWER SEMI-CONDUCTORS | | | | | ④ INDUCTORS L1 AND L2 (100 MHO INDUCTOR) | GTO SNUBBER CAP ASSEMBLY | GTO SNUBBER DIODES | DIODE SNUBBER CAP ASSEMBLY | ⑤ PRECHARGE CONTACTOR PCC |
|---------------|------------|-------------------|--------------------------------------|--------------------------------------|---|-----------------------|--------------|--------------|--------------|--------------|---|-----------------------------|-----------------------|----------------------------------|------------------------------------|
| | | | | | | THY1-THY6 | D1-D6 | D7, D8 | D9-D14 | PB1-PB12 | | | | | |
| 150 | LAL 36000 | A50P400 | 21 | 1425:5 | 600:5 | 52915-033-5001 | 52914-028-52 | 52914-038-50 | 52914-028-52 | 52914-036-50 | 51175-061-50 | 1.88 MFD 52011-411-50 | 52914-037-60 | 52914-037-50 | 52011-192-50 #502 PK5, 11L801 |
| 200 | MAL 360008 | A50P500 | 30 | 1850:5 | 600:5 | 52915-033-5001 | 52914-038-50 | 52914-038-50 | 52914-028-52 | 52914-036-50 | 51175-061-50 | 2.35 MFD 52011-411-50 | 52914-037-60 | 52914-037-50 | 52011-192-50 #502 PK5, 11L801 |
| 250 | MAL 360008 | A50P700 | 39 | 2325:5 | 600:5 | 52915-033-5001 | 52914-038-50 | 52914-038-50 | 52914-028-52 | 52914-036-50 | 51175-061-50 | 2.82 MFD 52011-411-50 | 52914-037-60 | 52914-037-50 | 52011-192-50 #502 PK5, 11L801 |
| 300 | MAL 360008 | A50P700 | 48 | 2620:5 | 600:5 | 52915-033-5001 | 52914-038-50 | 52914-038-50 | 52914-028-52 | 52914-036-50 | 51175-061-50 | 2.82 MFD 52011-411-50 | 52914-037-60 | 52914-037-50 | 52011-192-50 #502 PK5, 11L801 |

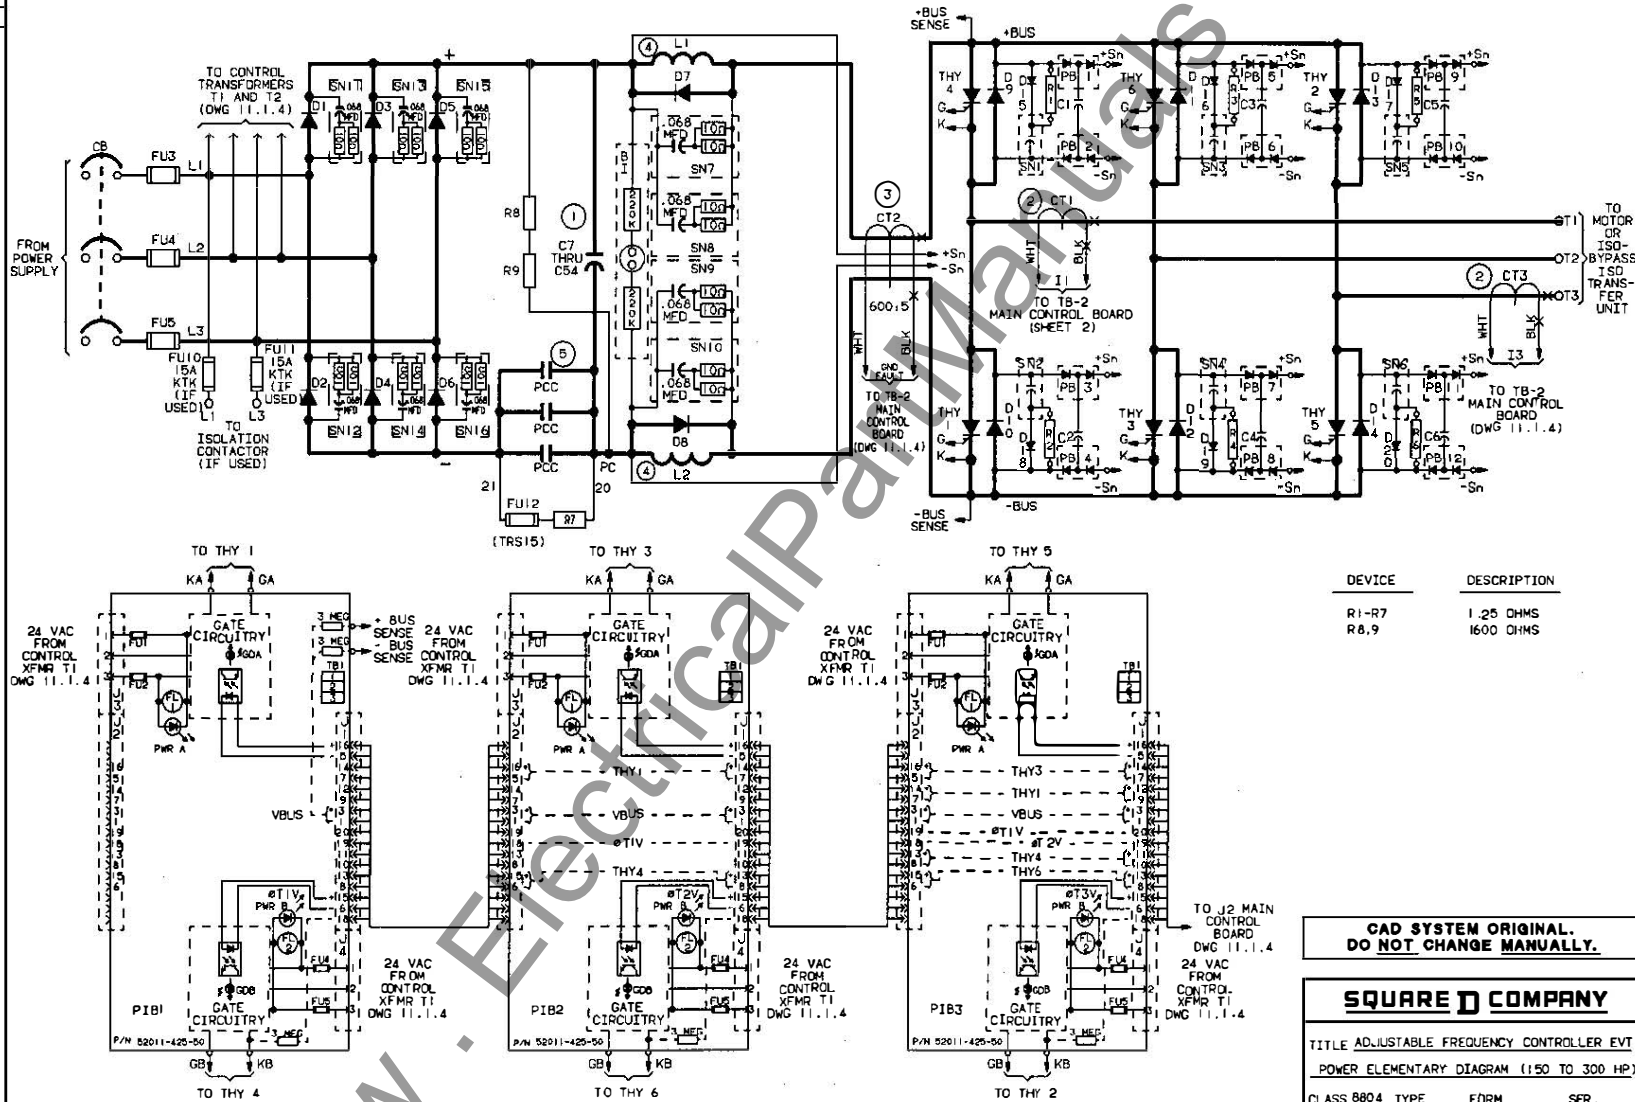

| DEVICE | DESCRIPTION |
|--------|-------------|
| R1-R7 | 1.25 OHMS |
| R8,9 | 1600 OHMS |

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE ADJUSTABLE FREQUENCY CONTROLLER EVT
POWER ELEMENTARY DIAGRAM (150 TO 300 HP)


CLASS 8804 TYPE FORM SER.


| | | | | | | | | | |
|----------------------|---------|------|------|------|--|------|--|------|--|
| REFERENCE | 8804-10 | DATE | 7-87 | DATE | | DATE | | DATE | |
| NEXT ASSEN | | DATE | | DATE | | DATE | | DATE | |
| BY | | DATE | | DATE | | DATE | | DATE | |
| REV | | DATE | | DATE | | DATE | | DATE | |
| REVISION DESCRIPTION | | | | | | | | | |


MASTER
11.1.2


7-20-87

A83 A B C D E F G H I J K L M N O P Q R S T

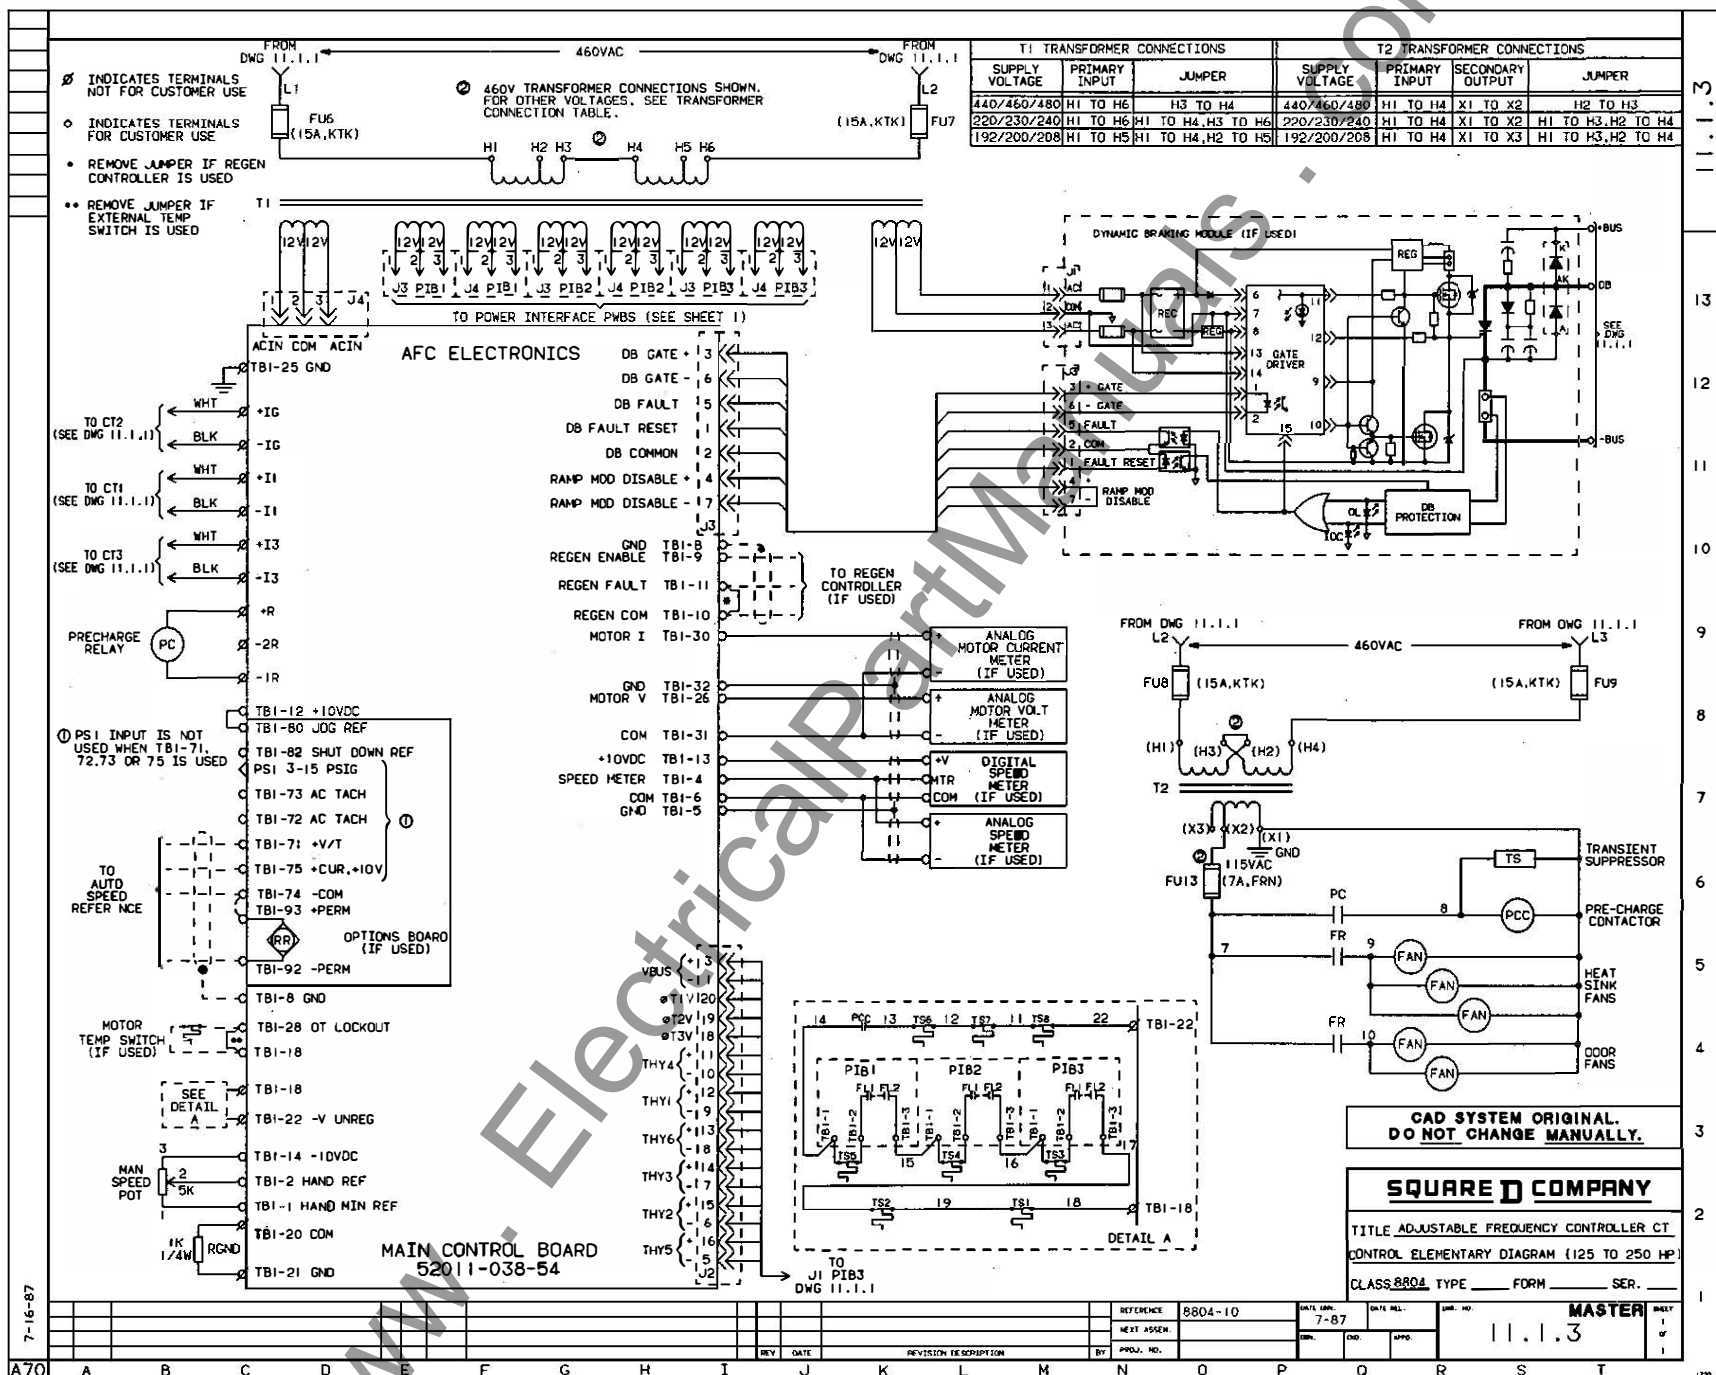


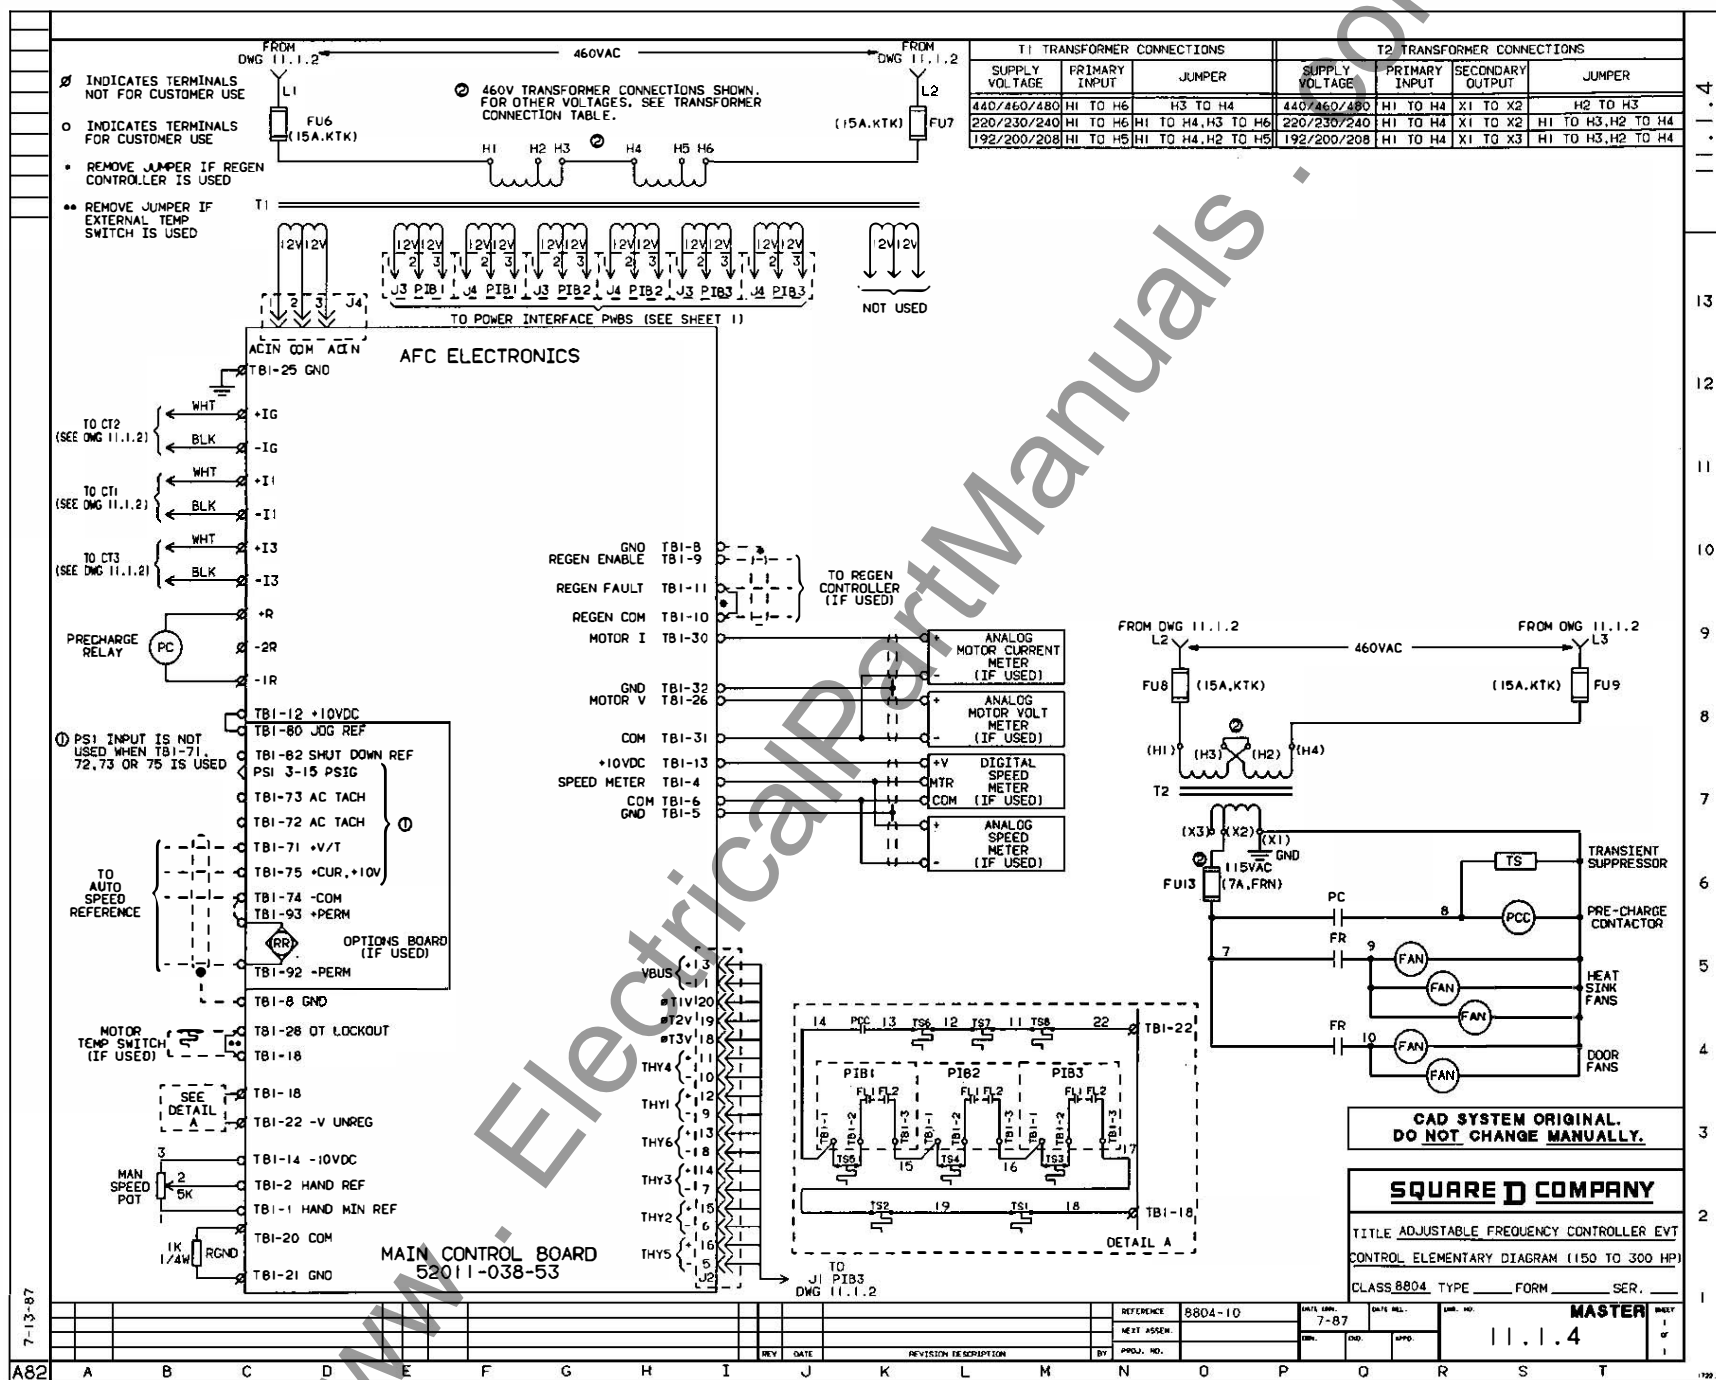

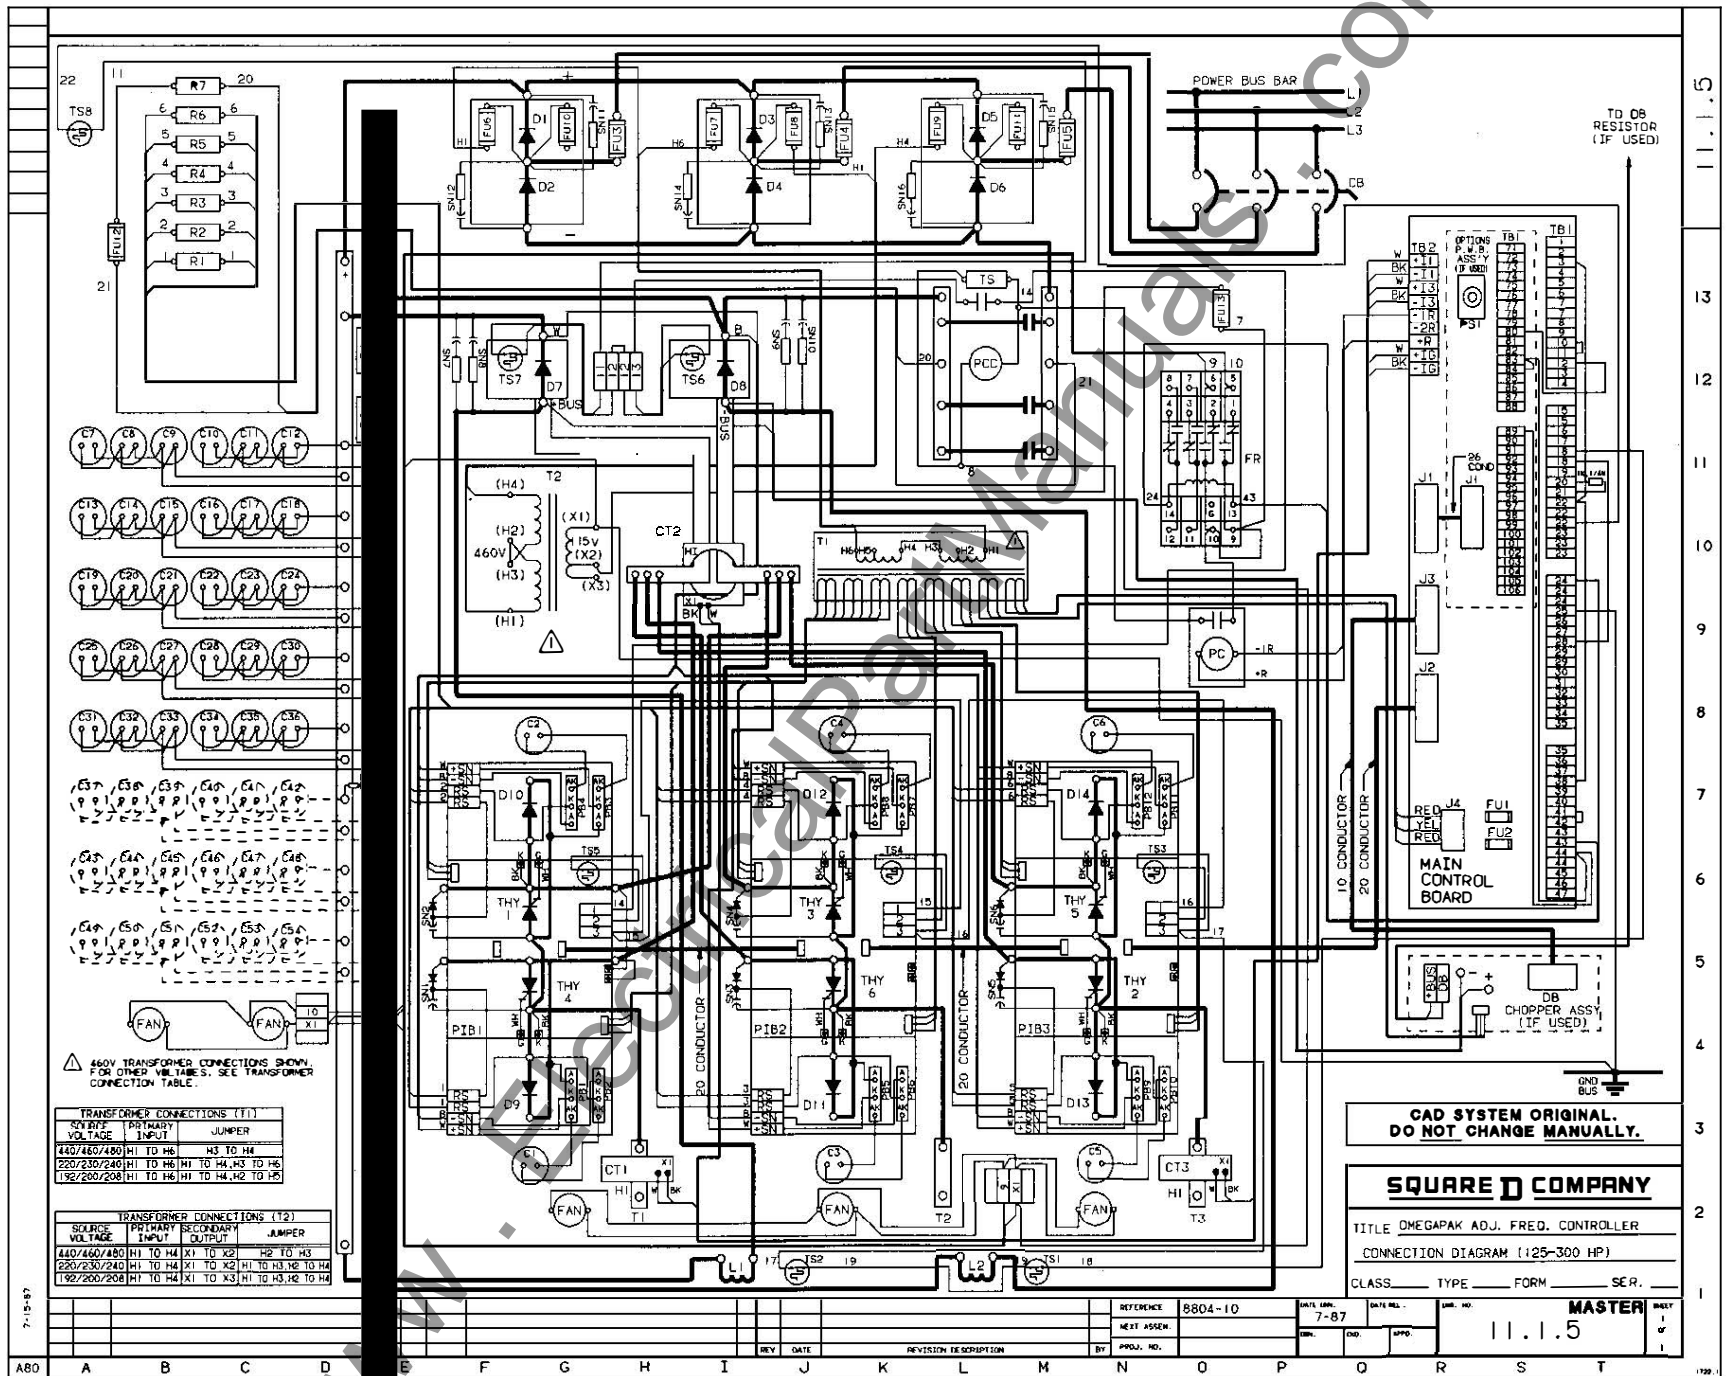

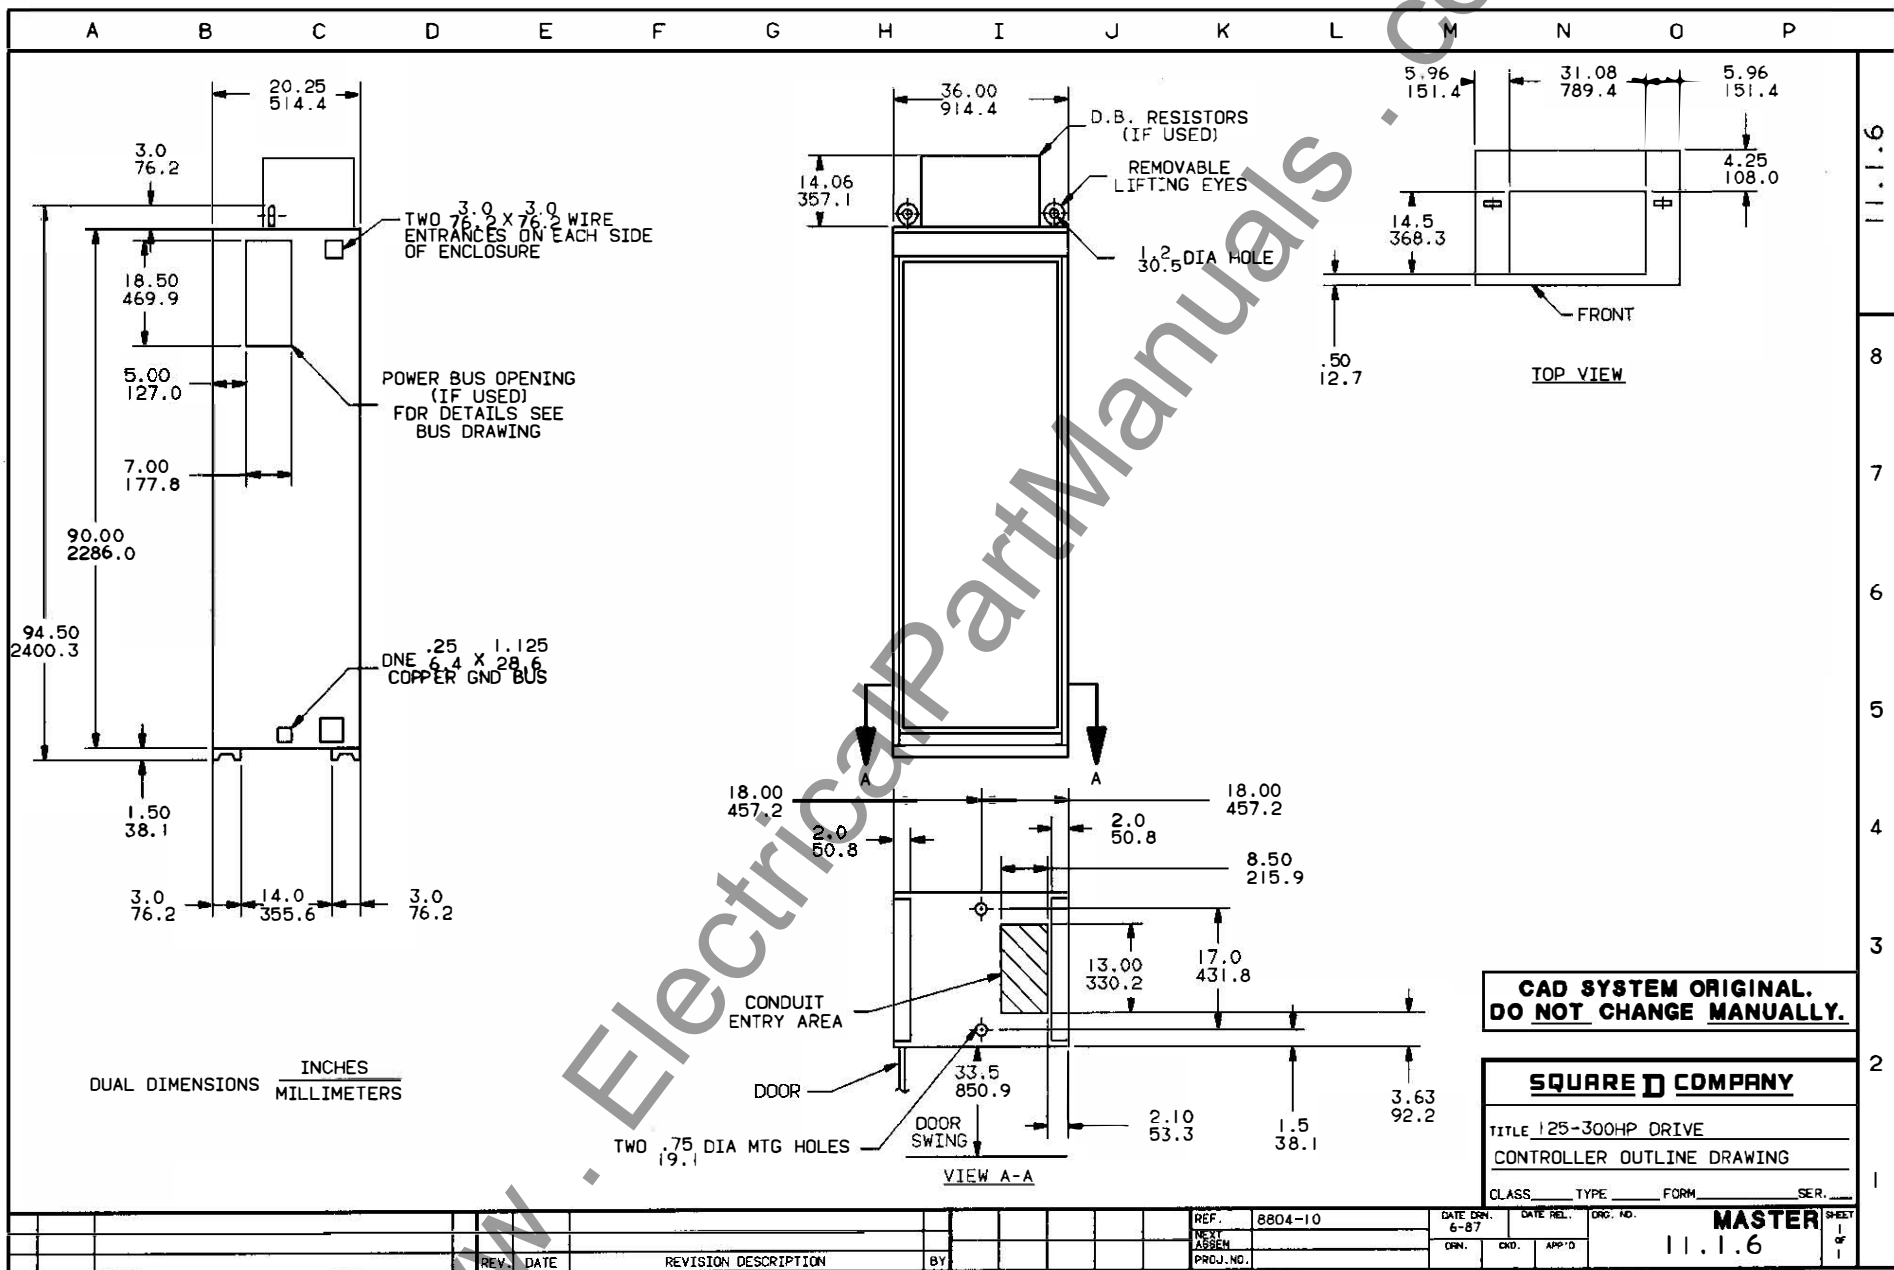





**CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.**

SQUARE D COMPANY

TITLE CONTROL CIRCUIT ELEMENTARY

START-STOP, RUN-JOG, FOR-REV, FAST STOP

CLASS _____ TYPE _____ FORM _____ SER. _____

MASTER 10-41.7

4

| | | |
|---|---|--|
| | - | |
| t | | |

4

| | |
|----|--|
| 12 | |
|----|--|

| |
|--|
| |
|--|

4

| | |
|--|----------|
| | 09-03-17 |
|--|----------|

403

FOR THE MOISTURE

1111

| | | |
|-----|--|--|
| REV | | |
|-----|--|--|

203

401

| | | |
|--|--|--|
| | | |
|--|--|--|

| | |
|--|--|
| | |
| | |
| | |

1

— 312 —

| | |
|--|--|
| | |
| | |

2-12-85

11.2.11

13

12

11

10

9

8

7

6


5

4

3

2

1

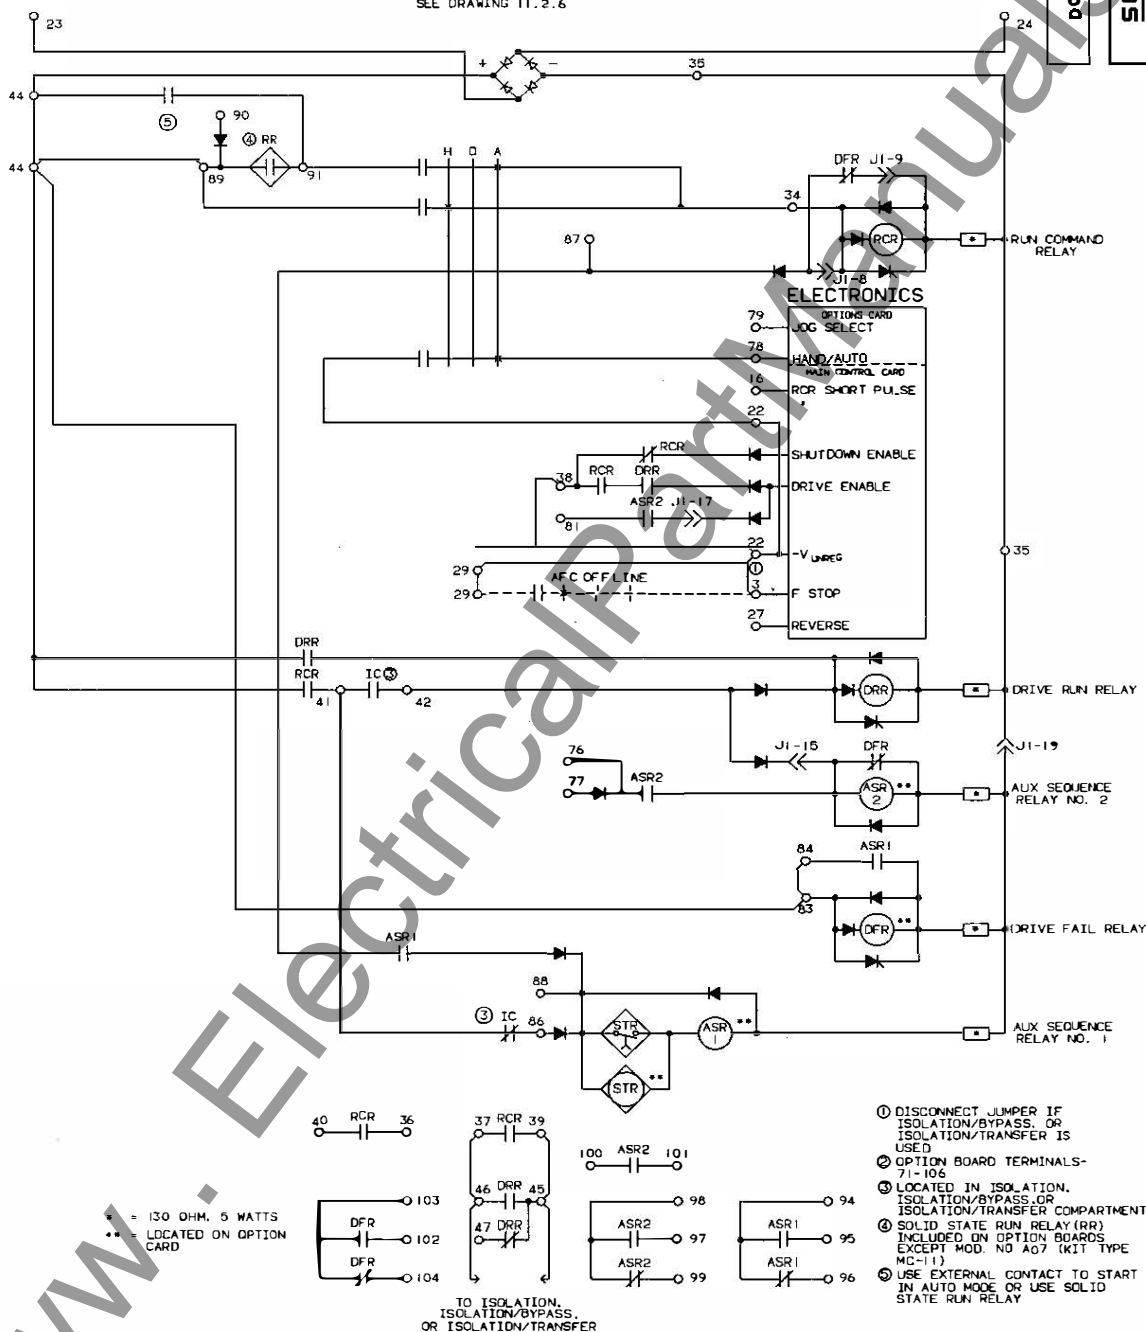

2-12-85

| REV | DATE | REVISION DESCRIPTION | BY | PROJ. NO. | REFERENCE | DATE DES. | DATE REL. | DATE MOD. | MASTER | DRY |
|-----|------|----------------------|----|-----------|-----------|-----------|-----------|-----------|--------|-----|
| | | | | | 8804-10 | 9-87 | | | 11.2.6 | 1 |

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE CONTROL CIRCUIT ELEMENTARY


FAN RELAY,OPTIONAL PILOT LIGHTS,AND ETM

CLASS TYPE FORM SER.

11.2.6


MASTER


DRY

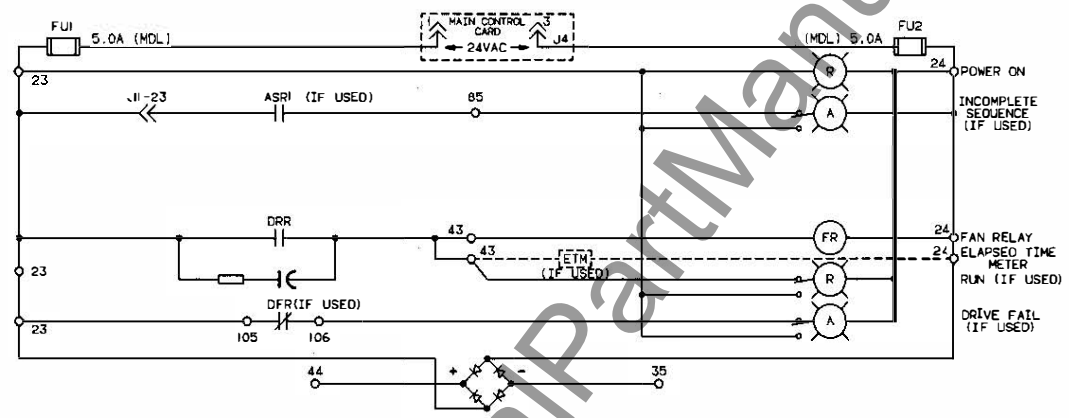





① OPTION BOARD TERMINALS-
71 TO 106

11.2.6
13
12
11
10
9
8
7
6
5
4
3
2
1

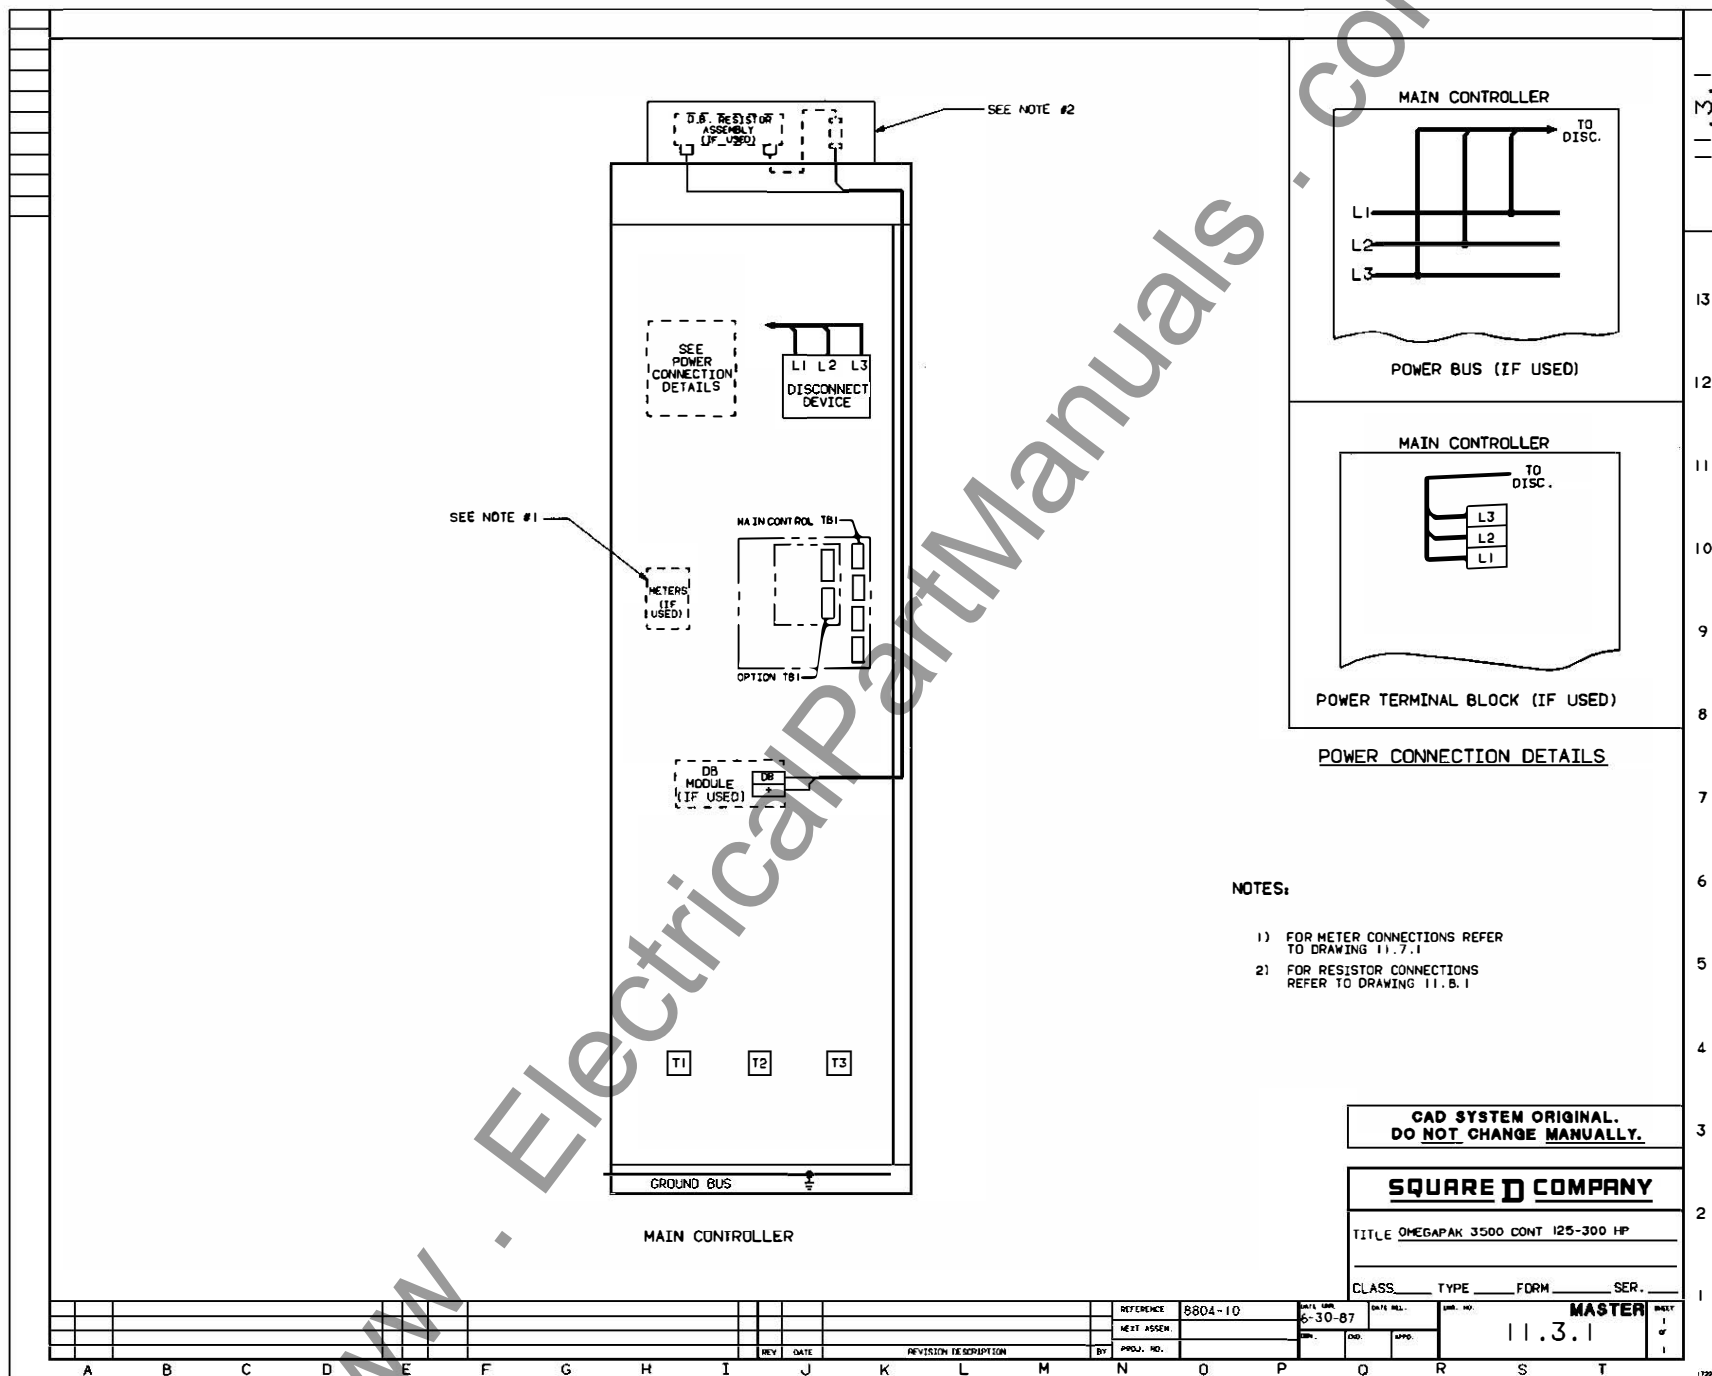

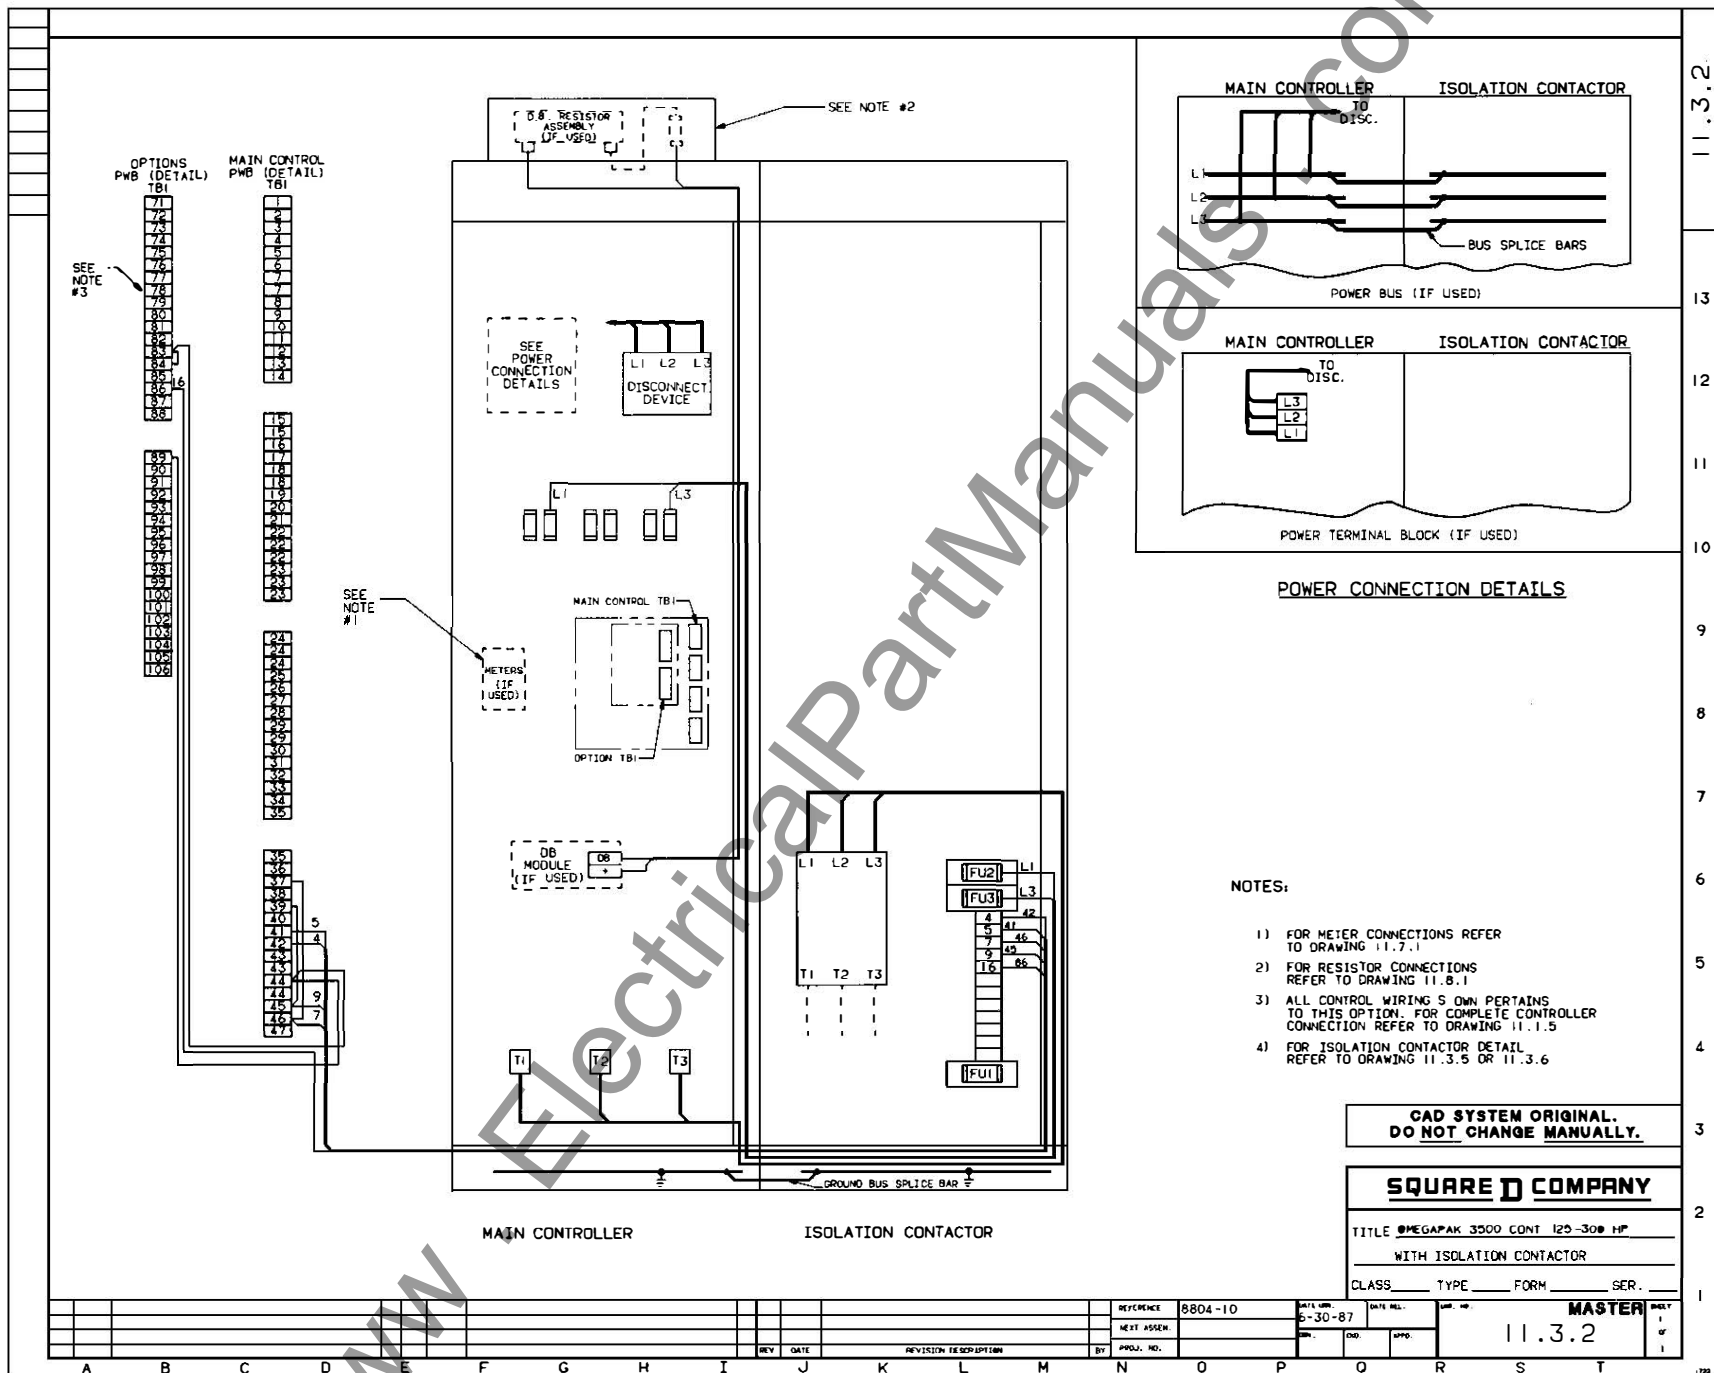

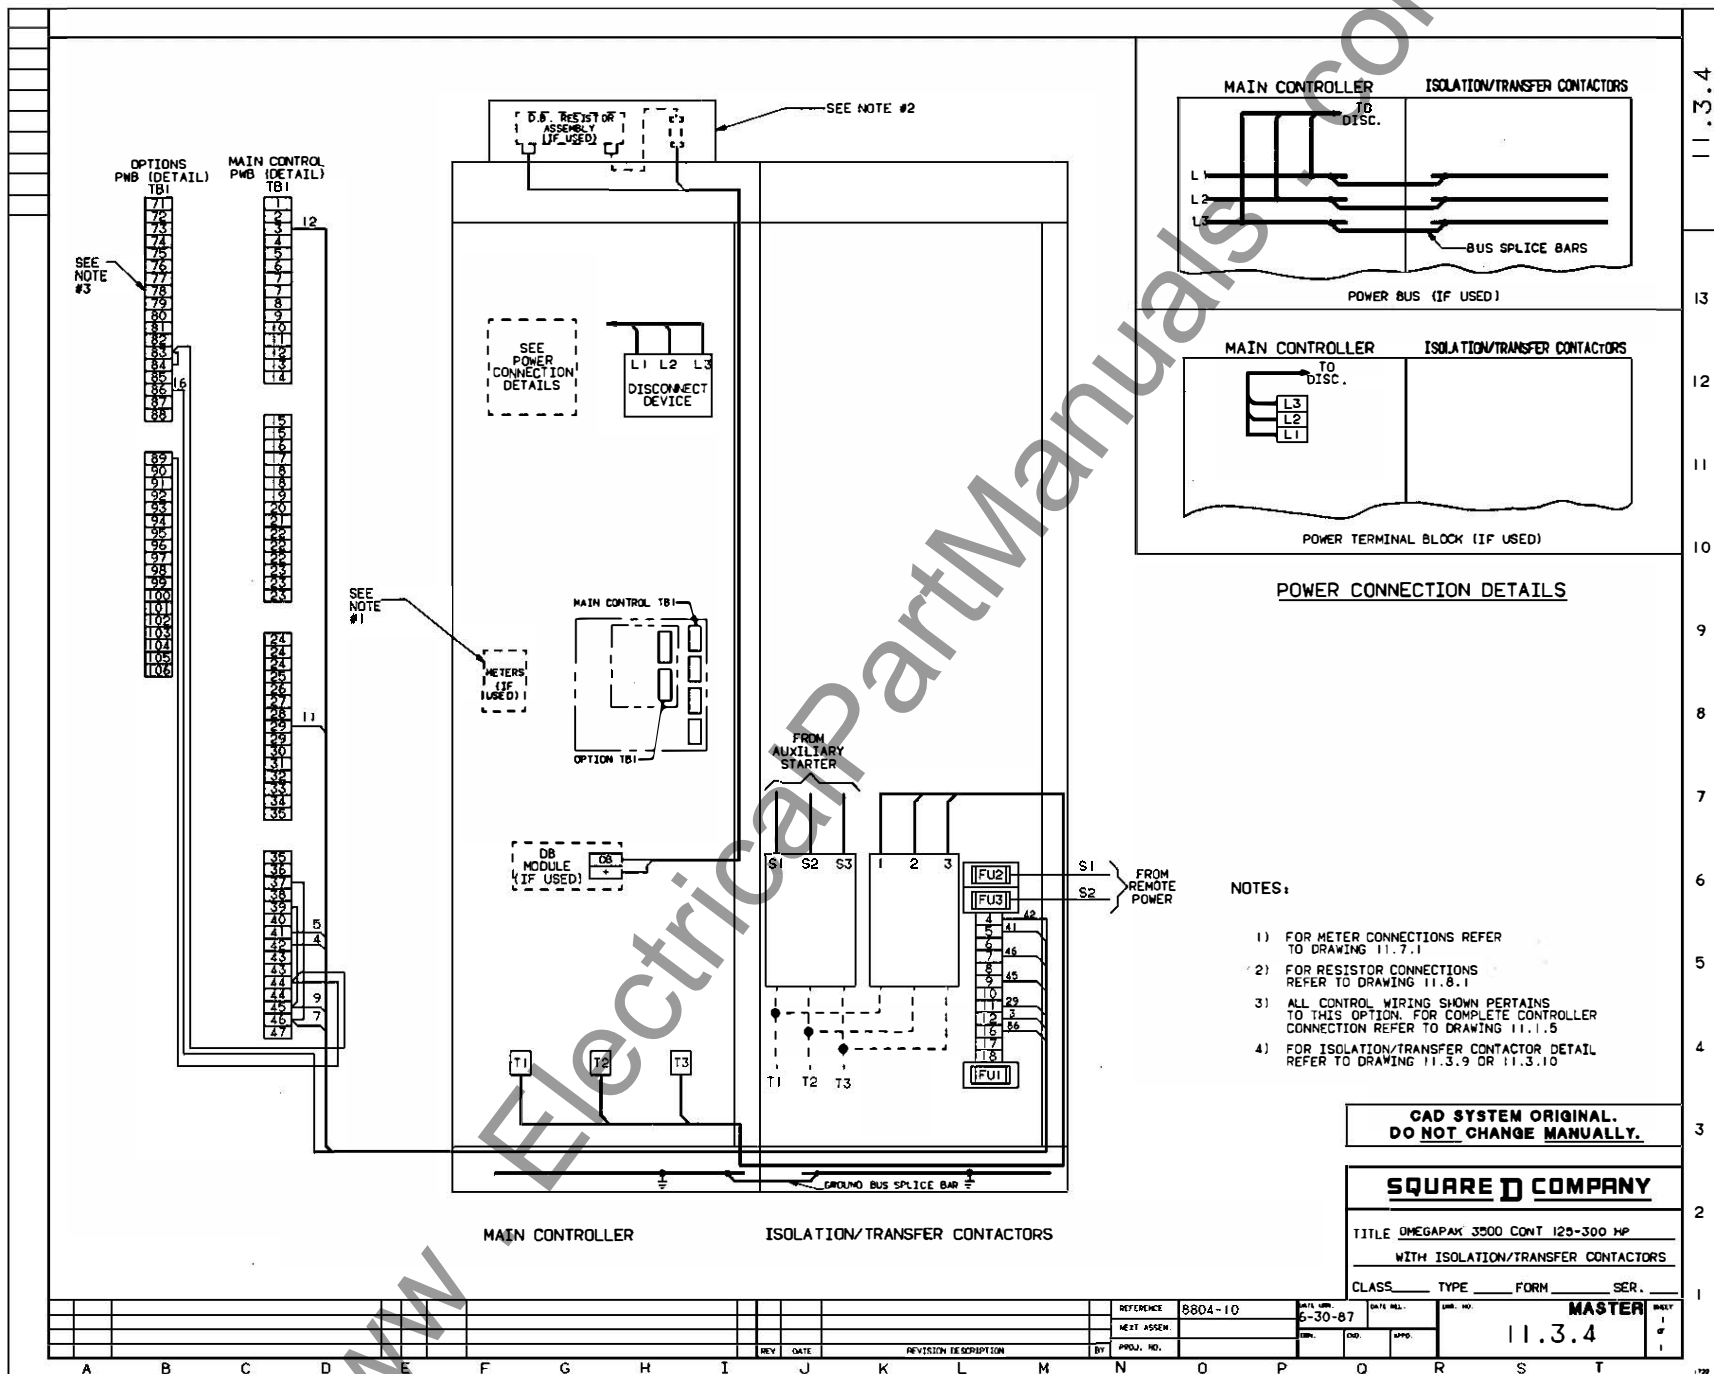

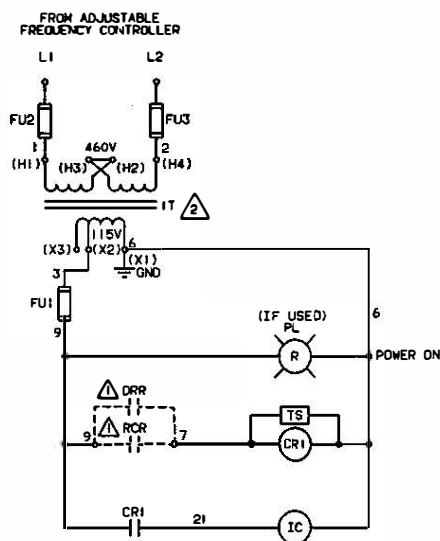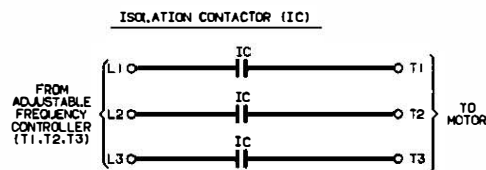

GROUND BUS

ALL GNDS ARE WIRED TO GROUND BUS


| TRANSFORMER CONNECTIONS | | | |
|-------------------------|---------------|------------------|--------------------|
| SOURCE VOLTAGE | PRIMARY INPUT | SECONDARY OUTPUT | JUMPER |
| 440/460/480 | H1 TO H4 | X1 TO X2 | H2 TO H3 |
| 220/230/240 | H1 TO H4 | X1 TO X2 | H1 TO H3, H2 TO H4 |
| 192/200/208 | H1 TO H4 | X1 TO X3 | H1 TO H3, H2 TO H4 |

POWER BUS (IF USED)

L1

L2




L3

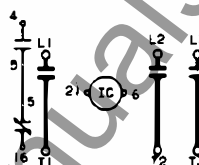

NOTES:

- LOCATED IN ADJUSTABLE FREQUENCY CONTROLLER
- INDICATES TERMINAL NUMBER ON DEVICE
- 460V TRANSFORMER CONNECTIONS SHOWN. FOR OTHER VOLTAGES, SEE TRANSFORMER CONNECTION TABLE.

(IF USED)

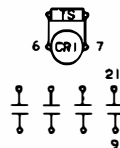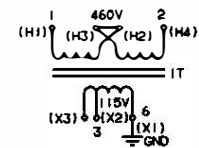

CAD SYSTEM ORIGINAL. DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE ISOLATION UNIT

(SIZE 5) 125-200 HP

CLASS TYPE FORM SER.

REFERENCE 8804-10.11

DATE 3-26-87

DATE 11.3.5

DATE 11.3.5

DATE 11.3.5

DATE 11.3.5

DATE 11.3.5

DATE 11.3.5

DATE 11.3.5

DATE 11.3.5

DATE 11.3.5


DATE 11.3.5

DATE 11.3.5





DATE 11.3.5

DATE 11.3.5


DATE 11.3.5

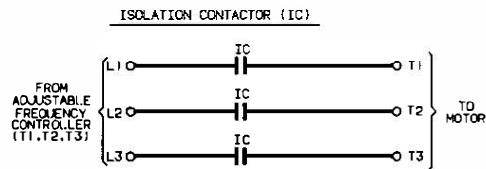

FROM ADJUSTABLE
FREQUENCY CONTROLLER

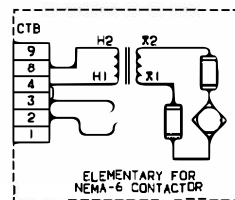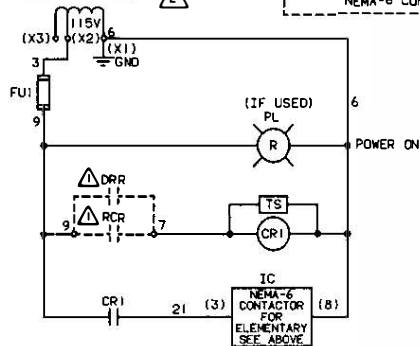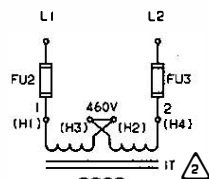



POWER BUS (IF USED)
L1
L2
L3

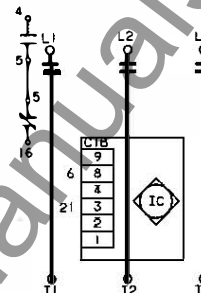

(IF USED)



TRIM MTD. EQUIPMENT

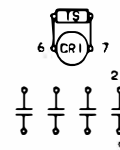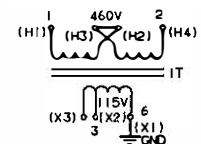

NOTES:

Δ LOCATED IN ADJUSTABLE
FREQUENCY CONTROLLER


() INDICATES TERMINAL NUMBER
ON DEVICE

Δ 460V TRANSFORMER CONNECTIONS
SHOWN. FOR OTHER VOLTAGES,
SEE TRANSFORMER CONNECTION
TABLE.

GROUND BUS:
ALL GNDS ARE WIRED
TO GROUND BUS

| TRANSFORMER CONNECTIONS | | | |
|-------------------------|------------------|---------------------|--------------------|
| SOURCE VOLTAGE | PRIMARY INPUT | SECONDARY OUTPUT | JUMPER |
| 440/460/480 | H1 TO H4 | X1 TO X2 | H2 TO H3 |
| 220/230/240 | H1 TO H4 | X1 TO X2 | H1 TO H3, H2 TO H4 |
| 192/200/208 | H1 TO H4 | X1 TO X3 | H1 TO H3, H2 TO H4 |

| WIRE NO | | SIZE AND COLOR | DEVICE DESIGNATION |
|------------|----|----------------------|----------------------|
| 1 | 2 | 16 GA RED | IT, FU2 |
| 3 | 4 | | IT, FU3 |
| 5 | 6 | | IT, FU1 |
| 7 | 8 | | IC, TB |
| 9 | 10 | | IC, TB |
| 11 | 12 | | GND BUS, IT, CR1, IC |
| 13 | 14 | | CR1, TB |
| 15 | 16 | | IC, CR1 |
| 17 | 18 | 16 GA RED | IC, PL (IF USED) |
| 19 | 20 | | CR1, PL (IF USED) |



CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE ISOLATION UNIT

(SIZE 6) 250-300 HP

CLASS TYPE FORM SER.

MASTER

11.3.6

11.3.6

13

12

11

10

9

8

7

6

5

4






3

2


1

1220

11.3.7
13
12
11
10
9
8
7
6
5
4
3
2
1


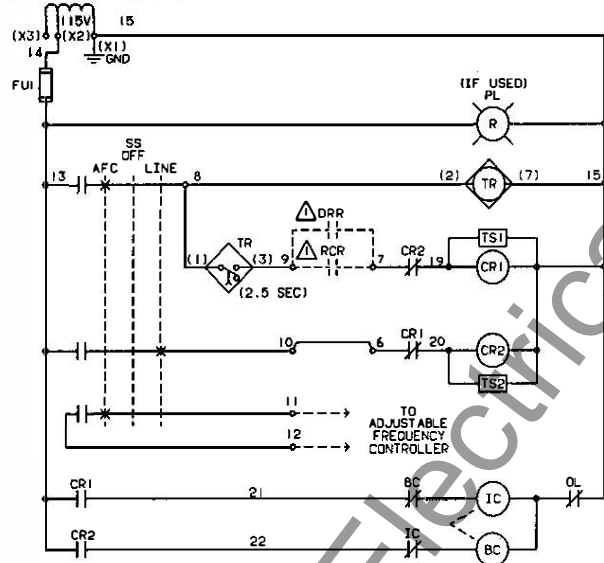
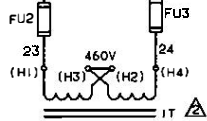
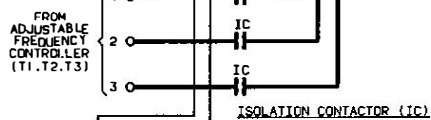
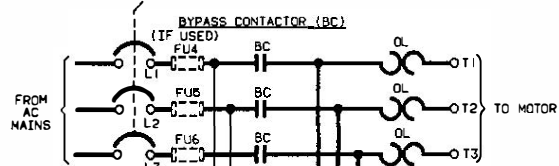


| TRANSFORMER CONNECTIONS | | | |
|-------------------------|---------------|------------------|--------------------|
| SOURCE VOLTAGE | PRIMARY INPUT | SECONDARY OUTPUT | JUMPER |
| 440/460/480 | H1 TO H4 | X1 TO X2 | H2 TO H3 |
| 220/230/240 | H1 TO H4 | X1 TO X2 | H1 TO H3, H2 TO H4 |
| 192/200/208 | H1 TO H4 | X1 TO X3 | H1 TO H3, H2 TO H4 |

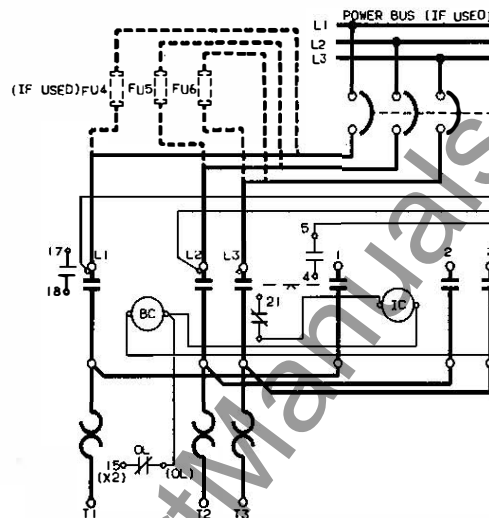

- NOTES:
- △ LOCATED IN ADJUSTABLE FREQUENCY CONTROLLER
 - () INDICATES TERMINAL NUMBER ON DEVICE
 - △ 460V TRANSFORMER CONNECTIONS SHOWN. FOR OTHER VOLTAGES, SEE TRANSFORMER CONNECTION TABLE.

| WIRE TABLE | | |
|------------|----------------|-------------------------------|
| WIRE NO | SIZE AND COLOR | DEVICE DESIGNATION |
| 1 | | EXISTING NUMBERS ON IC AND BC |
| 2 | | |
| 3 | | |
| 4 | 16 GA RED | IC, TB |
| 5 | | IC, TB |
| 6 | | CR1, TB |
| 7 | | CR2, TB |
| 8 | | TR, TB, SS |
| 9 | | TR, TB, SS |
| 10 | | TB, SS |
| 11 | | TB, SS |
| 12 | | TB, SS |
| 13 | | FU1, CR1, CR2, SS |
| 14 | | GND BUS, IT, OL, CR1, CR2, TR |
| 15 | | IC, TB |
| 16 | | BC, TB |
| 17 | | BC, TB |
| 18 | | CR1, CR2 |
| 19 | | CR1, CR2 |
| 20 | | BC, CR1 |
| 21 | | IC, CR2 |
| 22 | | IT, FU2 |
| 23 | | IT, FU3 |
| 24 | | |
| 13 | 16 GA RED | SS, PL (IF USED) |
| 15 | | TR, PL (IF USED) |

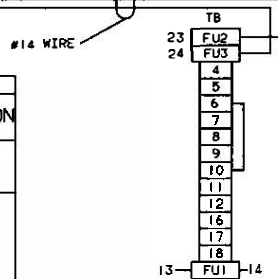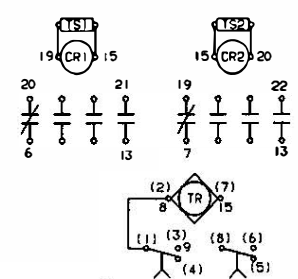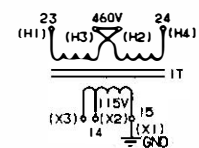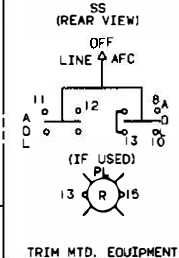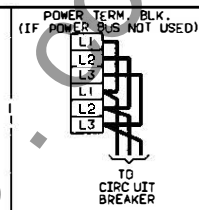

CAD SYSTEM ORIGINAL. DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE ISOLATION AND BYPASS UNIT
(SIZE 5) 125-200 HP
CLASS TYPE FORM SER.

11.3.7

| REV | DATE | REVISION DESCRIPTION | BY | CHKD | APPD |
|-----|------|----------------------|----|------|------|
| | | | | | |

11.3.8

13

12

11

10

9

8

7

6

5






4

3


2

1

129

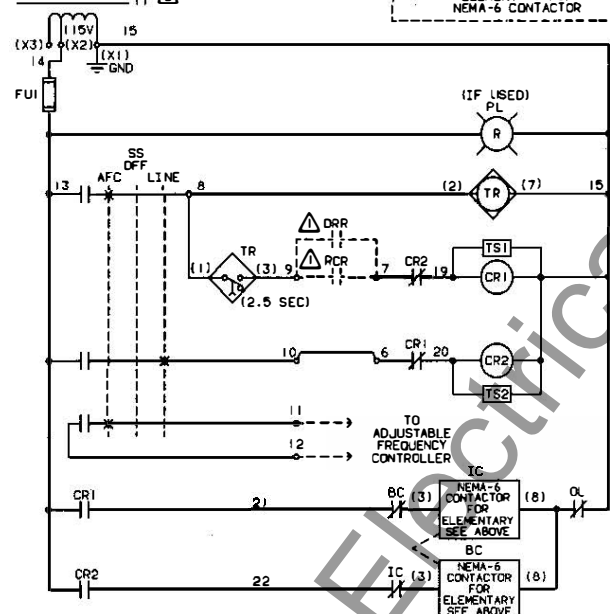
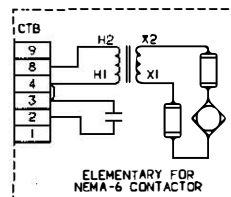
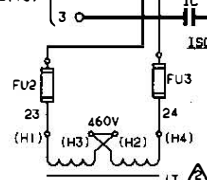
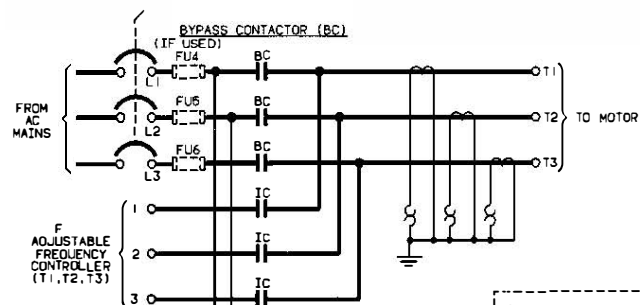


| TRANSFORMER CONNECTIONS | | | | |
|-------------------------|---------------|------------------|--------------------|--|
| SOURCE VOLTAGE | PRIMARY INPUT | SECONDARY OUTPUT | JUMPER | |
| 440/460/480 | H1 TO H4 | X1 TO X2 | H2 TO H3 | |
| 220/230/240 | H1 TO H4 | X1 TO X2 | H1 TO H3, H2 TO H4 | |
| 192/200/208 | H1 TO H4 | X1 TO X3 | H1 TO H3, H2 TO H4 | |

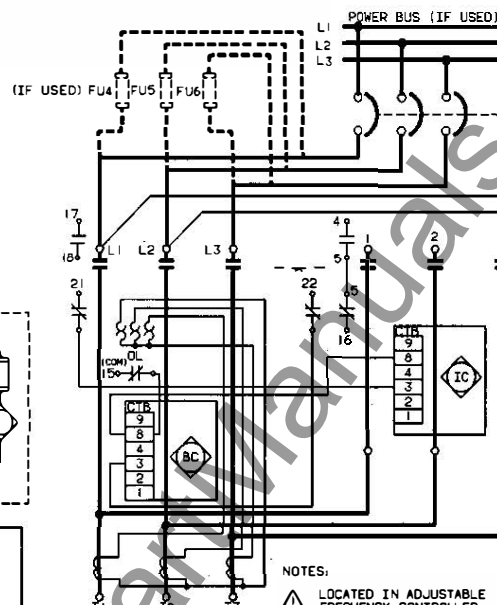

- NOTES:
- △ LOCATED IN ADJUSTABLE FREQUENCY CONTROLLER
 - () INDICATES TERMINAL NUMBER ON DEVICE
 - △ 460V TRANSFORMER CONNECTIONS SHOWN. FOR OTHER VOLTAGES, SEE TRANSFORMER CONNECTION TABLE.

| WIRE TABLE | | |
|--|----------------|---|
| WIRE NO. | SIZE AND COLOR | DEVICE DESIGNATION |
| 1, 2, 3 | | EXISTING NUMBERS ON IC AND BC |
| 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24 | 16 GA RED | IC, TB IC, TB CR1, TB CR2, TB TR, TB, SS TR, TB TB, SS TB, SS TB, SS FU1, CR1, CR2, SS IT, FU1 GND BUS, IT, OL, CR1, CR2, TR IC, TB BC, TB BC, TB CR1, CR2 CR1, CR2 BC, CR1 IC, CR2 IT, FU2 IT, FU3 |
| 13, 15 | 16 GA RED | SS, PL (IF USED) TR, PL (IF USED) |

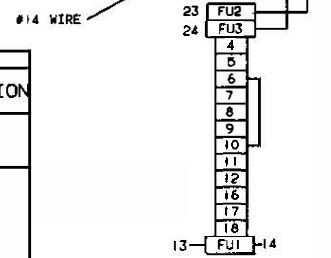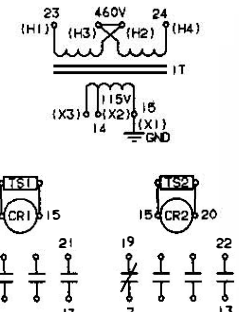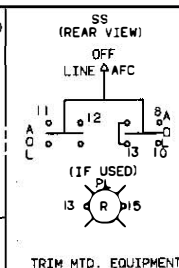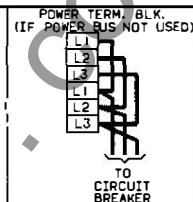

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE ISOLATION AND BYPASS UNIT
(SIZE 6) 250-300 HP

CLASS TYPE FORM SER.

REFERENCE 8804-10.11

DATE 3-26-87

DATE 11-3-87

DATE 11-3-87

DATE 11-3-87

DATE 11-3-87

DATE 11-3-87

DATE 11-3-87

DATE 11-3-87

DATE 11-3-87

DATE 11-3-87

DATE 11-3-87


DATE 11-3-87


DATE 11-3-87

DATE 11-3-87

MASTER

11.3.8



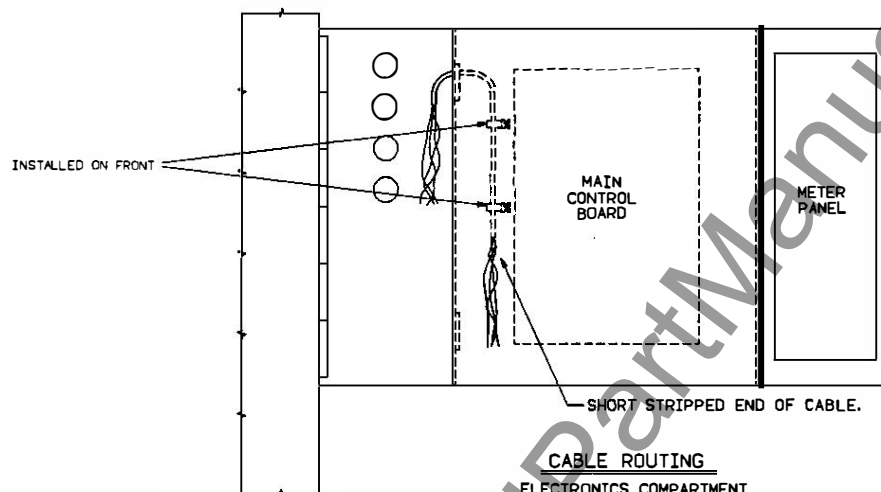

CABLE ROUTING
ELECTRONICS COMPARTMENT
(REAR VIEW)

GENERAL NOTES :

1. LIGHTS AND SWITCHES (WHEN USED) ARE TO BE ARRANGED IN FOLLOWING ORDER WITH THE UNUSED PORTION BEING AT THE BOTTOM OF THE FRONT PANEL:
POWER LIGHT, RUN LIGHT, DRIVE FAIL LIGHT, INCOMPLETE
SEQUENCE LIGHT, FORWARD-REVERSE, RUN-JOG, MAN. SPEED,
HAND-OFF-AUTO, HAND-AUTO, START, STOP, F-STOP.
2. MAXIMUM COMBINATION OF SWITCHES AND LIGHTS CANNOT EXCEED SEVEN (7).
3. TWELVE (12) CONDUCTOR UNSHIELDED CABLE USED ON ALL CONFIGURATIONS.
SEPARATE INDIVIDUAL WIRES USED WHEN MORE ARE REQUIRED.
4. ALL SWITCH AND PUSHBUTTON OPERATORS ARE TO BE ORIENTED WITH THEIR
LOCATING NIBS TO THE RIGHT (REAR VIEW OF COMPARTMENT) WITH CONTACT BLOCKS
MOUNTED ON TOPSIDE OF OPERATOR.

ATTACH TIE ANCHORS USING EXISTING HARDWARE.
USE CABLE TIES TO SECURE LOOSE WIRES AFTER
CONNECTIONS ARE MADE.

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE **DOOR MOUNTED PILOT DEVICE**
CABLE ROUTING

CLASS TYPE FORM SER.


MASTER


11.4.1


| | | | | | | | |
|--------------|------------|------------|---------|----------------------|--|----------|--|
| REFERENCE | 8804-10,11 | DATE APPR. | 7-13-87 | DATE REL. | | APP. NO. | |
| REVT. ASSEM. | | BY | | CHKD. | | APPRO. | |
| PROJ. NO. | | REV | DATE | REVISION DESCRIPTION | | | |

OF

| | | A | B | C | D | E | F | | | | |
|-------------|---------------|-----------|----------------------|--|--------|---|---|--|--|--|--|
| REV. NO. | BY | REV. DATE | REVISION DESCRIPTION | <p>RED — TBI-1</p> <p>TBI-80 (IF USED)</p> <p>TBI-12</p> <p>BLACK — TBI-14</p> <p>WHITE — TBI-2</p> <p>MAN. SPEED — GREEN — TBI-40</p> <p>START</p> <p>ORANGE — TBI-34</p> <p>TBI-36</p> <p>TBI-84 (IF USED)</p> <p>TBI-83 (IF USED)</p> <p>TBI-44</p> <p>BLUE — TBI-89 (IF USED)</p> <p>NOTE 1</p> <p>F. STOP — RED/BLK — TBI-3</p> <p>WHT/BLK — TBI-22</p> | | | | | | | |
| | | | | | | | | NOTES: | | | |
| | | | | | | | | MOD. NO. F10 | | | |
| | | | | | | | | CAD SYSTEM ORIGINAL DO NOT CHANGE MANUALLY. | | | |
| | | | | | | | | SQUARE D COMPANY | | | |
| | | | | | | | | TITLE CONNECTION DIAGRAM | | | |
| | | | | | | | | START-STOP, FAST-STOP, MAN. SPD. | | | |
| | | | | | | | | CLASS _____ TYPE _____ FORM _____ SER. _____ | | | |
| REF. | 8804-3, 1, 10 | DATE ORN. | DATE REL. | DRG. NO. | MASTER | | | | | | |
| REV. ASSEM. | | 6-85 | | | 11.4.3 | | | | | | |
| PROJ. NO. | | DRN. | CRD. | APP'D | OF | | | | | | |

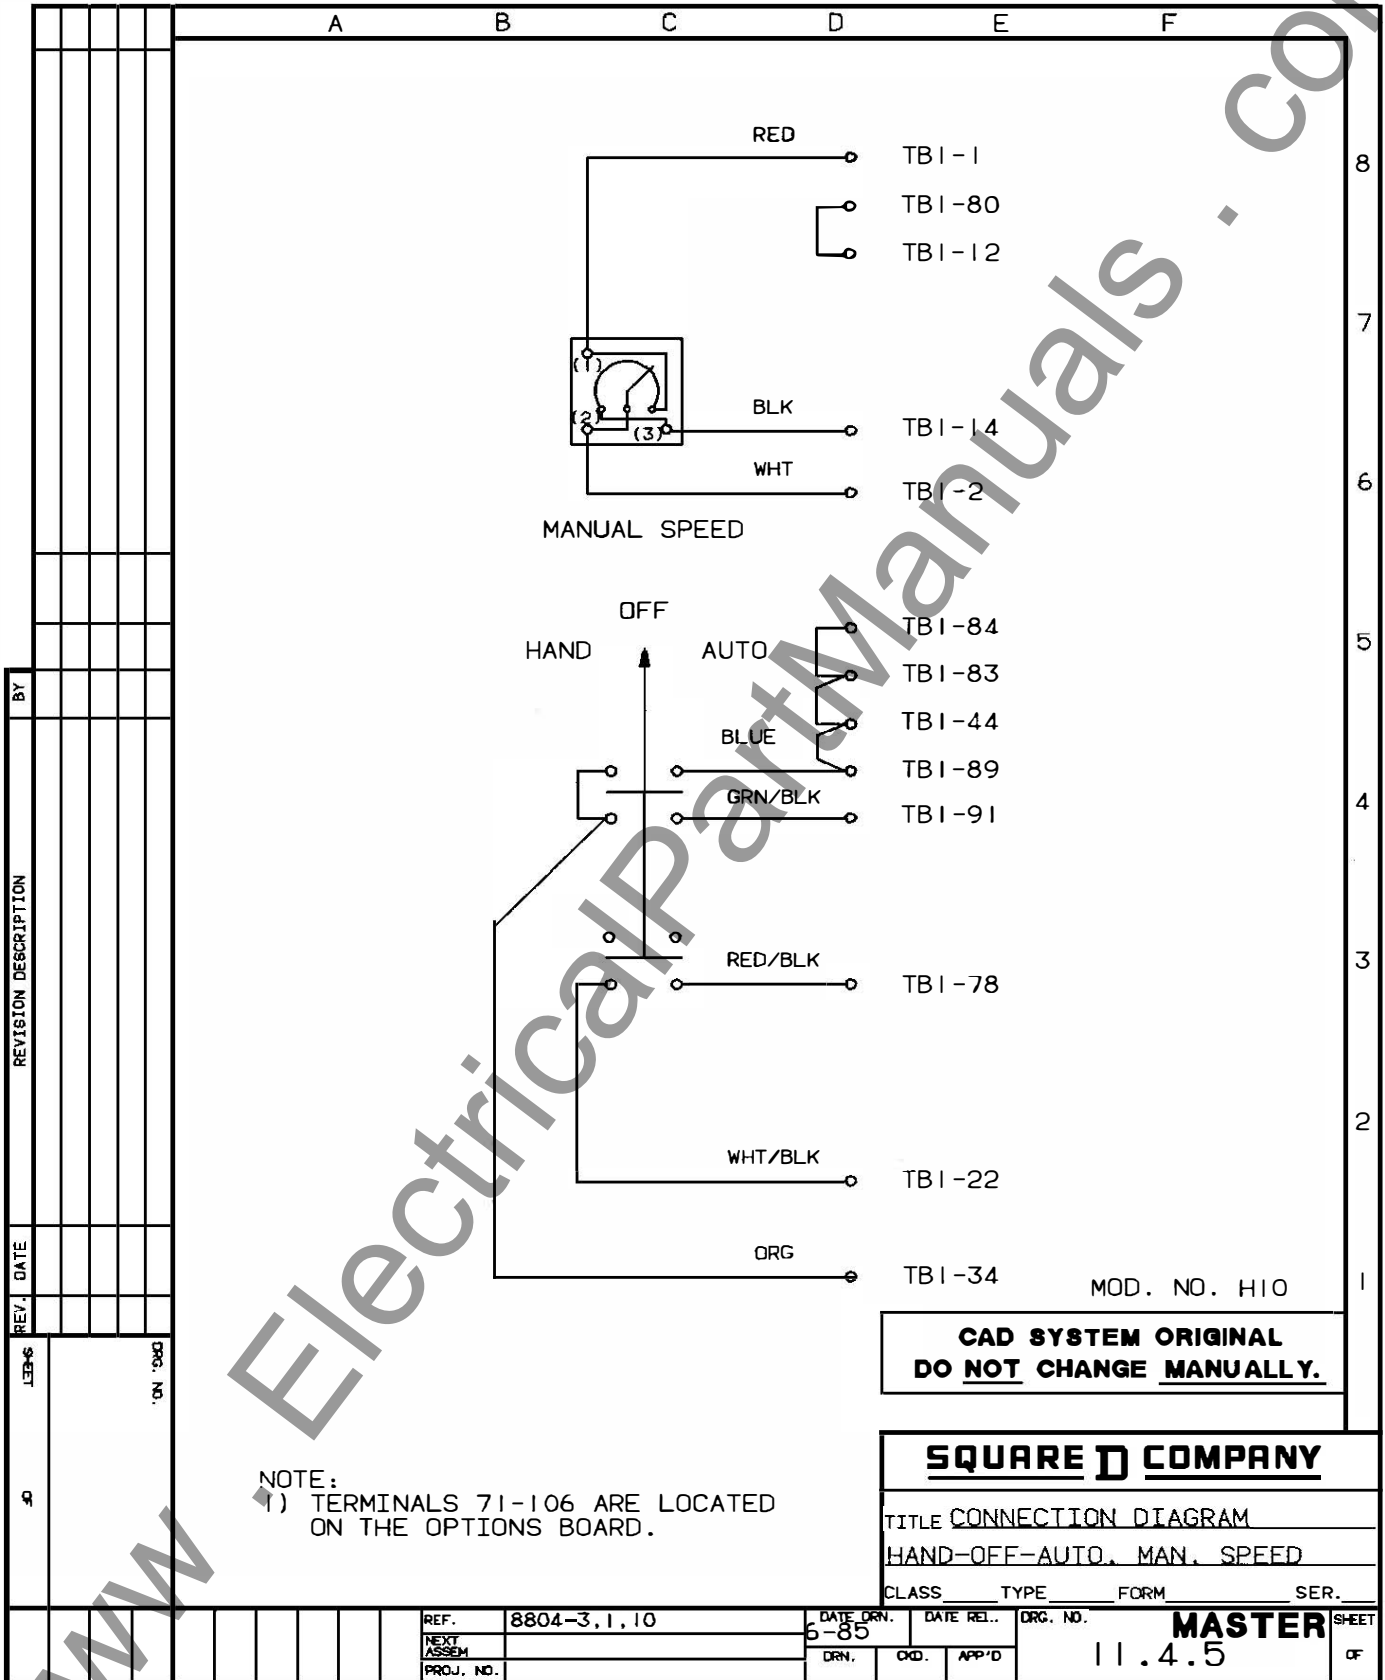

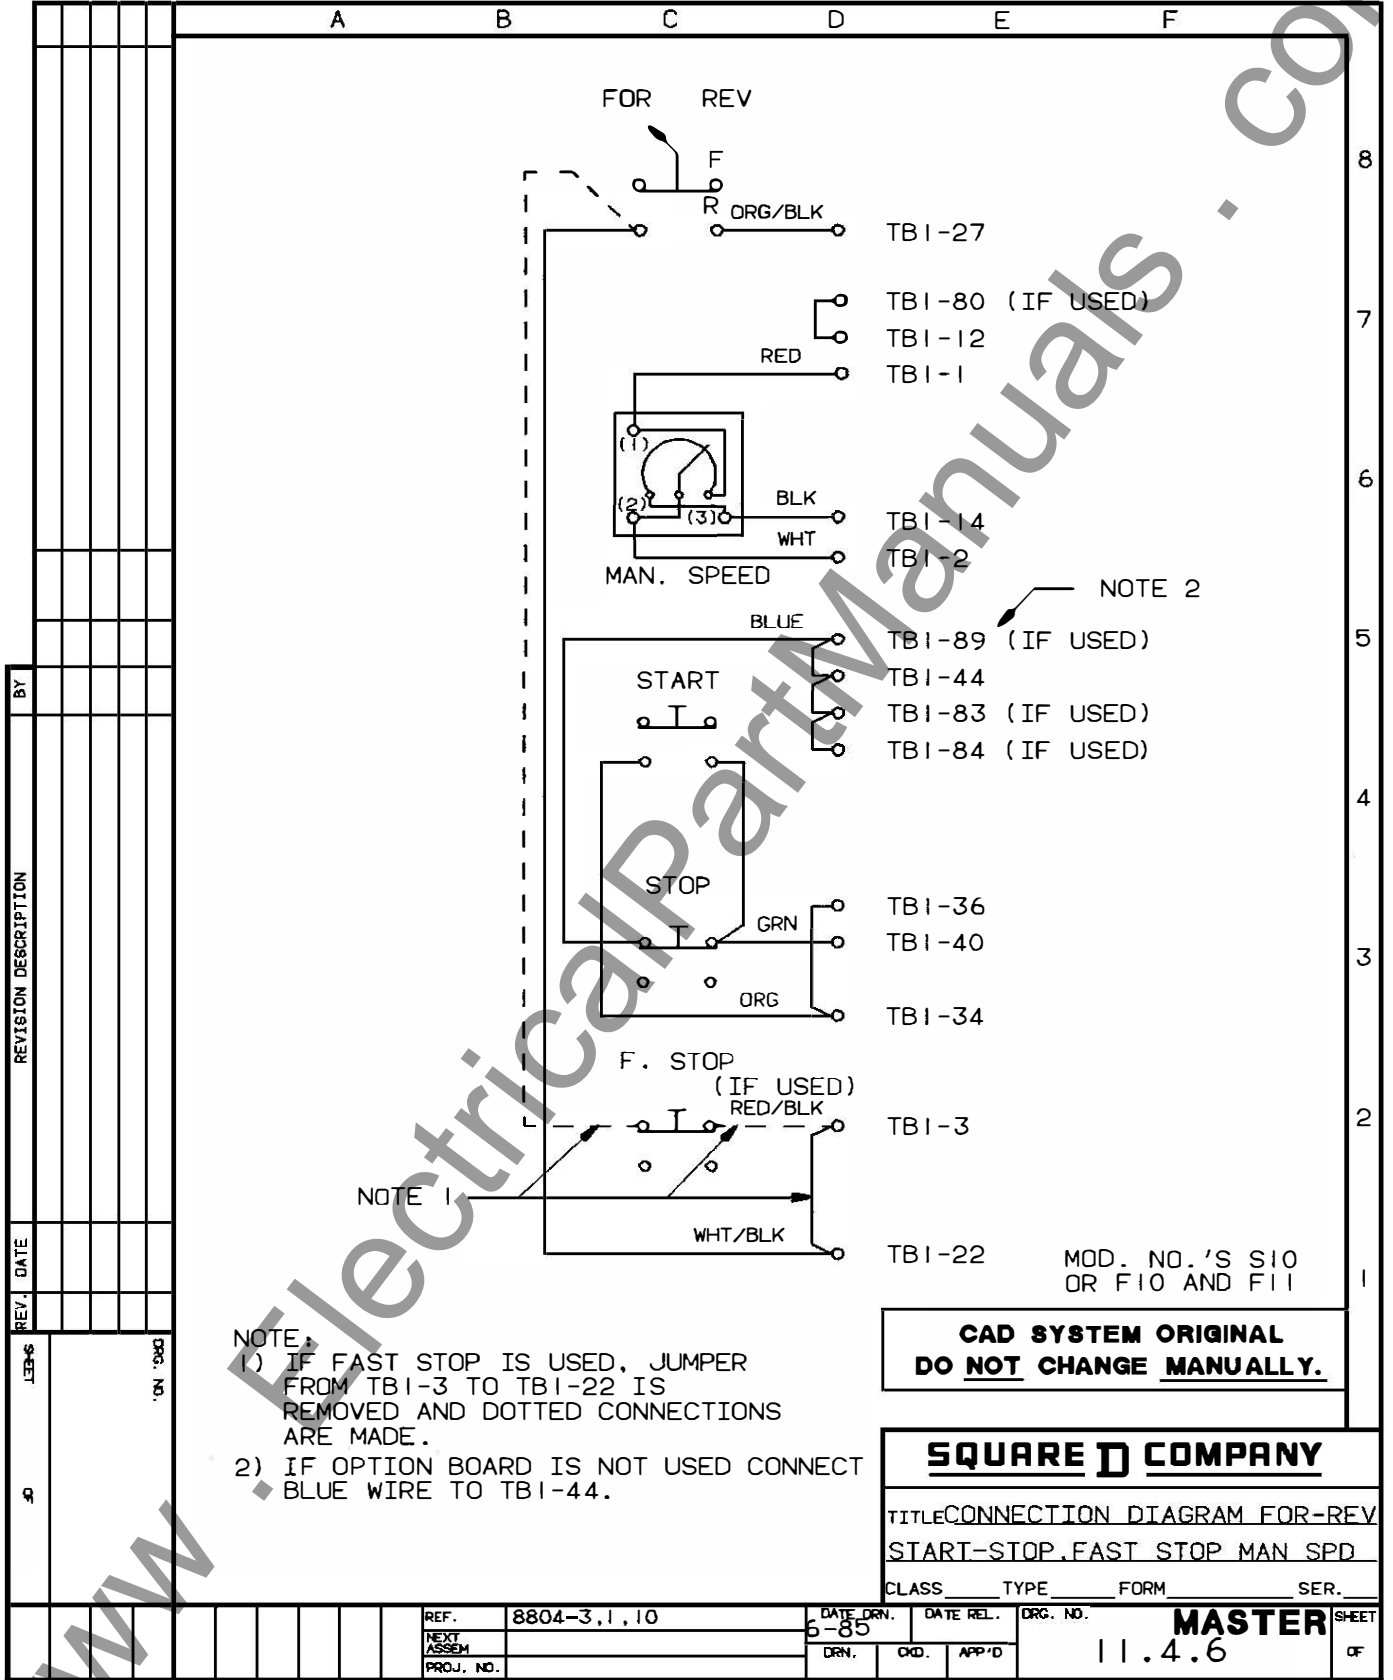

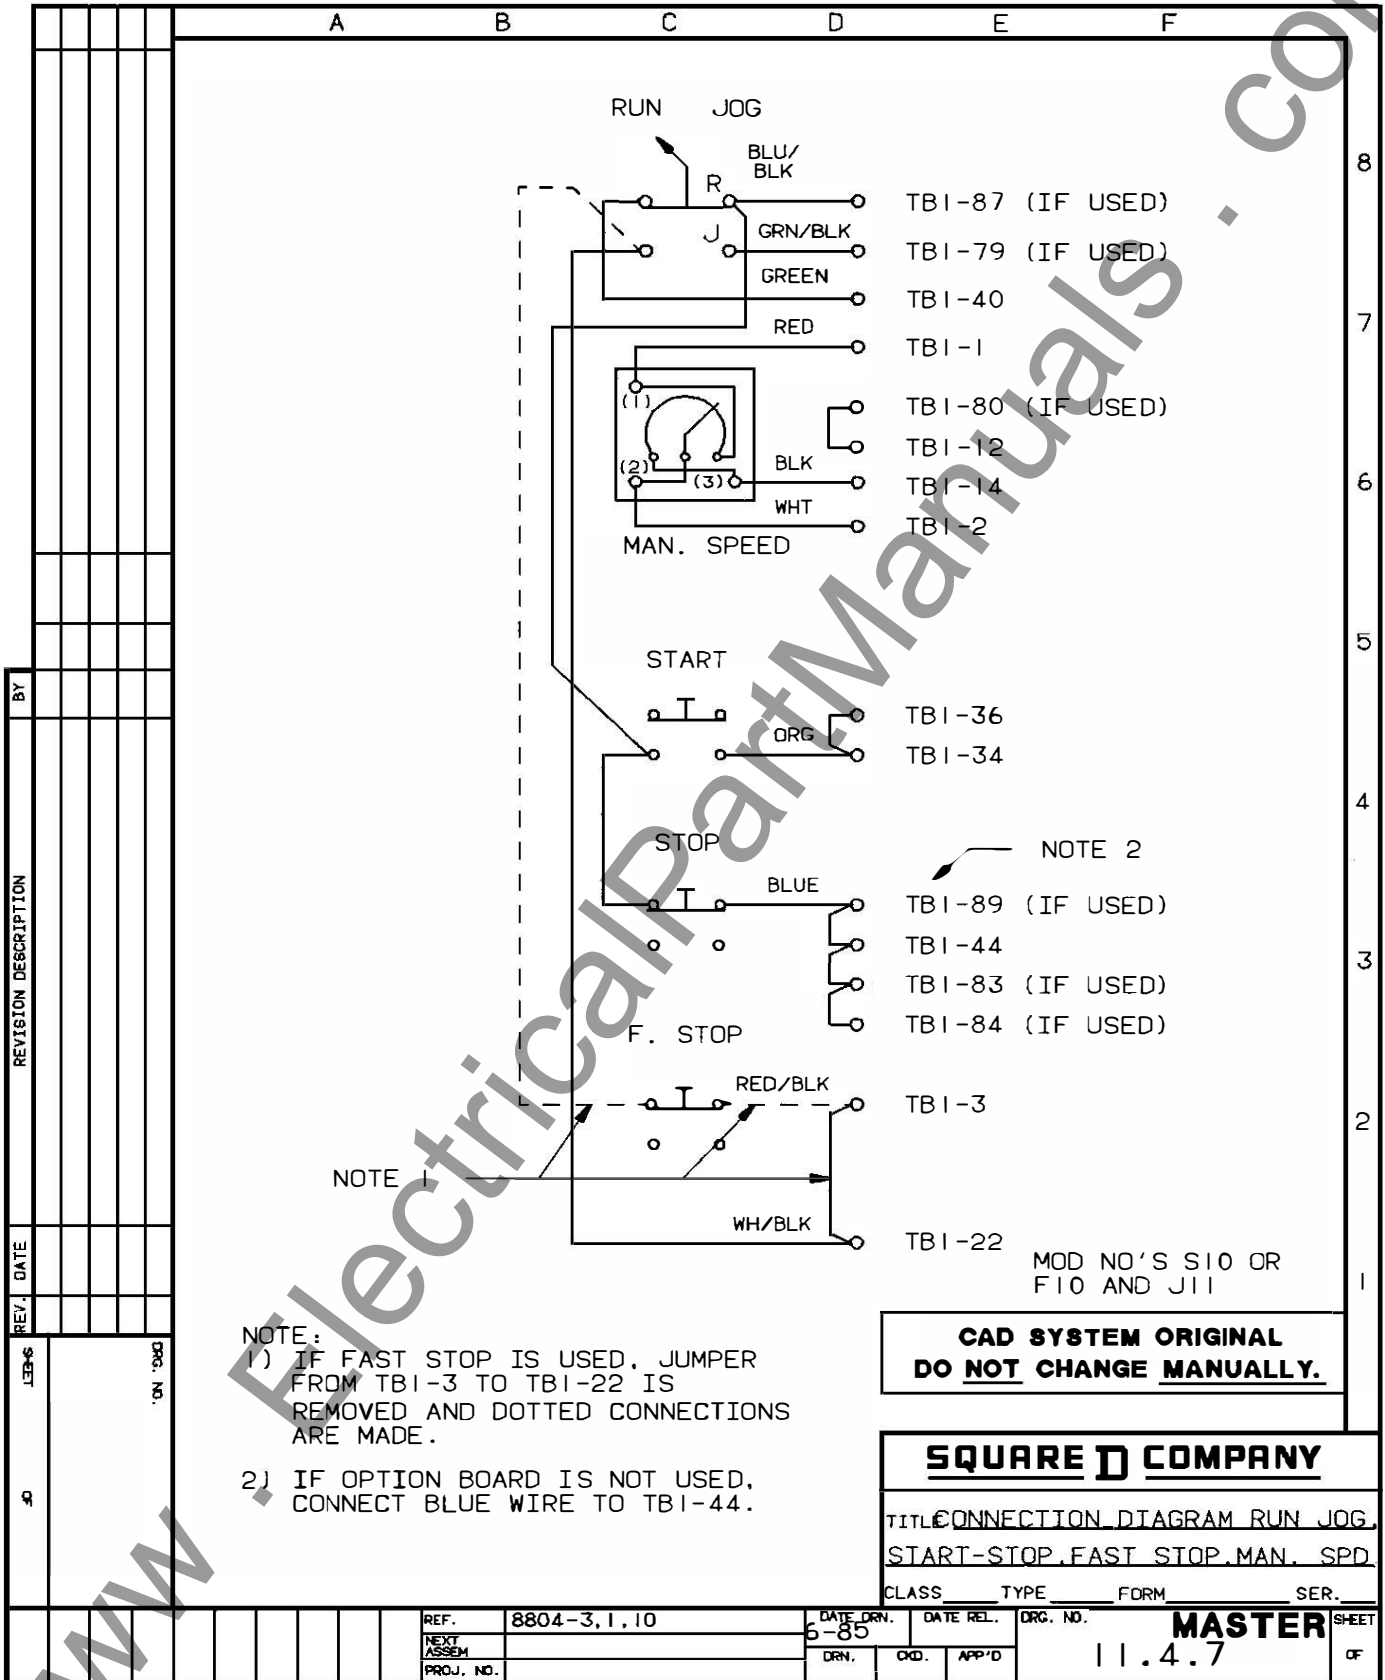

NOTE:
1) IF FAST STOP IS USED, JUMPER FROM TB1-3 TO TB1-22 IS REMOVED AND DOTTED CONNECTIONS ARE MADE.

2) IF OPTION BOARD IS NOT USED, CONNECT BLUE WIRE TO TB1-44.

REF. 8804-3, 1, 10

NEXT ASSEM

PROJ. NO.

DATE DRN. 5-85

DRN.

DATE REL.

ORD.

APP'D


DRG. NO.

MASTER

11.4.7

SHEET

OF

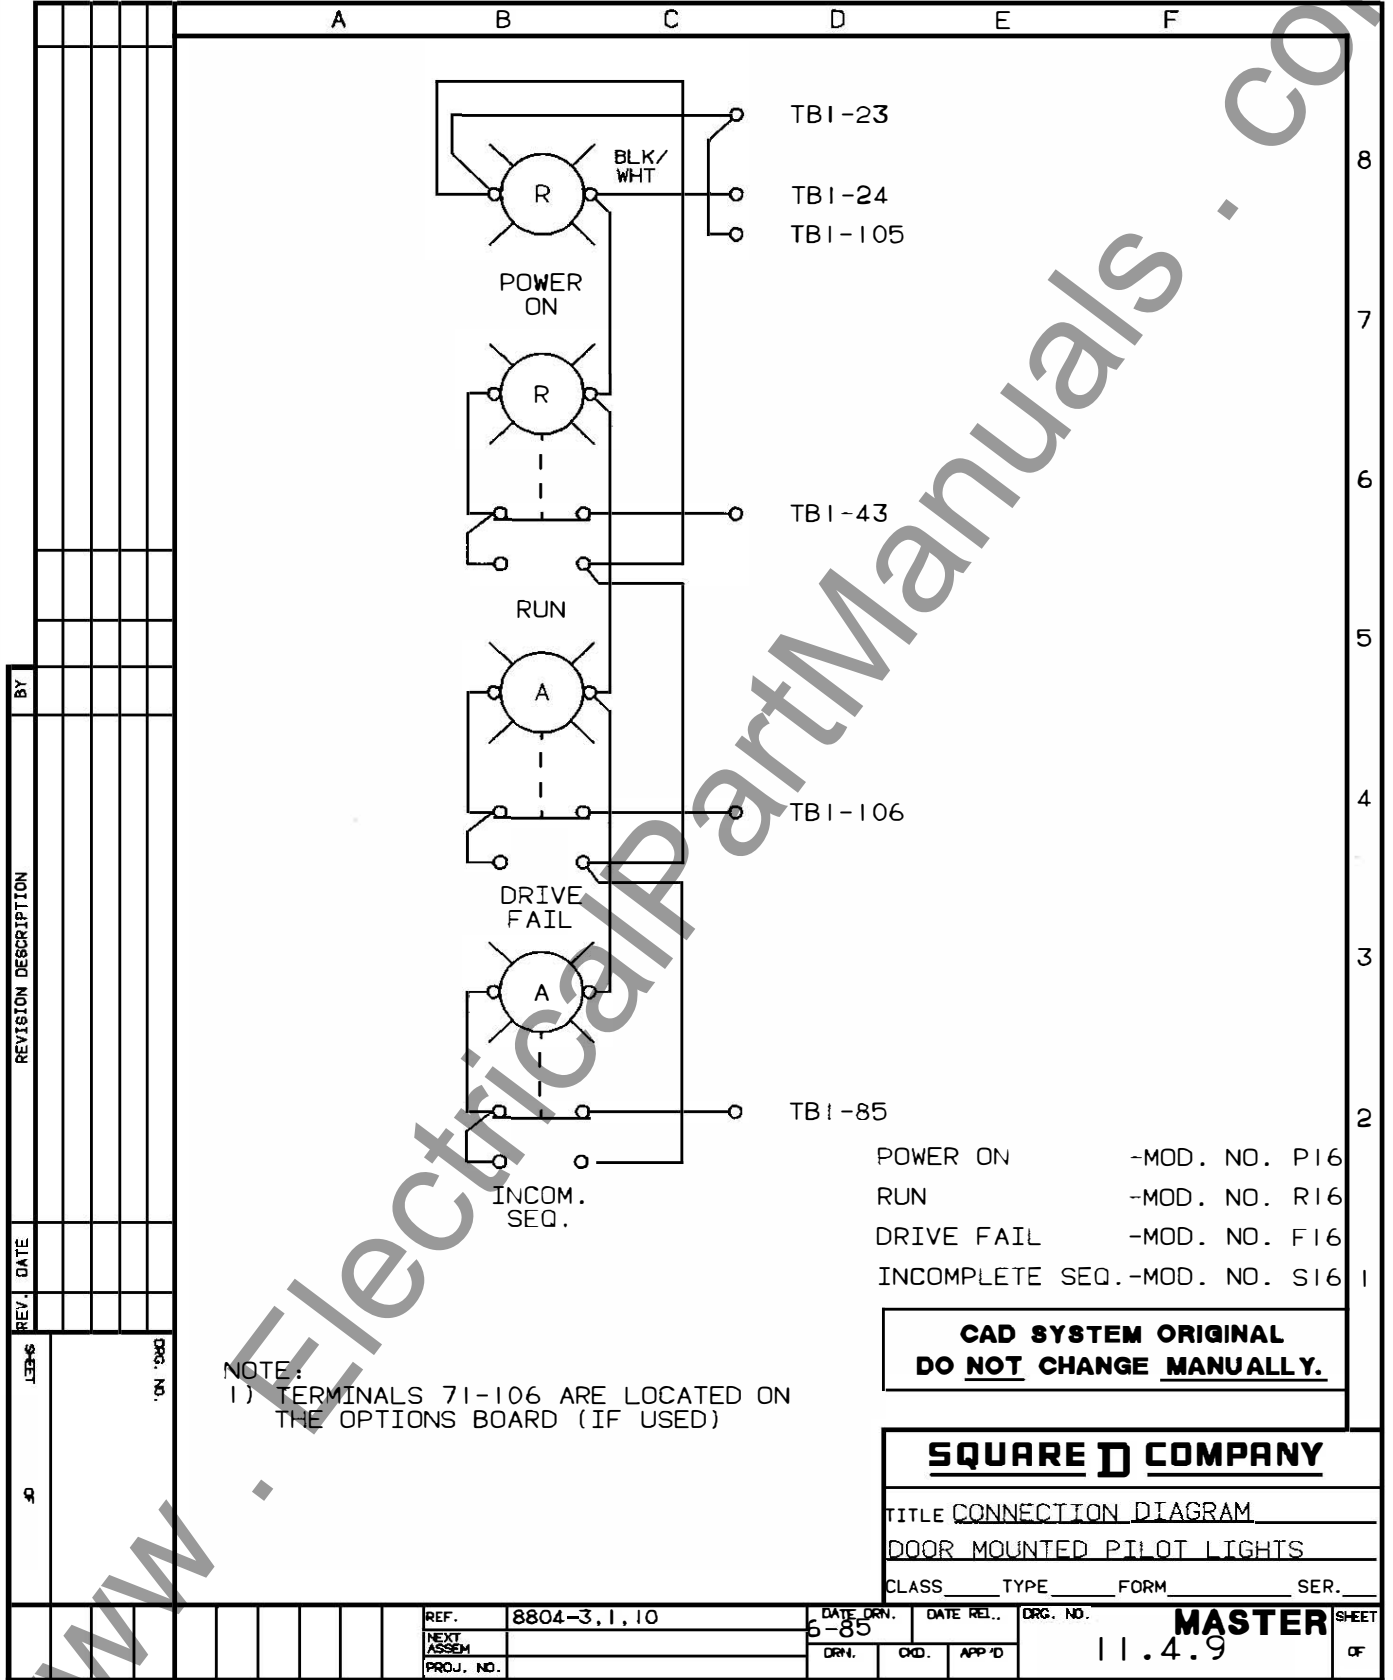

NOTE:
1) TERMINALS 71-106 ARE LOCATED ON THE OPTIONS BOARD (IF USED)

CAD SYSTEM ORIGINAL
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY
TITLE CONNECTION DIAGRAM
DOOR MOUNTED PILOT LIGHTS
CLASS TYPE FORM SER.

MASTER SHEET
OF


REF. 8804-3,1,10
NEXT ASSEM.
PROJ. NO.
DATE DRN. 5-85
DATE REL.
DRN. CND. APP'D

| REV. | DATE | BY | REVISION DESCRIPTION |
|------|------|----|----------------------|
| 1 | | | |
| 2 | | | |
| 3 | | | |
| 4 | | | |
| 5 | | | |
| 6 | | | |
| 7 | | | |
| 8 | | | |

MANUAL SPEED, START-STOP

CONTROL STATION (REAR VIEW)

MAN. SPEED

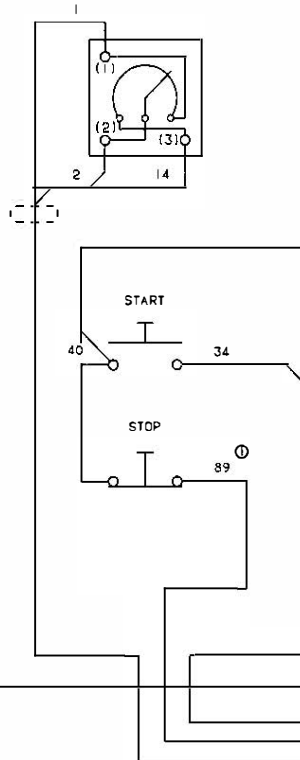

ADJUSTABLE FREQUENCY CONTROLLER (FRONT VIEW)

OPTIONS P.W.B. ASS'Y (IF USED)

71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88

89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106

MAIN CONTROL BOARD

TB1
1
2
3
4
5
6
7
8
9
10
11
12
13
14

15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35

36
37
38
39
40
41
42
43
44
45
46
47

LOW LEVEL CONTROL WIRING. THESE CONDUCTORS MAY BE ROUTED IN THE SAME RACEWAY. MAINTAIN 3" SEPARATION (CONDUIT) OR 12" SEPARATION (TRAY) FROM OTHER TYPES OF POWER OR CONTROL WIRING. ALL CONDUCTORS TO BE #18 AND MINIMUM. SHIELDED CABLE TO BE JACKETED. GROUND SHIELD ONLY WHERE SHOWN. INSULATE OTHER END OF SHIELDED CABLE.

NOTES:
① IF OPTION BOARD NOT USED WIRE DIRECT TO TB1-44

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE CONNECTION DIAGRAM TYPE CA-31

REMOTE OPERATOR STATION


CLASS TYPE FORM SER.

DATE DES. 6-85 DATE MOD. SER. NO. MASTER 11.5.1

REFERENCE 8804-3, 1, 10
NEXT ASSEM.
BY PROJ. NO.

REV. DATE
A 10-6-86
REV. DATE

REVISION DESCRIPTION

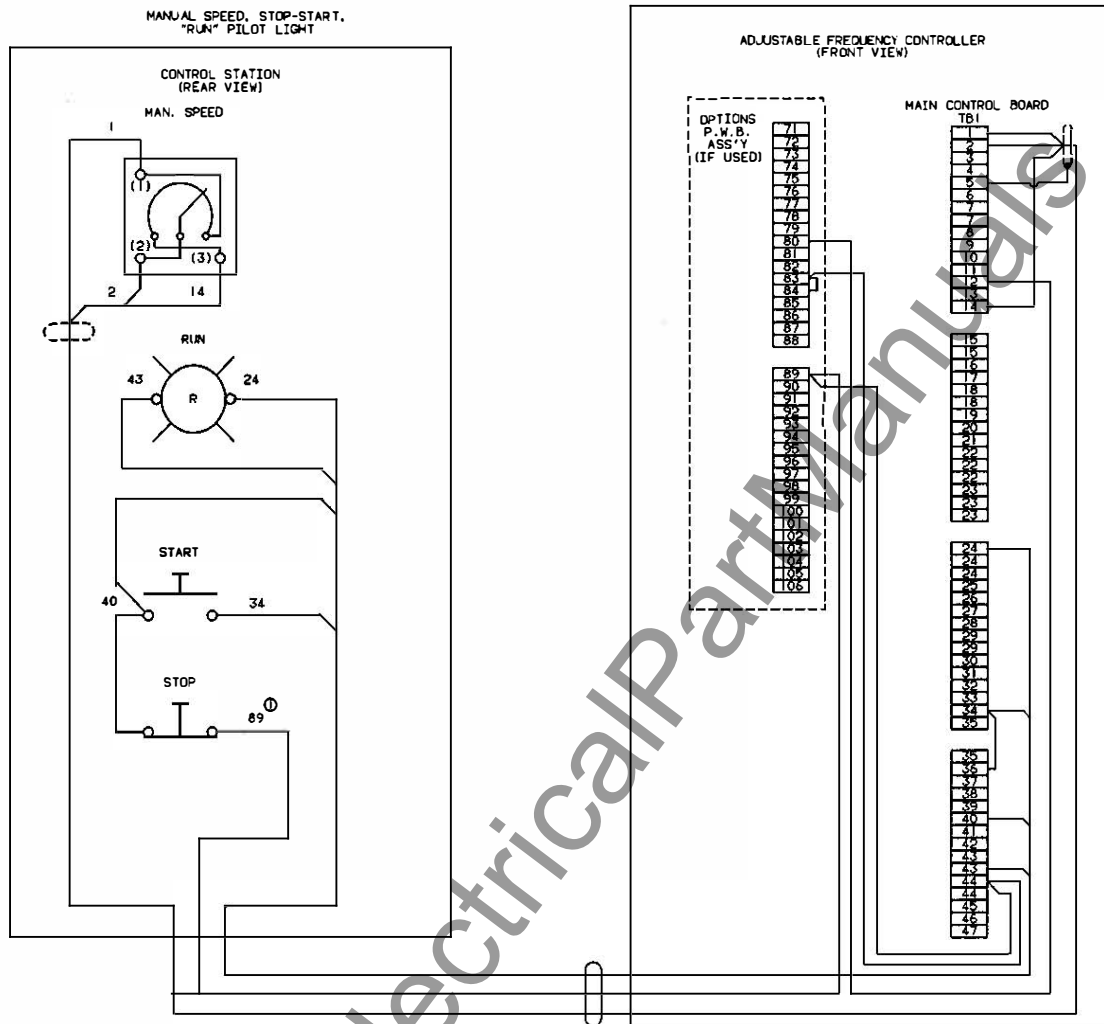

LOW LEVEL CONTROL WIRING. THESE CONDUCTORS MAY BE ROUTED IN THE SAME RACEWAY. MAINTAIN 3" SEPARATION (CONDUIT) OR 12" SEPARATION (TRAY) FROM OTHER TYPES OF POWER OR CONTROL WIRING. ALL CONDUCTORS TO BE #18 AWG MINIMUM. SHIELDED CABLE TO BE JACKETED. GROUND SHIELD ONLY WHERE SHOWN. INSULATE OTHER END OF SHIELDED CABLE.

NOTES:
① IF OPTION BOARD NOT USED WIRE DIRECT TO TBI-44

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE CONNECTION DIAGRAM TYPE CA-41

REMOTE OPERATOR STATION

CLASS TYPE FORM SER.

MASTER

11.5.2

SHEET

OF

REFERENCE 8804-3, 1, 10

DATE ORG.

5-85

DATE REL.

DATE

DATE

DATE

DATE

REV. DATE

11-7-84

REVISION DESCRIPTION

BY

PROJ. NO.

DATE

DATE

DATE

DATE

11.5.2

13

12

11

10

9

8

7

6

5


4

3

2

1

1729.1

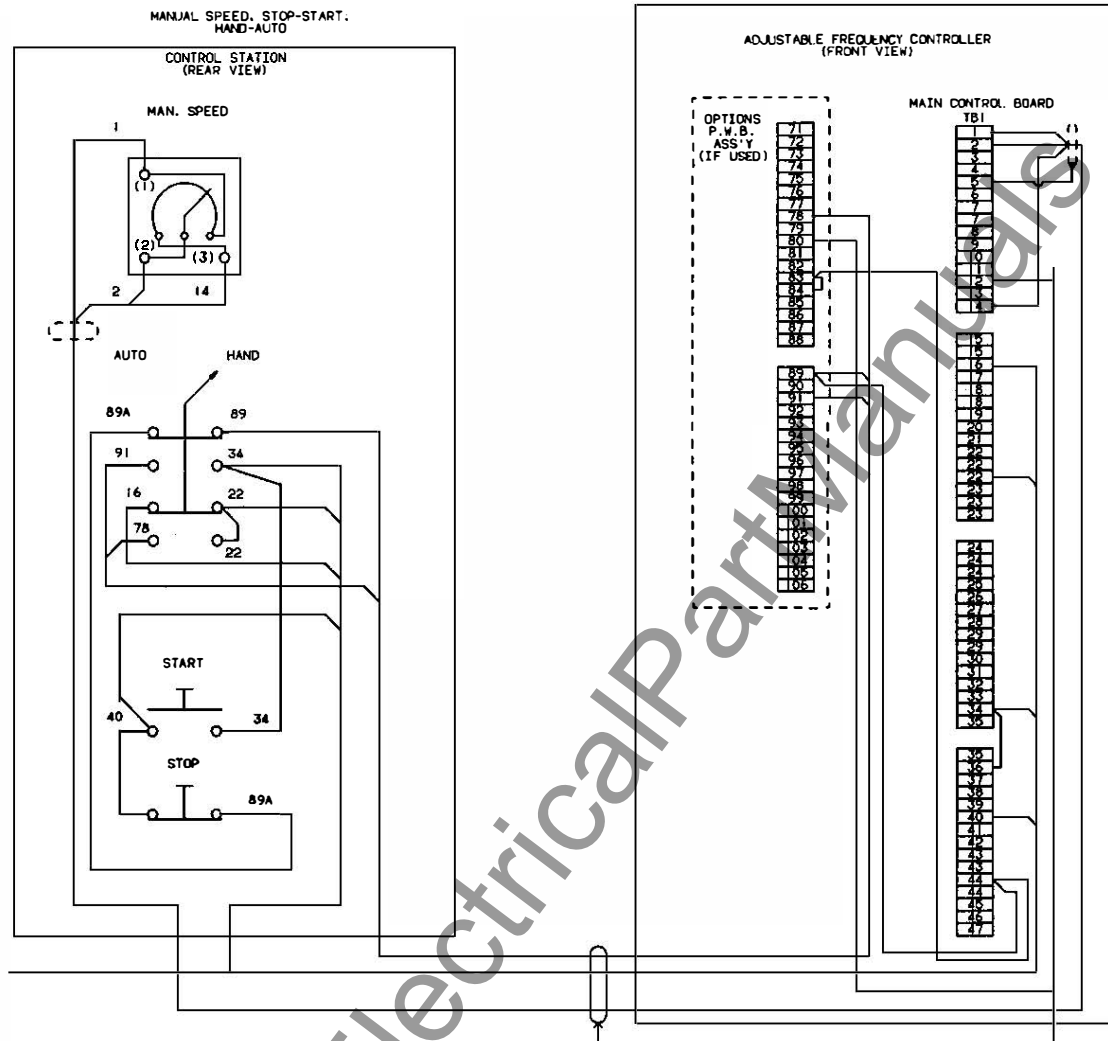

LOW LEVEL CONTROL WIRING. THESE CONDUCTORS MAY BE ROUTED IN THE SAME RACEWAY. MAINTAIN 3" SEPARATION (CONDUIT) OR 12" SEPARATION (TRAY) FROM OTHER TYPES OF POWER OR CONTROL WIRING. ALL CONDUCTORS TO BE #18 AWG MINIMUM. SHIELDED CABLE TO BE JACKETED, GROUND SHIELD ONLY WHERE SHOWN. INSULATE OTHER END OF SHIELDED CABLE.

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE CONNECTION DIAGRAM TYPE CA-42

REMOTE OPERATOR STATION

CLASS TYPE FORM SER.

MASTER

11.5.3

| | | | | | | | |
|----------------------|-------------|-----------|------|-----------|----------|--------|------|
| REFERENCE | 8804-3,1,10 | DATE DES. | 6-85 | DATE REL. | DES. NO. | 11.5.3 | 1723 |
| NEXT ASS'Y. | | BY | | CHK. | | | |
| PROJ. NO. | | REV. | A | DATE | 10-6-86 | | |
| REVISION DESCRIPTION | | | | | | | |

11.5.3

13

12

11

10

9

8

7

6



5

4

3

2

1

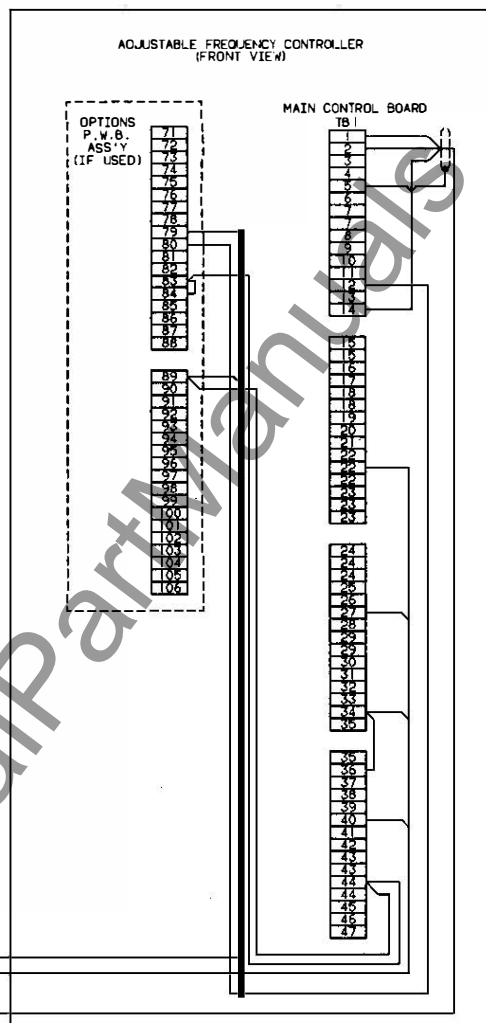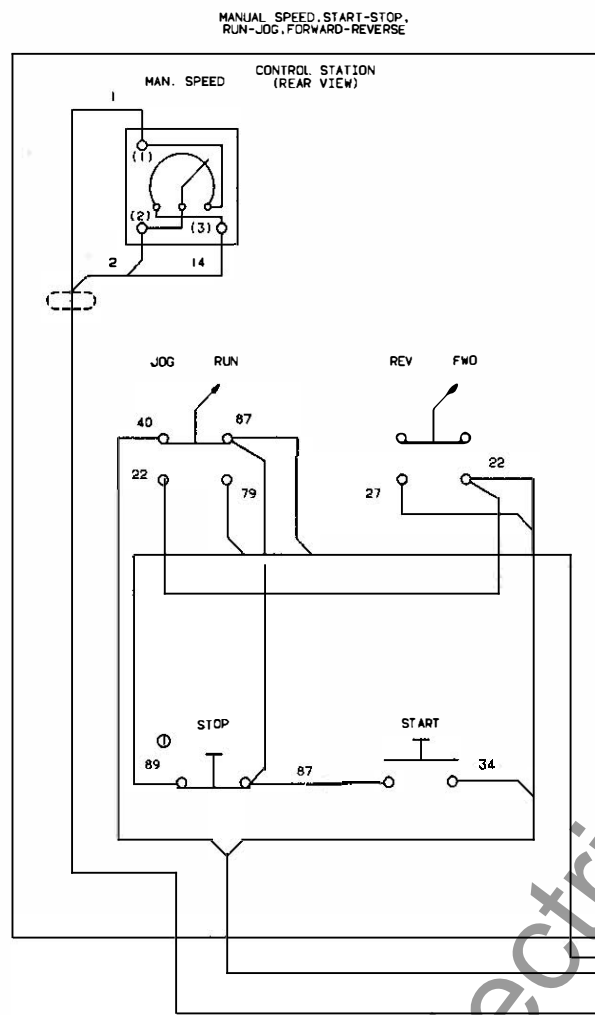

LOW LEVEL CONTROL WIRING. THESE CONDUCTORS MAY BE ROUTED IN THE SAME RACEWAY. MAINTAIN 3" SEPARATION (CONDUIT) OR 12" SEPARATION (TRAY) FROM OTHER TYPES OF POWER OR CONTROL WIRING. ALL CONDUCTORS TO BE #18 AWG MINIMUM. SHIELDED CABLE TO BE JACKETED. GROUND SHIELD ONLY WHERE SHOWN. INSULATE OTHER END OF SHIELDED CABLE.

NOTE:
① IF OPTION BOARD NOT USED WIRE DIRECT TO TB1-44

**CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.**

SQUARE D COMPANY

TITLE CONNECTION DIAGRAM TYPE CA-61

REMOTE OPERATOR STATION

CLASS TYPE FORM SER.

| | | | | | | | | | |
|-------------|-------------|-----------|---------|----------------------|----|----------|--|--------|-------|
| REFERENCE | 8804-3,1,10 | DATE CHG. | 6-85 | DATE REL. | | DRG. NO. | | MASTER | SHEET |
| NEXT ASSEM. | | CHG. | | APPD. | | | | 11.5.6 | 1728 |
| PROJ. NO. | | REV. | DATE | REVISION DESCRIPTION | BY | | | | |
| | | A | 10-7-86 | | | | | | |

11.5.6

13

12

11

10

9

8

7

6


5

4


3

2

MANUAL SPEED, START-STOP,
FORWARD-REVERSE, "RUN" PILOT LIGHT

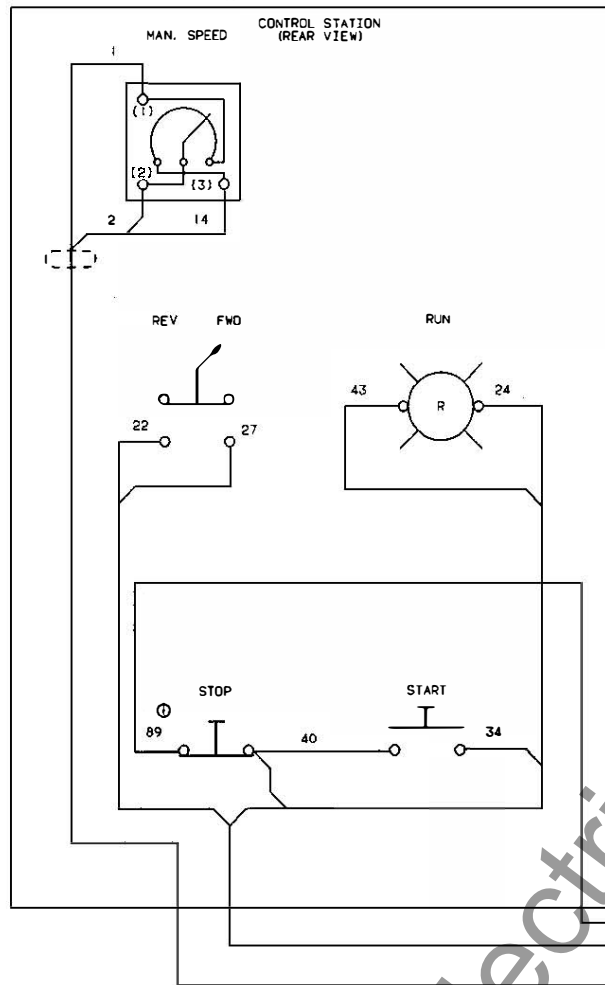

ADJUSTABLE FREQUENCY CONTROLLER
(FRONT VIEW)

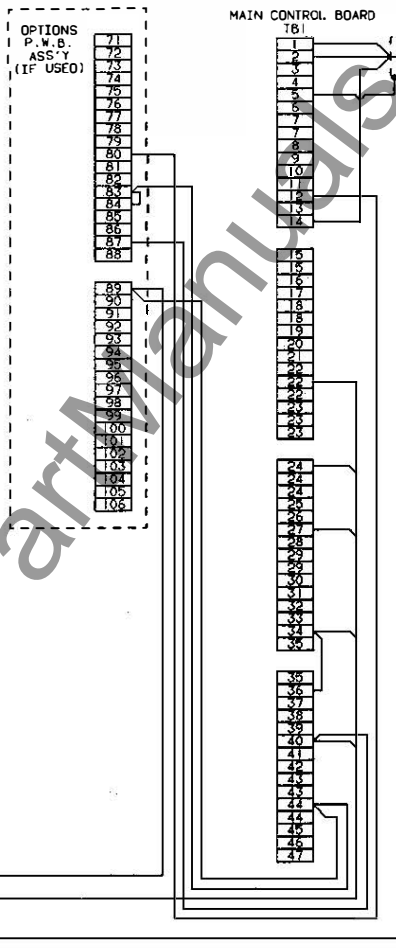

LOW LEVEL CONTROL WIRING. THESE CONDUCTORS MAY BE ROUTED IN THE SAME RACEWAY. MAINTAIN 3" SEPARATION (CONDUIT) OR 12" SEPARATION (TRAY) FROM OTHER TYPES OF POWER OR CONTROL WIRING. ALL CONDUCTORS TO BE #18 AWG MINIMUM. SHIELDED CABLE TO BE JACKETED. GROUND SHIELD ONLY WHERE SHOWN. INSULATE OTHER END OF SHIELDED CABLE.

NOTE:
① IF OPTION BOARD NOT USED WIRE DIRECT TO T81-44

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE CONNECTION DIAGRAM TYPE CA-62

REMOTE OPERATOR STATION

CLASS TYPE FORM SER.

MASTER

11.5.7

| | | | | | | | |
|-------------|---------------|----------------------|------|-----------|--|----------|--|
| REFERENCE | 8804-3, 1, 10 | DATE ORN. | 8-85 | DATE REL. | | DRW. NO. | |
| NEXT ASSEM. | | DRW. | | APPD. | | | |
| REV. | DATE | REVISION DESCRIPTION | BY | PROJ. NO. | | | |
| A | 10-7-86 | | | | | | |

A B C D E F G H I J K L M N O P Q R S T

11.5.7

13

12

11

10

9

8

7

6

5


4

3

2

1

175

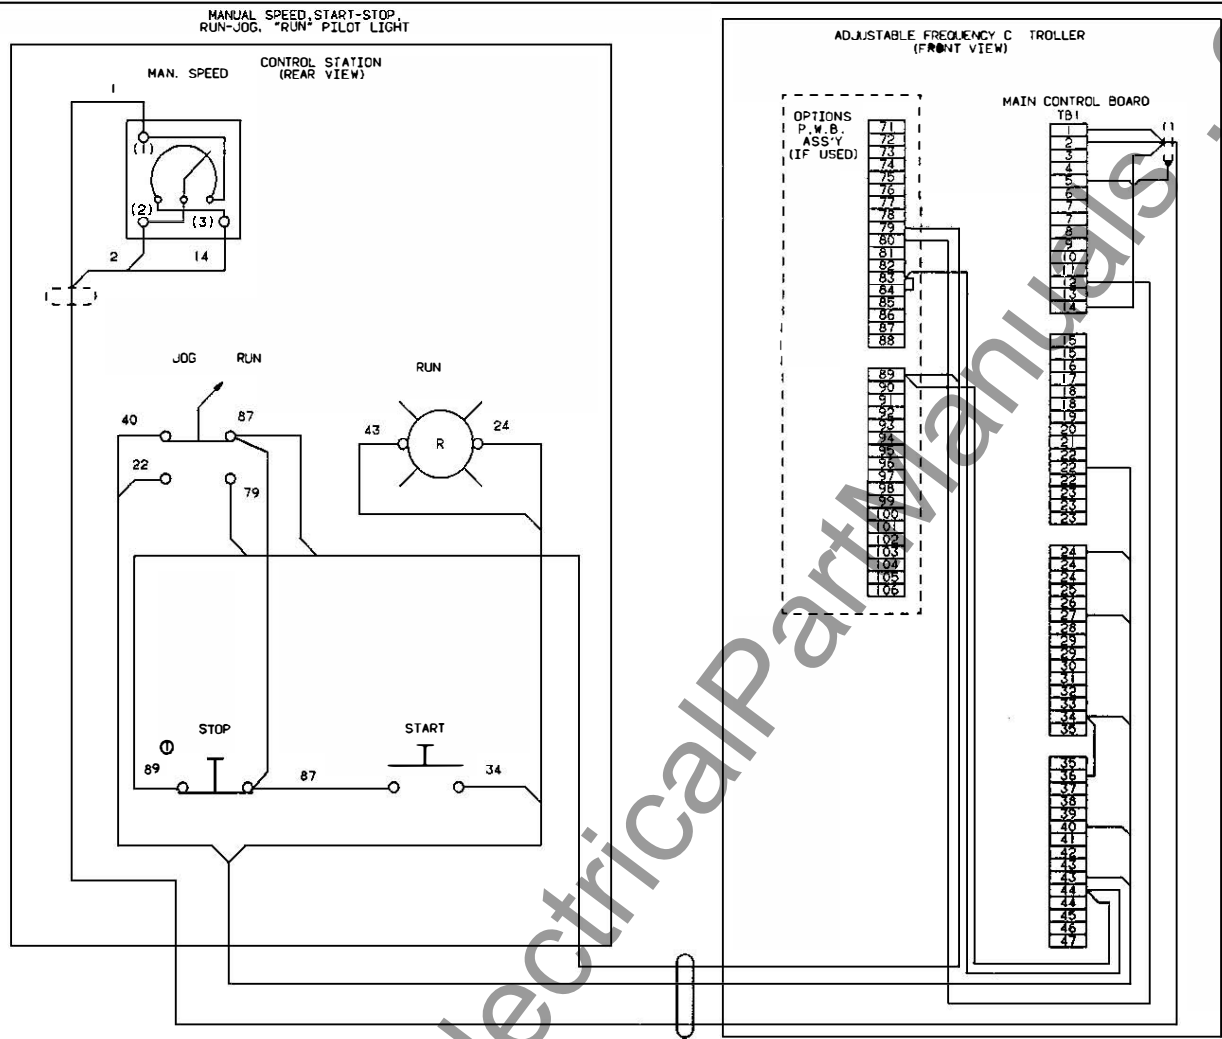


LOW LEVEL CONTROL WIRING. THESE CONDUCTORS MAY BE ROUTED IN THE SAME RACEWAY. MAINTAIN 3" SEPARATION (CONDUIT) OR 12" SEPARATION (TRAY) FROM OTHER TYPES OF POWER OR CONTROL WIRING. ALL CONDUCTORS TO BE #18 AWG MINIMUM. SHIELDED CABLE TO BE JACKETED. GROUND SHIELD ONLY WHERE SHOWN. INSULATE OTHER END OF SHIELDED CABLE.

NOTES:
 ① IF OPTION BOARD NOT USED WIRE DIRECT TO TB1-44

| | |
|---|----------------------|
| CAD SYSTEM ORIGINAL. DO NOT CHANGE MANUALLY. | |
| SQUARE D COMPANY | |
| TITLE CONNECTION DIAGRAM TYPE CA-63 | |
| REMOTE OPERATOR STATION | |
| CLASS | TYPE FORM SER. |
| 8804-3, 1, 10 | 5-85 |
| REV. DATE | REVISION DESCRIPTION |
| A 10-7-85 | |
| BY | PPG- NO. |
| DATE | DATE |
| 11.5.8 | MASTER |

| | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| A | B | C | D | E | F | G | H | I | J | K | L | M | N | O | P | Q | R | S | T |
| | | | | | | | | | | | | | | | | | | | |

11.5.8
13
12
11
10
9
8
7
6
5
4
3
2

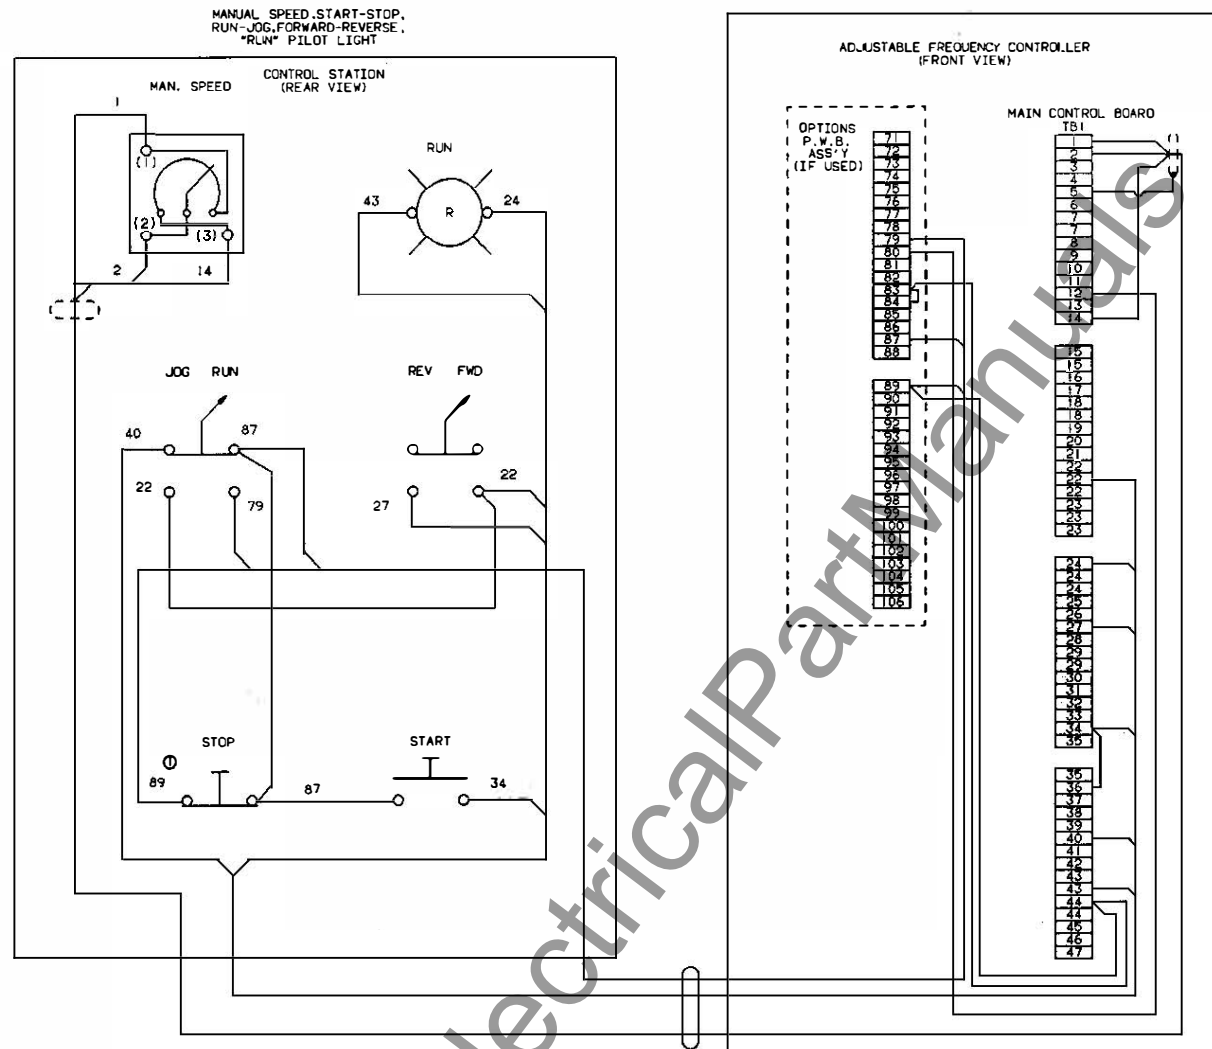

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY


TITLE CONNECTION DIAGRAM TYPE CA-64

REMOTE OPERATOR STATION

CLASS TYPE FORM SER.

MASTER

11.5.9

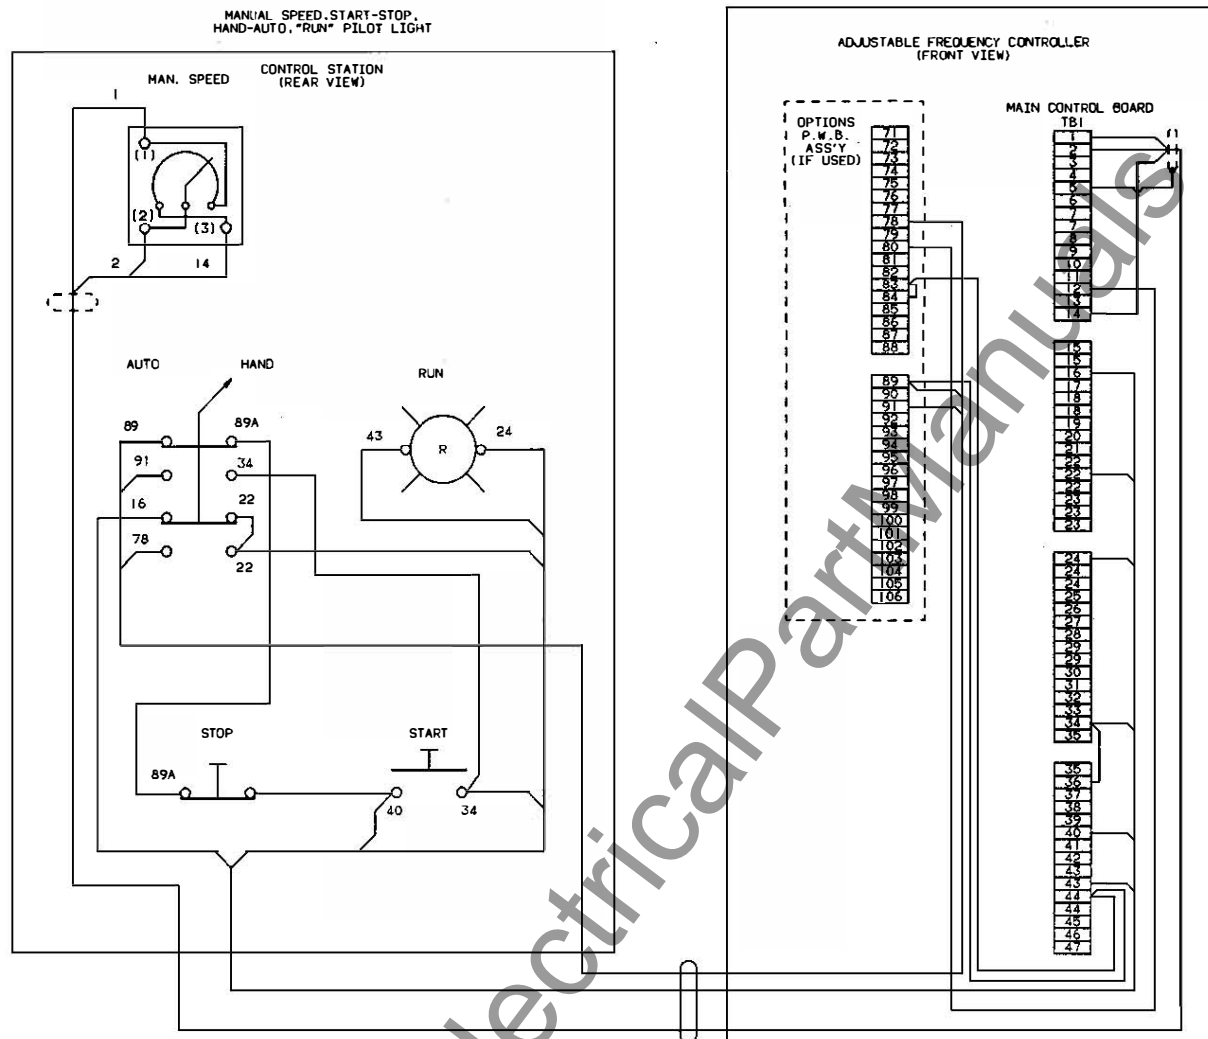

LOW LEVEL CONTROL WIRING. THESE CONDUCTORS MAY BE ROUTED IN THE SAME RACEWAY, MAINTAIN 3" SEPARATION (CONDUIT) OR 12" SEPARATION (TRAY) FROM OTHER TYPES OF POWER OR CONTROL WIRING. ALL CONDUCTORS TO BE #18 AWG MINIMUM. SHIELDED CABLE TO BE JACKETED. GROUND SHIELD ONLY WHERE SHOWN. INSULATE OTHER END OF SHIELDED CABLE.

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE CONNECTION DIAGRAM TYPE CA-65

REMOTE OPERATOR STATION

CLASS TYPE FORM SER

MASTER



11.5.10

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|-------------|-------------|---|-----------|---------|---|----------------------|---|---|----------|---|---|--------|---------|------|---|----|--|--|
| | | | | | | | | | | REFERENCE | 8804-3,1,10 | | DATE CHG. | 6-85 | | DATE REL. | | | DRG. NO. | | | MASTER | | REV. | | | | |
| | | | | | | | | | | NEXT ASSEM. | | | | | | | | | | | | | 11.5.10 | | | | | |
| | | | | | | | | | | PROJ. NO. | | | CHG. | | | CHG. | | | APPRO. | | | | | | | | | |
| | | | | | | | | | | REV. | A | | DATE | 10-7-86 | | REVISION DESCRIPTION | | | | | | | | | | BY | | |
| A | B | C | D | E | F | G | H | I | J | K | L | M | N | O | P | Q | R | S | T | U | V | W | X | Y | Z | | | |

NOTES:
1) LOW LEVEL CONTROL WIRING. THESE CONDUCTORS MAY BE ROUTED IN THE SAME RACEWAY. MAINTAIN 3" SEPARATION (CONDUIT) OR 12" SEPARATION (TRAY) FROM ANY OTHER TYPES OF POWER OR CONTROL WIRING. ALL CONDUCTORS TO BE #18 AWG MINIMUM. SHIELDED CABLE TO BE JACKETED. GROUND SHIELD ONLY WHERE SHOWN. INSULATE OTHER END OF SHIELDED CABLE.

2) ANY INDUCTIVE LOAD (CONTACTOR, SOLENOID VALVE, RELAY, ETC.) SWITCHED BY THESE RELAY CONTACTS MUST HAVE A TRANSIENT SUPPRESSOR ACROSS THE COIL.

3) THE CONTROLLER CAN BE STARTED IN THE AUTO MODE BY AN EXTERNAL CONTACT AS SHOWN OR BY AN EXTERNAL DC VOLTAGE.

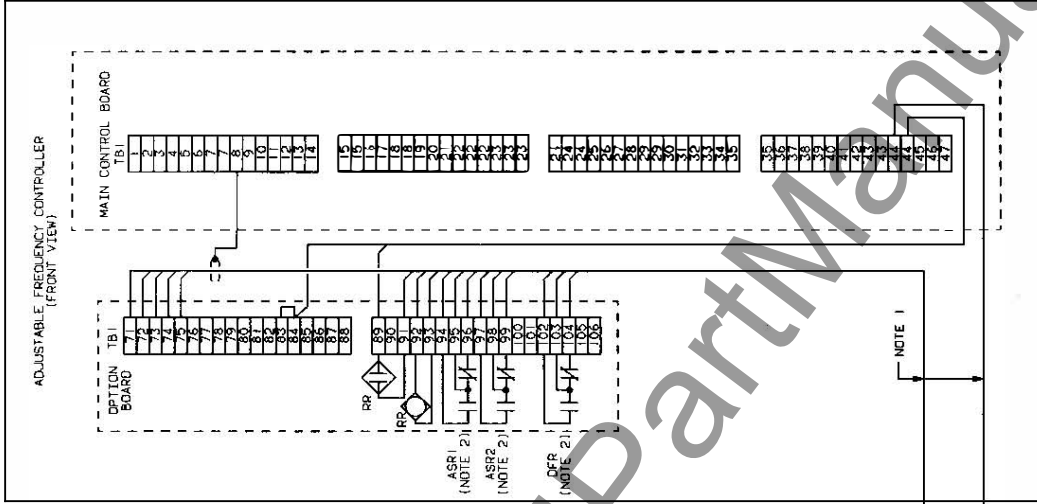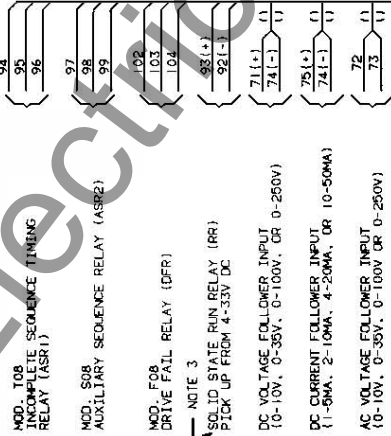

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY


TITLE CONNECTION DIAGRAM OPTIONS BOARD
ISOLATED FOLLOWER

| | | | |
|--------|------|------|--------|
| CLASS. | TYPE | FORM | SER. |
| | | | MASTER |
| | | | 11.6.1 |

| | | | |
|---------------|-------------|----------------------|------|
| REFERENCE | 8804-3.1.10 | DATE | 6-85 |
| NEXT ASSEMBLY | | BY | |
| PROJ. NO. | | REVISION DESCRIPTION | |
| | | REV. | DATE |

NOTES:
1) LOW LEVEL CONTROL WIRING. THESE CONDUCTORS MAY BE ROUTED IN THE SAME RACEWAY. MAINTAIN 3" SEPARATION (CONDUIT) OR 12" SEPARATION (TRAY) FROM ANY OTHER TYPES OF POWER OR CONTROL WIRING. ALL CONDUCTORS TO BE #18 AWG MINIMUM. SHIELDED CABLE TO BE JACKETED. GROUND SHIELD ONLY WHERE SHOWN. INSULATE OTHER END OF SHIELDED CABLE.

2) ANY INDUCTIVE LOAD (CONTACTOR, SOLENOID VALVE, RELAY, ETC.) SWITCHED BY THESE RELAY CONTACTS MUST HAVE A TRANSIENT SUPPRESSOR ACROSS THE COIL.

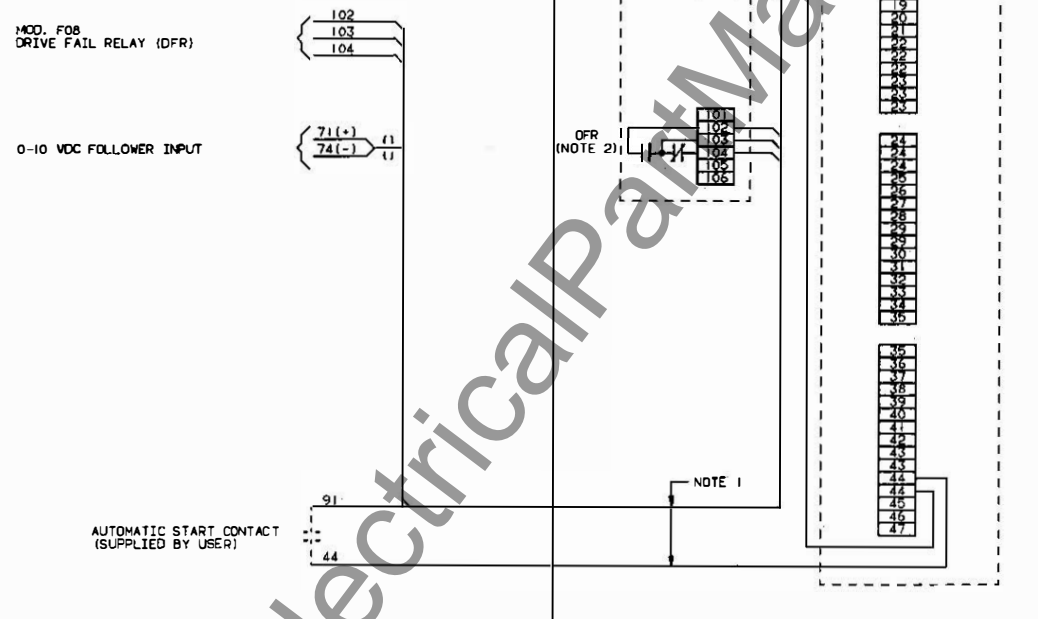

SQUARE D COMPANY

NON-ISOLATED FOLLOWER


CLASS _____ TYPE _____ FORM _____ SER. _____

| | | | |
|-----------|----------|--------|----|
| DATE REC. | CHK. NO. | MASTER | PG |
|-----------|----------|--------|----|

MASTER

11.6.2

| | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|------------|-------------|---|----------------------|------|----|-----------|--|--|----------|--------|--|---------|
| | | | | | | | | | | | | | REFERENCE | 8804-3,1,10 | | DATE CHG. | 6-85 | | DATE REL. | | | DRG. NO. | MASTER | | REV. OF |
| | | | | | | | | | | | | | NEXT ASSEM | | | | | | | | | 11.6.2 | | | |
| | | | | | | | | | | | | | REV. DATE | | | REVISION DESCRIPTION | | BY | PROJ. NO. | | | | | | |
| A | B | C | D | E | F | G | H | I | J | K | L | M | N | O | P | Q | R | S | T | | | | | | |

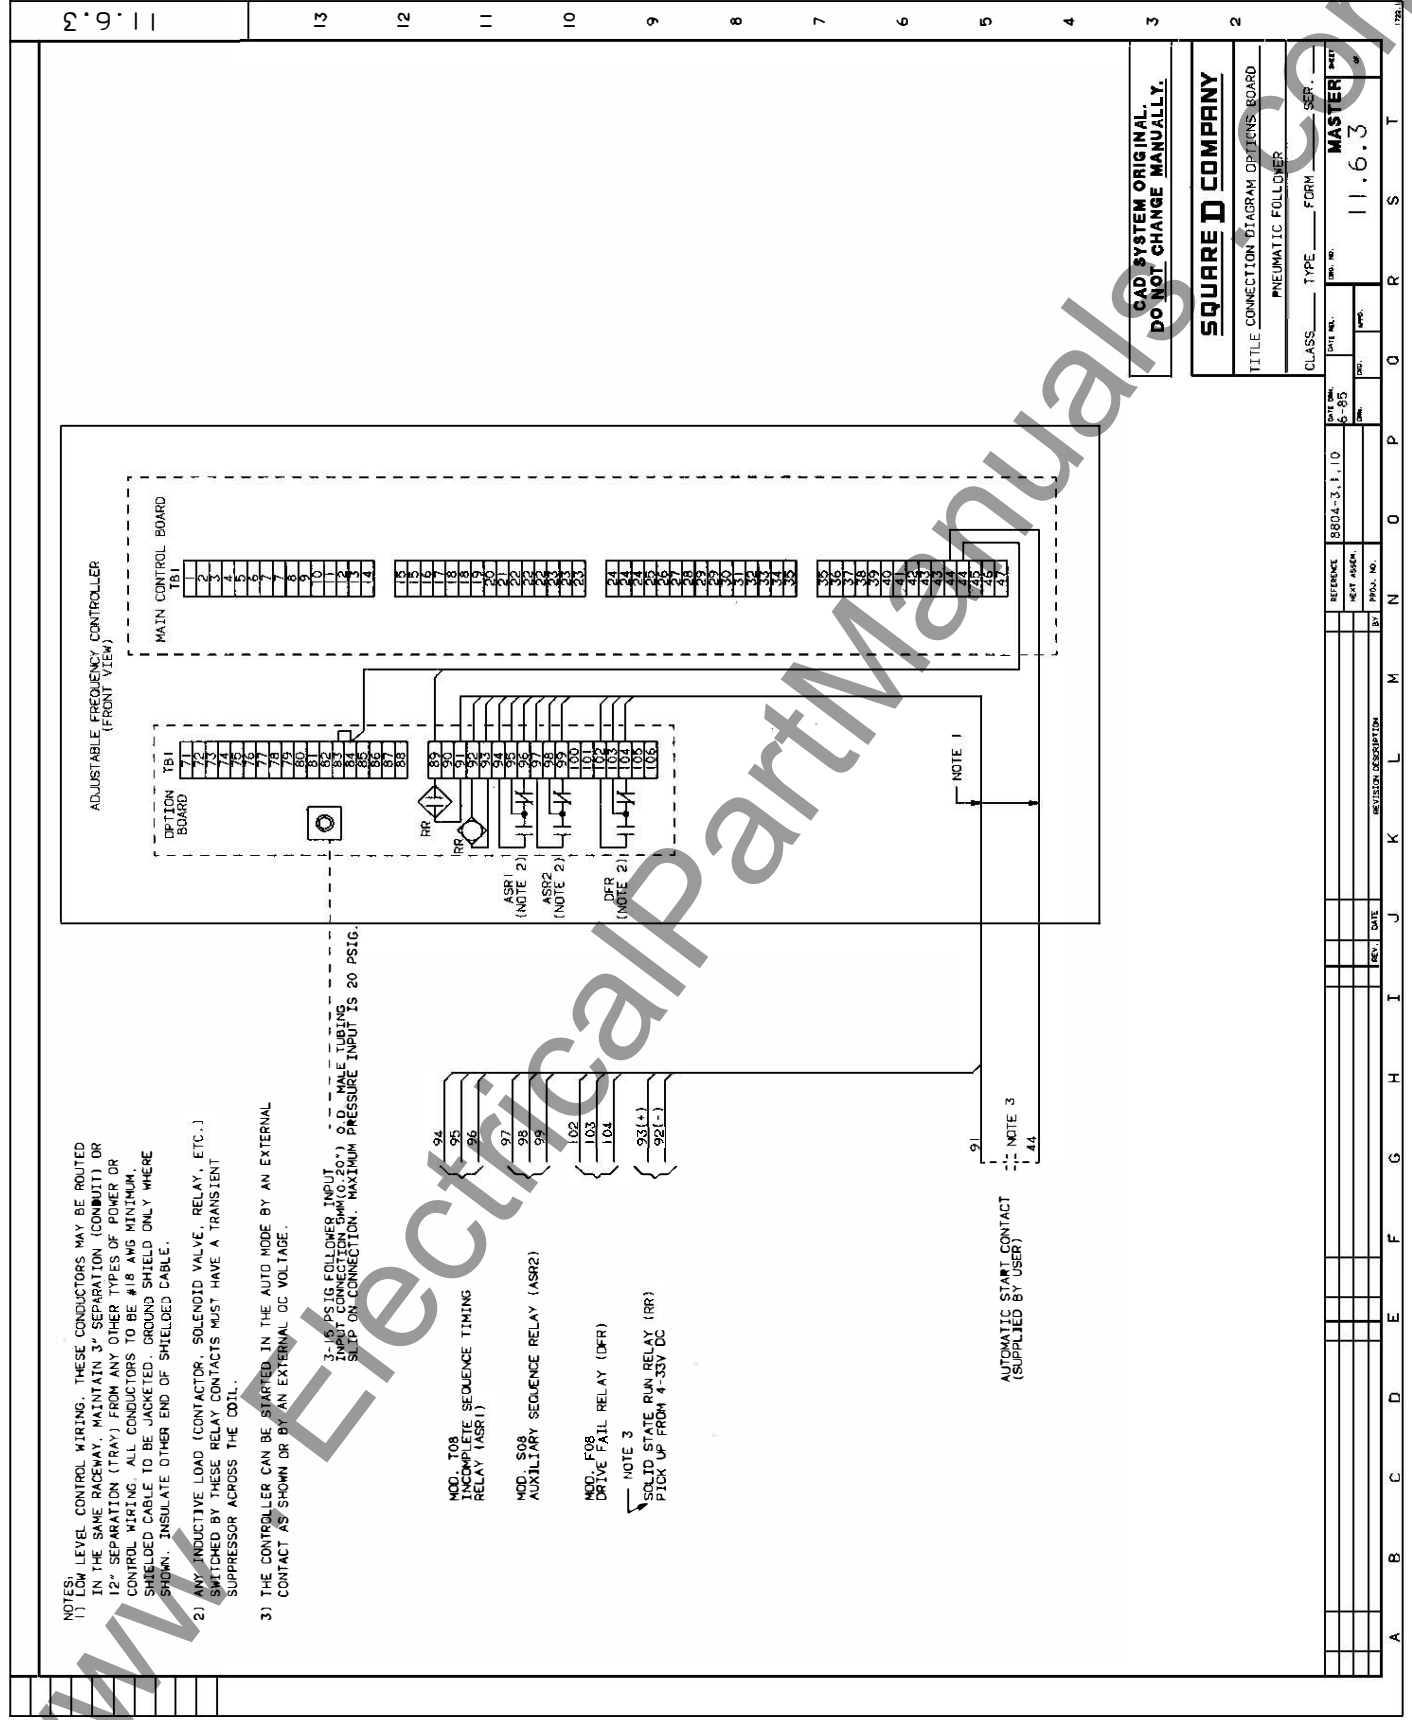

NOTES:
 1) LOW LEVEL CONTROL WIRING. THESE CONDUCTORS MAY BE ROUTED IN THE SAME RACEWAY. MAINTAIN 3" SEPARATION (CONDUIT) OR 12" SEPARATION (TRAY) FROM ANY OTHER TYPES OF POWER OR CONTROL WIRING. ALL CONDUCTORS TO BE #18 AWG. MINIMUM. SHIELDED CABLE TO BE JACKETED. GROUND SHIELD ONLY WHERE SHOWN. INSULATE OTHER END OF SHIELDED CABLE.

2) ANY INDUCTIVE LOAD (CONTACTOR, SOLENOID VALVE, RELAY, ETC.) SWITCHED BY THESE RELAY CONTACTS MUST HAVE A TRANSIENT SUPPRESSOR ACROSS THE COIL.

3) THE CONTROLLER CAN BE STARTED IN THE AUTO MODE BY AN EXTERNAL CONTACT AS SHOWN OR BY AN EXTERNAL DC VOLTAGE.

MOD. T08
 INCOMPLETE SEQUENCE TIMING
 RELAY (ASR1)

MOD. S08
 AUXILIARY SEQUENCE RELAY (ASR2)


MOD. F08
 DRIVE FAIL RELAY (DFR)

NOTE 3
 SOLID STATE RUN RELAY (RR)
 PICK UP FROM 4-33V DC

0-10 VDC FOLLOWER INPUT

AUTOMATIC START CONTACT
 (SUPPLIED BY OTHERS)

ADJUSTABLE FREQUENCY CONTROLLER (FRONT VIEW)

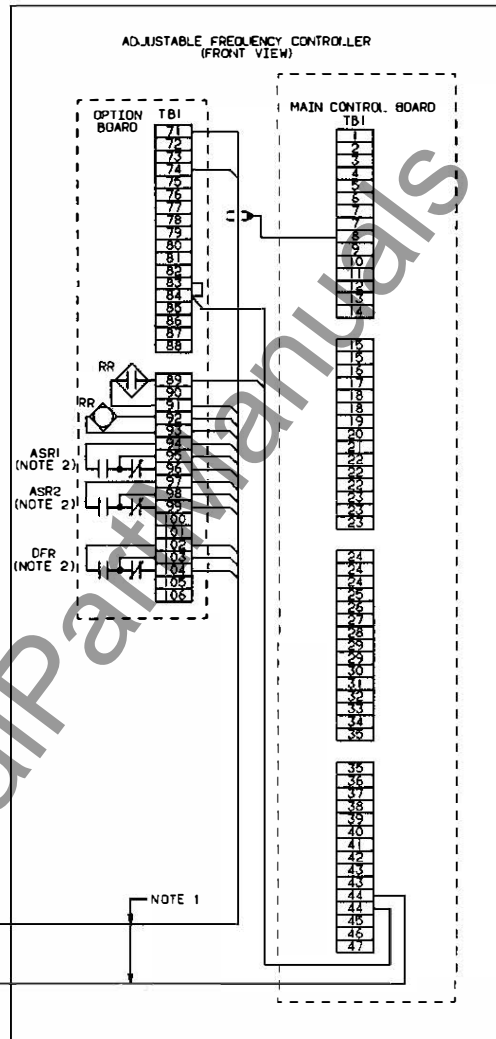

CAD SYSTEM ORIGINAL.
 DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE CONNECTION DIAGRAM OPTIONS BOARD

NON-ISOLATED FOLLOWER W/RR & STR

CLASS TYPE FORM SER

MASTER

11.6.4

| | | | | | | | | | | | | |
|------|------|----------------------|----|-----------|-----------|-------------|-----------|------|----------|----------|--------|--------|
| REV. | DATE | REVISION DESCRIPTION | BY | PROJ. NO. | REFERENCE | 8804-3.1.10 | DATE CHG. | 5-85 | DATE NO. | CHG. NO. | 11.6.4 | 11.6.4 |
|------|------|----------------------|----|-----------|-----------|-------------|-----------|------|----------|----------|--------|--------|

11.7.11

13

12

11

10

9

8

7

6







5

4

3

2

178.1

MAIN CONT OL
PWB (DETAIL)1
2
3
4
5
6
7
8
9
10
11
12
13
1415
15
16
17
18
18
19
20
21
22
22
23
23
2324
24
24
25
26
27
28
29
30
31
32
33
34
3535
36
37
38
39
40
41
42
43
43
44
44
45
46
47MAIN CONTROL
PWB (DETAIL)1
2
3
4
5
6
7
8
9
10
11
12
13
1415
15
16
17
18
18
19
20
21
22
22
23
23
2324
24
24
25
26
27
28
29
30
31
32
33
34
3535
36
37
38
39
40
41
42
43
43
44
44
45
46
47CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE METER CONNECTION DIAGRAM

CLASS TYPE FORM SER.

DATE 11.7.11

MASTER

DATE 11.7.11

REVISION DESCRIPTION


REV DATE




REV DATE

REV DATE

REV DATE

REV DATE

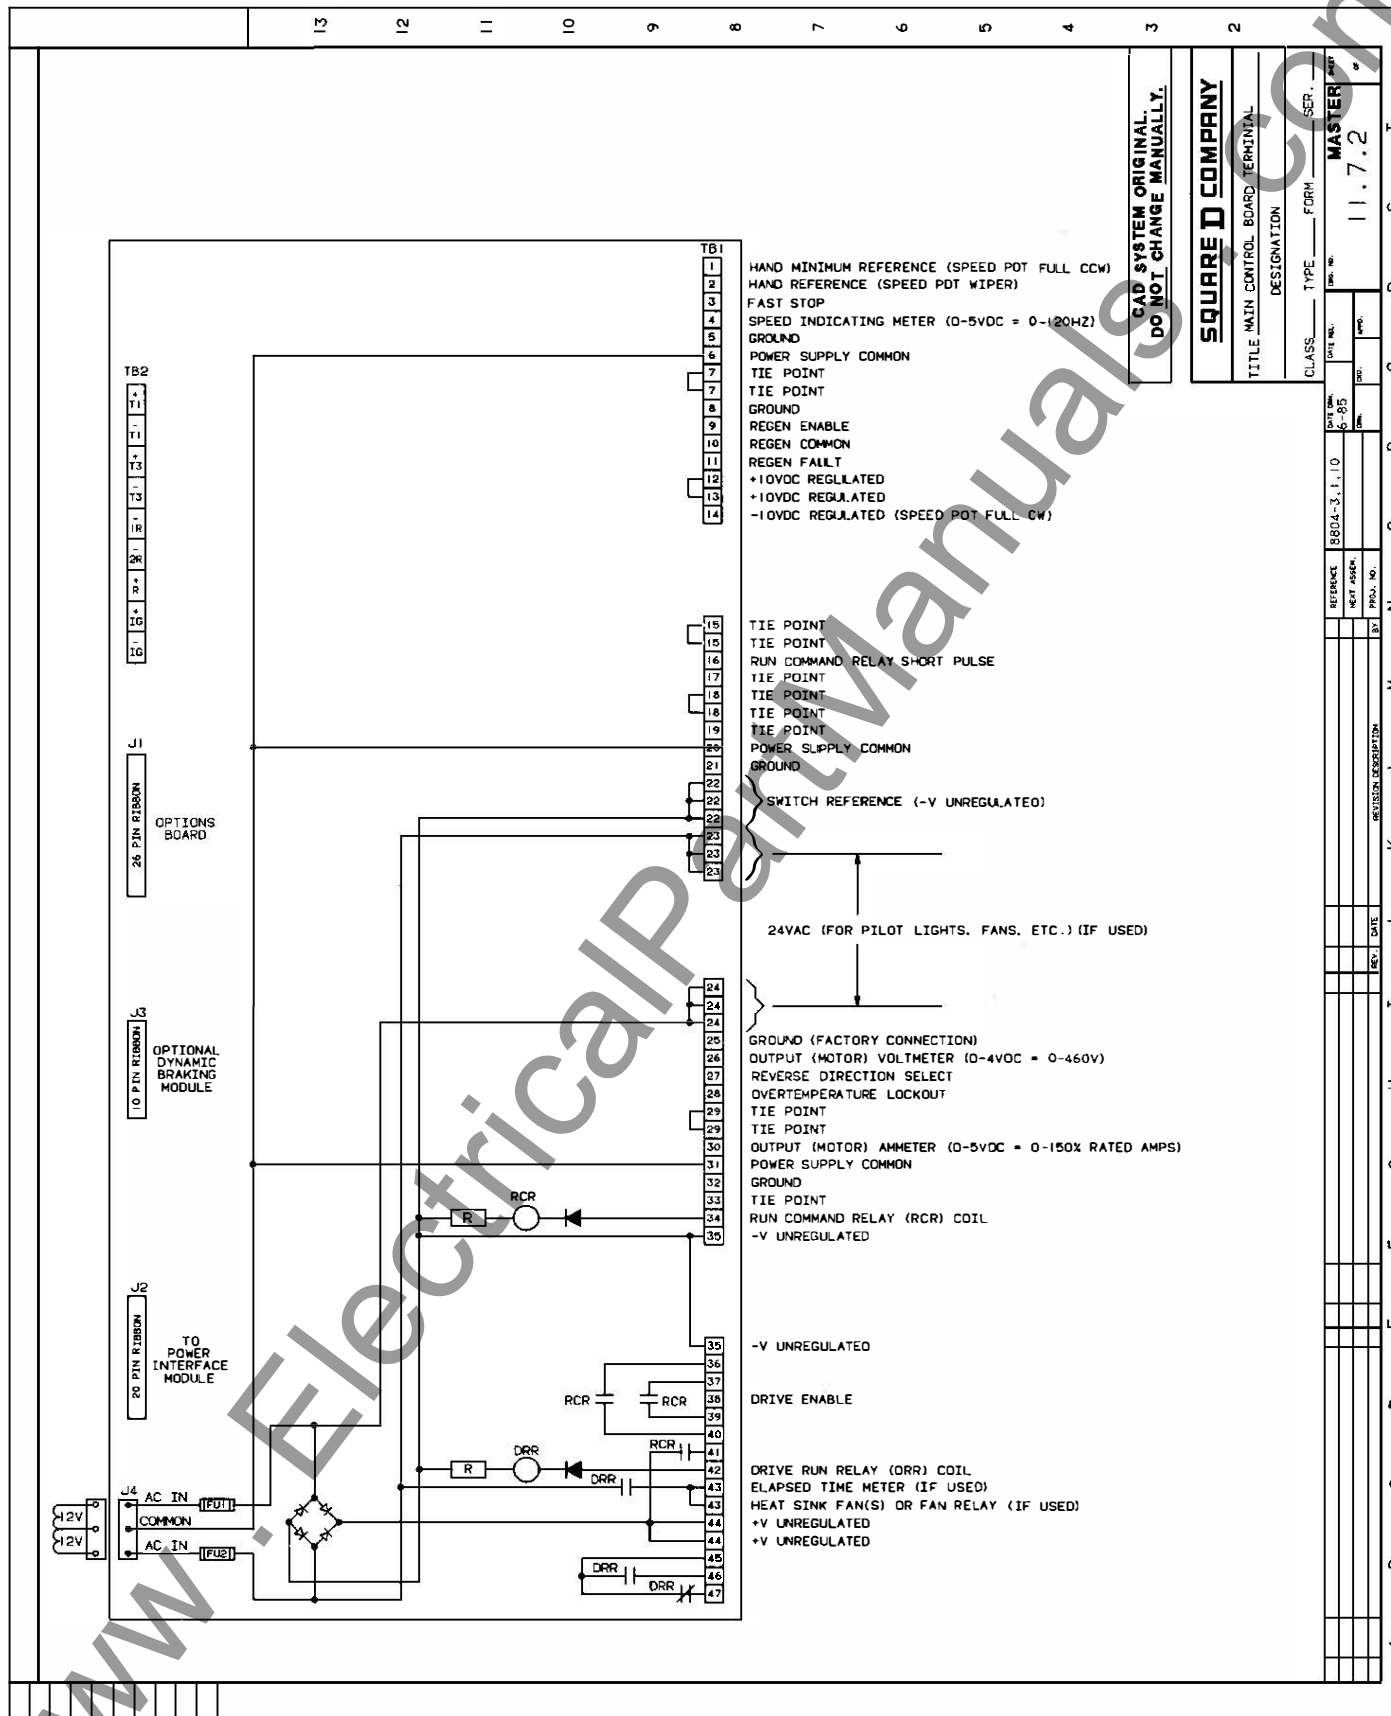

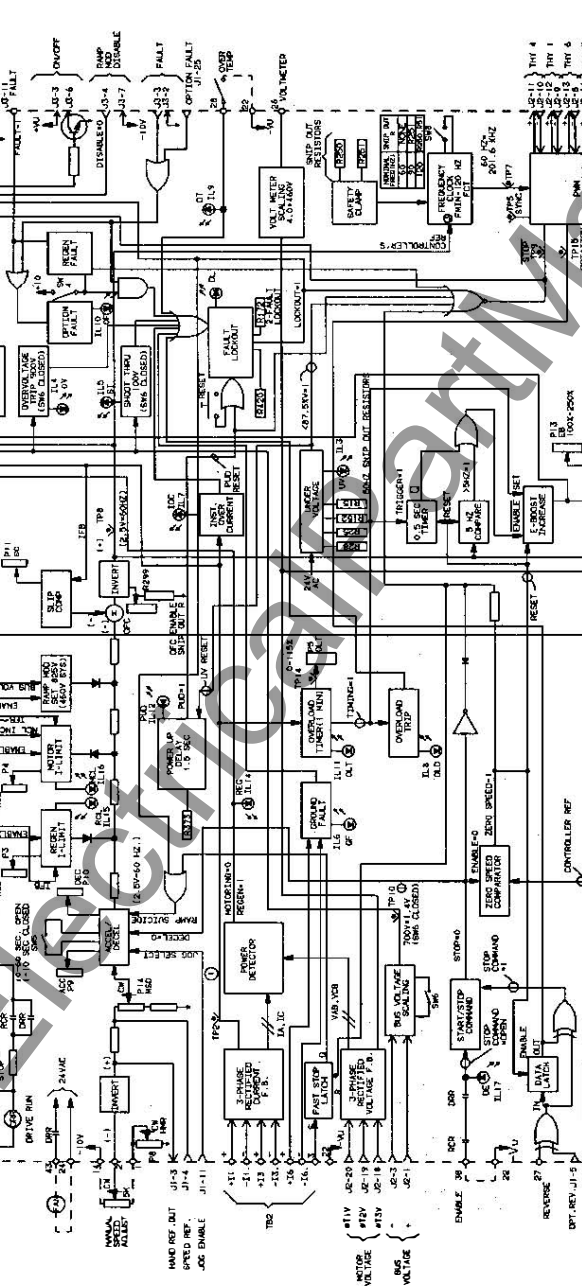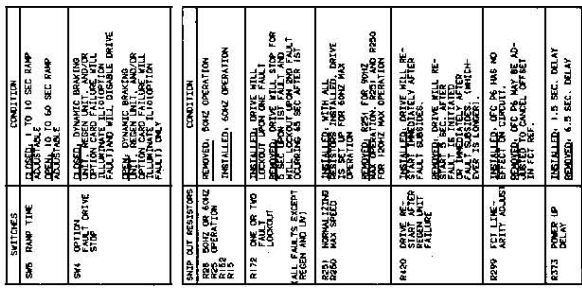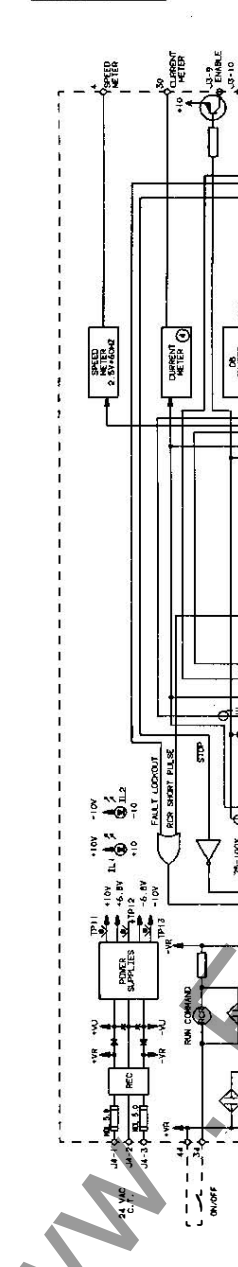

| TEST POINTS | COMP | DESIGNATION |
|-------------|---------------------|-------------|
| TP1 | 2ND FAULT I.O. TRNG | |
| TP2 | CURRENT FEEDBACK | |
| TP3 | RCT | |
| TP4 | OCF | |
| TP5 | TRNC | |
| TP6 | VCT | |
| TP7 | REF | |
| TP8 | CONTROLLER REF | |
| TP9 | TRM STOP | |
| TP10 | BUS STOP | |
| TP11 | +10 V | |
| TP12 | COMMON | |
| TP13 | -10 V | |
| TP15 | OVERLOAD ADJ | |
| TP16 | ROTATION | |

| LEDS | | | DESTINATION |
|--------|---------------------------|--|-------------|
| COMP | TYPE | | |
| E1.1 | 10 WDC | | 10 IL1 |
| E1.2 | 10 WDC | | 10 IL2 |
| E1.3 | 10 WDC | | 9 IL3 |
| E1.4 | 10 WDC | | 8 IL4 |
| E1.5 | SHOOT THROUGH | | 8 IL5 |
| E1.6 | SHOOT THROUGH | | 7 IL6 |
| E1.7 | GROUND FAULT | | 6 IL7 |
| E1.8 | GROUND FAULT | | 6 IL8 |
| E1.9 | INSTANTANEOUS OVERCURRENT | | 10C IL9 |
| E1.10 | OVERCURRENT | | 10C IL10 |
| E1.11 | OVERCURRENT | | 10C IL11 |
| E1.12 | OVERCURRENT | | 10C IL12 |
| E1.13 | OVERCURRENT | | 10C IL13 |
| E1.14 | OVERCURRENT | | 10C IL14 |
| E1.15 | OVERCURRENT | | 10C IL15 |
| E1.16 | OVERCURRENT | | 10C IL16 |
| E1.17 | OVERCURRENT | | 10C IL17 |
| E1.18 | OVERCURRENT | | 10C IL18 |
| E1.19 | OVERCURRENT | | 10C IL19 |
| E1.20 | OVERCURRENT | | 10C IL20 |
| E1.21 | OVERCURRENT | | 10C IL21 |
| E1.22 | OVERCURRENT | | 10C IL22 |
| E1.23 | OVERCURRENT | | 10C IL23 |
| E1.24 | OVERCURRENT | | 10C IL24 |
| E1.25 | OVERCURRENT | | 10C IL25 |
| E1.26 | OVERCURRENT | | 10C IL26 |
| E1.27 | OVERCURRENT | | 10C IL27 |
| E1.28 | OVERCURRENT | | 10C IL28 |
| E1.29 | OVERCURRENT | | 10C IL29 |
| E1.30 | OVERCURRENT | | 10C IL30 |
| E1.31 | OVERCURRENT | | 10C IL31 |
| E1.32 | OVERCURRENT | | 10C IL32 |
| E1.33 | OVERCURRENT | | 10C IL33 |
| E1.34 | OVERCURRENT | | 10C IL34 |
| E1.35 | OVERCURRENT | | 10C IL35 |
| E1.36 | OVERCURRENT | | 10C IL36 |
| E1.37 | OVERCURRENT | | 10C IL37 |
| E1.38 | OVERCURRENT | | 10C IL38 |
| E1.39 | OVERCURRENT | | 10C IL39 |
| E1.40 | OVERCURRENT | | 10C IL40 |
| E1.41 | OVERCURRENT | | 10C IL41 |
| E1.42 | OVERCURRENT | | 10C IL42 |
| E1.43 | OVERCURRENT | | 10C IL43 |
| E1.44 | OVERCURRENT | | 10C IL44 |
| E1.45 | OVERCURRENT | | 10C IL45 |
| E1.46 | OVERCURRENT | | 10C IL46 |
| E1.47 | OVERCURRENT | | 10C IL47 |
| E1.48 | OVERCURRENT | | 10C IL48 |
| E1.49 | OVERCURRENT | | 10C IL49 |
| E1.50 | OVERCURRENT | | 10C IL50 |
| E1.51 | OVERCURRENT | | 10C IL51 |
| E1.52 | OVERCURRENT | | 10C IL52 |
| E1.53 | OVERCURRENT | | 10C IL53 |
| E1.54 | OVERCURRENT | | 10C IL54 |
| E1.55 | OVERCURRENT | | 10C IL55 |
| E1.56 | OVERCURRENT | | 10C IL56 |
| E1.57 | OVERCURRENT | | 10C IL57 |
| E1.58 | OVERCURRENT | | 10C IL58 |
| E1.59 | OVERCURRENT | | 10C IL59 |
| E1.60 | OVERCURRENT | | 10C IL60 |
| E1.61 | OVERCURRENT | | 10C IL61 |
| E1.62 | OVERCURRENT | | 10C IL62 |
| E1.63 | OVERCURRENT | | 10C IL63 |
| E1.64 | OVERCURRENT | | 10C IL64 |
| E1.65 | OVERCURRENT | | 10C IL65 |
| E1.66 | OVERCURRENT | | 10C IL66 |
| E1.67 | OVERCURRENT | | 10C IL67 |
| E1.68 | OVERCURRENT | | 10C IL68 |
| E1.69 | OVERCURRENT | | 10C IL69 |
| E1.70 | OVERCURRENT | | 10C IL70 |
| E1.71 | OVERCURRENT | | 10C IL71 |
| E1.72 | OVERCURRENT | | 10C IL72 |
| E1.73 | OVERCURRENT | | 10C IL73 |
| E1.74 | OVERCURRENT | | 10C IL74 |
| E1.75 | OVERCURRENT | | 10C IL75 |
| E1.76 | OVERCURRENT | | 10C IL76 |
| E1.77 | OVERCURRENT | | 10C IL77 |
| E1.78 | OVERCURRENT | | 10C IL78 |
| E1.79 | OVERCURRENT | | 10C IL79 |
| E1.80 | OVERCURRENT | | 10C IL80 |
| E1.81 | OVERCURRENT | | 10C IL81 |
| E1.82 | OVERCURRENT | | 10C IL82 |
| E1.83 | OVERCURRENT | | 10C IL83 |
| E1.84 | OVERCURRENT | | 10C IL84 |
| E1.85 | OVERCURRENT | | 10C IL85 |
| E1.86 | OVERCURRENT | | 10C IL86 |
| E1.87 | OVERCURRENT | | 10C IL87 |
| E1.88 | OVERCURRENT | | 10C IL88 |
| E1.89 | OVERCURRENT | | 10C IL89 |
| E1.90 | OVERCURRENT | | 10C IL90 |
| E1.91 | OVERCURRENT | | 10C IL91 |
| E1.92 | OVERCURRENT | | 10C IL92 |
| E1.93 | OVERCURRENT | | 10C IL93 |
| E1.94 | OVERCURRENT | | 10C IL94 |
| E1.95 | OVERCURRENT | | 10C IL95 |
| E1.96 | OVERCURRENT | | 10C IL96 |
| E1.97 | OVERCURRENT | | 10C IL97 |
| E1.98 | OVERCURRENT | | 10C IL98 |
| E1.99 | OVERCURRENT | | 10C IL99 |
| E1.100 | OVERCURRENT | | 10C IL100 |

| COMP | POINT | LINE TYPE | VALUE | DESIGN |
|------|-----------------------|--------------|---------|--------|
| P1 | +10 | SUPR. ADJUST | 14 | +10 P1 |
| P2 | +10 | SUPR. ADJUST | 14 | +10 P2 |
| P3 | BEGIN CURRENT LIMIT | 5K | RCL P3 | |
| P4 | OVERDR. CURRENT LIMIT | 5K | RCL P4 | |
| P5 | OVERDR. ADJUST | 10K | DLA P5 | |
| P6 | CAIN ADJUST | 2K | CA P6 | |
| P7 | FCIT OFFSET | 10K | DFC P7 | |
| P8 | MAN. HIN REF | 5K | HR P8 | |
| P9 | ACCELERATION | 5K | ACC P9 | |
| P10 | DECELERATION | 5K | DEC P10 | |
| P11 | SLEP COMPARISON | 10K | SC P11 | |
| P12 | VZC VZC | 800K | VZC P12 | |
| P13 | WZC WZC | 5K | WZC P13 | |
| P14 | WZC WZC | 5K | WZC P14 | |
| P15 | OFFSET WALL | 10K | CON P15 | |

NOTES:
ALL TERMINAL CONNECTIONS SHOWN REFER TO
THE UNLESS OTHERWISE INDICATED.

**CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.**

SQUARE D COMPANY

ITILE OMEGAPAK ADJ. FREQUENCY CONTROLLER


CLASS _____ TYPE _____ FORM _____ SER. _____

| | | |
|-------------|------|--------|
| DATE REC'D. | 1173 | MASTER |
|-------------|------|--------|

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 | 93 | 94 | 95 | 96 | 97 | 98 | 99 | 100 |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|


| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 | 93 | 94 | 95 | 96 | 97 | 98 | 99 | 100 | 101 | 102 | 103 | 104 | 105 | 106 | 107 | 108 | 109 | 110 | 111 | 112 | 113 | 114 | 115 | 116 | 117 | 118 | 119 | 120 | 121 | 122 | 123 | 124 | 125 | 126 | 127 | 128 | 129 | 130 | 131 | 132 | 133 | 134 | 135 | 136 | 137 | 138 | 139 | 140 | 141 | 142 | 143 | 144 | 145 | 146 | 147 | 148 | 149 | 150 | 151 | 152 | 153 | 154 | 155 | 156 | 157 | 158 | 159 | 160 | 161 | 162 | 163 | 164 | 165 | 166 | 167 | 168 | 169 | 170 | 171 | 172 | 173 | 174 | 175 | 176 | 177 | 178 | 179 | 180 | 181 | 182 | 183 | 184 | 185 | 186 | 187 | 188 | 189 | 190 | 191 | 192 | 193 | 194 | 195 | 196 | 197 | 198 | 199 | 200 | 201 | 202 | 203 | 204 | 205 | 206 | 207 | 208 | 209 | 210 | 211 | 212 | 213 | 214 | 215 | 216 | 217 | 218 | 219 | 220 | 221 | 222 | 223 | 224 | 225 | 226 | 227 | 228 | 229 | 230 | 231 | 232 | 233 | 234 | 235 | 236 | 237 | 238 | 239 | 240 | 241 | 242 | 243 | 244 | 245 | 246 | 247 | 248 | 249 | 250 | 251 | 252 | 253 | 254 | 255 | 256 | 257 | 258 | 259 | 260 | 261 | 262 | 263 | 264 | 265 | 266 | 267 | 268 | 269 | 270 | 271 | 272 | 273 | 274 | 275 | 276 | 277 | 278 | 279 | 280 | 281 | 282 | 283 | 284 | 285 | 286 | 287 | 288 | 289 | 290 | 291 | 292 | 293 | 294 | 295 | 296 | 297 | 298 | 299 | 300 | 301 | 302 | 303 | 304 | 305 | 306 | 307 | 308 | 309 | 310 | 311 | 312 | 313 | 314 | 315 | 316 | 317 | 318 | 319 | 320 | 321 | 322 | 323 | 324 | 325 | 326 | 327 | 328 | 329 | 330 | 331 | 332 | 333 | 334 | 335 | 336 | 337 | 338 | 339 | 340 | 341 | 342 | 343 | 344 | 345 | 346 | 347 | 348 | 349 | 350 | 351 | 352 | 353 | 354 | 355 | 356 | 357 | 358 | 359 | 360 | 361 | 362 | 363 | 364 | 365 | 366 | 367 | 368 | 369 | 370 | 371 | 372 | 373 | 374 | 375 | 376 | 377 | 378 | 379 | 380 | 381 | 382 | 383 | 384 | 385 | 386 | 387 | 388 | 389 | 390 | 391 | 392 | 393 | 394 | 395 | 396 | 397 | 398 | 399 | 400 | 401 | 402 | 403 | 404 | 405 | 406 | 407 | 408 | 409 | 410 | 411 | 412 | 413 | 414 | 415 | 416 | 417 | 418 | 419 | 420 | 421 | 422 | 423 | 424 | 425 | 426 | 427 | 428 | 429 | 430 | 431 | 432 | 433 | 434 | 435 | 436 | 437 | 438 | 439 | 440 | 441 | 442 | 443 | 444 | 445 | 446 | 447 | 448 | 449 | 450 | 451 | 452 | 453 | 454 | 455 | 456 | 457 | 458 | 459 | 460 | 461 | 462 | 463 | 464 | 465 | 466 |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|

FIGURE 1

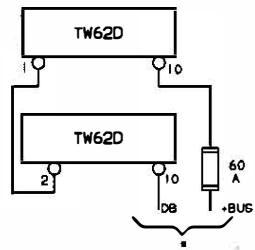


• TO TB ON DB MODULE IN MAIN CONTROLLER

FIGURE 2

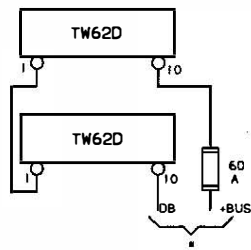


• TO TB ON DB MODULE IN MAIN CONTROLLER

FIGURE 3

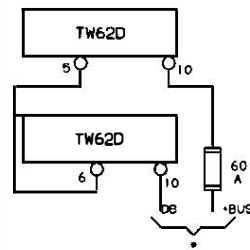


• TO TB ON DB MODULE IN MAIN CONTROLLER

FIGURE 4

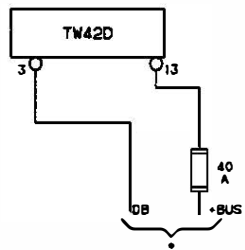


• TO TB ON DB MODULE IN MAIN CONTROLLER

FIGURE 5

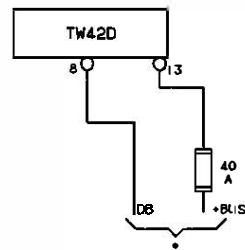


• TO TB ON DB MODULE IN MAIN CONTROLLER

FIGURE 6

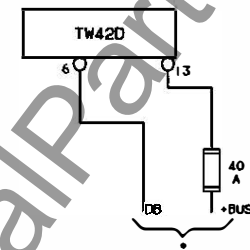

• TO TB ON DB MODULE IN MAIN CONTROLLER

FIGURE 7

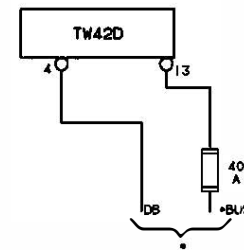

• TO TB ON DB MODULE IN MAIN CONTROLLER

| VOLTAGE | HORSEPOWER | CONNECT RESISTORS AND FUSE ASSEMBLIES PER LISTED CONNECTION DIAGRAM |
|-----------|------------|---|
| 460V | 250 | FIGURE 1 |
| | 200 | FIGURE 1 |
| | 150 | FIGURE 2 |
| | 125 | FIGURE 4 |
| 230V/200V | 125 | FIGURE 3 |
| | 100 | FIGURE 3 |
| | 75 | FIGURE 5 |
| | 60 | FIGURE 6 |
| | 50 | FIGURE 7 |

CAD SYSTEM ORIGINAL.
DO NOT CHANGE MANUALLY.

SQUARE D COMPANY

TITLE CONNECTION DIAGRAM

DB RESISTOR ASSEMBLY

CLASS _____ TYPE _____ FORM _____ SER _____

DATE 7-16-87
DRAWN BY
CHECKED BY
APPROVED BY
MASTER
11.8.1

REFERENCE 8804-10
HEAT ASSEM.
PROD. NO.
REV. DATE
REVISION DESCRIPTION

A B C D E F G H I J K L M N O P Q R S T

12.0 RENEWAL PARTS LIST

| Description | Square D Part Number |
|---|-----------------------|
| Controller | |
| Main Control Board | |
| Constant Torque | 52011-038-54 |
| Variable Torque | 52011-038-53 |
| Power Interface Board | 52011-435-50 |
| GTO (Thy 1 - Thy 6) | 52915-033-5001 |
| Fuses: | |
| Primary — 120V control — FU8, FU9 (KTK15) | 25419-10151 |
| Secondary — 120V control — FU13 (FRN-R-7) | 25413-00260 |
| Primary — 24V control — FU6, FU7 (KTK15) | 25419-10151 |
| Main Control Board — FU1, FU2 (MDL - 5.0) | 25420-30500 |
| Precharge Resistor — FU10 (TRS15R) | 25428-00150 |
| Line — FU3, FU4, FU5 | |
| 125 - 150 HP (A50P400) | 25418-60400 |
| 200 HP (A50P500) | 25418-60500 |
| 250-300 HP (A50P700) | 25418-60700 |
| DB Resistor | |
| 125 HP | 25428-00400 |
| 150-250 HP | 25428-00600 |
| DC Bus Capacitor | 52904-018-50 |
| Bus Discharge Resistor | 148-D10-PXI-1600 |
| Precharge Resistor | 52011-507-50 |
| Precharge Relay | 52905-024-50 |
| Precharge Contactor Coil | |
| 125-150 HP | 9998PJ1C110A |
| 200-300 HP | 9998PK1C110A |
| Fan Relay | 8501RS14 (24VAC Coil) |
| Door Fan | 26016-30620 |
| Heat Sink Fan | 26016-31100 |
| Diodes | |
| Rectifier | |
| 125-150 HP | 52914-028-52 |
| 200-300 HP | 52914-038-50 |
| Flyback | |
| 125-200 HP | 52914-038-50 |
| 250-300 HP | 52914-039-50 |
| Snubber Assembly | |
| Constant Torque 125-150 HP | 52011-441-50 |
| Variable Torque 150-200 HP | |
| Constant Torque 200 HP | 52011-441-51 |
| Variable Torque 250 HP | |
| Constant Torque 250 HP | 52011-441-52 |
| Variable Torque 300 HP | |

www.ElectricalPartManuals.com