

Instructions for Installing Protecto - Combo Conversion Kit



I. L. 46-065-5

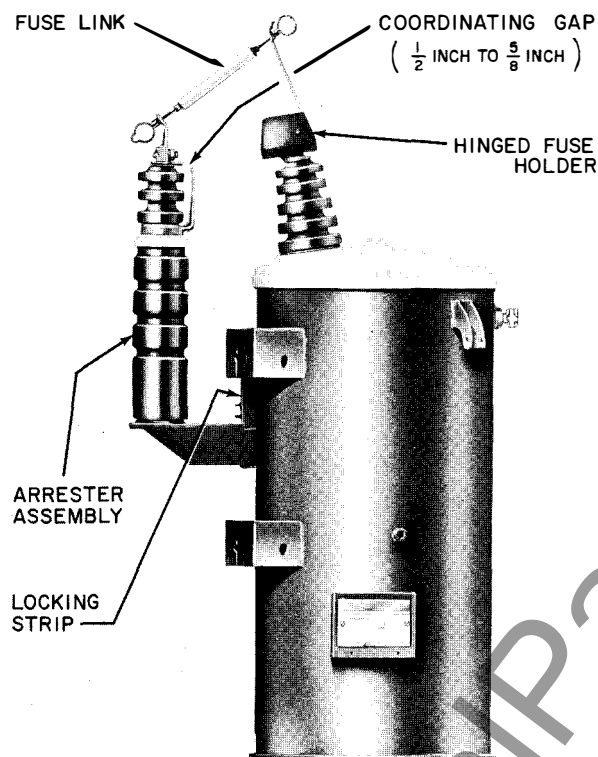


Fig. 1 Complete Protecto-Combo Assembly

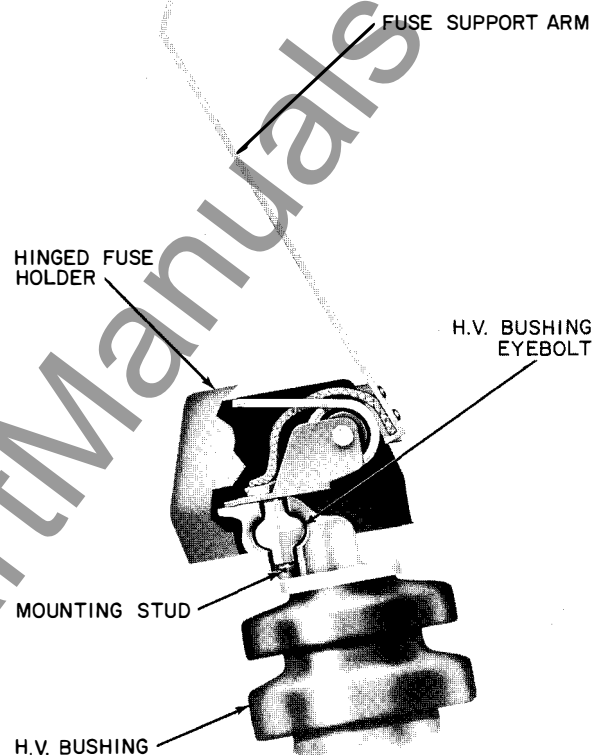


Fig. 2 High Voltage Bushing Assembly

1. Remove the arrester assembly from the shipping carton and bolt to the transformer tank with the two bolts and locking strip provided. (Fig. 1)
2. Loosen the eyebolt nut in the terminal of the H.V. bushing. (Fig. 2)
3. Remove the hinged fuse holder from the carton and push the hinged fuse holder mounting stud into the H.V. bushing eyebolt. (Fig. 2)
4. Turn the fuse holder so that the fuse support arm is directly over the centerline of the tank and tighten the H.V. bushing eyebolt nut to hold the assembly in place. (Fig. 2)
5. Install the fuse link supplied between the two fuse supports as shown. (Fig. 1)
6. Check to be sure that the length of the coordinating gap to the lightning arrester is between 1/2 inch and 5/8 inch. (Fig. 1)

Effective January, 1963

Westinghouse Electric Corporation

Distribution Transformer Division, Sharon, Pa.

Printed in U.S.A. (T.P.)