

CONTROL AND OIL SYSTEM

The relation of the various elements which comprise the complete governing (or control) system, is shown diagrammatically in Figure 1. The throttle valve, overspeed trip, governor, governing valves, emergency trip, extraction valves, servo-motor, pressure regulator and auxiliary pump (all of which are shown on the diagram) are described in separate leaflets. In order to simplify the description, the oil system can be divided into two parts, namely:-

1. High pressure oil system.
2. Lubrication system.

Two oil impellers (or pumps) are mounted on the turbine shaft. In Figure 1 the main oil pump is shown on the left, while the governing oil impeller is shown on the right.

High Pressure Oil

The oil discharged by the main oil pump is used for the following purposes:

1. To operate the ejectors which supply the main pump impeller suction.
2. To operate the throttle valve. The line supplying the throttle is in turn connected to the overspeed trip valve, and the governing valve emergency trip plunger. An orifice is used in the supply line to the throttle valve to reduce the actual flow in order to insure positive action of the trip mechanism.
3. To operate the governor servo-motor which opens and closes the governing valves.
4. To operate the extraction valve servo-motor which opens and closes the extraction valves.
5. To operate the extraction pressure regulator.
6. To supply oil through the coolers to the bearings. An orifice is used in this line to reduce the flow to the proper amount.
7. To operate the pilot valve on the non-return valve located in the steam extraction line.
8. To operate the auxiliary oil pump regulator.
9. As a control medium for:-
 - a. Governing impeller.
 - b. Governor transformer.
 - c. Governing valve emergency trip.
 - d. Steam flow limit valve.
 - e. Extraction pressure regulator.

Lubrication System

The oil supplied to the lubrication system (as noted above) passes through the oil cooler, and thence to the main bearings, thrust bearing and turning gear.

A connection from the bearing supply line is led to the auxiliary oil pump regulator to actuate the regulator.

Provision is made for cartridge type strainers to be installed in the oil supply lines to the bearings, for use when preparing the unit for service after a general inspection or major repair. At such times these strainers should be installed and used while circulating oil through the system preparatory to starting, but they must be removed before the unit is actually operated.

Control and Oil System

During the starting and stopping periods, all oil pressure requirements are supplied by the steam driven auxiliary oil pump. This pump is connected to the system by suitable check valves as shown in Figure 1. It is controlled automatically by the auxiliary oil pump regulator, and starts whenever the bearing line pressure drops below that for which the regulator is set.

In addition a motor driven auxiliary oil pump is provided to supply lubrication to the bearings and turning gear when the unit is being rolled at low speed by the turning gear during shut down periods. In case of an emergency such as failure of the steam driven auxiliary oil pump, this motor driven pump under control of a pressure switch will start automatically and supply sufficient oil for shutting down the unit. It should be noted however, that this motor driven pump does not have sufficient capacity for starting the unit.

Enough oil should be provided so that when the turbine is running at full speed the oil level in the reservoir, as shown by the gauge, is within the limits given on the indicator plate. Although there is a strainer in the oil system, it is desirable, as a precaution, to strain the oil through a fine mesh screen or cloth just before putting it into the reservoir.

The amount of water circulated through the oil cooler should be regulated to maintain the temperature of the oil leaving the cooler between 100 and 110°F. The correct criterion of oil cooler water supply is, of course, the temperature of the oil leaving the hottest bearing. This temperature will vary with different units and operating conditions. However, in general, oil return temperatures of 140 to 160°F. are considered good practice. When starting the turbine, the oil cooler water should not be turned on until the oil temperature has increased to the approximate limits given above.

One oil cooler is sufficient for normal operation. The piping connecting the coolers is arranged with an interlocking cock so that either cooler can be used and that continuous flow is insured when changing from one cooler to the other.

Air vents from the top of the coolers to the reservoir are used when there is a drop in the main oil line from the cooler. If this piping can be arranged to eliminate all possibility of trapping air, separate vent lines are not required.

Whenever oil operated motor starting switches are used in the system (such as for starting the motor driven oil pump if the oil supplied from other sources becomes insufficient), it is customary to install a valve in the oil line to each switch so it can be removed for repair, if necessary, during operation. Obviously, closing this valve with oil pressure in the line, renders the automatic switch inoperative and prevents starting the pump. Therefore, some means of locking the valve in the open position should be provided to eliminate the possibility of unauthorized closing while the turbine is in operation.

Steam Flow Limit Valve

An adjustable steam flow limiting valve is provided, with which it is possible to make adjustments so that under no condition of system frequency swing can the turbine governor open and increase the steam flow beyond a desired point. This is a high grade oil pressure regulating valve connected to the system as shown in the diagram. It is supplied with oil from a high pressure line through an orifice and the controlled and adjustable pressure is connected to the governor regulating pressure system in such a way that it limits the pressure to which the regulating system may be decreased.

It will be recalled that in the governing system the regulating oil pressure decreases to open the steam inlet valves, and that the steam flow varies closely in proportion to this regulating oil pressure change. The limit valve may be set for any pressure between the limits corresponding to no load and full load, and when the regulating pressure drops to that held by the limit valve, further governor travel and steam valve opening is prevented.


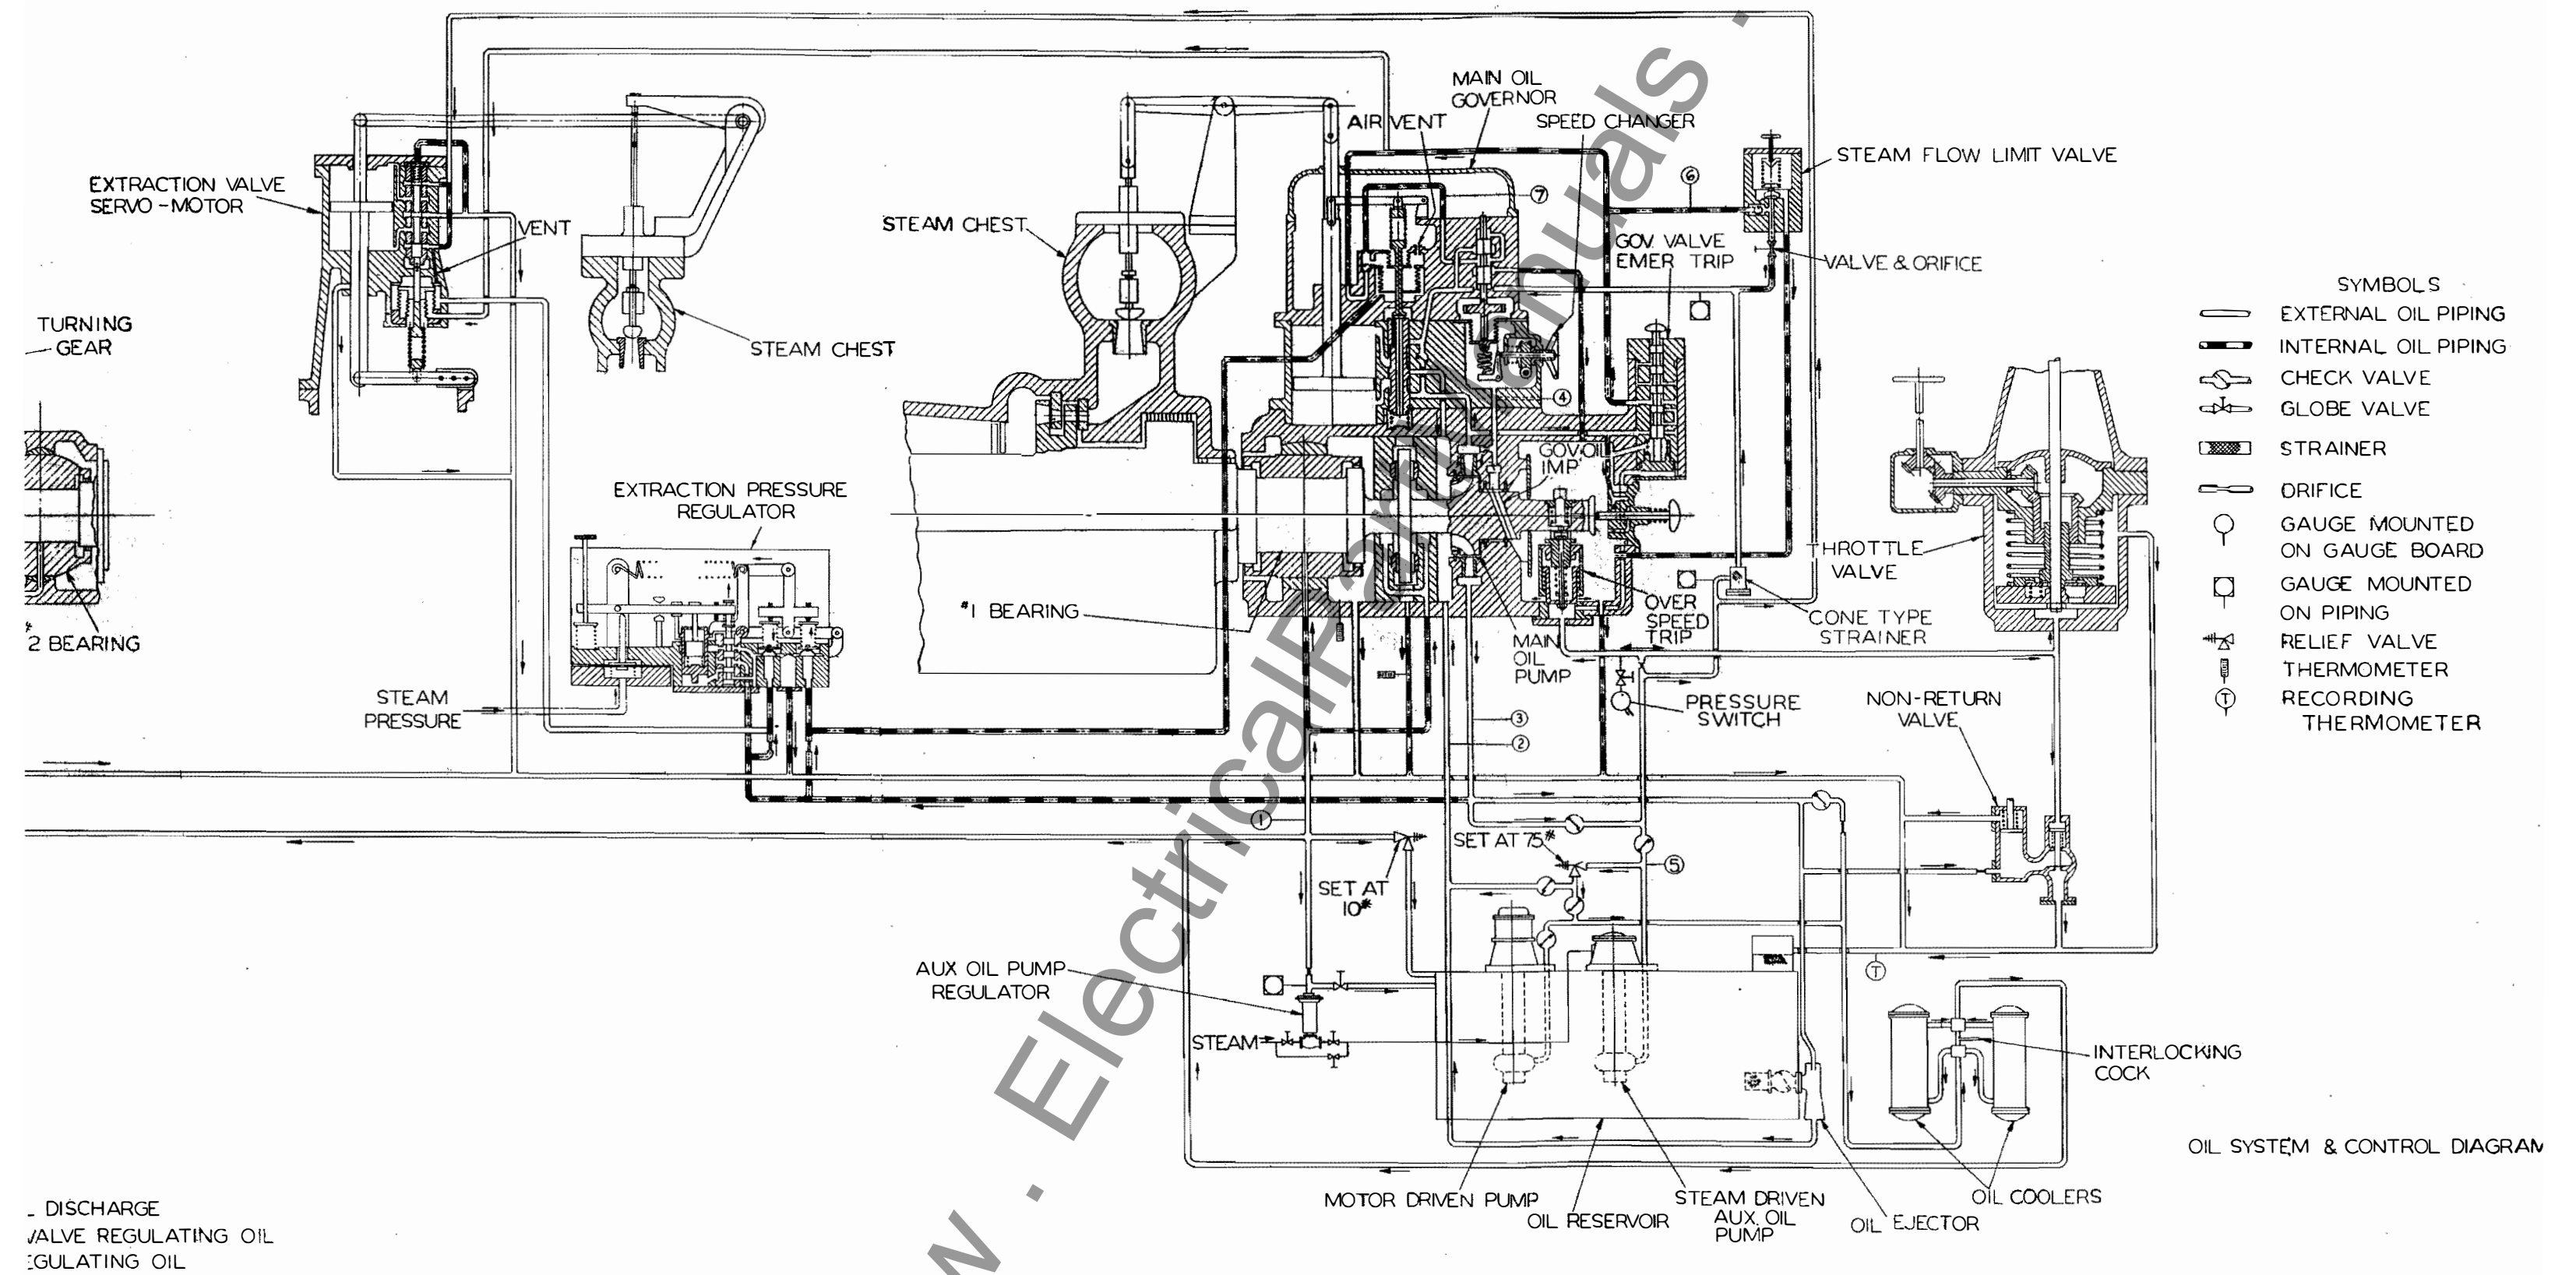


Figure - 1

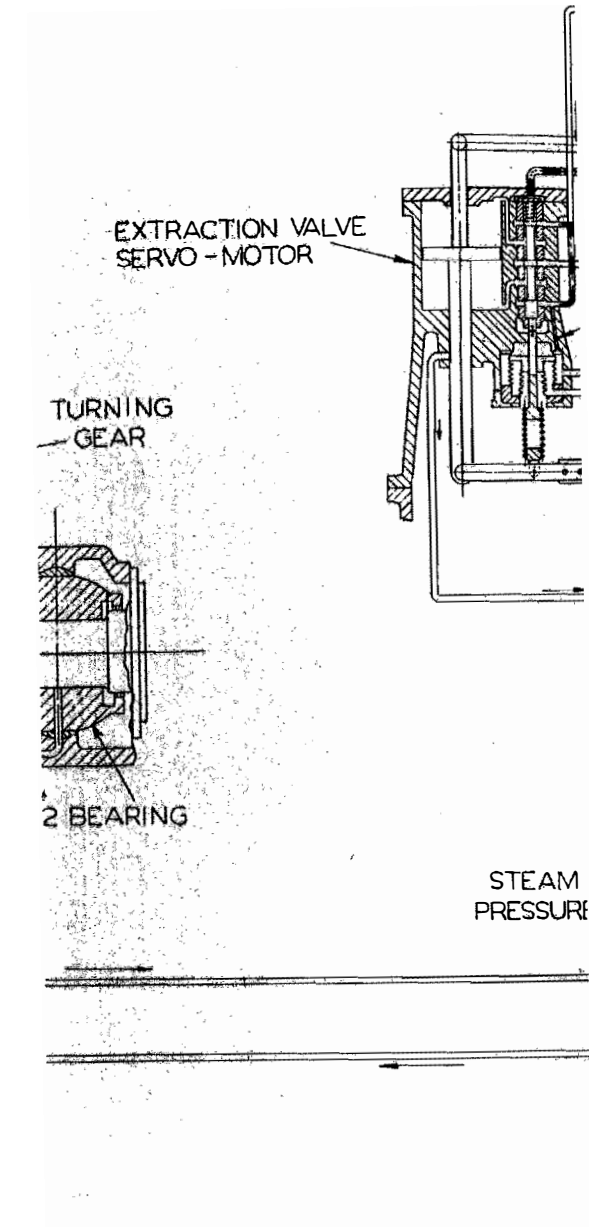

. DISCHARGE
VALVE REGULATING OIL
GULATING OIL