



# INSTALLATION • OPERATION • MAINTENANCE INSTRUCTIONS

## TYPES HRK AND HRP CARRIER DIRECTIONAL OVERCURRENT GROUND RELAYS (WITH TYPE HL-2 DIRECTIONAL ELEMENT)

**CAUTION** Before putting protective relays into service, remove all blocking which may have been inserted for the purpose of securing the parts during shipment, make sure that all moving parts operate freely, inspect the contacts to see that they are clean and close properly, and operate the relay to check the settings and electrical connections.

### APPLICATION

These relays are used to provide directional ground fault protection in the carrier relaying scheme using plate keyed carrier sets. The type HRK relay is used where residual current from the power transformer banks is available for polarizing the directional element. The type HRP relay is used where this residual current is not available, and residual voltage must be used for polarizing the element.

### CONSTRUCTION AND OPERATION

These relays consist of two beam-type overcurrent elements, a directional element, seal-in contactor switch, and operation indicator. The trip circuit of the relay includes the directional contacts in series with the contacts of one overcurrent element, the operation indicator, and the contactor switch. The other overcurrent element is used to start carrier signal transmission. Operation of this relay in connection with the carrier scheme is fully described in I. L. 41-600.6.

#### Overcurrent Element

The construction details of the two overcurrent elements are shown in Figure 1. The element consists of a pivoted beam with con-

tact arm on one end and a restraining spring acting on the other. The beam is pulled down to make contact by a current coil, and resets through the action of the restraining spring.

The moving contact is a thin-walled silver shell practically filled with tungsten powder. When this contact strikes the rigid stationary contact, the movement of the tungsten powder creates sufficient friction to absorb practically all of the energy of impact and thus the tendency of the contact to bounce is reduced to a minimum. The moving contact is loosely mounted on the beam and held in place by a leaf spring. The construction is such that the beam continues to move slightly after the contacts close deflecting the spring. This provides the required contact follow. Current is conducted into the moving contact by means of a flexible metal ribbon.

#### Directional Element

The directional element is made up of five basic parts: the die-cast aluminum frame, the electromagnet, the molded cover assembly, the moving element assembly, and the bridge and upper bearing pin assembly. The lower bearing pin and the magnetic core with its adjustment lever are mounted on the frame. The electromagnet has two series-connected polarizing coils mounted diametrically opposite one another, two series-connected current coils mounted diametrically opposite one another and two magnetic plugs accessible through the cover. The moving element consists of a spring and contact arm assembly and a double aluminum loop mounted on a shaft which has end jewels for the top and bottom bearings. This shaft rides between the bottom steel bearing pin mounted in the frame and a similar pin in the bridge that mounts on the two longer studs of the electromagnet. The stops for the mov-

## TYPES HRK AND HRP RELAYS

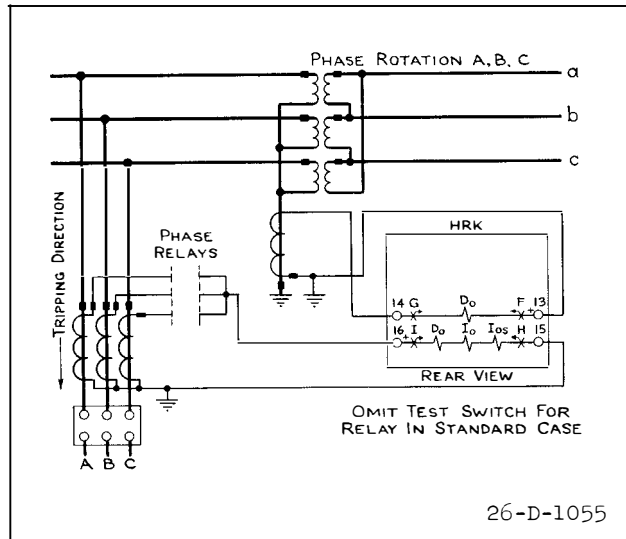


Fig. 4—External A-C Connections of the Type HRK Relay.

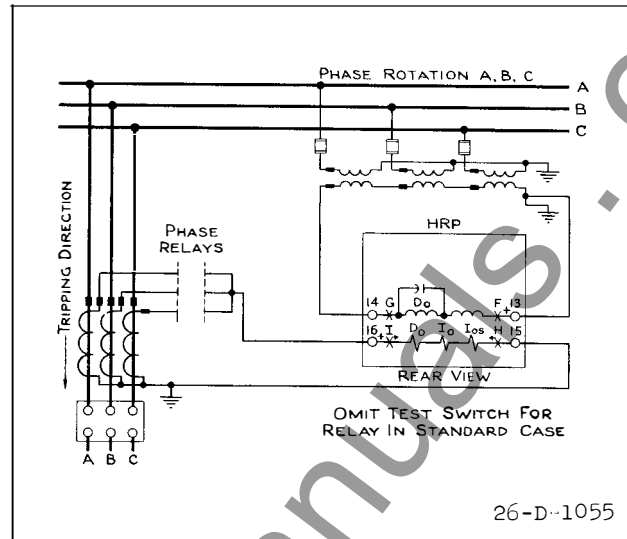


Fig. 5—External A-C Connections of the Type HRP Relay.

### ADJUSTMENTS

The proper adjustments to insure correct operation of this relay have been made at the factory and should not be disturbed after receipt by the customer. If the adjustments have been changed, the relay taken apart for repairs, or if it is desired to check the adjustments at regular maintenance periods, the instructions below should be followed.

All contacts should be periodically cleaned with a fine file. S#1002110 file is recommended for this purpose. The use of abrasive material for cleaning contacts is not recommended, because of the danger of embedding small particles in the face of the soft silver and thus impairing the contact.

#### Overcurrent Elements

Refer to Figure 1. Adjust the stop screw until the beam is in a horizontal position when resting against it. Adjust the magnetic gap to .020 inch. This is the gap between the beam and the stop pin. Adjust the stationary contact for an .020 inch gap when the beam is in the reset position. When the beam is in the operated position, there should be an .015 inch deflection of the moving contact. See that the spring which carries the moving element lies flat on the Micarta arm with no

initial tension in either direction. Also, make sure that the flexible pigtail is at least  $3/32$  inch away from the end of the stationary contact.

Pass 0.5 ampere thru the element with the tap screw in the 0.5 tap and adjust the beam spring tension until the beam just trips. This spring tension should hold the beam in the reset position, and when the beam is tripped on 0.5 ampere, the beam should deflect the moving contact spring and rest on the front stop pin. The tripping point of the other taps should be within  $\pm 5\%$  of the tap values.

#### Directional Element

The upper bearing screw should be screwed down until there is only three to four thousandths of an inch clearance between it and the shaft, and then securely locked in position with the lock nut. This adjustment can be made best by carefully screwing down the top bearing screw until the double loop fails to turn freely and then backing up  $1/8$ " of a turn. Great care must be taken in making this adjustment to prevent damage to the bearings.


The travel of the moving contact is limited by the stationary contacts mounted on the

molded cover. The contact gap should be adjusted as follows: With the moving contact centered between the studs, close the contact gaps by advancing the two front stationary contacts. Then back off the right-hand stationary contact .035 inch and lock both contacts in place. The front contact spring should be positioned in the center of the .020 inch slot of the aluminum guard by means of the small adjusting screw located on the nut plate that holds the spring on the moving element. The complete moving element is limited in travel by two stop screws located on the molded cover assembly.

Type HRK relays only - The moving element stops should be adjusted so that the moving contact just touches the stationary contact when energized in the closing direction with 5.0 amperes in phase in the current circuits. The right-hand stationary contact should be turned 1/6th of a turn to obtain .005 inch contact follow. The rear and left stationary contact stops should be adjusted to barely miss the moving contact when energized as above. Energize the element in the opening

direction by passing 60 amperes through the current circuits in series. The contact should not bounce closed when the element is suddenly de-energized. Slight readjustment of the left-hand stop may be necessary to insure that this does not happen. The magnetic plugs which are accessible through the molded cover are used to adjust for zero torque with current only in the operating coils. Raising the right hand plug will produce torque to the right when considering the front moving contact.

Type HRP relays only - The moving element stops should be adjusted so that the moving contact just touches the stationary contact when energized in the closing direction with 120 volts and 5.0 amperes at 60 degrees lag. The right-hand stationary contact should then be turned 1/6th of a turn to obtain .005 inch contact follow. The rear and left stationary contact stops should be adjusted to barely miss the moving contact when energized as above. Energize the element in the opening direction with 120 volts and 60 amperes at 240 degrees lag. The contact should not bounce

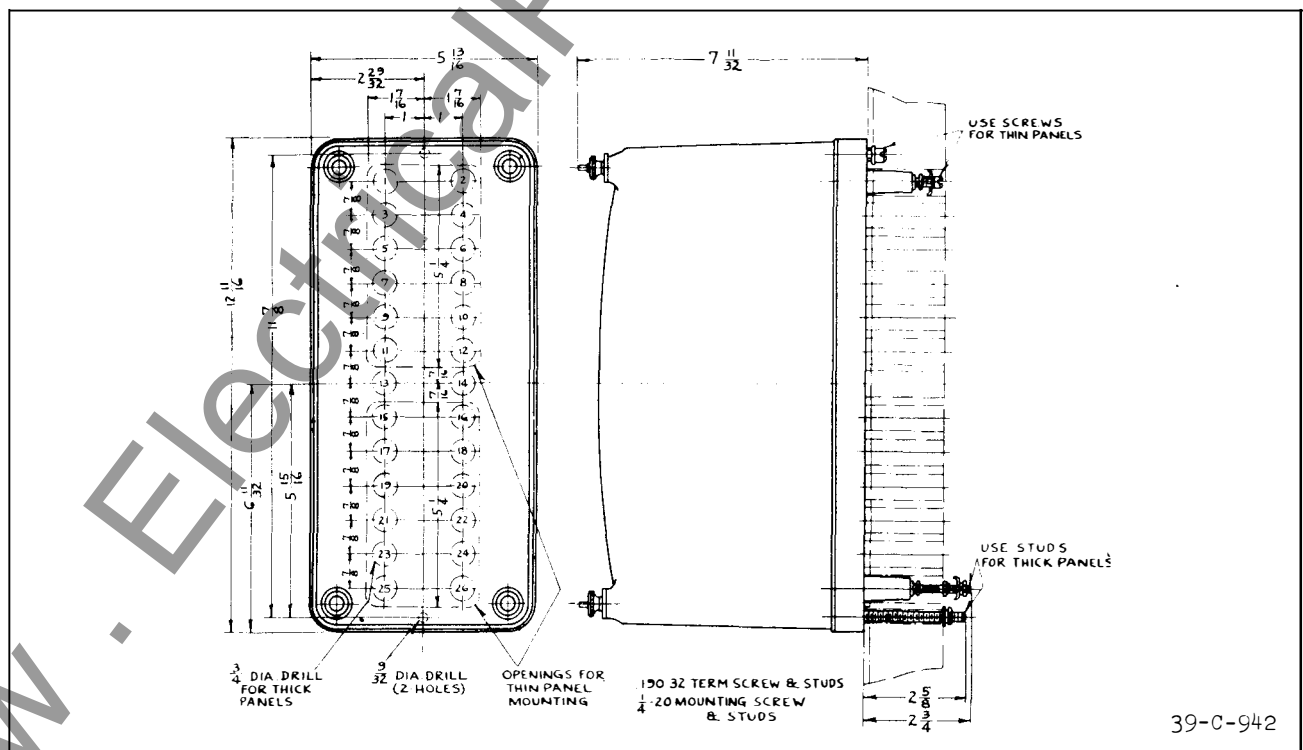



Printed in U. S. A.



# INSTALLATION • OPERATION • MAINTENANCE INSTRUCTIONS

## TYPES HRK AND HRP CARRIER DIRECTIONAL OVERCURRENT GROUND RELAYS (WITH TYPE HL-2 DIRECTIONAL ELEMENT)

**CAUTION** Before putting protective relays into service, remove all blocking which may have been inserted for the purpose of securing the parts during shipment, make sure that all moving parts operate freely, inspect the contacts to see that they are clean and close properly, and operate the relay to check the settings and electrical connections.

### APPLICATION

These relays are used to provide directional ground fault protection in the carrier relaying scheme using plate keyed carrier sets. The type HRK relay is used where residual current from the power transformer banks is available for polarizing the directional element. The type HRP relay is used where this residual current is not available, and residual voltage must be used for polarizing the element.

### CONSTRUCTION AND OPERATION

These relays consist of two beam-type overcurrent elements, a directional element, seal-in contactor switch, and operation indicator. The trip circuit of the relay includes the directional contacts in series with the contacts of one overcurrent element, the operation indicator, and the contactor switch. The other overcurrent element is used to start carrier signal transmission. Operation of this relay in connection with the carrier scheme is fully described in I. L. 41-600.6.

#### Overcurrent Element

The construction details of the two overcurrent elements are shown in Figure 1. The element consists of a pivoted beam with con-

tact arm on one end and a restraining spring acting on the other. The beam is pulled down to make contact by a current coil, and resets through the action of the restraining spring.

The moving contact is a thin-walled silver shell practically filled with tungsten powder. When this contact strikes the rigid stationary contact, the movement of the tungsten powder creates sufficient friction to absorb practically all of the energy of impact and thus the tendency of the contact to bounce is reduced to a minimum. The moving contact is loosely mounted on the beam and held in place by a leaf spring. The construction is such that the beam continues to move slightly after the contacts close deflecting the spring. This provides the required contact follow. Current is conducted into the moving contact by means of a flexible metal ribbon.

#### Directional Element

The directional element is made up of five basic parts: the die-cast aluminum frame, the electromagnet, the molded cover assembly, the moving element assembly, and the bridge and upper bearing pin assembly. The lower bearing pin and the magnetic core with its adjustment lever are mounted on the frame. The electromagnet has two series-connected polarizing coils mounted diametrically opposite one another, two series-connected current coils mounted diametrically opposite one another and two magnetic plugs accessible through the cover. The moving element consists of a spring and contact arm assembly and a double aluminum loop mounted on a shaft which has end jewels for the top and bottom bearings. This shaft rides between the bottom steel bearing pin mounted in the frame and a similar pin in the bridge that mounts on the two longer studs of the electromagnet. The stops for the mov-

## TYPES HRK AND HRP RELAYS

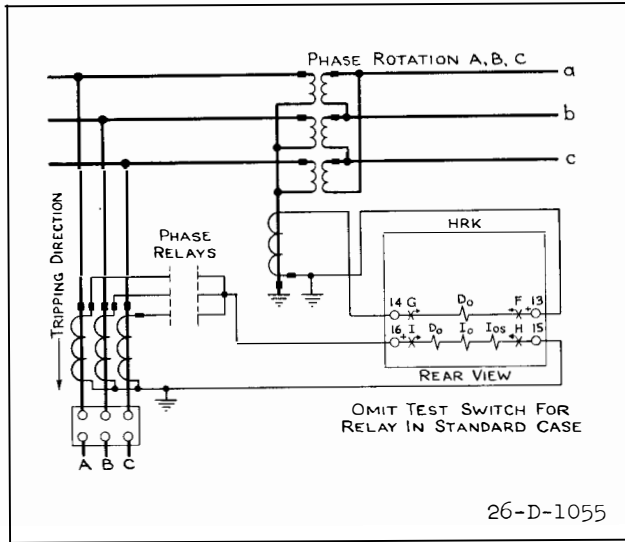


Fig. 4—External A-C Connections of the Type HRK Relay.

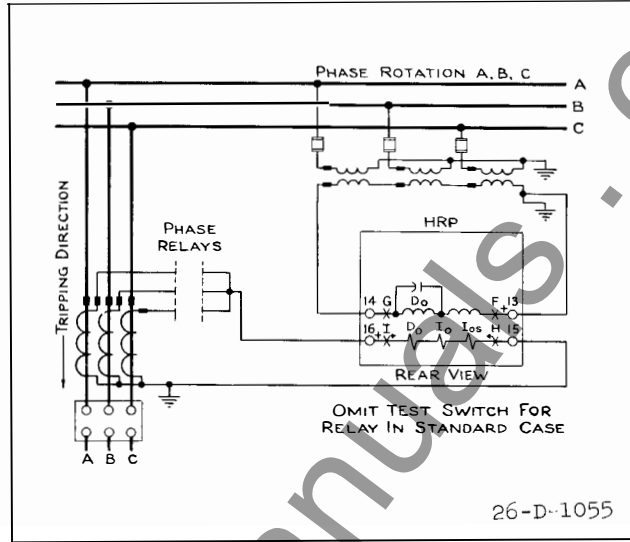


Fig. 5—External A-C Connections of the Type HRP Relay.

### ADJUSTMENTS

The proper adjustments to insure correct operation of this relay have been made at the factory and should not be disturbed after receipt by the customer. If the adjustments have been changed, the relay taken apart for repairs, or if it is desired to check the adjustments at regular maintenance periods, the instructions below should be followed.

All contacts should be periodically cleaned with a fine file. S#1002110 file is recommended for this purpose. The use of abrasive material for cleaning contacts is not recommended, because of the danger of embedding small particles in the face of the soft silver and thus impairing the contact.

#### Overcurrent Elements

Refer to Figure 1. Adjust the stop screw until the beam is in a horizontal position when resting against it. Adjust the magnetic gap to .020 inch. This is the gap between the beam and the stop pin. Adjust the stationary contact for an .020 inch gap when the beam is in the reset position. When the beam is in the operated position, there should be an .015 inch deflection of the moving contact. See that the spring which carries the moving element lies flat on the Micarta arm with no

initial tension in either direction. Also, make sure that the flexible pigtail is at least 3/32 inch away from the end of the stationary contact.

Pass 0.5 ampere thru the element with the tap screw in the 0.5 tap and adjust the beam spring tension until the beam just trips. This spring tension should hold the beam in the reset position, and when the beam is tripped on 0.5 ampere, the beam should deflect the moving contact spring and rest on the front stop pin. The tripping point of the other taps should be within  $\pm 5\%$  of the tap values.

#### Directional Element

The upper bearing screw should be screwed down until there is only three to four thousandths of an inch clearance between it and the shaft, and then securely locked in position with the lock nut. This adjustment can be made best by carefully screwing down the top bearing screw until the double loop fails to turn freely and then backing up 1/8" of a turn. Great care must be taken in making this adjustment to prevent damage to the bearings.

The travel of the moving contact is limited by the stationary contacts mounted on the

molded cover. The contact gap should be adjusted as follows: With the moving contact centered between the studs, close the contact gaps by advancing the two front stationary contacts. Then back off the right-hand stationary contact .035 inch and look both contacts in place. The front contact spring should be positioned in the center of the .020 inch slot of the aluminum guard by means of the small adjusting screw located on the nut plate that holds the spring on the moving element. The complete moving element is limited in travel by two stop screws located on the molded cover assembly.

Type HRK relays only - The moving element stops should be adjusted so that the moving contact just touches the stationary contact when energized in the closing direction with 5.0 amperes in phase in the current circuits. The right-hand stationary contact should be turned 1/6th of a turn to obtain .005 inch contact follow. The rear and left stationary contact stops should be adjusted to barely miss the moving contact when energized as above. Energize the element in the opening

direction by passing 60 amperes through the current circuits in series. The contact should not bounce closed when the element is suddenly de-energized. Slight readjustment of the left-hand stop may be necessary to insure that this does not happen. The magnetic plugs which are accessible through the molded cover are used to adjust for zero torque with current only in the operating coils. Raising the right hand plug will produce torque to the right when considering the front moving contact.

Type HRP relays only - The moving element stops should be adjusted so that the moving contact just touches the stationary contact when energized in the closing direction with 120 volts and 5.0 amperes at 60 degrees lag. The right-hand stationary contact should then be turned 1/6th of a turn to obtain .005 inch contact follow. The rear and left stationary contact stops should be adjusted to barely miss the moving contact when energized as above. Energize the element in the opening direction with 120 volts and 60 amperes at 240 degrees lag. The contact should not bounce

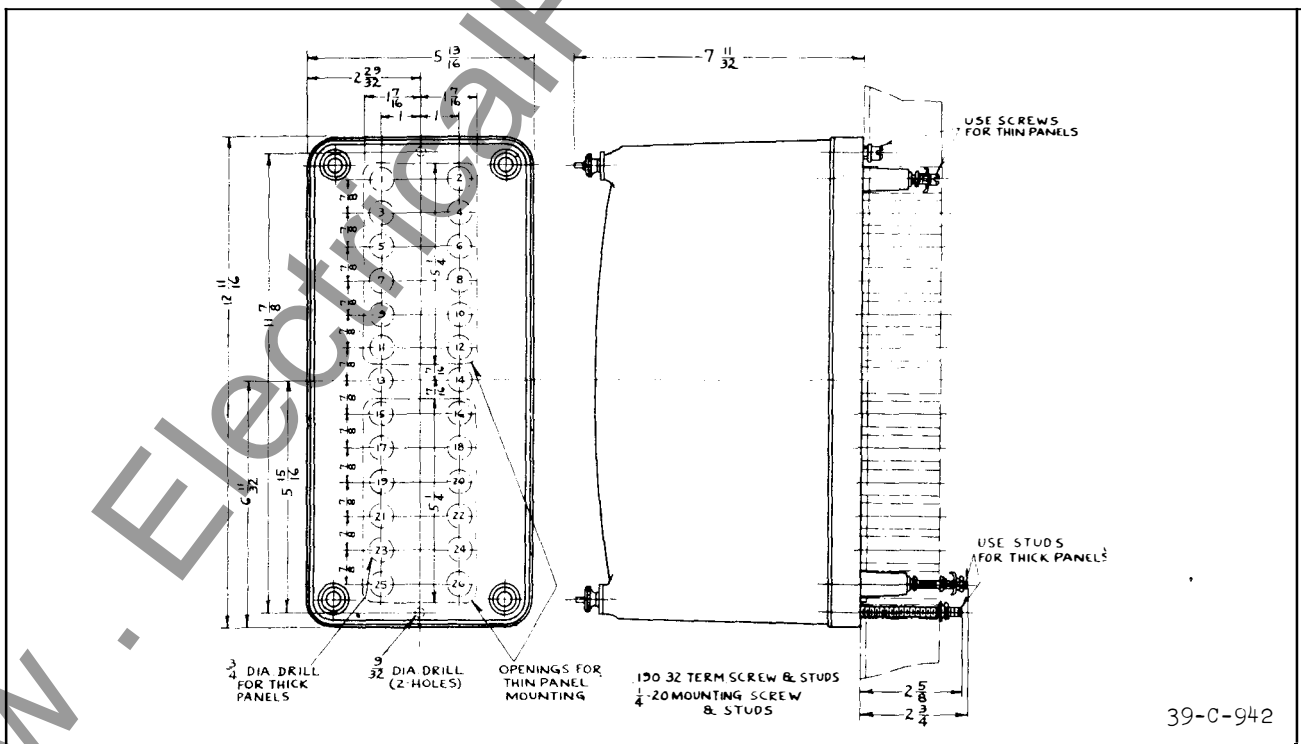


Fig. 6—Outline and Drilling Plan for the Standard Projection Type Case. See the Internal Schematics for the Terminals Supplied. For Reference Only.

## TYPES HRK AND HRP RELAYS.

closed when the element is suddenly de-energized. Slight readjustment of the left-hand stop may be necessary to insure that this does not happen.

The lever at the bottom of the element should be adjusted so that the element will operate with 30 amperes and 0.1 to 0.4 volt at the maximum torque angle. Before or after this adjustment, short the voltage coils and check to insure that the contacts do not close on 60 amperes momentarily applied. Raising the right-hand plug under these conditions will produce torque to the right when considering the front moving contact. The element can be adjusted to just remain open under these conditions or adjusted to operate with 60 amperes and 0.1 to 0.4 volts at the maximum torque angle.

## Seal-In Contactor Switch

Adjust the stationary core of the switch for a clearance between the stationary core and the moving core of .025 inch when the switch

is picked up. This can be done by turning the relay up-side-down, or by disconnecting the switch and turning it up-side-down. Then screw up the core screw until the moving core starts rotating. Now, back off the core screw until the moving core stops rotating.. This indicates the point where the play in the assembly is taken up, and where the moving core just separates from the stationary core screw. Back off the core screw approximately one turn and lock in place. This prevents the moving core from striking and sticking to the stationary core because of residual magnetism. Adjust the contact clearance for 3/32 inch by means of the two small nuts on either side of the Micarta disc. The switch should pick up at 1 ampere d-c. Test for sticking after 30 amperes d-c have been passed through the coil. The coil resistance is approximately 0.84 ohm.

Operation Indicator

Adjust the indicator to operate at 1.0 ampere d-c gradually applied. Test for stick-

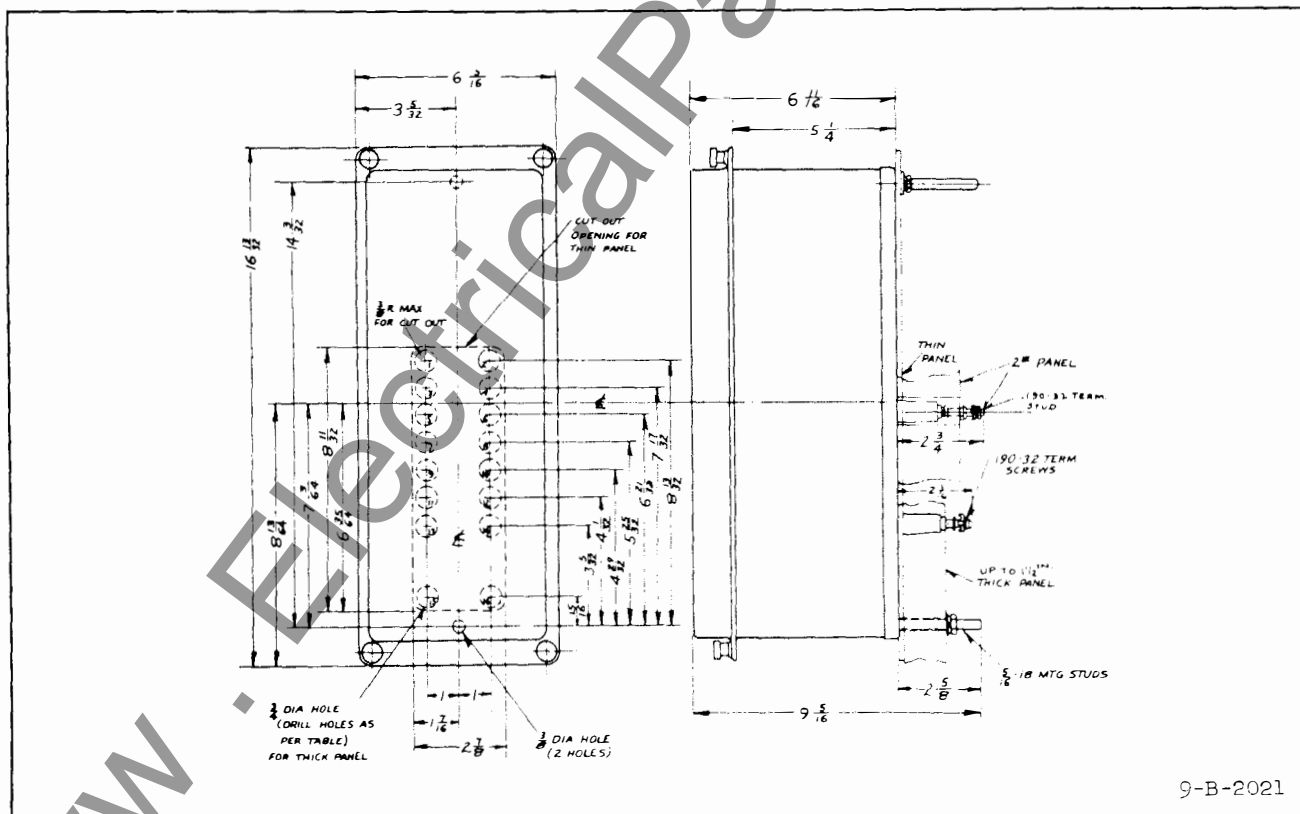


Fig. 7—Outline and Drilling Plan for the M10 Projection Type FT Case. See the Internal Schematics for the Terminals Supplied. For Reference Only.



ing after 30 amperes d-c is passed thru the coil. The coil resistance is approximately 0.16 ohm. Adjustments may be made by loosening the two screws on the under side of the assembly, and moving the bracket forward or backward. Also, the amount of overhang of the armature on the latch may be adjusted by means of the small screw bearing on the flat spring carrying the inertia weight. The best adjustment will usually be found when this screw just touches the flat spring with the armature in the reset position. If the two helical springs which reset the armature are replaced by new springs, they should be weakened slightly by stretching just beyond the elastic limit.

### RENEWAL PARTS

Repair work can be done most satisfactorily at the factory. However, interchangeable parts can be furnished to the customers who are equipped for doing repair work. When ordering parts, always give the complete name-plate data.

### ENERGY REQUIREMENTS

The typical 60 cycle burdens of the various circuits of these relays are as follows:

#### HRP Relay Only

Directional element and overcurrent elements in series:

0.5 amp. tap at 0.5 amps.	.6 v.a.	41° lag
6.0 amp. tap at 6.0 amps.	3.8 v.a.	36° lag

Directional element polarizing circuit:

At 120 volts.	6.9 v.a.	42° lag
---------------	----------	---------

#### HRK Relay Only

Directional element and overcurrent elements in series:

0.5 amp. tap at 0.5 amps.	.6 v.a.	41° lag
6.0 amp. tap at 6.0 amps.	6.7 v.a.	40° lag

Directional element polarizing circuit:

At 5.0 amperes	4.8 v.a.	10° lag
----------------	----------	---------

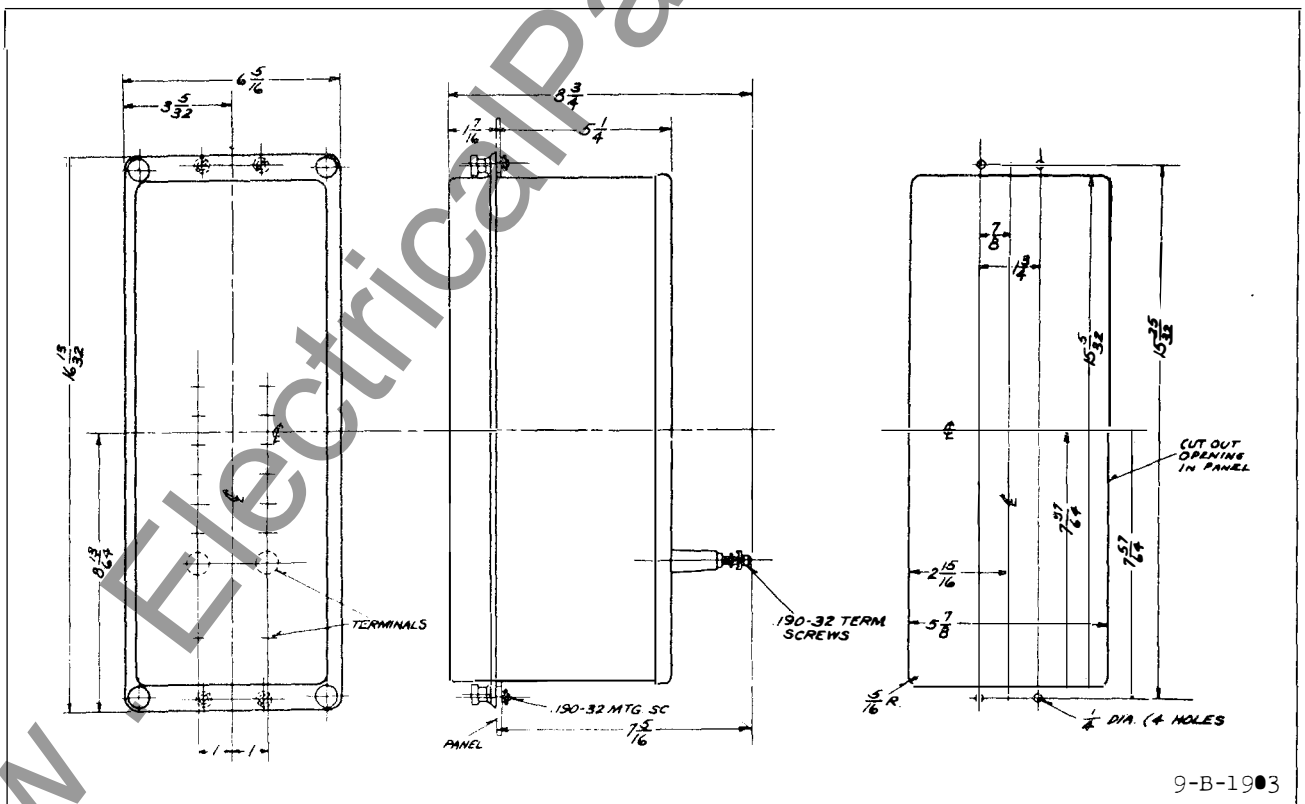


Fig. 8—Outline and Drilling Plan for the M10 Semi-Flush Type FT Case. For Reference Only.



**WESTINGHOUSE ELECTRIC CORPORATION**  
**METER DIVISION** • **NEWARK, N.J.**

Printed in U. S. A.