

Regarding to F416 and F494, each value is replaced with following value in the table "Default settings by inverter rating" on page K-14 of E6581158.

	Default settings by Inverter type	Motor no-load current	Motor adjustment factor
		F4 16	FYgy
		(%)	FTTT
	VFS11S-2002PL	70	90
	VFS11S-2004PL	65	90
	VFS11S-2007PL	60	80
	VFS11S-2015PL	55	70
	VFS11S-2022PL	52	70
	VFS11-2002PM	70	90
	VFS11-2004PM	65	90
	VFS11-2005PM	62	80
	VFS11-2007PM	60	80
	VFS11-2015PM	55	70
	VFS11-2022PM	52	70
	VFS11-2037PM	48	70
	VFS11-2055PM	46	70
	VFS11-2075PM	43	70
	VFS11-2110PM	41	60
	VFS11-2150PM	38	50
	VFS11-4004PL	65	90
	VFS11-4007PL	60	80
	VFS11-4015PL	55	70
	VFS11-4022PL	52	70
	VFS11-4037PL	48	70
	VFS11-4055PL	46	70
	VFS11-4075PL	43	70
	VFS11-4110PL	41	60
2	VFS11-4150PL	38	50

- End -

E6581158

# I. Safety precautions

The items described in these instructions and on the inverter itself are very important so that you can use the inverter safely prevent injury to yourself and other people around you as well as prevent damage to property in the area. Thoroughly familiarize yourself with the symbols and indications shown below and then continue to read the manual. Make sure that you observe all warnings given.

#### Explanation of markings

Marking	Meaning of marking
Danger	Indicates that errors in operation may lead to death or serious injury.
\Lambda Warning	Indicates that errors in operation may lead to injury ( $1$ ) to people or that these errors may cause damage to physical property. ( $2$ )

(\*1) Such things as injury, burns or shock that will not require hospitalization or long periods of outpatient treatment.

(\*2) Physical property damage refers to wide-ranging damage to assets and materials.

#### Meanings of symbols

Mark	king	Meaning of marking
	$\mathbf{S}$	Indicates prohibition (Don't do it). What is prohibited will be described in or near the symbol in either text or picture form.
		Indicates something mandatory (must be done). What is mandatory will be described in or near the symbol in either text or picture form.
	$\rangle$	Indicates danger. What is dangerous will be described in or near the symbol in either text or picture form.
	7	Indicates warning. What the warning should be applied to will be described in or near the symbol in either text or picture form.

#### Limits in purpose

This inverter is used for controlling speeds of three-phase induction motors in general industrial use.

	Safety precautions
	The inverter cannot be used in any device that would present danger to the human body or from which malfunction or error in operation would present a direct threat to human life (nuclear power control device, aviation and space flight control device, traffic device, life support or operation system, safety device, etc.). If the inverter is to be used for any special purpose, first get in touch with the people in charge of sales.
	This product was manufactured under the strictest quality controls but if it is to be used in critical equipment, for example, equipment in which errors in malfunctioning signal output system would cause a major accident, safety devices must be installed on the equipment.
	Do not use the inverter for loads other than those of properly applied three-phase induction motors in general industrial use. (Use in other than properly applied three-phase induction motors may cause an accident.)
14	1
2	

E6581158

11

## General Operation

	Danger	See item
Disassembly prohibited	Never disassemble, modify or repair. This can result in electric shock, fire and injury. For repairs, call your sales agency.	2.
promoted	• Never remove the front cover when power is on or open door if enclosed in a cabinet. The unit contains many high voltage parts and contact with them will result in electric shock.	2.1
$\bigcirc$	• Don't stick your fingers into openings such as cable wiring hole and cooling fan covers. This can result in electric shock or other injury.	2.
Prohibited	<ul> <li>Don't place or insert any kind of object into the inverter (electrical wire cuttings, rods, wires). This can result in electric shock or fire.</li> </ul>	2.
	<ul> <li>Do not allow water or any other fluid to come in contact with the inverter. This can result in electric shock or fire.</li> </ul>	2.
•	• Turn power on only after attaching the front cover or closing door if enclosed in a cabinet. If power is turned on without the front cover attached or closing door if enclosed in a cabi- net. This can result in electric shock or other injury.	2.1
U	• If the inverter begins to emit smoke or an unusual odor, or unusual sounds, immediately turn power off.	3.
Mandatory	If the equipment is continued in operation in such a state, the result may be fire. Call your local sales agency for repairs.	
	• Always turn power off if the inverter is not used for long periods of time since there is a possibility of malfunction caused by leaks, dust and other material. If power is left on with the inverter in that state, it may result in fire.	3.

	Marning Warning	g			See item
Prohibited	Do not touch heat radiating fins or discharge These device are hot, and you'll get burned		nem.		3.
contact	•. ( )				
	<ul> <li>Avoid operation in any location where there other chemicals.</li> <li>The plastic parts may be damaged to a certa</li> </ul>				1.4.4
(	there is a possibility of the plastic covers con				
Drahibitad	If the chemical or solvent is anything other the	han those sho	wn below, please conta	ct us in	
Prohibited	advance.	( <b>T</b> -1-1-0)	European de la contra de la con	- 1-1 -	
	(Table 1) Examples of applicable chemicals and solvents	(Table 2)	Examples of unapplic chemicals and solver		
	Acetic acid (density of 10% or less)		Acetone	ns	
			Benzene		
	Hydrochloric acid (density of 10% or less)				
	Sulfuric acid (density of 10% or less)		Chloroform		
	Sodium chloride		Ethylene chloride		
	Hexane		Ethyl acetate		
	Triethylene glycol		Glycerin		
	•		Tetrachloroethylene		
			Trichloroethylene		
			Xylene		

E6581158

## ■ Transportation & installation

	Danger	See item
$\bigcirc$	• Do not install or operate the inverter if it is damaged or any component is missing. This can result in electric shock or fire. Please consult your local sales agency for repairs. Call your local sales agency for repairs.	1.4.4
Prohibited	<ul> <li>Do not place any inflammable objects nearby.</li> <li>If a flame is emitted due to malfunction, it may result in a fire.</li> </ul>	1.4.4
	<ul> <li>Do not install in any location where the inverter could come into contact with water or other fluids.</li> </ul>	2.
	This can result in electric shock or fire.	1.4.4
	<ul> <li>Must be used in the environmental conditions prescribed in the instruction manual. Use under any other conditions may result in malfunction.</li> </ul>	1.4.4
	<ul> <li>Mount the inverter on a metal plate.</li> <li>The rear panel gets very hot. If installation is in an inflammable object, this can result in fire.</li> </ul>	1.4.4
Mandatory	<ul> <li>Do not operate with the front panel cover removed. This can result in electric shock. Failure to do so can lead to risk of electric shock and can result in death or serious injury.</li> </ul>	1.4.4
	• An emergency stop device must be installed that fits with system specifications (e.g. shut	1.4.4
	off input power then engage mechanical brake). Operation cannot be stopped immediately	
	by the inverter alone, thus risking an accident or injury.	
	All options used must be those specified by Toshiba.	1.4.4
	The use of any other option may result in an accident.	

	▲ Warning	See item
$\bigcirc$	• When transporting or carrying, do not hold by the front panel covers.	2.
	The covers may come off and the unit will drop out resulting in injury.	
Prohibited	<ul> <li>Do not install in any area where the unit would be subject to large amounts of vibration. That could result in the unit failing, resulting in injury.</li> </ul>	1.4.4
TIONDILEU		
	<ul> <li>The main unit must be installed on a base that can bear the unit's weight.</li> </ul>	1.4.4
•	If the unit is installed on a base that cannot withstand that weight, the unit may fall result- ing in injury.	
	<ul> <li>If braking is necessary (to hold motor shaft), install a mechanical brake.</li> </ul>	1.4.4
Mandatory	The brake on the inverter will not function as a mechanical hold, and if used for that pur-	
	pose, injury may result.	

Wiring

Danger	See item
<ul> <li>Do not connect input power to the output (motor side) terminals (U/T1,V/T2,W/T3).</li> <li>That will destroy the inverter and may result in fire.</li> </ul>	2.2
Do not connect resistors to the DC terminals (across PA-PC or PO-PC).     That may cause a fire.     Connect a resistor in accordance with 6 13 4	2.2
<ul> <li>Prohibited</li> <li>Within ten minutes after turning off input power, do not touch wires of devices (MCCB) connected to the input side of the inverter. That could result in electric shock.</li> </ul>	2.2
3	

E6581158

	🗘 Danger	See item
	• Electrical construction work must be done by a qualified expert. Connection of input power by someone who does not have that expert knowledge may re- sult in fire or electric shock.	2.1
	<ul> <li>Connect output terminals (motor side) correctly.</li> <li>If the phase sequence is incorrect, the motor will operate in reverse and that may result in injury.</li> </ul>	2.1
	Wiring must be done after installation.     If wiring is done prior to installation that may result in injury or electric shock	2.1
Mandatory	<ul> <li>The following steps must be performed before wiring.</li> <li>(1) Turn off all input power.</li> <li>(2) Wait at least ten minutes and check to make sure that the charge lamp is no longer lit.</li> <li>(3) Use a tester that can measure DC voltage (800VDC or more), and check to make sure that the voltage to the DC main circuits (across PA-PC) is 45V or less.</li> <li>If these steps are not properly performed, the wiring will cause electric shock.</li> </ul>	2.1
	<ul> <li>Tighten the screws on the terminal board to specified torque.</li> <li>If the screws are not tightened to the specified torque, it may lead to fire.</li> </ul>	2.1
	• Check to make sure that the input power voltage is $+10\%$ , $15\%$ of the rated power voltage written on the rating label ( $\pm 10\%$ when the load is 100% in continuous operation). If the input power voltage is not $+10\%$ , $-15\%$ of the rated power voltage ( $\pm 10\%$ when the load is 100% in continuous operation) this may result in fire.	1.4.4
	<ul> <li>Ground must be connected securely. If the ground is not securely connected, it could lead to electric shock or fire when a malfunction or current leak occurs.</li> </ul>	2.1 2.2
Be Grounded		

	🕂 Warning	See item	
Prohibited	<ul> <li>Do not attach equipment (such as noise filters or surge absorbers) that have built-in capacitors to the output (motor side) terminals. That could result in a fire.</li> </ul>	2.1	

## Operations

	Danger	Se
	Do not touch inverter terminals when electrical power is going to the inverter even if the motor is stopped.     Touching the inverter terminals while power is connected to it may result in electric shock.	3.
	<ul> <li>Do not touch switches when the hands are wet and do not try to clean the inverter with a damp cloth.</li> <li>Such practices may result in electric shock.</li> </ul>	3.
Prohibited	<ul> <li>Do not go near the motor in alarm-stop status when the retry function is selected. The motor may suddenly restart and that could result in injury. Take measures for safety, e.g. attaching a cover to the motor, against accidents when the motor unexpectedly restarts.</li> </ul>	3.
0	• Turn input power on after attaching the front cover. When storing inside the cabinet and using with the front cover removed, always close the cabinet doors first and then turn power on. If the power is turned on with the front cover or the cabinet doors open, it may result in electric shock.	3.
Mandatory	• Make sure that operation signals are off before resetting the inverter after malfunction. If the inverter is reset before turning off the operating signal, the motor may restart suddenly causing injury.	3.
	4	



See item

3.

🔨 Warning



NA

 Observe all permissible operating ranges of motors and mechanical equipment. (Refer to the motor's instruction manual.)

Not observing these ranges may result in injury.

## When sequence for restart after a momentary failure is selected (inverter)

	Marning	See item
	• Stand clear of motors and mechanical equipment. If the motor stops due to a momentary power failure, the equipment will start suddenly af-	6.12.1
$\mathbf{U}$	ter power recovers. This could result in unexpected injury.	
Mandatory	<ul> <li>Attach warnings about sudden restart after a momentary power failure on inverters, mo- tors and equipment for prevention of accidents in advance.</li> </ul>	6.12.1

## When retry function is selected (inverter)

Marning Marning		See item
0	<ul> <li>Stand clear of motors and equipment.</li> <li>If the motor and equipment stop when the alarm is given, selection of the retry function will restart them suddenly after the specified time has elapsed. This could result in unexpected injury.</li> </ul>	6.12.3
Mandatory	• Attach warnings about sudden restart in retry function on inverters, motors and equipment for prevention of accidents in advance.	6.12.3

## Maintenance and inspection

	Danger	See item
Prohibited	• Do not replace parts. This could be a cause of electric shock, fire and bodily injury. To replace parts, call the lo- cal sales agency.	14.2
	• The equipment must be inspected every day. If the equipment is not inspected and maintained, errors and malfunctions may not be dis- covered and that could result in accidents.	14.
Mandatory	<ul> <li>Before inspection, perform the following steps.</li> <li>(1) Turn off all input power to the inverter.</li> <li>(2) Wait at least ten minutes and check to make sure that the charge lamp is no longer lit.</li> <li>(3) Use a tester that can measure DC voltages (800VDC or more), and check to make sure that the voltage to the DC main circuits (across PA-PC) is 45V or less.</li> <li>If inspection is performed without performing these steps first, it could lead to electric shock.</li> </ul>	14.

E6581158

## Ι

#### Disposal

	Marning	See item
<b>O</b> Mandatory	<ul> <li>If you throw away the inverter, have it done by a specialist in industry waste disposal(*). If you throw away the inverter by yourself, this can result in explosion of capacitor or produce noxious gases, resulting in injury.</li> <li>(*) Persons who specialize in the processing of waste and known as "industrial waste product collectors and transporters" or "industrial waste disposal persons. "If the collection, transport and disposal of industrial waste is done by someone who is not licensed for that job, it is a punishable violation of the law. (Laws in regard to cleaning and processing of waste materials)</li> </ul>	16.


#### Attach warning labels

Shown here are examples of warning labels to prevent, in advance, accidents in relation to inverters, motors and other equipment.

Be sure to affix the caution label where it is easily visible when selecting the auto-restart function (6.13.1) or the retry function (6.13.3).

If the inverter has been programmed for restart sequence of momentary power failure, place warning labels in a place where they can be easily seen and read.

(Example of warning label)



Do not go near motors and equipment. Motors and equipment that have stopped temporarily after momentary power failure will restart suddenly after recovery. If the retry function has been selected, place warning labels in a location where they can be easily seen and read.

(Example of warning label)

Warning (Functions programmed for retry)

Do not go near motors and equipment. Motors and equipment that have stopped temporarily after an alarm will restart suddenly after the specified time has elapsed.

## II. Introduction

Thank you for your purchase of the Toshiba "TOSVERT VF-S11" industrial inverter. Please be informed that CPU version will be frequently upgraded.

#### Features

- 1. Built-in noise filter
  - 1) All models in both the 200V and 400V series have a noise filter inside
  - 2) Compliant with European CE marking standard
  - 3) Reduces space requirements and cuts down on time and labor needed in wiring.

#### 2. Simple operation

 Automatic functions (torque boost acceleration/deceleration time, function programming) Just by wiring the motor to the power supply allows instant operation without the need to program parameters.

E6581

2) The potentiometer dial and the RUN/STOP button allow easy operation.

#### 3. Superior basic performance

- 1) 200% or more starting torque
- 2) Smooth operation : Reduced rotation ripple through the use of Toshiba's unique dead-band compensation.
- 3) Built-in current surge suppression circuit : Can be safely connected even if power load is low.
- 4) Maximum 500Hz high frequency output : Optimum for use with high speed motors such as those in lumber machinery and milling machines.
- Maximum carrier frequency : 16kHz quiet operation Toshiba's unique PWM control reduces noise at low carrier.
- 4. Globally compatible
  - 1) Compatible with 240V and 500V power supplies
  - 2) Conforms to CE marking and with UL, CSA and C-Tick.
  - 3) Sink/source switching of control input/output.
- 5. Options allow use with a wide variety of applications
  - Internal communications devices (RS485, Modbus RTU, DeviceNET, LonWorks)
  - Extension panel/Parameter writer
  - DIN rail kit
    - Foot-mounted type noise reduction filter (EMC directive: For class A and class B)
  - Other options are common to all models



## TOCUIDA

	Contents		G
I Safe	ty precautions		
ll Intro	duction	<u> </u>	7
1. Read	d first		
1.1	Check product purchase		A-1
1.2	Contents of the product		A-3
1.3	Names and functions		A-4
1.4	Notes on the application		A-
2. Con	nection equipment		R-'
2. 0011	Cautions on wiring		
2.2	Standard connections		
2.3	Description of terminals		B-(
3. Ope	rations		C-
3.1	Simplified operation of the VF-S11		C-
3.2	How to operate VF-S11		
4. Basi	c VF-S11 operations		
4.1	How to set parameters		D-
5 Basi	c parameters		F-
5.1	Setting acceleration/deceleration time		
5.2	Increasing starting torque		
5.3	Specifying an operation mode, using parameters		
5.4	Selection of operation mode		
5.5	Meter setting and adjustment		
5.6	Standard default setting		
5.7	Forward/reverse run selection (operation panel operation)		E-
5.8	Maximum frequency		E-
5.9	Upper limit and lower limit frequencies		E-
5.10	Base frequency		E-
5.11	Selecting control mode		E-
5.12	Manual torque boost - increasing torque boost at low speeds	S	E-:
5.13			
5.14	Preset-speed operation (speeds in 15 steps)		E-
6. Exte	nded parameters		F-1
6.1			
6.2			

(	6.3	Terminal function selection	<b>F-</b> 7
(	6.4	Basic parameters 2	
(	6.5	Frequency priority selection	
(	6.6	Operation frequency	
(	6.7	DC braking	
(	6.8	Auto-stop in case of lower-limit frequency continuous operation	
	6.9	Jog run mode	
(	6.10	Jump frequency-jumping resonant frequencies	
(	6.11	Preset-speed operation frequencies	
(	6.12	PWM carrier frequency	
(	6.13	Trip-less intensification	
(	6.14	Drooping control	
	6.15	Braking setting functions	
(	6.16	Conducting PID control	F-45
(	6.17	Setting motor constants	F-50
(	6.18	Acceleration/deceleration Patterns 2 and 3	F-54
(	6.19	Protection functions	F-60
(	6.20	Adjustment parameters	
(	6.21	Operation panel parameter	
(	6.22	Communication function (Common serial)	F-81
(	6.23	Parameters for options	F-86
(	6.24	Permanent magnetic motors	F-86
_			<b>.</b> <i>i</i>
		d operation	
	7.1	Setting the operation frequency	
	7.2	Setting the operation mode	
		pring the operation status	
	8.1	Status monitor mode	
ł	8.2	Display of trip information	H-6
9	Takino	measures to satisfy the CE directive	I-1
	9.1	How to cope with the CE directive	
	••••		
10.	Periph	eral devices	J-1
	10.1	Selection of wiring materials and devices	J-1
	10.2	Installation of a magnetic contactor	J-3
	10.3	Installation of an overload relay	J-4
	10.4	Optional external devices	J-5
11 -	Tabla	of parameters and data	K-1
	11.1	User parameters	
	11.2	Basic parameters	
	11.2	Extended parameters	
	11.5		
		ii	

12.1

12.2

13.1

13.2 13.3

13.4

14.1 14.2

14.3

14.4


# E6581158 12. Specifications ..... Models and their standard specifications..... ľ-1 Outside dimensions and mass.....L-4 Trip causes/warnings and remedies ...... M-1 If the motor does not run while no trip message is displayed ......M-7 How to determine the causes of other problems..... .....M-8 14. Inspection and maintenance ......N-1 Making a call for servicing ......N-4 P-1 16. Disposal of the inverter .....

E6581158

# 1. Read first

## 1.1 Check product purchase

Before using the product you have purchased, check to make sure that it is exactly what you ordered.

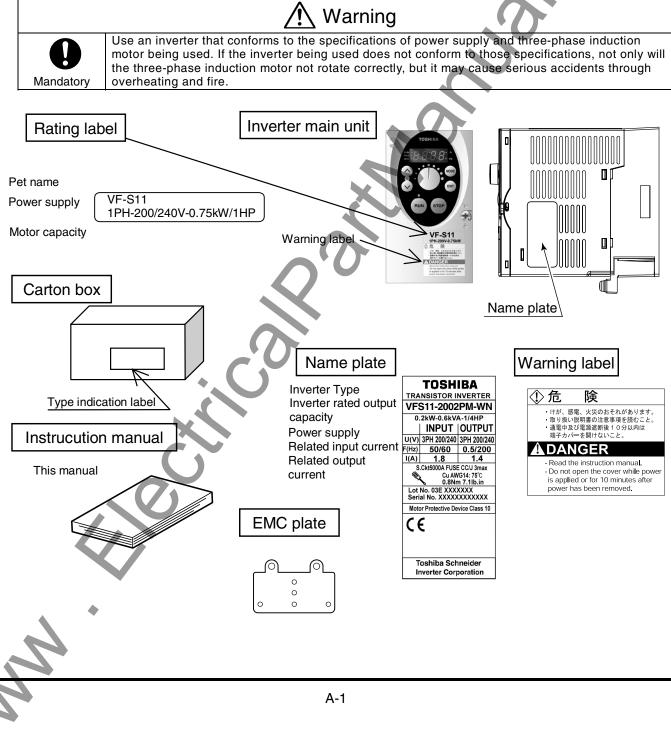

E6581158

#### CD-ROM

Contains the instruction manual in digital form. Some models do not come with this CD-ROM.

<u>/!</u> Warning

Prohibited

Do not play this CD-ROM on any audio CD player to avoid hearing loss due to very loud noises or damage to the CD player.

#### [System requirements]

OS: Microsoft Windows 98/NT/2000/XP Browser: Internet Explorer 4.0 or later CPU: Pentium 100MHz or more Memory: 32MB or more DOS/V-based personal computer

[Starting the browsing program]

When you insert this CD-ROM in the CD-ROM drive, the program "index.htm" in the root directory starts automatically. When you want to close the browsing program or if it does not start automatically, open Windows Explorer and click "\index.htm" under "CD-ROM drive" to display the top window.

[Software needed for browsing]

Adobe Acrobat Reader 4.0J or later

[Trade names and trademarks]

- · Microsoft Windows and Windows logos are trademarks or registered trademarks of Microsoft Corporation in the U.S.A.
- Adobe Acrobat is a trademark of Adobe Systems Incorporated.
- Other company names and product names referred to in this manual are trade names and registered trademarks, respectively.

#### [Copyright]

This manual and other documentation included with the inverter are publications of Toshiba Schneider Inverter Corporation, and all rights to these publications, including copyrights, are reserved by the said corporation.

#### [Duplication]


No part of the contents of the CD-ROM shall be reproduced without written permission from Toshiba Schneider Inverter Corporation.

#### [Exclusions]

Toshiba Schneider Inverter Corporation shall have no liability for any damage of any kind caused by the use of this CD-ROM.

E6581158

## 1.2 Contents of the product

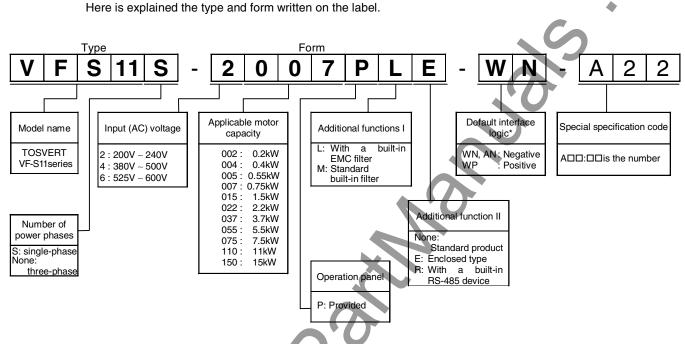


\* This code represents the factory default logic setting. You can switch from one input/output logic to the other using slide switch SW1. (See 2.3.2)

Warning: Always shut power off first then check the ratings label of inverter held in a cabinet.


E6581158

## 1.3 Names and functions



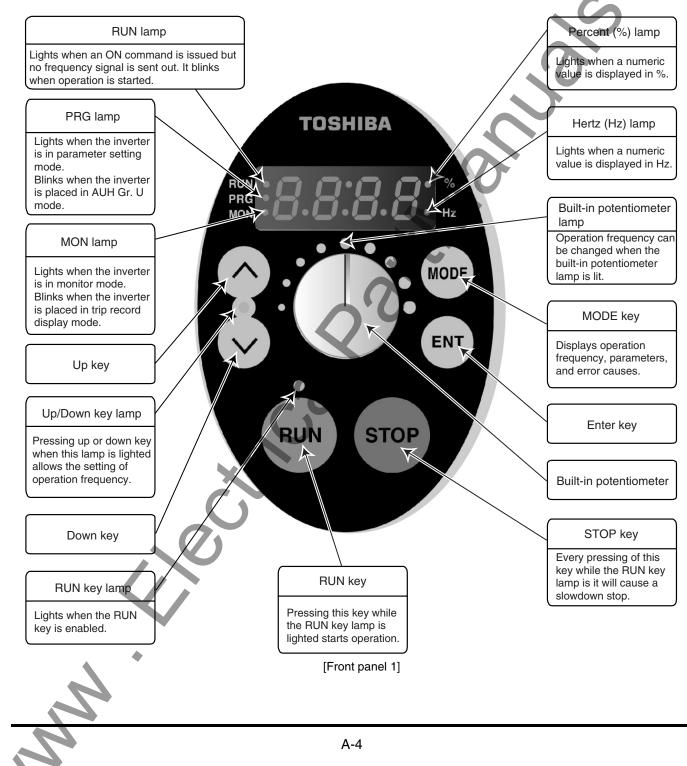

#### TOSHIBA E6581158 TOSHIBA Hz Charge lamp MODE Indicates that high voltage is still Unlock position mark present within the inverter. Do not open the terminal board cover ENT The front panel is unlocked when while this is lit. the dot on the locking screw is on this (upper) side. STOP RUN Front panel locking screw Front panel The inverter came with this The front panel of the inverter or screw in the locked position. terminal board So from this position, turn the To avoid touching the terminal screw 90° counterclockwise to board by mistake, be sure to close unlock the front panel, or turn **VF-S11** the front panel before starting it 90° clockwise to lock the 1PH-200V-0.75kW operation. front panel. ①危 険 The screw does not turn 360°. So 8電、火災のおそれがあります。 い説明書の注意事項を読むこと。 20電源遮断後10分以内は いーを開けないこと。 avoid damage to the screw, do not use excessive force when NGER turning it. **D**A he instruction manual. open the cover while power ed or for 10 minutes after has been removed. Lock position mark The front panel is locked when the dot on the locking screw is on this (lower) side. A-5

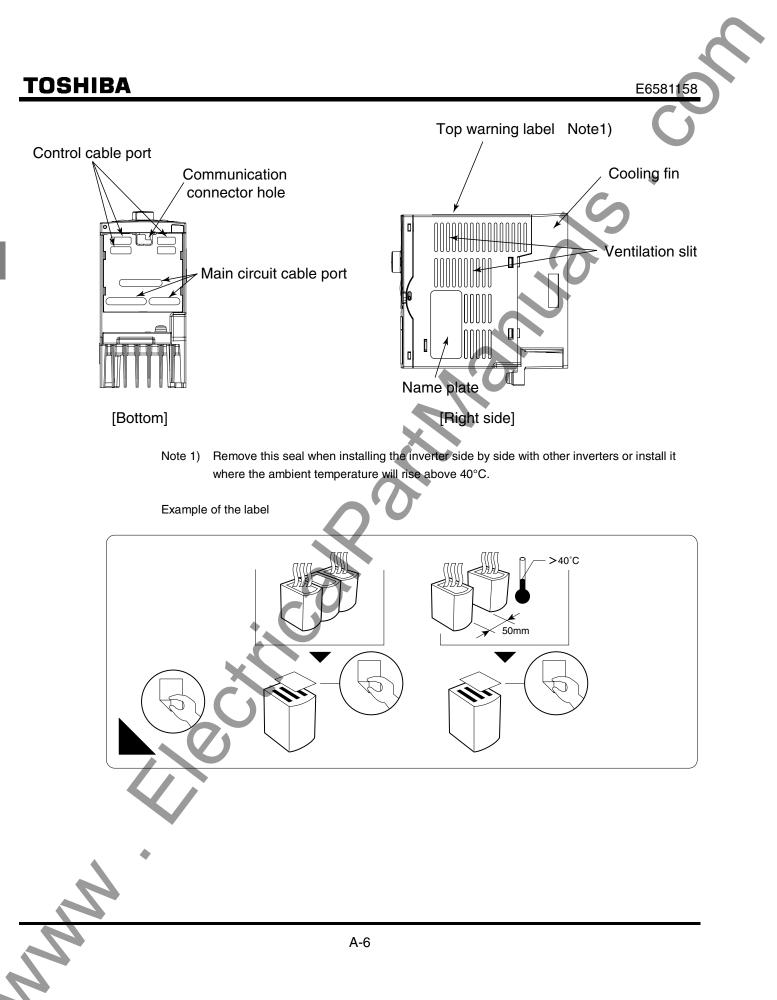


# <u>E6581158</u>


## 1.3.2 Main circuit and control circuit terminal boards


#### 1) Main circuit terminal board


In case of the lug connector, cover the lug connector with insulated tube, or use the insulated lug connector.


Screw size	tightening torque	
M3.5 screw	0.9N • m	7.1lb • in
M4 screw	1.3N • m	10.7lb • in
M5 screw	2.5N • m	22.3lb • in
M6 screw	4.5N • m	40.1lb • in

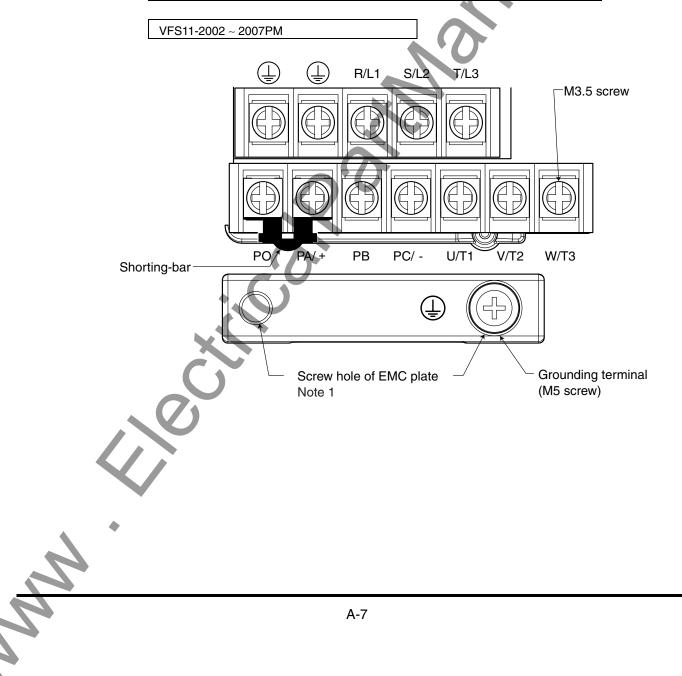


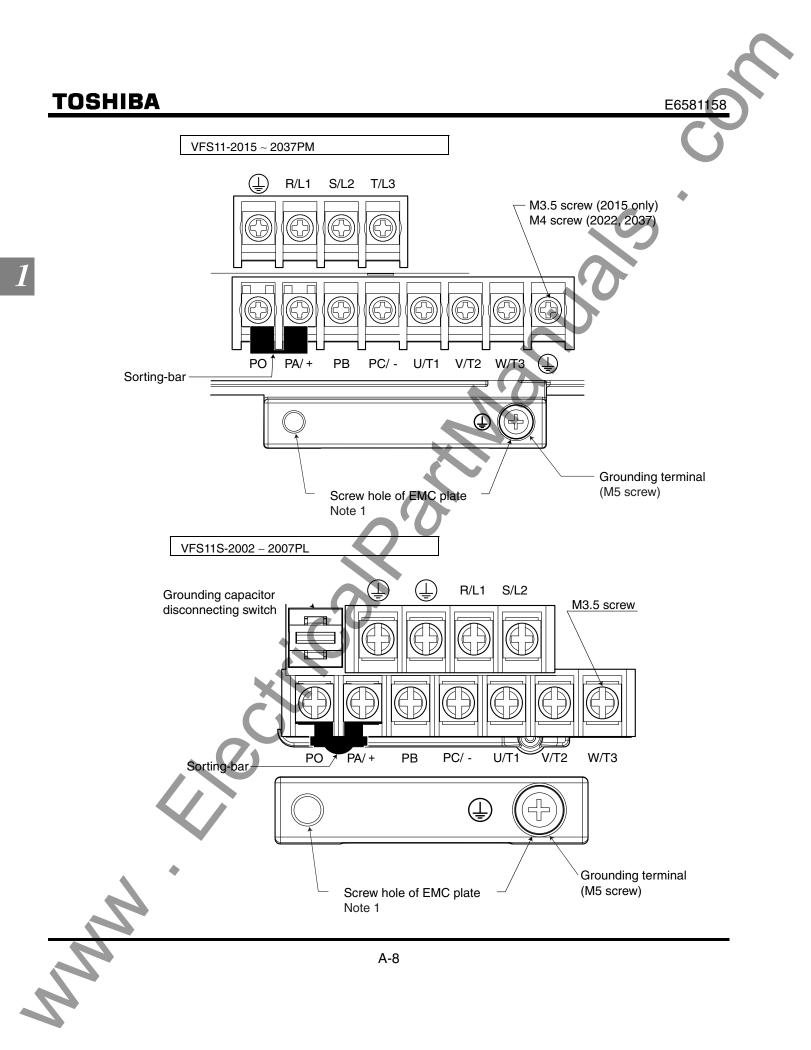

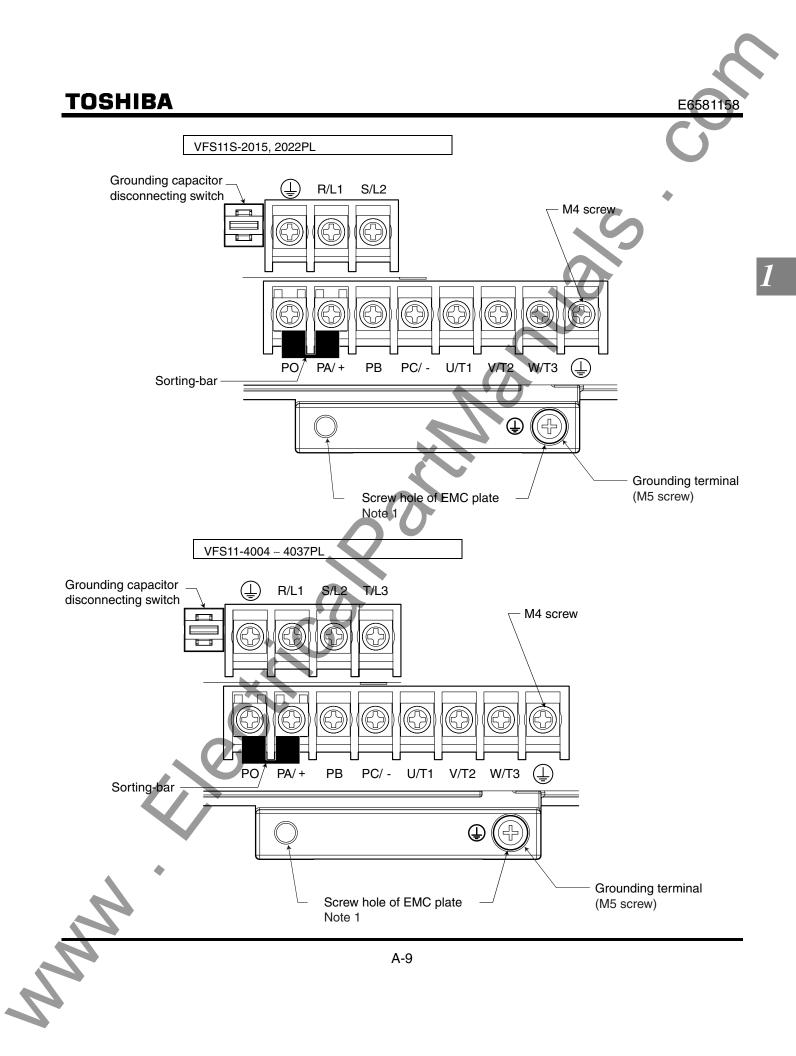


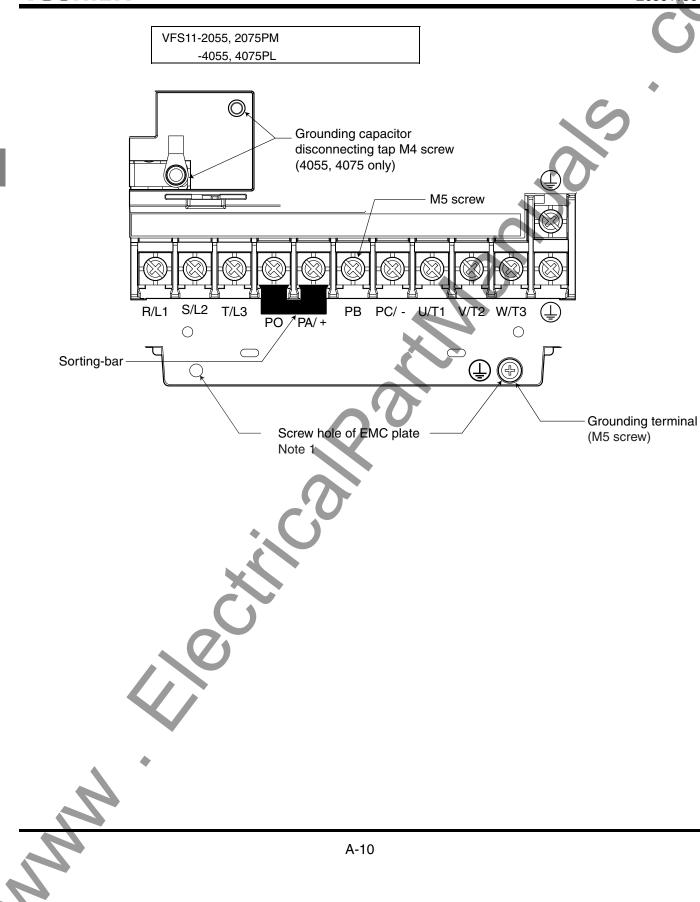

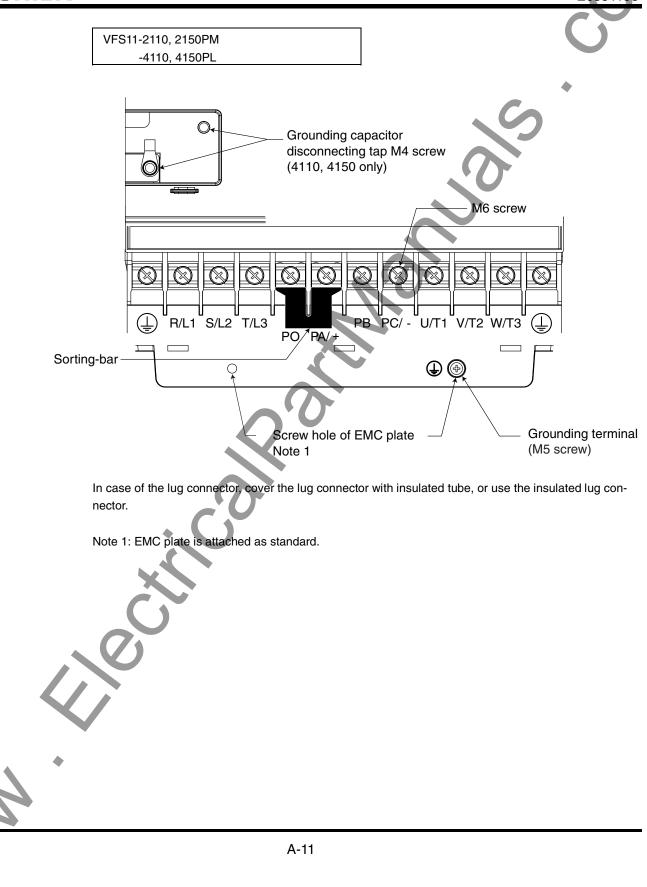

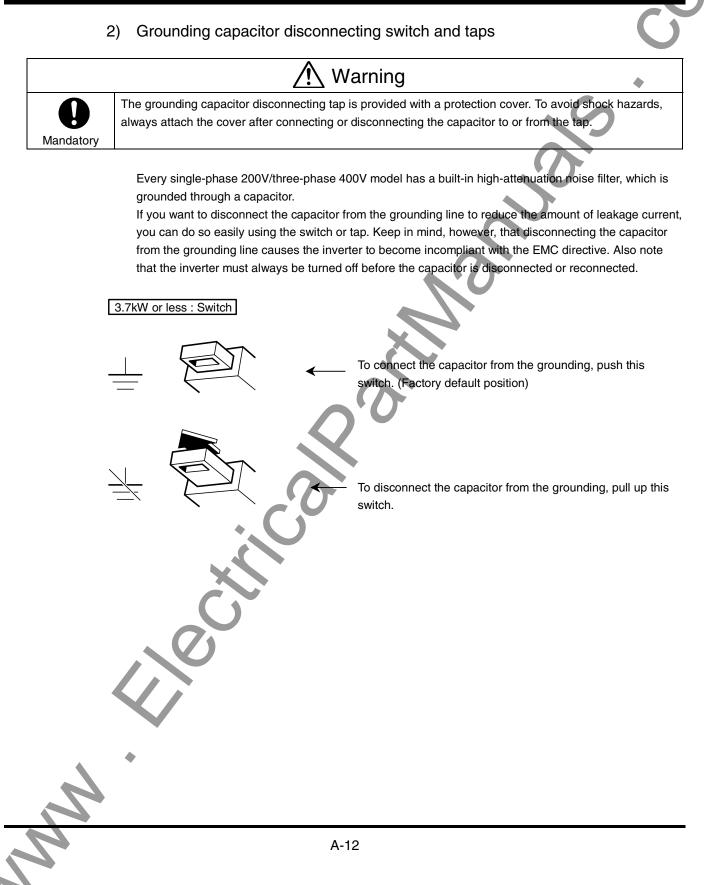


<u>E6581158</u>

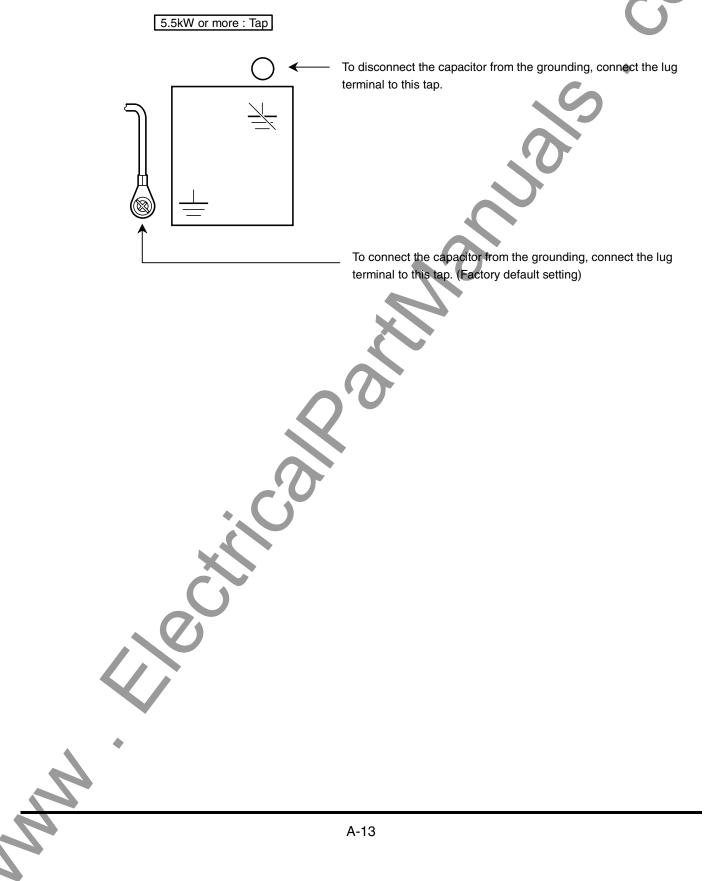

E6581158

#### 3) Control circuit terminal board

The control circuit terminal board is common to all equipment.

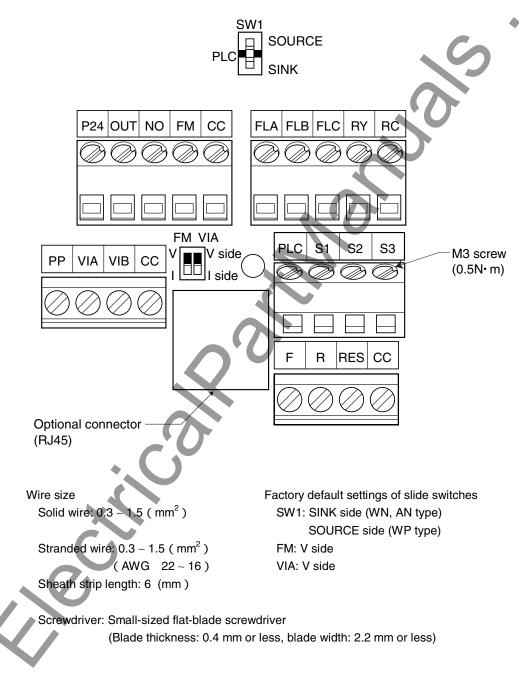


See 2.3.2 for details on all terminal functions.

E6581158

## 1.3.3 How to open the front (terminal board) cover

To wire the terminal board, remove the front lower cover in line with the steps given below.

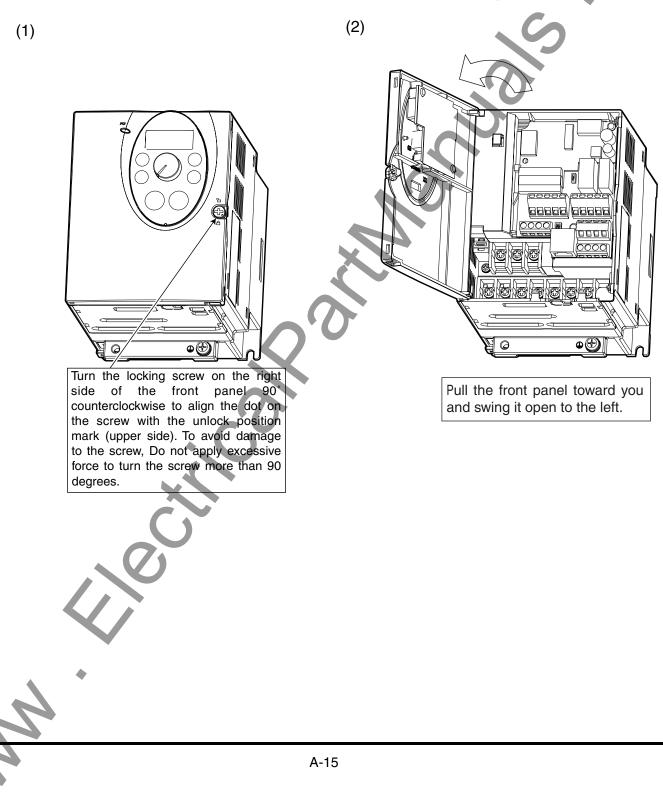

E6581158

#### 1.4 Notes on the application

#### 1.4.1 Motors

When the VF-S11 and the motor are used in conjunction, pay attention to the following iter

## 🕂 Warning



Use an inverter that conforms to the specifications of power supply and three-phase induction motor being used. If the inverter being used does not conform to those specifications, not only will the three-phase induction motor not rotate correctly, but it may cause serious accidents through overheating and fire.

#### Comparisons with commercial power operation.

The VF-S11 Inverter employs the sinusoidal PWM system. However, the output voltage and output current do not assume a precise sine wave, they have a distorted wave that is close to sinusoidal waveform. This is why compared to operation with a commercial power there will be a slight increase in motor temperature, noise and vibration.

#### Operation in the low-speed area

When running continuously at low speed in conjunction with a general purpose motor, there may be a decline in that motor's cooling effect. If this happens, operate with the output decreased from rated load.

To carry out low-speed operation continuously at the rated torque, we recommend to use a "VF motor" or a "Gold motor" designed for use with an inverter. When operating in conjunction with a "VF motor", you must change the inverter's motor overload protection level to VF motor use ( $\Pi L \Pi$ ).

#### Adjusting the overload protection level

The VF-S11 Inverter protects against overloads with its overload detection circuits (electronic thermal). The electronic thermal's reference current is set to the inverter's rated current, so that it must be adjusted in line with the rated current of the general purpose motor being used in combination.

#### High speed operation at and above 60Hz

Operating at frequencies greater than 60Hz will increase noise and vibration. There is also a possibility that such operation will exceed the motor's mechanical strength limits and the bearing limits so that you should inquire to the motor's manufacturer about such operation.

#### Method of lubricating load mechanisms

Operating an oil-lubricated reduction gear and gear motor in the low-speed areas will worsen the lubricating effect. Check with the manufacturer of the reduction gear to find out about operable gearing area.



E6581158

#### Low loads and low inertia loads

The motor may demonstrate instability such as abnormal vibrations or overcurrent trips at light loads of 50 % or under of the load percentage, or when the load's inertia moment is extremely small. If that happens reduce the carrier frequency.

#### Occurrence of instability

Unstable phenomena may occur under the load and motor combinations shown below.

- · Combined with a motor that exceeds applicable motor ratings recommended for the inverter
- · Combined with special motors

To deal with the above lower the settings of inverter carrier frequency.

Combined with couplings between load devices and motors with high backlash
When using the inverter in the above combination, use the S-pattern acceleration/deceleration function,
or when vector control is selected, adjust the speed control response/stability factor or switch to V/f
control mode.

Combined with loads that have sharp fluctuations in rotation such as piston movements
 In this case, adjust the response time (inertial moment setting) during vector control or switch to V/f control.

#### Braking a motor when cutting off power supply


A motor with its power cut off goes into free-run, and does not stop immediately. To stop the motor quickly as soon as the power is cut off install an auxiliary brake. There are different kinds of brake devices, both electrical and mechanical. Select the brake that is best for the system.

#### Load that produces regenerative torque

When combined with a load that produces regenerative torque, the overvoltage or overcurrent protection function may be activated to trip the inverter. For this kind of situation, you must install a dynamic braking resistor, etc. that complies with the load conditions.

#### Motor with brake

If a motor with brake is connected directly to the output side of the inverter, the brake will not release because voltage at startup is low. Wire the brake circuit separately from the motor's main circuits.

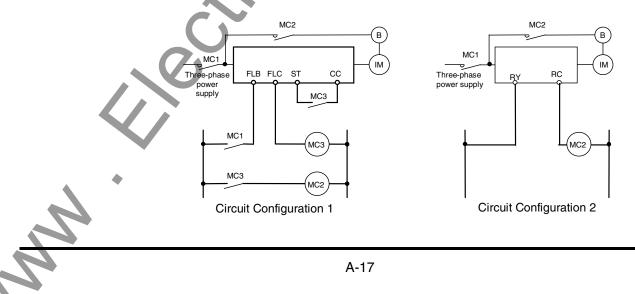

In circuit configuration 1, the brake is turned on and off through MC2 and MC3. If the circuit is configured in some other way, the overcurrent trip may be activated because of the locked rotor current when the brake goes into operation.

Circuit configuration 2 uses low-speed signal RY to turn on and off the brake.

Turning the brake on and off with a low-speed signal may be better in such applications as elevators. Please confer with us before designing the system.

#### Measures to protect motors against surge voltages

In a system in which a 400V-class inverter is used to control the operation of a motor, very high surge voltages may be produced, applied to the motor coils repeatedly for a long time and cause deterioration of their insulation, depending on the cable length, cable routing and types of cables used. Here are some examples of measures against surge voltages.

- (1) Lower the inverter's carrier frequency.
- (2) Set the parameter  $F \ni I \subseteq$  (Carrier frequency control mode selection) to  $2 \text{ or } \exists$ .
- (3) Use a motor with high insulation strength.
- (4) Insert an AC reactor or a surge voltage suppression filter between the inverter and the motor.

#### 1.4.2 Inverters

#### Protecting inverters from overcurrent

The inverter has an overcurrent protection function. However because the programmed current level is set to the inverter's maximum applicable motor, if the motor is one of small capacity and it is in operation, the overcurrent level and the electronic thermal protection must be readjusted. If adjustment is necessary, see 5-13, and make adjustments as directed.


#### Inverter capacity

Do not use a small-capacity (kVA) inverter to control the operation of a large-capacity motor (two-class or more larger motor), no matter how light the load is. Current ripple will raise the output peak current making it easier to set off the overcurrent trip.

E6581158

#### Power factor improving capacitor


Power factor improving capacitors cannot be installed on the output side of the inverter. When a motor is run that has a power factor improving capacitor attached to it, remove the capacitors. This can cause inverter malfunction trips and capacitor destruction.

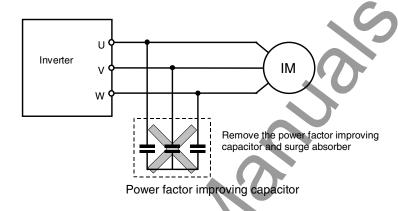

#### Operating at other than rated voltage

Connections to voltages other than the rated voltage described in the rating label cannot be made. If a connection must be made to a power supply other than one with rated voltage, use a transformer to raise or lower the voltage to the rated voltage.

#### Circuit interrupting when two or more inverters are used on the same power line.

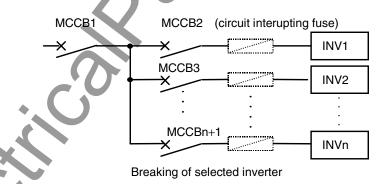

There is no fuse in the inverter's main circuit. Thus, as the diagram above shows, when more than one inverter is used on the same power line, you must select interrupting characteristics so that only the MCCB2 will trip and the MCCB1 will not trip when a short occurs in the inverter (INV1). When you cannot select the proper characteristics install a circuit interrupting fuse between the MCCB2 and the INV1.

#### If power supply distortion is not negligible

If the power supply distortion is not negligible because the inverter shares a power distribution line with other systems causing distorted waves, such as systems with thyristors or large-capacity inverters, install an input reactor to improve the input power factor, to reduce higher harmonics, or to suppress external surges.

E6581158

#### Disposal

If an inverter is no longer usable, dispose of it as industrial waste.

## 1.4.3 What to do about the leak current


## 🕂 Warning

Current may leak through the inverter's input/output wires because of insufficient electrostatic capacity on the motor with bad effects on peripheral equipment.

The leak current's value is affected by the carrier frequency and the length of the input/output wires. Test and adopt the following remedies against leak current.

#### (1) Effects of leak current across ground

Leak current may flow not just through the inverter system but also through ground wires to other systems. Leak current will cause earth leakage breakers, leak current relays, ground relays, fire alarms and sensors to operate improperly, and it will cause superimposed noise on the CRT screen or display of incorrect current amounts during current detection with the CT.

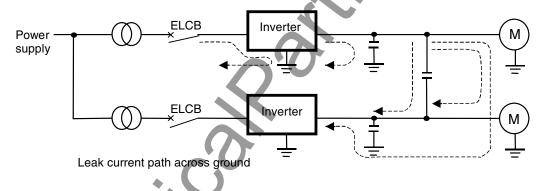

#### Remedies:

1.If there is no radio-frequency interference or similar problem, detach the built-in noise filter capacitor, using the grounding capacitor disconnecting switch or tap. (See 1.3.2-2)


2.Reduce PWM carrier frequency.


The setting of PWM carrier frequency is done with the parameter  $F \exists \square \square$ .

3. Use high frequency remedial products (Schneider Toshiba electric corporation: Tesys J series or Esper Mighty Series) for earth leakage breakers. PWM carrier frequency.

4.If the sonsors and CRT are affected, it can be remedied using the reduction of PWM carrier frequency described in 1 above, but if this cannot be remedied since there is an increase in the motor's magnetic noise, please consult with Toshiba.


E6581158



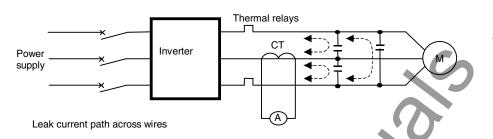

(1) Thermal relays

The high frequency component of current leaking into electrostatic capacity between inverter output wires will increase the effective current values and make externally connected thermal relays operate improperly. If the wires are more than 50 meters long, it will be easy for the external thermal relay to operate improperly with models having motors of low rated current (several A(ampere) or less), especially the 400V class low capacity (3.7kW or less) models, because the leak current will increase in proportion to the motor rating.

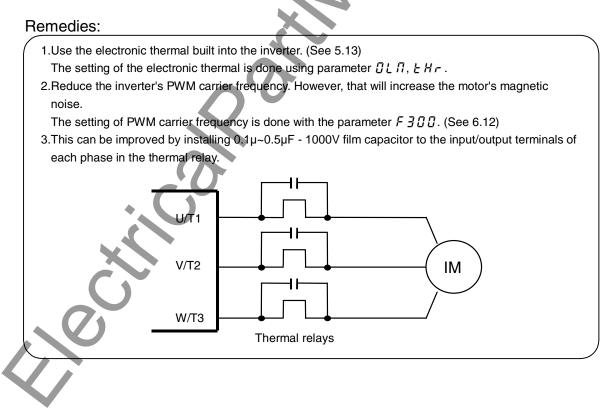

E6581158

#### (2) CT and ammeter

If a CT and ammeter are connected externally to detect inverter output current, the leak current's high frequency component may destroy the ammeter. If the wires are more than 50 meters long, it will be easy for the high frequency component to pass through the externally connected CT and be superimposed on and burn the ammeter with models having motors of low rated current (several A(ampere) or less), especially the 400V class low capacity (3.7kW or less) models, because the leak current will increase in proportion to the motor's rated current.

#### **Remedies:**

- 1.Use a meter output terminal in the inverter control circuit.
- The output current can be output on the meter output terminal (FM). If the meter is connected, use an ammeter of 1mAdc full scale or a voltmeter of 7.5V-1mA full scale.
- 2.Use the monitor functions built into the inverter.
  - Use the monitor functions on the panel built into the inverter to check current values.


## 1.4.4 Installation


#### Installation environment

The VF-S11 Inverter is an electronic control instrument. Take full consideration to installing it in the proper operating environment.

Danger		
$\bigtriangledown$	<ul> <li>Do not place any inflammable substances near the VF-S11 Inverter.</li> <li>If an accident occurs in which flame is emitted, this could lead to fire.</li> </ul>	
Prohibited		
	Operate under the environmental conditions prescribed in the instruction manual.	
Mandatory	Operations under any other conditions may result in malfunction.	

	Marning
$\sim$	<ul> <li>Do not install the VF-S11 Inverter in any location subject to large amounts of vibration.</li> </ul>
	This could cause the unit to fall, resulting in bodily injury.
Duchildend	
Prohibited	
	• Check to make sure that the input power voltage is +10%, -15% of the rated power voltage written on the rating label (±10% when the load is 100% in continuous operation) If the input power voltage is not
Mandatory	+10%, -15% of the rated power voltage (±10% when the load is 100% in continuous operation) this may result in fire.

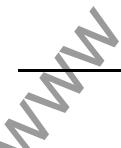

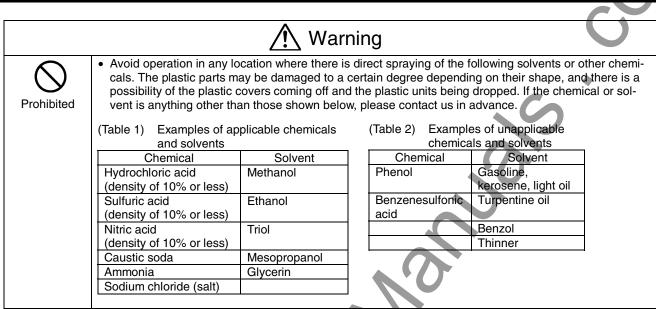

٠

Note: The plastic cover has resistance to deformation by the above applicable solvents. They are not examples for resistance to fire or explosion.




Do not install in any location of high temperature, high humidity, moisture condensation and freezing and avoid locations where there is exposure to water and/or where there may be large amounts of dust, metallic fragments and oil mist.

Do not install in any location where corrosive gases or grinding fluids are present.

Operate in areas where ambient temperature ranges from -10°C to 60°C. Operation over 40°C is allowed when peel off the top warning label. When installing the inverter where the ambient temperature will rise above 50°C, remove the caution label (seal) from the top of it and operate it at a current lower than the rated one.



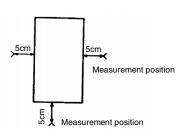

The inverter is a heat-emitting body. Make sure to provide proper space and ventilation when installing in the cabinet. When installing inside a cabinet, we recommend peel of the top seal although 40°C or less.

E6581158

• Do not install in any location that is subject to large amounts of vibration.

Note:



If the VF-S11 Inverter is installed in a location that is subject to vibration, anti-vibration measures are required. Please consult with Toshiba about these measures.

 If the VF-S11 Inverter is installed near any of the equipment listed below, provide measures to insure against errors in operation.



Solenoids:Attach surge suppressor on coil.Brakes:Attach surge suppressor on coil.Magnetic contactors:Attach surge suppressor on coil.Fluorescent lights:Attach surge suppressor on coil.Resistors:Place far away from VF-S11 Inverter.

#### How to install


Danger	
Prohibited	Do not install or operate the inverter if it is damaged or any component is missing. This can result in electric shock or fire. Please consult your local sales agency for repairs. Call your lo- cal sales agency for repairs.
Mandatory	<ul> <li>Mount the inverter on a metal plate. The rear panel gets very hot. If installation is in an inflammable object, this can result in fire.</li> <li>Do not operate with the front panel cover removed. This can result in electric shock.</li> <li>An emergency stop device must be installed that fits with system specifications (e.g. shut off input power then engage mechanical brake). Operation cannot be stopped immediately by the inverter alone, thus risking an accident or injury.</li> <li>All options used must be those specified by Toshiba. The use of any other option may result in an accident.</li> </ul>

## A Warning

	<ul> <li>The main unit must be installed on a base that can bear the unit's weight.</li> <li>If the unit is installed on a base that cannot withstand that weight, the unit may fall resulting in injury.</li> <li>If braking is necessary (to hold motor shaft), install a mechanical brake.</li> </ul>
Mandatory	The brake on the inverter will not function as a mechanical hold, and if used for that purpose, injury may result.

### How to install

Install the inverter in a well-ventilated indoor place and mount it on a flat metal plate in portrait orientation. If you are installing more than one inverter, the separation between inverters should be at least 5 centimeters, and they should be arranged in horizontal rows. If the inverters are horizontally arranged with no space between them (side-by-side installation), peel of the ventilation seals on top of the inverter. It is necessary to decrease the current if the inverter is operated at over 40°C. For more information, refer to "Load Reduction and Thermal Environment Instruction Manual."

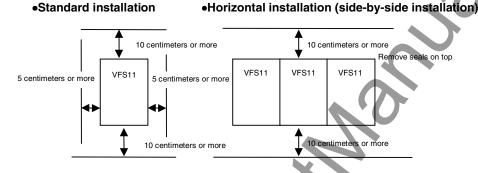

The space shown in the diagram is the minimum allowable space. Because air cooled equipment has cooling fans built in on the top or bottom surfaces, make the space on top and bottom as large as possible to allow for air passage.

Note: Do not install in any location where there is high humidity or high temperatures and where there are large amounts of dust, metallic fragments and oil mist. If you are going to install the equipment in any area that presents a potential problem, please consult with Toshiba before doing so.

### Calorific values of the inverter and the required ventilation

About 5% of the rated power of the inverter will be lost as a result of conversion from AC to DC or from DC to AC. In order to suppress the rise in temperature inside the cabinet when this loss becomes heat loss, the interior of the cabinet must be ventilated and cooled.

The amount of forcible air-cooling ventilation required and the necessary heat discharge surface quantity when operating in a sealed cabinet according to motor capacity are as follows.

	Operating motor			Calorific	Values	Amount of forcible air	Heat discharge surface
Voltage class	capacity	Invert	er type	Carrier	Carrier	cooling ventilation re-	area required for sealed
Ũ	( kW )			frequency 4kHz	frequency 12kHz	quired (m <sup>3</sup> /min)	storage cabinet(m <sup>2</sup> )
	0.2		2002PL	23	29	0.23	0.8
	0.4		2004PL	47	60	0.29	1.0
Single-phase	0.75	VFS11S-	2007PL	74	88	0.40	1.4
200V class	1.5		2015PL	142	169	0.60	2.1
	2.2		2022PL	239	270	0.80	2.8
	0.2		2002PM	21	26	0.23	0.8
	0.4		2004PM	43	54	0.29	1.0
	0.55		2005PM	50	54	0.32	1.1
	0.75		2007PM	67	79	0.40	1.4
Single-Phase	1.5	VFS11-	2015PM	131	150	0.60	2.1
200V class	2.2		2022PM	168	195	0.80	2.8
2007 Class	3.7		2037PM	330	374	1.2	4.3
	5.5		2055PM	450	510	1.7	6.1
	7.5		2075PM	576	635	2.3	8.1
	11		2110PM	750	820	3.4	12.0
	15		2150PM	942	1035	4.6	16.0
	0.4		4004PL	30	42	0.32	1.1
Three-Phase	0.75		4007PL	44	57	0.40	1.4
	1.5		4015PL	77	99	0.60	2.1
	2.2		4022PL	103	134	0.80	2.8
	3.7	VFS11-		189	240	1.2	4.3
400V class	5.5		4055PL	264	354	1.7	6.1
	7.5		4075PL	358	477	2.3	8.1
	11		4110PL	490	650	3.4	12.0
	15		4150PL	602	808	4.6	16.0

Notes


- 1) The heat loss for the optional external devices (input reactor, DC reactor, radio noise reduction filters, etc.) is not included in the calorific values in the table
- 2) Case of 100% Load Continuation operation.

### Panel designing taking into consideration the effects of noise

The inverter generates high frequency noise. When designing the control panel setup, consideration must be given to that noise, Examples of measures are given below.

- Wire so that the main circuit wires and the control circuit wires are separated. Do not place them in the same conduit, do not run them parallel, and do not bundle them.
- Provide shielding and twisted wire for control circuit wiring.
- Separate the input (power) and output (motor) wires of the main circuit. Do not place them in the same conduit, do not run them parallel, and do not bundle them.
- Ground the inverter ground terminals  $(\stackrel{\bot}{=})$ .
- Install surge suppressor on any magnetic contactor and relay coils used around the inverter.
- Install noise filters if necessary.


• Install EMC plate and shielded wires fit with the EMC plate.

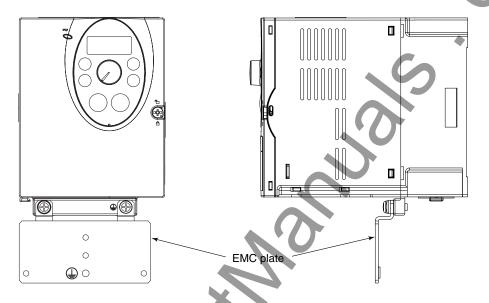

### Installing more than one unit in a cabinet

If you are installing two or more inverters in one cabinet, pay attention to the following.

- Inverters may be installed side by side with each other with no space left between them.
- When installing inverters side by side, detach the caution label on the top surface of each inverter and use them where the ambient temperature will not rise above 40°C.
   When using inverters where the ambient temperature will rise above 40°C, leave a space of 5 cm or more between them and remove the caution label from the top of each inverter, or operate each inverter at a current lower than the rated one. For more information, refer to "Load Reduction and Thermal Environment Instruction Manual."
- Ensure a space of at least 20 centimeters on the top and bottom of the inverters.
- Install an air deflecting plate so that the heat rising up from the inverter on the bottom does not affect the inverter on the top.

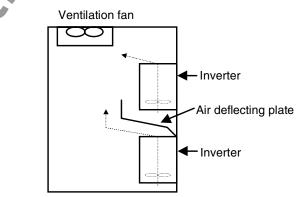

E6581158

## 2. Connection equipment

	Danger
Disassembly prohibited	<ul> <li>Never disassemble, modify or repair. This can result in electric shock, fire and injury. For repairs, call your sales agency.</li> </ul>
Prohibited	<ul> <li>Don't stick your fingers into openings such as cable wiring hole and cooling fan covers. This can result in electric shock or other injury.</li> <li>Don't place or insert any kind of object into the inverter (electrical wire cuttings, rods, wires). This can result in electric shock or fire.</li> <li>Do not allow water or any other fluid to come in contact with the inverter. That may result in electric shock or fire.</li> </ul>

Marning



• When transporting or carrying, do not hold by the front panel covers. The covers may come off and the unit will drop out resulting in injury.

## 2.1 Cautions on wiring

<ul><li>Mandatory</li><li>Electrical construction work must be done by a qualified expert.</li></ul>	$\bigcirc$	<ul> <li>Never remove the front cover when power is on or open door if enclosed in a cabinet. The unit contains many high voltage parts and contact with them will result in electric shock.</li> </ul>
<ul> <li>If power is turned on without the front cover attached or closing door if enclosed in a cabinet. This caresult in electric shock or other injury.</li> <li>Electrical construction work must be done by a qualified expert. Connection of input power by someone who does not have that expert knowledge may result in fire electric shock.</li> <li>Connect output terminals (motor side) correctly. If the phase sequence is incorrect, the motor will operate in reverse and that may result in injury.</li> <li>Wiring must be done after installation. If wiring is done prior to installation that may result in injury or electric shock.</li> <li>The following steps must be performed before wiring.</li> <li>Shut off all input power.</li> <li>Wait at least ten minutes and check to make sure that the charge lamp is no longer lit.</li> <li>Use a tester that can measure DC voltage (800VDC or more), and check to make sure that the voltage to the DC main circuits (across PA-PC) is 45V or less. If these steps are not properly performed, the wiring will cause electric shock.</li> <li>Tighten the screws on the terminal board to specified torque.</li> </ul>	Prohibited	• <b>· · ·</b>
In the screws are not lightened to the specified torque, it may lead to the.	Mandatory	<ul> <li>If power is turned on without the front cover attached or closing door if enclosed in a cabinet. This caresult in electric shock or other injury.</li> <li>Electrical construction work must be done by a qualified expert. Connection of input power by someone who does not have that expert knowledge may result in fire celectric shock.</li> <li>Connect output terminals (motor side) correctly. If the phase sequence is incorrect, the motor will operate in reverse and that may result in injury.</li> <li>Wiring must be done after installation. If wiring is done prior to installation that may result in injury or electric shock.</li> <li>The following steps must be performed before wiring.</li> <li>(1) Shut off all input power.</li> <li>(2) Wait at least ten minutes and check to make sure that the charge lamp is no longer lit.</li> <li>(3) Use a tester that can measure DC voltage (800VDC or more), and check to make sure that the voltage to the DC main circuits (across PA-PC) is 45V or less. If these steps are not properly performed, the wiring will cause electric shock.</li> <li>Tighten the screws on the terminal board to specified torque.</li> </ul>
	5	If the screws are not tightened to the specified torque, it may lead to fire.

E6581158

## 🗘 Danger



Prohibited

Ground must be connected securely. If the ground is not securely connected, it could lead to electric shock or fire when a malfunction or current leak occurs.

## Varning

2

 Do not attach devices with built-in capacitors (such as noise filters or surge absorber) to the output (motor side) terminal.

This could cause a fire.

### Preventing radio noise

To prevent electrical interference such as radio noise, separately bundle wires to the main circuit's power terminals (R/L1, S/L2, T/L3) and wires to the motor terminals (U/T1, V/T2, W/T3).

### Control and main power supply

The control power supply and the main circuit power supply for the VFS11 are the same. If a malfunction or trip causes the main circuit to be shut off, control power will also be shut off. When checking the cause of the malfunction or the trip, use the trip holding retention selection parameter. (See 6.19.3)

### Wiring

- Because the space between the main circuit terminals is small use sleeved pressure terminals for the connections. Connect the terminals so that adjacent terminals do not touch each other.
- For ground terminal  $\frac{1}{2}$  use wires of the size that is equivalent to or larger than those given in table 10.1 and always ground the inverter (200V voltage class: D type ground [former type 3 ground]; 400V class: C type ground [former special type 3 ground]).

Use as large and short a ground wire as possible and wire it as close as possible to the inverter.

- For the sizes of electric wires used in the main circuit, see the table in 10.1.
- The length of the main circuit wire in 10-1 should be no longer than 30 meters. If the wire is longer than 30 meters, the wire size (diameter) must be increased.



E6581158


## 2.2 Standard connections

	Danger
Prohibited	<ul> <li>Do not connect input power to the output (motor side) terminals (U/T1, V/T2, W/T3). Connecting input power to the output could destroy the inverter or cause a fire.</li> <li>Do not insert a resistor between DC terminals (between PA/+ and PC/-, or between PO and PC/-). It could cause a fire. See 6.13.4 for the connection of a resistor.</li> <li>First shut off input power and wait at least 10 minutes before touching wires on equipment (MCCB) that is connected to inverter power side. Touching the wires before that time could result in electric shock.</li> </ul>
Be Grounded	Securely connect to ground with a ground wire.     It could lead to electric shock or fire when a malfunction or current leak occurs.
2	B-3


E6581158

### 2.2.1 Standard connection diagram 1


This diagram shows a standard wiring of the main circuit.

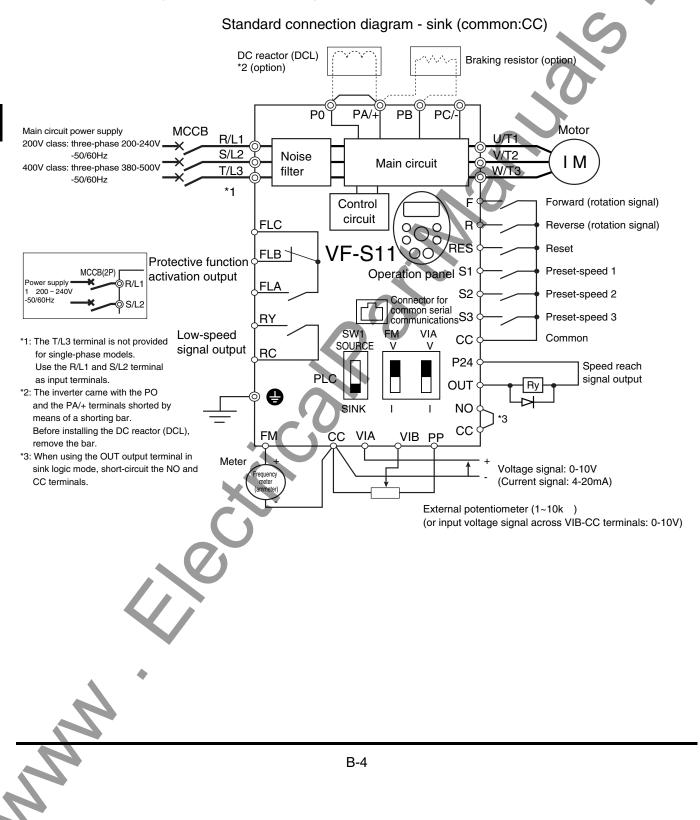

### 2.2.2 Standard connection diagram 2

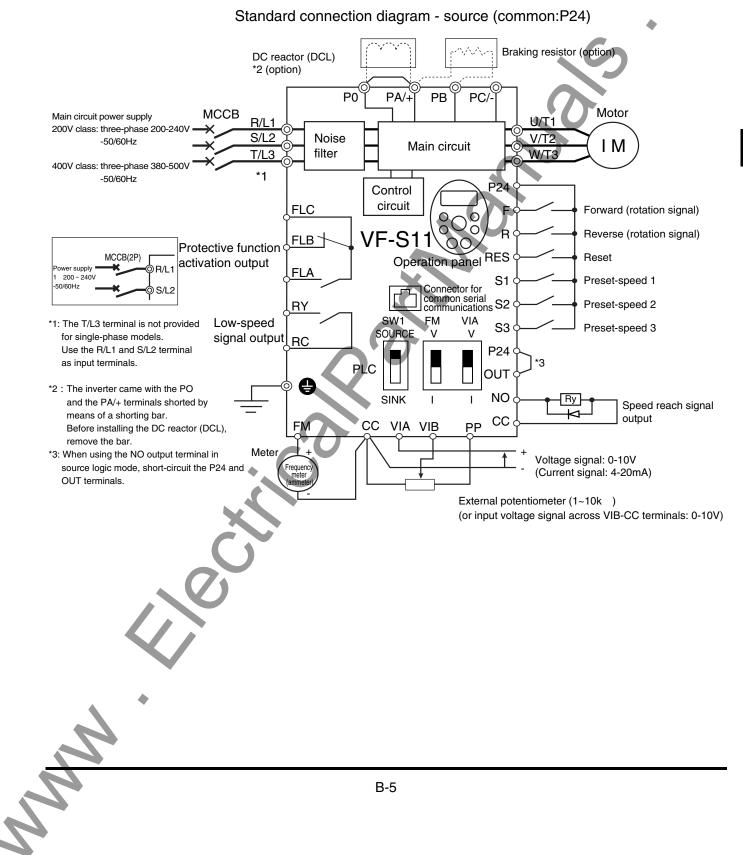

E6581158

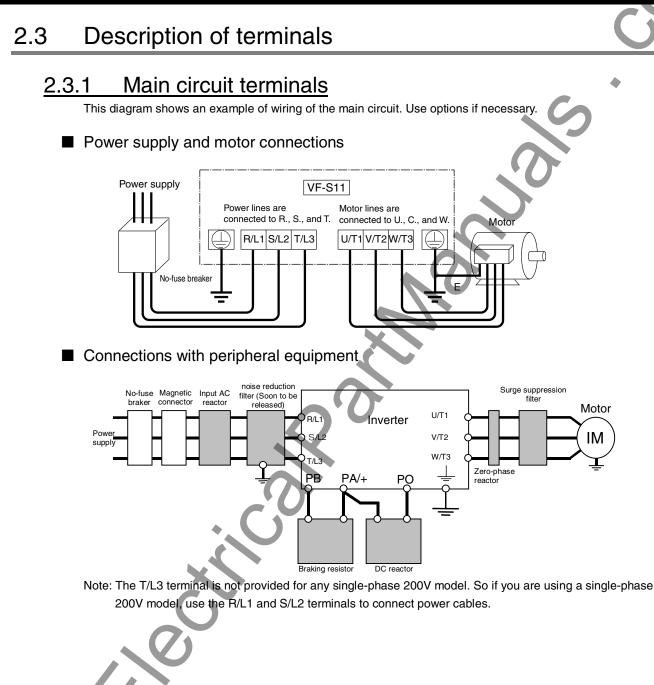

N

#### E6581158

### Main circuit

Main circuit	
Terminal symbol	Terminal function
Ļ	Grounding terminal for connecting inverter. There are 3 terminals in total. 2 terminals in the terminal board, 1 terminal in the cooling fin.
R/L1,S/L2,T/L3	200V class: single-phase 200~240V-50/60Hz three-phase 200~240V-50/60Hz 400V class: three-phase 380~500V-50/60Hz * Single-phase input: R/L1 and S/L2 terminals
U/T1,V/T2,W/T3	Connect to a (three-phase induction) motor.
PA/+ , PB	Connect to braking resistors. Change parameters F 304, F 305, F 308, F 309 if necessary.
PC/-	This is a negative potential terminal in the internal DC main circuit. DC common power can be input across the PA terminals (positive potential).
PO , PA/+	Terminals for connecting a DC reactor (DCL: optional external device). Shorted by a short bar when shipped from the factory. Before installing DCL, remove the short bar.

E6581158

### 2.3.2 Control circuit terminals (sink logic)


The control circuit terminal board is common to all equipment.

SW1 SOURCE P SINK P24 OUT NO FM FLA FLB FLC RY CC RC FM VIA PLC S2 S S3 V side M3 screw PP VIA VIB CC I side (0.5N•m) F R RES CC Optional connector (RJ45) Wire size Factory default settings of slide switches Solid wire:  $0.3 \sim 1.5$  (mm<sup>2</sup>) SW1: SINK side (WN, AN type) SOURCE side (WP type) Stranded wire:  $0.3 \sim 1.5 (mm^2)$ FM: V side (AWG 22~16) VIA: V side Sheath strip length: 6 (mm) Screwdriver: Small-sized flat-blade screwdriver (Blade thickness: 0.4 mm or less, blade width: 2.2 mm or less)

Terminal	Input/output Function			Electrical	Inverter internal circuits
symbol F	Input	Shorting across F-CC causes forward rotation; open causes slow-		specifications	*
R	Input	le contact ir	Shorting across R-CC causes reverse rotation; open causes slow- down and stop. (When ST is always ON)	No voltage contact input	+24V SW1 PLC SOURCE
RES	Input	Multifunction programmable contact input	Shorting across RES-CC causes a held reset when the inverter protector function is operating. Note that when the inverter is operating normally, it will not operate even if there is a short across RES-CC	24Vdc-5mA or less <u>*Sink/Source/PLC</u> <u>selectable using</u> SW1	
S1	Input	functi	Shorting across S1-CC causes preset speed operation.		Ĭ
S2	Input	Multi	Shorting across S2-CC causes preset speed operation.		Factory default setting WN, AN type : SINK side
S3	Input		Shorting across S3-CC causes preset speed operation.		WP type : SOURCE side
PLC	Input (common)	Whe	ernal 24Vdc power input en the source logic is used, a common ninal is connected.	24VDC (Insulation resis- tance: DC50V)	
сс	Common to Input/output		itrol circuit's equipotential terminal (3 ninals)		cc
Ρ	Output	Analog input setting power output		10Vdc (permissible load current: 10mAdc)	PPi Voltage Conversion 0.47 μ
VIA	Input	Multifunction programmable analog input. Factory default setting: $0 \sim 10$ Vdc and $0 \sim 60$ Hz frequency input. The function can be changed to $4 \sim 20$ mAdc ( $0 \sim 20$ mA) current input by flip- ping the slide switch to the I position. By changing parameter setting, this termi- nal can also be used as a multifunction programmable contact input terminal. When using the sink logic, be sure to in- sert a resistor between P24-VIA ( $4.7$ $k\Omega$ —1/2 W). Also turn the VIA slide switch to the V position.		10Vdc (internal impedance: 30kΩ) 4-20mA (internal impedance: 250Ω)	
7			B-9		

E6581158

	I			
Terminal symbol	Input/output	Function	Electrical specifications	Inverter internal circuits
VIB	Input	Multifunction programmable analog input. Standard default setting: $0~10$ Vdc input and $0~60$ Hz frequency By changing parameter setting, this termi- nal can also be used as a multifunction programmable contact input terminal. When using the sink logic, be sure to in- sert a resistor between P24 and VIB. (4.7 k $\Omega$ —1/2 W)	10Vdc (internal imped- ance: 30kΩ)	VIB i 15k 15k
FM	Output	Multifunction programmable analog out- put. Standard default setting: output fre- quency. Connect a 1mAdc full-scale am- meter or 7.5Vdc (10Vdc)-1mA full-scale voltmeter. The function can be changed to 0-20mAdc (4-20mA) current input by flipping the FM slide switch to the I position.	1mA full-scale DC ammeter or 7.5Vd (10Vdc)1mA full- scale DC voltmeter 0-20mA (4-20mA) full-scale DC am- meter	FM FM FM I I I I I I I I I I I I I I I I
P24	Output	24Vdc power output	24Vdc-100mA	P24 PTC
OUT NO	Output	Multifunction programmable open collector output. Standard default settings detect and output speed reach signal output fre- quencies. Multifunction output terminals to which two different functions can be assigned. The NO terminal is an isoelectric output terminal. It is insulated from the CC termi- nal. By changing parameter settings, these terminals can also be used as multifunc- tion programmable pulse train output ter- minals.	Open collector output 24Vdc-50mA To output pulse trains, a current of 10mA or more needs to be passed. Pulse frequency range: 38 ~ 1600Hz	
FLA FLB FLC	Output	Multifunction programmable relay contact output. Contact ratings: 250 Vac-1A(cos $\phi$ =1), 30Vdc-0.5A, 250Vac-0.5A(cos $\phi$ =0.4). De- tects the operation of the inverter's protection function. Contact across FLA-FLC is closed and FLB- FLC is opened during protection function op- eration.	250Vac-1A (cos \$\phi=1) : at resistance load 30Vdc-0.5A 250Vac-0.5A (cos \$\phi=0.4)	FLA +24V FLB FLC

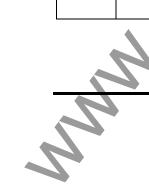

### E6581158

Terminal symbol	Input/output	Function	Electrical specifications	Inverter internal circuits
RY RC	Output	Multifunction programmable relay contact output. Contact ratings: 250 Vac- $1A(\cos\phi=1)$ , 30Vdc-0.5A, 250Vac- $0.5A(\cos\phi=0.4)$ . Standard default settings detect and out- put low-speed signal output frequencies. Multifunction output terminals to which two different functions can be assigned.	250Vac-1A (cosφ=1) : at resistance load 30Vdc-0.5A 250Vac-0.5A (cosφ=0.4)	RY RC RC

E6581158


### Sink logic/source logic (When the inverter's internal power supply is used)

Current flowing out turns control input terminals on. These are called sink logic terminals. (Type: -AN/-WN). The general used method in Europe is source logic in which current flowing into the input terminal turns it on (Typ: -WP).

Sink logic terminals and source logic terminals are sometimes referred to as minus common terminals and positive common terminals, respectively.


Each logic is supplied with electricity from either the inverter's internal power supply or an external power supply, and its connections vary depending on the power supply used.

< Examples of connections when the inverter's internal power supply is used >

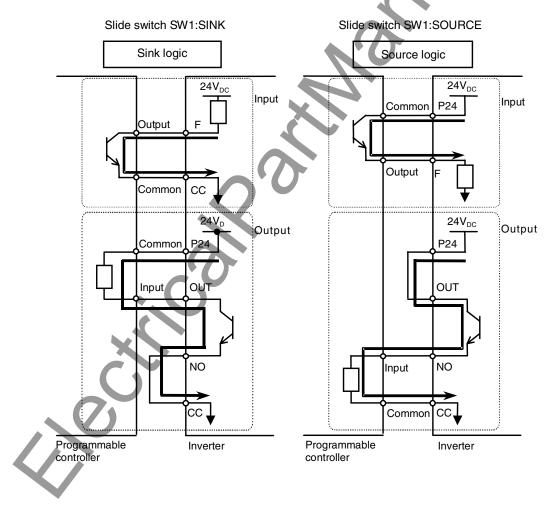

,

E6581158

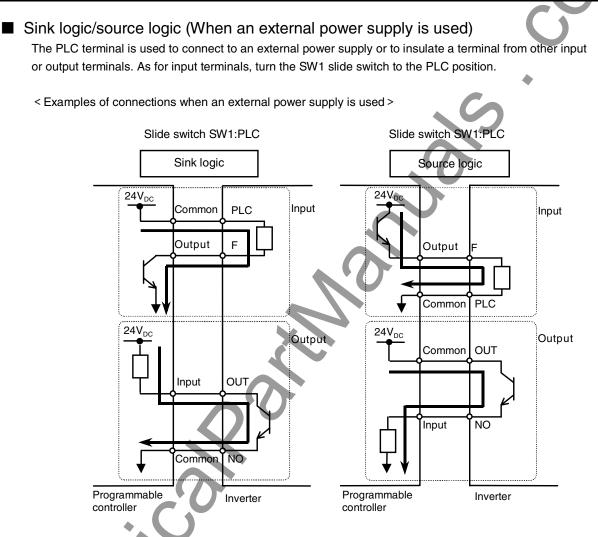

Selecting the functions of the VIA and VIB terminals between analog input and contact input

The functions of the VIA and VIB terminals can be selected between analog input and contact input by changing parameter settings ( $F + \square \square$ ). (Factory default setting: Analog input)

When using these terminals as contact input terminals in a sink logic circuit, be sure to insert a resistor between the P24 and VIA terminals or between the P24 and VIB terminals. (Recommended resistance:  $4.7K\Omega$ -1/2W)

When using the VIA terminal as a contact input terminal, be sure to turn the VIA switch to the V position. If no resistor is inserted or the VIA slide switch is not turned to the V position, contact input will be left always ON, which is very dangerous.

Switch between analog input and contact input before connecting the terminals to the control circuit terminals. Otherwise the inverter or devices connected to it may be damaged.


#### Logic switching/Voltage-current output switching (slide switch)

(1) Logic switching

Use SW1 to switch between logics.

Switch between logics before wiring to the inverter and without supplying power. If switching between sink, source and PLC is done when power is turned on after switching or when the inverter is supplied with power, the inverter might become damaged. Confirm it before supplying power.

(2) Voltage-current output switching
 Use the FM switch to switch between voltage output and current output.
 Switch the FM terminal's voltage-current output before wiring to inverter or without supplying power.

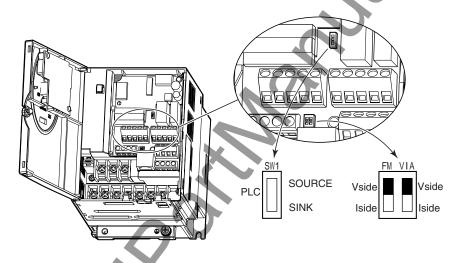

Factory default settings of slide switches SW1 : SINK side (WN, AN type) SOURCE side (WP type) FM : V side VIA : V side

\* After you have selected a logic between sink and source, take measures to prevent the logic from being changed.

NA

## 3. Operations

	Danger
Prohibited	<ul> <li>Do not touch inverter terminals when electrical power is going to the inverter even if the motor is stopped. Touching the inverter terminals while power is connected to it may result in electric shock.</li> <li>Do not touch switches when the hands are wet and do not try to clean the inverter with a damp cloth. Such practices may result in electric shock.</li> <li>Do not go near the motor in alarm-stop status when the retry function is selected. The motor may suddenly restart and that could result in injury. Take measures for safety, e.g. attaching a cover to the motor, against accidents when the motor unexpectedly restarts.</li> </ul>
Mandatory	<ul> <li>Turn power on only after attaching the front cover or closing door if enclosed in a cabinet. If power is turned on without the front cover attached or closing door if enclosed in a cabinet, that may result in electric shock or other injury.</li> <li>If the inverter begins to emit smoke or an unusual odor, or unusual sounds, immediately turn power off. If the equipment is continued in operation in such a state, the result may be fire. Call your local sales agency for repairs.</li> <li>Always turn power off if the inverter is not used for long periods of time.</li> <li>Turn input power on after attaching the front cover. When enclosed inside a cabinet and using with the front cover removed, always close the cabinet doors first and then turn power on. If the power is turned on with the front cover or the cabinet doors open, it may result in electric shock.</li> <li>Make sure that operation signals are off before resetting the inverter after malfunction. If the inverter is reset before turning off the operating signal, the motormay restart suddenly causing injury.</li> </ul>


	Marning
	<ul> <li>Do not touch heat radiating fins or discharge resistors.</li> <li>These device are hot, and you'll get burned if you touch them.</li> </ul>
Contact prohibited	
$\bigcirc$	Observe all permissible operating ranges of motors and mechanical equipment. (Refer to the motor's instruction manual.)
Prohibited	Not observing these ranges may result in injury.
4	
2.	

E6581158

<u>E6581158</u>

## 3.1 Simplified Operation of the VF-S11

The procedures for setting operation frequency and the methods of operation can be selected from the following.

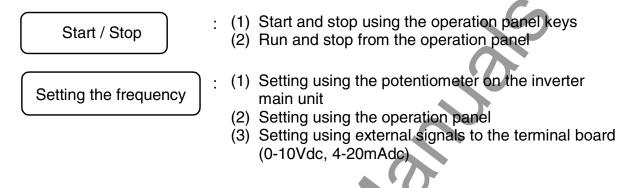

Use the basic parameters  $\begin{bmatrix} \Pi & \Pi & \Pi \\ \Pi & \Pi & \Pi \end{bmatrix} d$  (Operation command mode selection),  $F \Pi & \Pi & \Pi & \Pi$  (Speed setting mode selection).

Title	Function	Adjustment range	Default setting
6004	Command mode selection	0: Terminal board 1: Panel	1
FNDa	Frequency setting mode	0: Internal potentiometer setting 1: VIA 2: VIB 3: Operation panel 4: Serial communication 5: External contact up/down 6: VIA+VIB (Override)	0

\* See 5.4 for  $F \prod \square d = 4$ , 5 and 6

### 3.1.1 How to start and stop

[Example of a L III	d setting procedu	
Key operated	LED display	Operation
	0.0	Displays the operation frequency (operation stopped). (When standard monitor display selection $F = 1 I I I I I I$ [Operation frequency])
MODE	ЯIJН	Displays the first basic parameter [History $(\mathcal{F} \sqcup \mathcal{H})$ ].
	C N D J	Press either the $\triangle$ or $\bigtriangledown$ key to select " $\Box \Pi \Box \exists$ ".
ENT	1	Press ENTER key to display the parameter setting. (Default setting: 1).
	0	Change the parameter to ${\it I}$ (terminal board) by pressing the $ riangle$ key.
ENT	0⇔[∩0ď	Press the ENTER key to save the changed parameter. [ $\Pi \square d$ and the parameter set value are displayed alternately.
ENT	0⇔[∩0d	

#### [Example of a $\begin{bmatrix} \Pi & \Pi & \Pi \\ \Pi & \Pi & \Pi \end{bmatrix}$ setting procedure]

(1) Start and stop using the operation panel keys  $( \begin{bmatrix} I & I & I \\ I & I & I \end{bmatrix} d = 1 )$ 


Use the (RUN) and (STOP) keys on the operation panel to start and stop the motor.


(RUN) : Motor starts.

STOP : Motor stops.

(2) RUN/STOP by means of an external signal to the terminal board ( $[\Pi \square d = \square)$ ): Sink logic

Use external signals to the inverter terminal board to start and stop the motor.

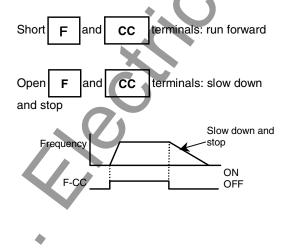

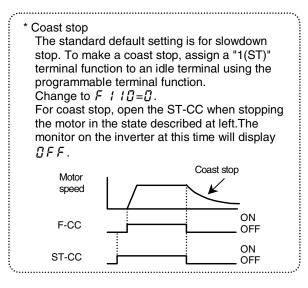

### 3.1.2 How to set the frequency

Key operated	LED display	Operation	
	0.0	Displays the operation frequency (operation stopped). (When standard monitor display selection $F = \frac{1}{2} [Operation frequency]$ )	
MODE	ЯIJН	Displays the first basic parameter [History $(\mathcal{R} \cup \mathcal{H})$ ].	
	FNOJ	Press either the $\triangle$ key or $\bigtriangledown$ key to select " $F \Pi \square H$ ".	
ENT	0	Press ENTER key to display the parameter setting. (Default setting: ${\it I}$ ).	
	3	Change the parameter to $\exists$ (Operation panel) by pressing the $\triangle$ key.	
ENT	∃⇔F∏Od	Press the ENTER key to save the changed parameter. $F \prod \bigcup d$ and the parameter set value are displayed alternately.	

[Example of a F II I d setting procedure]

\* Pressing the MODE key twice returns the display to standard monitor mode (displaying operation frequency).

## (1) Setting the frequency using the potentiometer on the inverter main unit $\begin{pmatrix} E & D & D \\ D & D & - \end{pmatrix}$

 $(F \Pi \square \square = \square)$ 

Set the frequency with the notches on the potentiometer.

Move clockwise for the higher frequencies.

The potentiometer has hysteresis. So the set value may slightly change when the inverter is turned off, and then turned back on.

### (2) Setting the frequency using the operation panel $(F \square \square d = 3)$


Set the frequency with the operation panel..

• Moves the frequency up • Moves the frequency down

E	xample o	f operating a r	un from the panel
	y operated	LED display	Operation
		0.0	Displays the operation frequency.         (When standard monitor display selection F 7 10=0 [Operation frequency])
		50.0	Set the operation frequency.
	ENT	50.0⇔F[	Press the ENT key to save the operation frequency. $F \not L$ and the frequency are displayed alternately.
		60.0	Pressing the $\triangle$ key or the $\nabla$ key will change the operation frequency even during operation.
			C-5
2			


E6581

E6581158

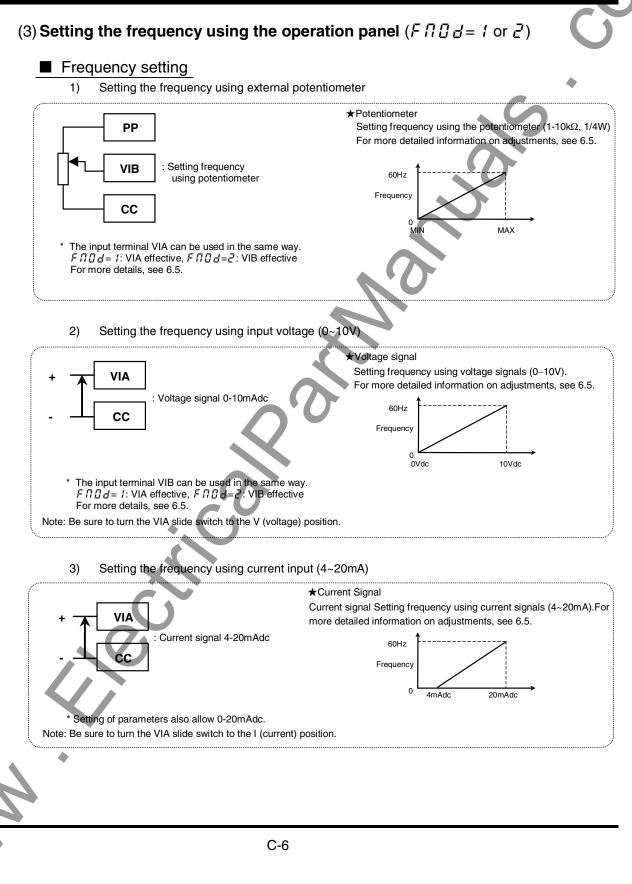


## 3.2 How to operate the VF-S11


Overview of how to operate the inverter with simple examples.

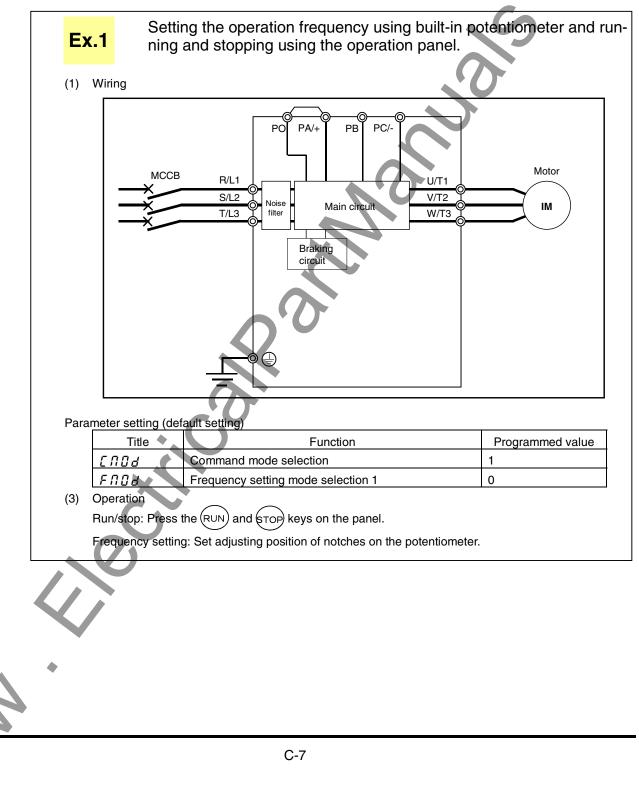


E6581158

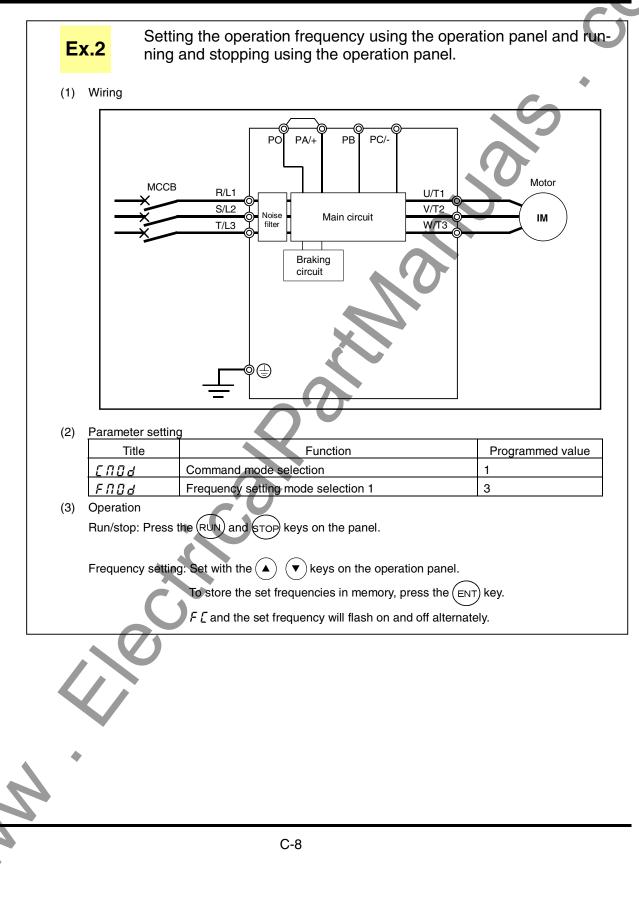

E6581158

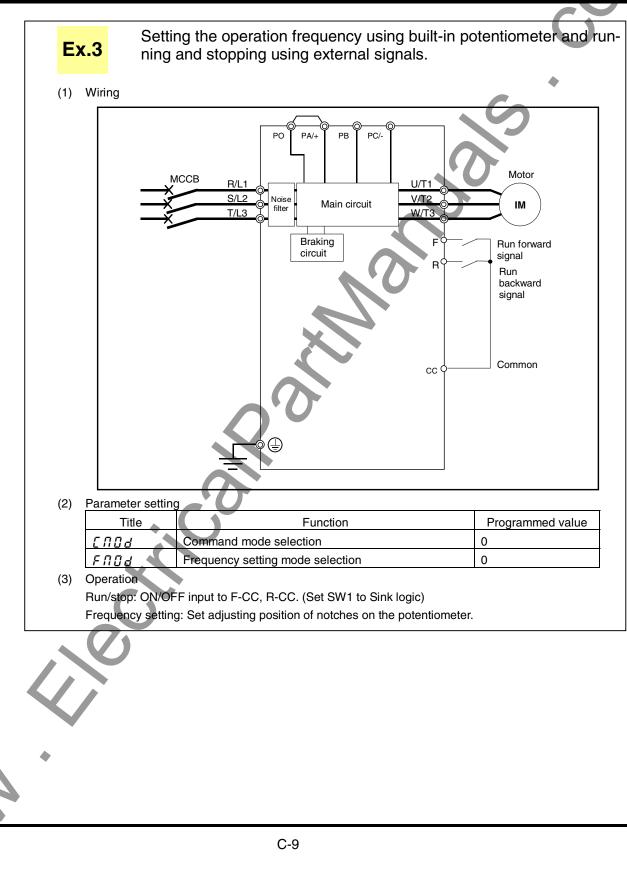


E6581158

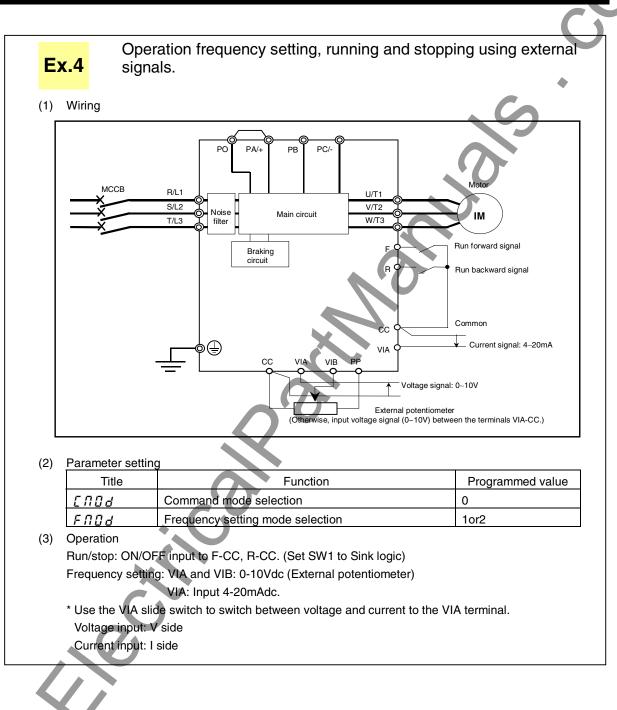


## 4. Basic VF-S11 operations

The VF-S11 has the following three monitor modes.

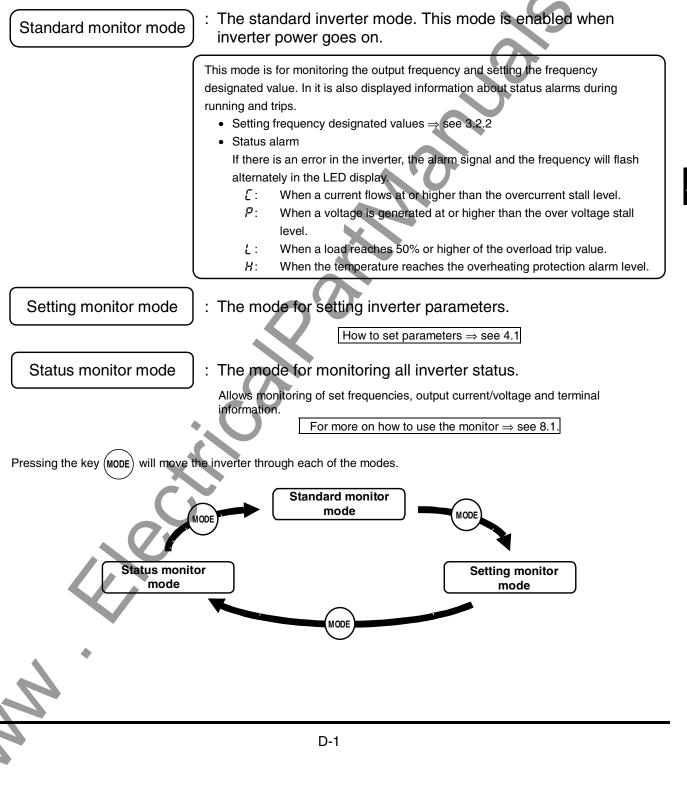

E6581158

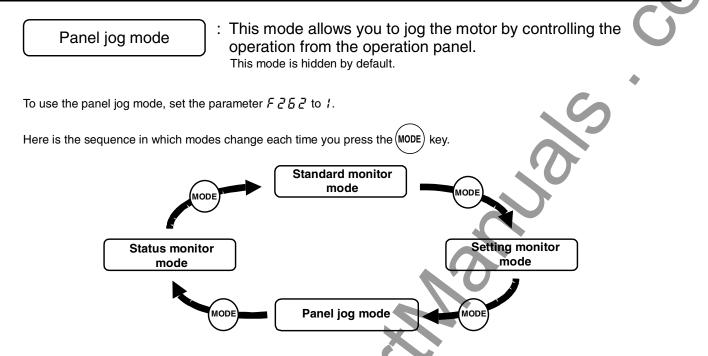

Note: When the inverter is in operation (RUN lamp is blinking) or when an operation command is issued (RUN lamp is lit), the inverter cannot be switched to panel jog mode.




Standard monitor mode

### 4.1 How to set parameters

The standard default parameters are programmed before the unit is shipped from the factory. Parameters can be divided into 4 major categories. Select the parameter to be changed or to be searched and retrieved. The basic parameters that must be programmed be-Basic parameters fore the first use. (See 4.1.1) : The parameters for detailed and special setting. (See Extended parameters 4.1.2) Indicates parameters that are different from the : User parameters standard default setting parameters. Use them to check after setting and to change setting. (automatic edit function) (Parameter title: [r, l]). (See 4.1.3) This parameter has the function of displaying, in History parameter reverse chronological order, the five parameters that were changed last. This function comes in very handy when you adjust the inverter repeatedly using the same parameter. (Parameter name:  $\overline{A} \sqcup H$ ). (See 4.1.4) Adjustment range of parameters H 1: An attempt has been made to assign a value that is higher than the programmable range. Or, as a result of changing other parameters, the programmed value of the parameter that is now selected exceeds the upper limit.  $L_{i}$ : An attempt has been made to assign a value that is lower than the programmable range. Or, as a result of changing other parameters, the programmed value of the parameter that is now selected exceeds the lower limit. If the above alarm is flashing on and off, no setting can be done of values that are equal to or greater than H i or equal to or lower than L  $\square$ .

D-3

E6581158

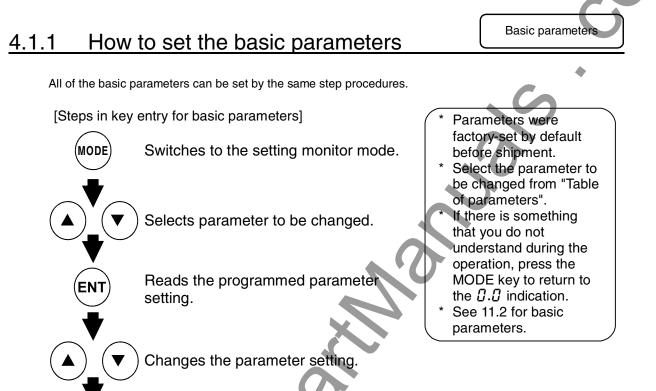

Saves the changed value of the parameter setting.


FΝ

Steps in setting are as follows (the example shown is one of changing the maximum frequency from 80Hz to 60Hz).

		-	
əd	LED display	Operation	
	0.0	Displays the operation frequency (operation stopped). (When standard monitor display selection $F \ I \ I \ I = I$ [Operation frequency])	
	RUH	The first basic parameter " $\Pi \sqcup H$ " (history function) is displayed.	
	FH	Press either the $\triangle$ or $\nabla$ key to select " <i>F</i> H".	
$\mathcal{O}$	80.0	Pressing the ENTER key reads the maximum frequency.	
	60.0	Press the $\Delta$ key to change the maximum frequency to 60Hz.	
	60.0⇔FH	Press the ENT key to save the maximum frequency. $F$ $H$ and the frequency are displayed alternately.	
		0.0 RUH FH 80.0 50.0 50.0 50.0 S0.	

### 4.1.2 How to set extended parameters

The VF-S11 has extended parameters to allow you to make full use of its functions. All extended parameters are expressed with F and three digits.

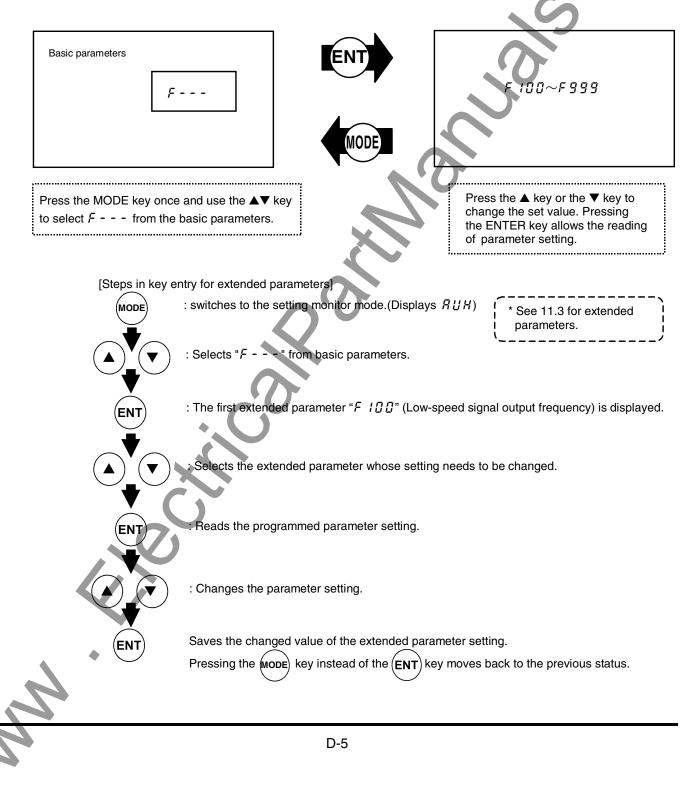

#### Example of parameter setting

Steps in setting are as follows

(Example of changing the dynamic braking selection  $F \exists \Box \forall$  from 0 to 1.)

LED display	Operation
0.0	Displays the operation frequency (operation stopped). (When standard monitor display selection $F = 112 = 12$ [Operation frequency])
RUH	The first basic parameter " $\Re \amalg H$ " (history function) is displayed.
F	Press either the $\triangle$ or the $\bigtriangledown$ to change to the parameter group $F$ .
F 100	Press the ENTER key to display the first extended parameter $F I \square \square$ .
F 3 0 4	Press the $\triangle$ key to change to the dynamic braking selection $F \exists \Box 4$ .
0	Pressing the ENTER key allows the reading of parameter setting.
1	Press the $\Delta$ key to change the dynamic braking selection from $\square$ to $I$ .
1⇔F 304	Pressing the ENTER key alternately flashes on and off the parameter and changed value and allows the save of those values.
	0.0 RUH F F 100 F 304 0 I

If there is anything you do not understand during this operation, press the MODE key several times to start over from the step of  $R \sqcup H$  display.

## 4.1.3 Search and resetting of changed parameters (Lir.Li)

Automatically searches for only those parameters that are programmed with values different from the standard default setting and displays them in the user parameter group [I, r.]. Parameter setting can also be changed within this group.

Notes on operation

• If you reset a parameter to its factory default, the parameter will no longer appear in Lr.U.

#### How to search and reprogram parameters

The operations of search and resetting of parameters are as follows.

Key operated	LED display	Operation
	0.0	Displays the operation frequency (operation stopped). (When standard monitor display selection $F \ 7 \ I \ \square = \square$ [Operation frequency])
MODE	RUH	The first basic parameter " $\mathcal{H} \sqcup \mathcal{H}$ " (history function) is displayed.
	Gr.U	Press $\triangle$ or $\nabla$ key to select $[ cr.]$ .

Key operated	LED display	Operation
ENT	<u> Ц</u>	Press the ENTER key to enable the user parameter automatic edit function.
Or Or	UF (Ur) ↓ R[[	Searches for parameters that are different in value from the standard default setting and displays those parameters. Press the ENTER key or the $\Delta$ key to change the parameter displayed. (Pressing the $\nabla$ key moves the search in the reverse direction).
ENT	8.0	Press the ENTER key to display the set value.
	5.0	Press the $\Delta$ key and $ abla$ key to change set value.
ENT	5.0⇔₽[[	Press the ENTER key to save the changed value. The parameter name and the programmed value will flash on and off alternately. After the change has been saved, " <i>U</i> " is displayed.
	リー-F (リー-F)	Use the same steps as those given above to display parameters that you want to search for or change setting with the $\Delta$ key and $\nabla$ key.
	6 r .U	When $\Box r$ . $\Box$ appears again, the search is ended.
MODE	Gr.U ↓ Fr-F ↓ 0.0	A search can be canceled by pressing the MODE key. Press the MODE key once while the search is underway to return to the display of parameter setting mode. After that you can press the MODE key to return to the status monitor mode or the standard monitor mode (display of operation frequency).
	<i>U.U</i>	

If there is anything you do not understand during this operation, press the (MODE) key several times to start over from the step of  $\mathcal{RUH}$  display.

# 4.1.4 Searching for a history of changes, using the history function (ALT)

### History function (유답사):

Automatically searches for 5 latest parameters that are programmed with values different from the standard default setting and displays them in the  $R \sqcup H$ . Parameter setting can also be changed within this group  $R \sqcup H$ .

Notes on operation

If no history information is stored, this parameter is skipped and the next parameter "R II 1" is displayed.

 $H \in R d$  and  $E \cap d$  are added respectively to the first and last parameters in a history of changes.

E6

E6581158

#### How to use the history function

	Tow to use the history function			
Key operated	LED display	Operation		
	0.0	Displays the operation frequency (operation stopped). (When standard monitor display selection $F \ 1 \ 1 \ 2 = 0$ [Operation frequency])		
MODE	ЯIJН	The first basic parameter " $\mathcal{R} \sqcup \mathcal{H}$ " (history function) is displayed.		
ENT	REE	The parameter that was set or changed last is displayed.		
ENT	8.0	Press the ENTER key to display the set value.		
	5.0	Press the $\triangle$ key and $\bigtriangledown$ key to change set value.		
ENT	5.0⇔8[[	Press the ENTER key to save the changed value. The parameter name and the programmed value will flash on and off alternately.		
	***	Use the same steps as those given above to display parameters that you want to search for or change setting with the $\Delta$ key and $\nabla$ key.		
	HERd (End)	$H \not\in R d$ : First historic record $\not\in n d$ : Last historic record		
MODE	Parameter display $\downarrow$ $R \sqcup H$ $\downarrow$ F r - F $\downarrow$ $\Box . \Box$	Press the MODE key to return to the parameter setting mode "RUH." After that you can press the MODE key to return to the status moni- tor mode or the standard monitor mode (display of operation fre- quency).		

E6581158

### 4.1.5 Parameters that cannot be changed while running

For reasons of safety, the following parameters have been set up so that they cannot be reprogrammed while the inverter is running. Stop operation (" $\square$ . $\square$ " or " $\square$  F F" is displayed) before changing parameter settings.

[Basic parameters] RU i (Automatic acceleration/deceleration) RU i (Automatic torque boost) RU i (Automatic function setting) fnDd (Command mode selection 1) $fnDd (Command mode selection 1)FnDd (Command mode selection 1)EYP$ (Default setting) FH (Maximum frequency) uL (Base frequency voltage1) PL (V/F control mode selection 1) [Extended parameters] F iDS : Priority selection parameters $F iDS - F iB$ : Input terminal selection parameters F iDS - F iB : Uput terminal selection parameters F iDS - F iB : Uput terminal selection parameters F iDS - F iB : Duput terminal selection parameters F iDS - F iB : Duput terminal selection parameters F iDS - F iB : Prove the parameters F iDS - F iB : Duput terminal selection parameters F iBS - F iB : Carrier frequency control mode selection F 342 : Braking mode selection F 343 : Release frequency F 420 : Auto-tuning F 4400 : Auto-tuning F 4400 : Auto-tuning F 4400 : Exciting strengthening coefficient F 4500 : Output phase failure detection mode selection F 6000 : Dupt phase failure detection mode selection F 6000 : Dupt phase failure detection mode selection F 60000 : Dupt phase failure detection mode selection F 6000000000000000000000000000000000000		
RU2 (Automatic torque boost) $RU4$ (Automatic function setting) $IIII def$ (Command mode selection) $FIII def$ (Frequency setting mode selection 1) $EYP$ (Default setting) $FH$ (Maximum frequency) $uL$ (Base frequency voltage1) $PL$ (V/F control mode selection 1)[Extended parameters] $F 103 - F 118$ : Input terminal selection parameters $F 130 - F 139$ : Output terminal selection parameters $F 130 - F 139$ : Output terminal selection parameters $F 130 - F 139$ : Output terminal selection parameters $F 130 - F 139$ : Output terminal selection parameters $F 130 - F 139$ : Output terminal selection parameters $F 130 - F 139$ : Output terminal selection $F 343 : Release frequency voltage 2F 261 : Jog stopping patternF 316 : Carrier frequency control mode selectionF 343 : Release frequencyF 343 : Release frequencyF 400 : Auto-tuningF 415 - F 419 : Moter conslatin parametersF 400 : Exciting strengthening coefficientF 492 : Stall cooperation gain at field weakening zone 1F 492 : Stall cooperation gain at field weakening zone 2F 493 : Cherry or selectionF 603 : Emergency selectionF 603 : Dutput phase failure detection mode selectionF 513 : Detection of output short-circuit during start-up selectionF 526 : Under voltage stall protection levelF 527 : Under voltage trip/alarm selectionF 5319 : Detection of output yeak selection (OUT-NO)F 519 : Cogic output/pulse train output selection (OUT-NO)F 51$		
$RUY$ (Automatic function setting) $LRD_d$ (Command mode selection) $RRD_d$ (Frequency setting mode selection 1) $LVYP$ (Default setting) $FH$ (Maximum frequency) $uL$ (Base frequency voltage1) $PL$ (V/F control mode selection 1)[Extended parameters] $F 103 - F 118$ $F 103 - F 139$ Output terminal selection parameters $F 130 - F 139$ $F 130 - F 139$ $F 130 - F 139$ $F 110$ $F 130 - F 139$ $F 110$ $F 130 - F 139$ $F 110$ $F 130 - F 139$ $F 111$ $F 130 - F 139$ $F 111$ $F 130 - F 139$ $F 111$ <td></td> <td></td>		
$\begin{bmatrix} f \ 0 \ d \ d \ d \ d \ d \ d \ d \ d \ d$		
Set $P = P_{3B}$ , and the call be changed write $EYP$ (Default setting) $FH$ (Maximum frequency) $uL$ (Base frequency 1) $uLu$ (Base frequency voltage1) $PL$ (V/F control mode selection 1)[Extended parameters]F 105 $F 109 - F 118$ Input terminal selection parameters $F 130 - F 139$ Output terminal selection parameters $F 131 - F 131$ Base frequency voltage 2 $F 251$ Jog stopping pattern $F 311$ Ease frequency voltage 2 $F 251$ Jog stopping pattern $F 341$ Protection parameters $F 315$ Carrier frequency control mode selection $F 343$ Release frequency $F 343$ Release frequency $F 343$ Release frequency $F 343$ Enclass frequency $F 490$ Auto-tuning $F 4752$ Stall cooperation gain at field weakening zone 1 $F 480$ Exciting strengthening coefficient $F 480$ Exciting strengthening zone 2 $F 492$ Stall cooperation gain at field weakening zone 2 $F 4934$ Motor adjustment factor $F 503$ Emergency stop selection $F 513$ Detection of output short-circuit during start-up selection $F 513$ Detection of output short-circuit during start-up selection $F 553$ Logic output/pulse train output selection (OUT-NO) $F 5419$ Logic output/pulse train output selection $F 553$ Logic output/pulse train output selection $F 553$ Logic output/pulse	유법식 (Automatic function setting)	
$F H U d$ (Frequency setting mode selection 1)the inverter is running. $E \forall P$ (Default setting) $F H$ (Maximum frequency) $u L$ (Base frequency voltage1) $P E$ (W/F control mode selection 1)[Extended parameters]F 105 : Priority selection $F 105 - F 13$ : Input terminal selection parameters $F 130 - F 139$ : Output terminal selection parameters $F 130 - F 139$ : Output terminal selection parameters $F 130 - F 139$ : Output terminal selection parameters $F 130 - F 139$ : Output terminal selection parameters $F 130 - F 131$ : Base frequency voltage 2 $F 25 I$ : Jog stopping pattern $F 30 I - F 3 I I$ Protection parameters $F 3 I 5$ : Carrier frequency control mode selection $F 3 4 7 2$ : Braking mode selection $F 3 4 7 3$ : Release frequency $F 4 5 5$ : Creeping frequency $F 4 7 5 - F 4 19$ : Motor constant parameters $F 4 8 5$ : Stall cooperation gain at field weakening zone 1 $F 4 9 2$ : Stall cooperation gain at field weakening zone 2 $F 4 9 4$ : Motor adjustment factor $F 6 0 5$ : Output phase failure detection mode selection $F 5 13$ : Detection of output short-circuit during start-up selection $F 6 2 5$ : Under voltage traj valuer selection $F 6 2 5$ : Under voltage traj valuer selection $F 6 5 7$ : Under voltage traj valuer selection $F 6 5 7$ : Under voltage trai value selection $F 6 5 8$ :	$\int \Pi \square d$ (Command mode selection)	Set $E_{13}B_{13}$ and they can be changed while
FH(Maximum frequency) $uL$ (Base frequency 1) $uLu$ (Base frequency voltage1) $PL$ (V/F control mode selection 1)[Extended parameters]F 105F 105: Priority selectionF 103-F 118: Input terminal selection parametersF 130-F 139: Output terminal selection parametersF 130: Base frequency 2F 171: Base frequency voltage 2F 251: Jog stopping patternF 30:-F311Protection parametersF 315: Carrier frequency control mode selectionF 343: Release frequencyF 450: Auto-tuningF 4715: Creeping frequencyF 4700: Auto-tuningF 4715: Exciting strengthening coefficientF 480: Exciting strengthening coefficientF 472: Stall cooperation gain at field weakening zone 1F 472: Stall cooperation gain at field weakening zone 2F 4734: Motor adjustment factorF 503: Emergency stop selectionF 503: Output phase failure detection mode selectionF 503: Detection of output short-circuit during start-up selectionF 513: Detection of output selectionF 525: Under voltage trip/alarm selectionF 525: Under voltage trip/alarm selectionF 525: Under voltage trip/alarm selectionF 525: Logic output/ulse train output selection (OUT-NO)F 519: Logic output/ulse train output selection (OUT-NO)F 526: Logic output/	F ∏ ☐ d (Frequency setting mode selection 1)	
$J_{L}$ (Base frequency voltage1) $P_{L}$ (V/F control mode selection 1)[Extended parameters] $F$ $IDS$ $F$	<i>と当P</i> (Default setting)	the inverter is furtaing.
$J_L$ (Base frequency voltage1) $P_L$ (V/F control mode selection 1)[Extended parameters]F 105 $F$ 105: Priority selection $F$ 105: Input terminal selection parameters $F$ 130-F 139: Output terminal selection parameters $F$ 170: Base frequency 2 $F$ 171: Base frequency voltage 2 $F$ 261: Jog stopping pattern $F$ 301-F 311: Protection parameters $F$ 315: Carrier frequency control mode selection $F$ 342: Braking mode selection $F$ 343: Release frequency $F$ 400: Auto-tuning $F$ 415-F 419: Motor constant parameters $F$ 480: Exciting strengthening coefficient $F$ 482: Stall cooperation gain at field weakening zone 1 $F$ 492: Stall cooperation gain at field weakening zone 2 $F$ 494: Motor adjustment factor $F$ 505: Output phase failure detection mode selection $F$ 505: Output phase failure detection mode selection $F$ 508: Input phase failure detection mode selection $F$ 508: Under voltage stall protection level $F$ 527: Under voltage stall protection level $F$ 528: Over-voltage stall protection level $F$ 529: Logic output/pulse train output selection $F$ 529: Logic output/pulse train output selection<	F H (Maximum frequency)	
$P_E$ (V/F control mode selection 1)[Extended parameters]F 105: Priority selection $F 105 - F 118$ : Input terminal selection parameters $F 130 - F 139$ : Output terminal selection parameters $F 170$ : Base frequency 2 $F 171$ : Base frequency voltage 2 $F 251$ : Jog stopping pattern $F 30 - F 3 11$ : Protection parameters $F 315$ : Carrier frequency control mode selection $F 342$ : Braking mode selection $F 343$ : Release frequency $F 400$ : Auto-tuning $F 415 - F 419$ : Motor constant parameters $F 480$ : Exciting strengthening coefficient $F 482$ : Stall cooperation gain at field weakening zone 1 $F 492$ : Stall cooperation gain at field weakening zone 2 $F 494$ : Dutp thase failure detection mode selection $F 505$ : Output phase failure detection mode selection $F 505$ : Dutp thase failure detection mode selection $F 513$ : Detection of output short-circuit during start-up selection $F 525$ : Output phase failure detection mode selection $F 525$ : Under voltage stall protection level $F 525$ : Logic output/pulse train output selection <td>u (Base frequency 1)</td> <td></td>	u (Base frequency 1)	
[Extended parameters] $F 105$ : Priority selection $F 105 - F 118$ : Input terminal selection parameters $F 130 - F 137$ : Output terminal selection parameters $F 130 - F 137$ : Base frequency 2 $F 171$ : Base frequency voltage 2 $F 251$ : Jog stopping pattern $F 30 - F 311$ : Protection parameters $F 315$ : Carrier frequency control mode selection $F 347$ : Braking mode selection $F 347$ : Brease frequency $F 345$ : Creeping frequency $F 400$ : Auto-tuning $F 415 - F 417$ : Motor constant parameters $F 480$ : Exciting strengthening coefficient $F 492$ : Stall cooperation gain at field weakening zone 1 $F 492$ : Stall cooperation gain at field weakening zone 2 $F 494$ : Motor adjustment factor $F 603$ : Emergency stop selection $F 603$ : Dutput phase failure detection mode selection $F 508$ : Output phase failure detection mode selection $F 508$ : Under voltage trip/alarm selection $F 526$ : Under voltage trip/alarm selection $F 526$ : Under voltage trip/alarm selection $F 526$ : Logic output/pulse train output selection (OUT-NO) $F 9 10$ : Step-out detection current level (for PM motors)	ພ່ມ (Base frequency voltage1)	
F $105$ : Priority selectionF $109 - F$ $118$ : Input terminal selection parametersF $130 - F$ $139$ : Output terminal selection parametersF $170$ : Base frequency 2F $171$ : Base frequency voltage 2F: Jog stopping patternF $301 - F311$ : Protection parametersF: Jog stopping patternF: Carrier frequency control mode selectionF: Staking mode selectionF: Staking mode selectionF: Staking mode selectionF: Creeping trequencyF: Creeping trequencyF: Auto-tuningF: Stall cooperation gain at field weakening zone 1F: Stall cooperation gain at field weakening zone 2F: Stall cooperation gain at field weakening zone 1F: Emergency stop selectionF: Stall cooperation gain at field weakening zone 2F: Stall cooperation gain at fie	PL (V/F control mode selection 1)	
$F : 10 \ 9-F : 118$ : Input terminal selection parameters $F : 130 - F : 139$ : Output terminal selection parameters $F : 170$ : Base frequency 2 $F : 171$ : Base frequency voltage 2 $F : 25 : 1$ : Jog stopping pattern $F : 30 : 1-F : 31 : 1$ : Protection parameters $F : 315$ : Carrier frequency control mode selection $F : 342$ : Braking mode selection $F : 343$ : Release frequency $F : 400$ : Auto-tuning $F : 415 - F : 419$ : Motor constant parameters $F : 480$ : Exciting strengthening coefficient $F : 485$ : Stall cooperation gain at field weakening zone 1 $F : 482$ : Stall cooperation gain at field weakening zone2 $F : 494$ : Motor adjustment factor $F : 503$ : Emergency stop selection $F : 503$ : Dutput phase failure detection mode selection $F : 503$ : Dutput phase failure detection mode selection $F : 503$ : Dutput phase failure detection is start-up selection $F : 503$ : Dutput phase failure detection $F : 503$ : Dutput phase failure detection $F : 503$ : Dutput phase failure detection folder $F : 503$ : Dutput phase failure detection	[Extended parameters]	
F : 130 - F : 139: Output terminal selection parameters $F : 170$ : Base frequency 2 $F : 171$ : Base frequency voltage 2 $F : 25 :$ : Jog stopping pattern $F : 30 : 1 - F : 3 : 1$ : Protection parameters $F : 3 : 15$ : Carrier frequency control mode selection $F : 3 : 15$ : Carrier frequency control mode selection $F : 3 : 42$ : Braking mode selection $F : 3 : 42$ : Braking mode selection $F : 3 : 42$ : Braking mode selection $F : 3 : 42$ : Braking mode selection $F : 3 : 42$ : Braking mode selection $F : 3 : 42$ : Braking mode selection $F : 3 : 42$ : Braking mode selection $F : 3 : 42$ : Braking mode selection $F : 3 : 42$ : Creeping frequency $F : 400$ : Auto-tuning $F : 4 : 15 - F : 419$ : Motor constant parameters $F : 480$ : Exciting strengthening coefficient $F : 485$ : Stall cooperation gain at field weakening zone 1 $F : 485$ : Stall cooperation gain at field weakening zone 2 $F : 492$ : Stall cooperation gain at field weakening zone 2 $F : 493$ : Emergency stop selection $F : 503$ : Emergency stop selection $F : 503$ : Emergency stop selection mode selection $F : 503$ : Detection of output short-circuit during start-up selection $F : 513$ : Detection of output short-circuit during start-up selection $F : 523$ : Under voltage trip/atarm selection $F : 524$ : Under voltage trip/atarm sele	F 105 : Priority selection	
$F + 170$ : Base frequency 2 $F + 171$ : Base frequency voltage 2 $F \ge 5$ : Jog stopping pattern $F \ge 11$ : Protection parameters $F \ge 11$ : Protection parameters $F \ge 15$ : Carrier frequency control mode selection $F \ge 16$ : Carrier frequency control mode selection $F \ge 16$ : Carrier frequency control mode selection $F \ge 16$ : Carrier frequency control mode selection $F \ge 16$ : Carrier frequency $F \ge 16$ : Creeping frequency $F \ge 100$ : Auto-tuning $F \le 15$ : Creeping trequency $F \le 100$ : Exciting strengthening coefficient $F \le 120$ : Exciting strengthening coefficient $F \le 120$ : Exciting strengthening coefficient $F \le 120$ : Stall cooperation gain at field weakening zone 1 $F \le 120$ : Stall cooperation gain at field weakening zone 2 $F \le 120$ : Stall cooperation gain at field weakening zone 2 $F \le 120$ : Stall cooperation gain at field weakening zone 2 $F \le 120$ : Output phase failure detection mode selection $F \le 120$ : Duput phase failure detection mode selection $F \le 120$ : Duput phase failure detection mode selection $F \le 120$ : Duput phase failure detection mode selection $F \le 120$ : Duput phase failure detection mode selection $F \le 120$ : Duput voltage trip/alarm selection $F \le 120$ : Under voltage trip/alarm selection $F \le 120$ : Under voltage trip/alarm selection $F \le 120$ : Logic output/	$F I \square \square \neg F I I B$ : Input terminal selection p	barameters
F 111: Base frequency voltage 2F 251: Jog stopping patternF 301-F 311: Protection parametersF 315: Carrier frequency control mode selectionF 342: Braking mode selectionF 343: Release frequencyF 345: Creeping trequencyF 410: Auto-tuningF 415-F 419: Motor constant parametersF 480: Exciting strengthening coefficientF 482: Stall cooperation gain at field weakening zone 1F 492: Stall cooperation gain at field weakening zone 2F 494: Motor adjustment factorF 503: Emergency stop selectionF 503: Output phase failure detection mode selectionF 513: Detection of output short-circuit during start-up selectionF 513: Detection of output short-circuit during start-up selectionF 525: Over-voltage stall protection levelF 525: Logic output/pulse train output selection (OUT-NO)F 315: Step-out detection current level (for PM motors)	F 130~F 139 : Output terminal selection	parameters
F 2 5 1: Jog stopping patternF 3 0 1F 3 1 1: Protection parametersF 3 1 5: Carrier frequency control mode selectionF 3 4 2: Braking mode selectionF 3 4 3: Release frequencyF 3 4 3: Release frequencyF 3 4 5: Creeping frequencyF 4 0 0: Auto-tuningF 4 15F 4 19: Motor constant parametersF 4 8 0: Exciting strengthening coefficientF 4 8 5: Stall cooperation gain at field weakening zone 1F 4 9 2: Stall cooperation gain at field weakening zone 2F 4 9 4: Motor adjustment factorF 5 0 3: Emergency stop selectionF 5 0 3: Output phase failure detection mode selectionF 5 0 3: Detection of output short-circuit during start-up selectionF 5 1 3: Over-voltage stall protection levelF 5 2 7: Under voltage trip/alarm selectionF 5 5 9: Logic output/pulse train output selection (OUT-NO)F 9 10: Step-out detection current level (for PM motors)	F I 7 🛛 : Base frequency 2 🔍	
$F \exists 0$ $I - F \exists 1 I$ : Protection parameters $F \exists 15$ : Carrier frequency control mode selection $F \exists 42$ : Braking mode selection $F \exists 43$ : Release frequency $F \exists 43$ : Release frequency $F \exists 75$ : Creeping frequency $F 400$ : Auto-tuning $F 4 15 - F 4 13$ : Motor constant parameters $F 480$ : Exciting strengthening coefficient $F 482$ : Stall cooperation gain at field weakening zone 1 $F 492$ : Stall cooperation gain at field weakening zone 2 $F 494$ : Motor adjustment factor $F 503$ : Emergency stop selection $F 505$ : Output phase failure detection mode selection $F 508$ : Input phase failure detection mode selection $F 525$ : Over-voltage stall protection level $F 525$ : Under voltage trip/alarm selection $F 559$ : Logic output/pulse train output selection (OUT-NO) $F 9 10$ : Step-out detection current level (for PM motors)	F / 7 / : Base frequency voltage	2
F = 3 $15$ : Carrier frequency control mode selection $F = 3$ $42$ : Braking mode selection $F = 3$ $43$ : Release frequency $F = 3$ : Creeping frequency $F = 3$ : Creeping frequency $F = 400$ : Auto-tuning $F = 400$ : Exciting strengthening coefficient $F = 480$ : Stall cooperation gain at field weakening zone 1 $F = 480$ : Stall cooperation gain at field weakening zone 2 $F = 492$ : Stall cooperation gain at field weakening zone 2 $F = 492$ : Stall cooperation gain at field weakening zone 2 $F = 492$ : Stall cooperation gain at field weakening zone 2 $F = 492$ : Stall cooperation gain at field weakening zone 2 $F = 503$ : Couput phase failure detection mode selection $F = 503$ : Input phase failure detection mode selection $F = 524$ : Over-voltage stall protection level $F = 525$ : Under voltage trip/alarm selection $F = 525$ : Logic ou	F25 / : Jog stopping pattern	
$F \ 3 \ 4 \ 2$ : Braking mode selection $F \ 3 \ 4 \ 3$ : Release frequency $F \ 3 \ 4 \ 5$ : Creeping frequency $F \ 4 \ 15 \ -F \ 4 \ 19$ : Auto-tuning $F \ 4 \ 15 \ -F \ 4 \ 19$ : Motor constant parameters $F \ 4 \ 15 \ -F \ 4 \ 19$ : Exciting strengthening coefficient $F \ 4 \ 8 \ 5$ : Exciting strengthening coefficient $F \ 4 \ 8 \ 5$ : Stall cooperation gain at field weakening zone 1 $F \ 4 \ 9 \ 2$ : Stall cooperation gain at field weakening zone 2 $F \ 4 \ 9 \ 4$ : Motor adjustment factor $F \ 5 \ 0 \ 3$ : Emergency stop selection $F \ 5 \ 0 \ 3$ : Output phase failure detection mode selection $F \ 5 \ 0 \ 3$ : Input phase failure detection mode selection $F \ 5 \ 1 \ 3$ : Detection of output short-circuit during start-up selection $F \ 5 \ 2 \ 5$ : Over-voltage stall protection level $F \ 5 \ 5 \ 5$ : Under voltage trip/alarm selection $F \ 5 \ 5 \ 5 \ 5 \ 5 \ 5 \ 5 \ 5 \ 5 \ $	F301~F311 : Protection parameters	
F = 3 + 3: Release frequency $F = 3 + 5$ : Creeping frequency $F = 4 + 5$ : Auto-tuning $F + 4 + 5$ : Auto-tuning $F + 4 + 5$ : Exciting strengthening coefficient $F + 8 + 5$ : Exciting strengthening coefficient $F + 8 + 5$ : Stall cooperation gain at field weakening zone 1 $F + 9 + 7$ : Stall cooperation gain at field weakening zone 2 $F + 9 + 7$ : Stall cooperation gain at field weakening zone 2 $F + 9 + 7$ : Stall cooperation gain at field weakening zone 2 $F + 9 + 7$ : Motor adjustment factor $F + 5 + 7$ : Emergency stop selection $F + 5 + 7$ : Emergency stop selection mode selection $F + 5 + 7$ : Detection of output short-circuit during start-up selection $F + 5 + 7$ : Under voltage stall protection level $F + 5 + 7$ : Under voltage trip/alarm selection $F + 5 + 5 + 7$ : Logic output/pulse train output selection (OUT-NO) $F + 7 + 7 + 7$ : Step-out detection current level (for PM motors)	F 3 15 : Carrier frequency contro	I mode selection
F = 3 + 5: Creeping trequency $F + 15$ : Auto-tuning $F + 15 - F + 19$ : Motor constant parameters $F + 80$ : Exciting strengthening coefficient $F + 85$ : Stall cooperation gain at field weakening zone 1 $F + 92$ : Stall cooperation gain at field weakening zone2 $F + 94$ : Stall cooperation gain at field weakening zone2 $F + 94$ : Motor adjustment factor $F = 503$ : Emergency stop selection $F = 505$ : Output phase failure detection mode selection $F = 508$ : Input phase failure detection mode selection $F = 513$ : Detection of output short-circuit during start-up selection $F = 525$ : Over-voltage stall protection level $F = 525$ : Under voltage trip/alarm selection $F = 526$ : Logic output/pulse train output selection (OUT-NO) $F = 10$ : Step-out detection current level (for PM motors)	F342 : Braking mode selection	
F 4 10: Auto-tuningF 4 15 - F 4 19: Motor constant parametersF 4 80: Exciting strengthening coefficientF 4 85: Stall cooperation gain at field weakening zone 1F 4 92: Stall cooperation gain at field weakening zone2F 4 92: Stall cooperation gain at field weakening zone2F 4 94: Motor adjustment factorF 5 03: Emergency stop selectionF 5 05: Output phase failure detection mode selectionF 5 08: Input phase failure detection mode selectionF 5 13: Detection of output short-circuit during start-up selectionF 5 25: Over-voltage stall protection levelF 5 5 9: Logic output/pulse train output selection (OUT-NO)F 9 10: Step-out detection current level (for PM motors)	F343 : Release frequency	
F 4 15~F 4 19: Motor constant parametersF 4 80: Exciting strengthening coefficientF 4 85: Stall cooperation gain at field weakening zone 1F 4 9 2: Stall cooperation gain at field weakening zone2F 4 9 4: Stall cooperation gain at field weakening zone2F 4 9 4: Stall cooperation gain at field weakening zone2F 4 9 5: Stall cooperation gain at field weakening zone2F 4 9 4: Motor adjustment factorF 5 0 3: Emergency stop selectionF 5 0 5: Output phase failure detection mode selectionF 5 0 8: Input phase failure detection mode selectionF 5 1 3: Detection of output short-circuit during start-up selectionF 5 2 5: Over-voltage stall protection levelF 5 2 7: Under voltage trip/alarm selectionF 5 5 9: Logic output/pulse train output selection (OUT-NO)F 9 10: Step-out detection current level (for PM motors)	F345 : Creeping frequency	
F 480: Exciting strengthening coefficientF 485: Stall cooperation gain at field weakening zone 1F 492: Stall cooperation gain at field weakening zone2F 494: Motor adjustment factorF 503: Emergency stop selectionF 505: Output phase failure detection mode selectionF 508: Input phase failure detection mode selectionF 525: Detection of output short-circuit during start-up selectionF 525: Over-voltage stall protection levelF 525: Logic output/pulse train output selection (OUT-NO)F 310: Step-out detection current level (for PM motors)	FYDD : Auto-tuning	
F 485: Stall cooperation gain at field weakening zone 1F 492: Stall cooperation gain at field weakening zone2F 494: Motor adjustment factorF 503: Emergency stop selectionF 505: Output phase failure detection mode selectionF 508: Input phase failure detection mode selectionF 525: Detection of output short-circuit during start-up selectionF 525: Over-voltage stall protection levelF 525: Under voltage trip/alarm selectionF 525: Logic output/pulse train output selection (OUT-NO)F 310: Step-out detection current level (for PM motors)	F415~F419 : Motor constant parameter	ers
F 4 9 2: Stall cooperation gain at field weakening zone2F 4 9 4: Motor adjustment factorF 5 0 3: Emergency stop selectionF 5 0 5: Output phase failure detection mode selectionF 5 0 8: Input phase failure detection mode selectionF 5 1 3: Detection of output short-circuit during start-up selectionF 5 2 5: Over-voltage stall protection levelF 5 2 5: Under voltage trip/alarm selectionF 5 5 9: Logic output/pulse train output selection (OUT-NO)F 9 10: Step-out detection current level (for PM motors)	F480 : Exciting strengthening co	pefficient
F 4 9 4: Motor adjustment factorF 5 0 3: Emergency stop selectionF 5 0 5: Output phase failure detection mode selectionF 5 0 8: Input phase failure detection mode selectionF 5 1 3: Detection of output short-circuit during start-up selectionF 5 2 5: Over-voltage stall protection levelF 5 2 5: Under voltage trip/alarm selectionF 5 5 9: Logic output/pulse train output selection (OUT-NO)F 9 10: Step-out detection current level (for PM motors)	F485 :Stall cooperation gain at	field weakening zone 1
F 5 0 3: Emergency stop selectionF 5 0 5: Output phase failure detection mode selectionF 5 0 8: Input phase failure detection mode selectionF 5 1 3: Detection of output short-circuit during start-up selectionF 5 2 5: Over-voltage stall protection levelF 5 2 7: Under voltage trip/alarm selectionF 5 5 9: Logic output/pulse train output selection (OUT-NO)F 5 1 0: Step-out detection current level (for PM motors)	F492 : Stall cooperation gain at	field weakening zone2
F 5 0 5: Output phase failure detection mode selectionF 5 0 8: Input phase failure detection mode selectionF 5 1 3: Detection of output short-circuit during start-up selectionF 5 2 5: Over-voltage stall protection levelF 5 2 7: Under voltage trip/alarm selectionF 5 5 9: Logic output/pulse train output selection (OUT-NO)F 5 10: Step-out detection current level (for PM motors)	F494 Motor adjustment factor	
F 5 0 B: Input phase failure detection mode selectionF 5 1 3: Detection of output short-circuit during start-up selectionF 5 2 5: Over-voltage stall protection levelF 5 2 7: Under voltage trip/alarm selectionF 5 5 9: Logic output/pulse train output selection (OUT-NO)F 5 10: Step-out detection current level (for PM motors)	F 5 0 3 : Emergency stop selection	n
F 5 13: Detection of output short-circuit during start-up selectionF 5 2 5: Over-voltage stall protection levelF 5 2 7: Under voltage trip/alarm selectionF 5 5 9: Logic output/pulse train output selection (OUT-NO)F 5 10: Step-out detection current level (for PM motors)	F505 Output phase failure det	ection mode selection
F 5 2 5: Over-voltage stall protection levelF 5 2 7: Under voltage trip/alarm selectionF 5 5 9: Logic output/pulse train output selection (OUT-NO)F 9 10: Step-out detection current level (for PM motors)		
F 5 2 5: Over-voltage stall protection levelF 5 2 7: Under voltage trip/alarm selectionF 5 5 9: Logic output/pulse train output selection (OUT-NO)F 9 10: Step-out detection current level (for PM motors)	F5 I I : Detection of output short	circuit during start-up selection
F 5 5 9: Logic output/pulse train output selection (OUT-NO)F 9 10: Step-out detection current level (for PM motors)	F525 : Over-voltage stall protec	tion level
F3 II : Step-out detection current level (for PM motors)	F527 : Under voltage trip/alarm	selection
	: Step-out detection current	nt level (for PM motors)

E6581158

### 4.1.6 Returning all parameters to standard default setting

Setting the standard default setting parameter  $\not{ \ } \not{ \ } P = \not{ \ }$ , all parameters can be returned to the those factory default settings.

Note: For more details on the standard default setting parameter  $\not\vdash \exists P$ , see 5.6.

.....

Notes on operation

- We recommend that before this operation you write down on paper the values of those parameters, because when setting *L J P* = *J*, all parameters with changed values will be returned to standard factory default setting.
- Note that F \(\mathcal{P}\), F \(\mathcal{P}\) \(\mathcal{P}\), F \(\mathcal{P}\) \(\mathcal{P}\) and F \(\mathcal{B}\) \(\mathcal{D}\) will not be reset to their factory default settings.

Steps for returning all parameters to standard default setting

Key operated	LED display	Operation
	0.0	Displays the operation frequency (perform during operation stopped).
MODE	RUH	The first basic parameter " $\Pi \sqcup H$ " (history function) is displayed.
	ŁЧР	Press the $\Delta$ key or the $\nabla$ key to change to $\mathcal{L} \mathcal{LP}$ .
ENT	з о	Pressing the ENTER key displays the programmed parameters. ( $E \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$
	33	Press the $\Delta$ key or the $\nabla$ key to change the set value. To return to standard factory default setting, change to "].
ENT in it		Pressing the ENTER key displays " $l_n$ $l_n$ " while returning all parameters to factory default setting.
	0.0	The monitor returns to the display of setup parameters.

If there is anything you do not understand during this operation, press the (MODE) key several times to start over from the step of  $R \sqcup H$  display.

E6581158

## 5. Basic parameters

Before you operate the inverter, the parameters that you must first program are the basic parameters.

### 5.1 Setting acceleration/deceleration time

- **HUI**: Automatic acceleration/deceleration
- REE : Acceleration time 1
- **JEL** : Deceleration time 1
  - Function
    - 1) For acceleration time 1 # [ [ programs the time that it takes for the inverter output frequency to go from 0Hz to maximum frequency F H.
    - 2) For deceleration time 1  $\exists E \subseteq$  programs the time that it takes for the inverter output frequency to got from maximum frequency F H to 0Hz.


### 5.1.1 Automatic acceleration/deceleration

This automatically adjusts acceleration and deceleration time in line with load size.

- \* Adjusts the acceleration/deceleration time automatically within the range of 1/8 to 8 times as long as the time set with the REE or dEE, depending on the current rating of the inverter.

RU 1 =2

\* Automatically adjusts speed during acceleration only. During deceleration, speed is not adjusted automatically but reduced at the rate set with  $d \in \mathcal{E}$ .

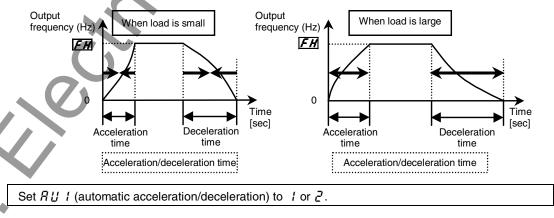

[Parameter s	etting]		
Title	Function	Adjustment range	Default setting
RU 1	Automatic acceleration/deceleration	0: Disabled (manual) 1: Automatic 2: Automatic (only at acceleration)	0


- ☆ When automatically setting acceleration/deceleration time, always change the acceleration/deceleration time so that it conforms with the load. The acceleration/deceleration time changes constantly with load fluctuations. For inverters that requires a fixed acceleration/deceleration time, use the manual settings ( $R \downarrow L$ ,  $d \in L$ ).
- ☆ Setting acceleration/deceleration time (*R ⊆ ⊆*, *d E ⊆*) in conformance with mean load allows optimum setting that conforms to further changes in load.
- $\Rightarrow$  Use this parameter after actually connecting the motor.
- \* When the inverter is used with a load that fluctuates considerably, it may fail to adjust the acceleration or deceleration time in time, and therefore may be tripped.

[Methods of setting automatic acceleration/deceleration]
--

Key operated	LED display	Operation
	0.0	Displays the operation frequency. (When standard monitor display selection <i>F</i> 7 <i>I</i> <sup>[7</sup> ] is set to <sup>[7</sup> ] [Operation frequency])
MODE	RUH	The first basic parameter " $\mathcal{R} \sqcup \mathcal{H}$ " (history function) is displayed.
	RU I	Press the $\Delta$ key to change the parameter to $RU$ 1.
ENT	0	Pressing the ENTER key allows the reading of parameter setting.
	1	Press the $\blacktriangle$ key to change the parameter to $l$ or $2$ .
ENT	I⇔₽U-I	Press the ENTER key to save the changed parameter. $R \amalg I$ and the parameter are displayed alternately.

### 5.1.2 Manually setting acceleration/deceleration time

Set acceleration time from 0 (Hz) operation frequency to maximum frequency F H and deceleration time as the time when operation frequency goes from maximum frequency F H to 0 (Hz).

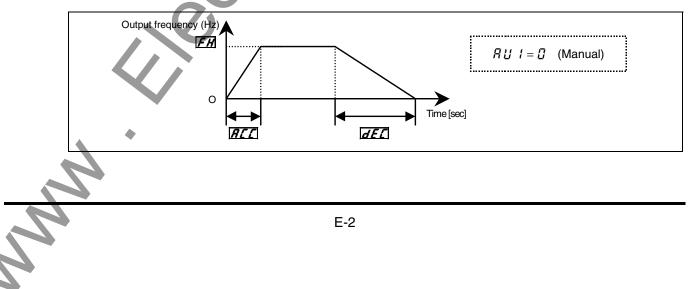

[Parameter s	setting]		
Title	Function	Adjustment range	Default setting
R[[	Acceleration time 1	0.0-3200 sec.	10.0
d E E	Deceleration time 1	0.0-3200 sec.	• 10.0

Note: When the acceleration/deceleration time is set at 0.0 seconds, the inverter speed increases or reduces speed within 0.05 seconds.

☆ If the programmed value is shorter than the optimum acceleration/deceleration time determined by load conditions, overcurrent stall or overvoltage stall function may make the acceleration/deceleration time longer than the programmed time. If an even shorter acceleration/deceleration time is programmed, there may be an overcurrent trip or overvoltage trip for inverter protection. (For further details, see 13.1)

### 5.2 Increasing starting torque

#### RU2: Automatic torque boost

• Function

Simultaneously switches inverter output (V/F) control and programs motor constants automatically (Online automatic-tuning function) to improve torque generated by the motor. This parameter integrates the setting of special V/F control selection such as vector control.

Title	Function	Adjustment range	Default setting
RUZ	Automatic torque boost	0: Disabled 1: Automatic torque boost + auto-tuning 2: Vector control + auto-tuning 3: Energy saving + auto-tuning	0

Note: Parameter displays on the right always return to  $\mathcal{I}$  after setting. The previous setting is displayed on the left. Ex. I

1) Increasing torque automatically according to the load

Set the automatic control  $R \sqcup 2$  is set to I (automatic torque boost + auto-tuning)

E6581158

[Setting methods]		
Key operated	LED display	Operation
	0.0	Displays the operation frequency. (Perform during operation stopped.) (When standard monitor display selection $F$ 7 1 $\square$ is set to $\square$ [Operation frequency])
MODE	RUH	The first basic parameter " $\Re \amalg H$ " (history function) is displayed.
	RUZ	Press the $\Delta$ key to change the parameter to $RU2$ (automatic torque boost)
ENT	0 0	Pressing the ENTER key allows the reading of parameter setting.
	0 1	Press the key to change the parameter to 1 (sensorless vector control + auto-tuning). (Programmed value at the right and the history at the left)
ENT	0 I⇔AU2	Press the ENTER key to save the changed parameter. $R \sqcup 2$ and the parameter are displayed alternately.

Note 1: The same characteristic can be obtained by setting the V/F control mode selection parameter  $P \downarrow$  to 2 (automatic torque boost control) and the auto-tuning parameter  $F \lor \square \square$  to 2 (auto-tuning).

- $\Rightarrow$  See 5.12
- Note 2: Setting  $\mathcal{R} \sqcup \mathcal{Z}$  to  $\mathcal{I}$  automatically programs  $\mathcal{P} \not\models$  to  $\mathcal{Z}$ .
- Note 3: The accuracy of auto-tuning can be increased by specifying the rated current of the driven motor, using the motor rated current setting parameter  $F \neq 15$ .

#### 2) When using vector control (increasing starting torque and high-precision operations)

Set the automatic control  $R \amalg 2$  to 2 (sensorless vector control + auto-tuning)

Setting Automatic control  $\exists \sqcup \exists$  to  $\exists$  (sensorless vector control + auto-tuning) provides high starting torque bringing out the maximum in motor characteristics from the low-speed range. This suppresses changes in motor speed caused by fluctuations in load to provide high precision operation. This is an optimum feature for elevators and other load transporting machinery.

[Setting methods]		
Key operated	LED display	Operation
0. 0		Displays the operation frequency. (Perform during operation stopped.) (When standard monitor display selection <i>F</i> 7 11 is set to 1 [Operation frequency])
MODE	RUH	The first basic parameter " $\Re \amalg H$ " (history function) is displayed.
	RUZ	Press the key to change the parameter to $H \sqcup 2$ (automatic torque boost)
ENT	0 0	Pressing the ENTER key allows the reading of parameter setting.
	0 2	Press the key to change the parameter to 2 (sensorless vector control + auto-tuning). (Programmed value at the right and the history at the left)
ENT	5 U A ⇔ 5 O	Press the ENTER key to save the changed parameter. $A \sqcup Z$ and the parameter are displayed alternately.

Note 1: The same characteristic can be obtained by setting the V/F control mode selection parameter  $P \not\in$  to  $\exists$  (vector control) and the auto-tuning parameter  $F \not\subseteq \Box \Box$  to  $\exists$  (auto-tuning).  $\Rightarrow$  See 5.12

Note 2: Setting  $R \amalg 2$  to 2 automatically programs P E to 3.

#### 3) Energy-saving operation

Automatic torque boost parameter  $B \ U \ Z$  is set to  $\exists$  (automatic energy saving + auto-tuning)

When the automatic control parameter  $R \sqcup 2$  is set to  $\exists$  (automatic torque boost + auto-tuning), the inverter always passes a current appropriate to the load for energy saving.

	[Setting methods]				
	Key operated LED display			splay	Operation
	4		₿.	a	Displays the operation frequency. (Perform during operation stopped.) (When standard monitor display selection $F$ 7 $I$ $I$ is set to $I$ [Operation frequency])
	MODE		ЯU	Η	The first basic parameter " $H \sqcup H$ " (history function) is displayed.
			RIJ	2	Press the key to change the parameter to $R \sqcup 2$ (automatic torque boost)
	ENT		0	0	Pressing the ENTER key allows the reading of parameter setting.
	E 0 3		3	Change the parameter setting to $\exists$ (energy saving + auto-tuning), using the key.	
5	ENT	0	₹⇔	AU2	Press the ENTER key to save the changed parameter. $A \sqcup Z$ and the parameter are displayed alternately.

Note 1: The same characteristic can be obtained by setting the V/F control mode selection parameter  $P_{L}$  to  $\mathcal{A}$  (automatic energy saving) and the auto-tuning parameter  $F \mathcal{A} \square \square$  to  $\mathcal{A}$  (auto-tuning). Note 2: When  $\mathcal{A} \sqcup \mathcal{A}$  is set to  $\mathcal{A}$ ,  $P_{L}$  is automatically set to  $\mathcal{A}$ .

E6581158

If vector	control	cannot	ho	nroaran	hmod
	COLLIO	Carmor	Dei	uluulali	inneu

- First read the precautions about vector control in 5.11, 8.
- 1) If the desired torque cannot be obtained see 6.17,2
- 2) If auto-tuning error " $E \models n$ " appears see 6.17,3

#### ■ PU2 (automatic torque boost) and PL (V/F control mode selection 1)

Automatic torque boost is the parameter for setting V/F control mode selection 1 ( $P \downarrow : \exists$ ) and autotuning ( $F \lor \square \square$ ) together. That is why all parameters related to change automatically when  $R \amalg 2$  is changed.

		Automatically programmed parameters			
RUZ		PE	F400		
Displays 🖟 after resetting	-	Check the programmed value of P Ł . (If R U Z is not changed, it becomes 0 (V/F constant)	-		
Automatic torque boost + auto-tuning	2	Automatic torque boost	Executed ([] after execution)		
Vector control + auto-tuning	З	Sensorless vector control	Executed ([] after execution)		
Energy saving + auto-tuning	ч	Automatic energy saving	Executed $(\underline{D} \text{ after execution})$		
	Displays [] after resetting Automatic torque boost + auto-tuning Vector control + auto-tuning	Displays [] after resetting-Automatic torque boost + auto-tuning2Vector control + auto-tuning3	RU2       PE         Displays [] after resetting       -       Check the programmed value of PE. (If RU2 is not changed, it becomes 0 (V/F constant)         Automatic torque boost + auto-tuning       -       2         Vector control + auto-tuning       3       Sensorless vector control		

### 4) Increasing torque manually (V/F constant control)

This is the setting of constant torque characteristics that are suited for such things as conveyors. It can also be used to manually increase starting torque.

If V/F constant control is programmed after changing  $B \sqcup 2$ , Set V/F control mode selection 1  $P \models = \square$  (V/F constant).

 $\Rightarrow$  see 5.11

- Note 1: To further increase torque, increase the torque boost amount  $1_{U}_{b}$ . How to set the torque boost amount  $1_{U}_{b}$   $\Rightarrow$  see 5.12 Note 0:  $V/\Gamma$  control collection 1  $U_{c}$  - 1 (variable torque) is an effective patting for the lead on one
- Note 2: V/F control selection 1  $P_{L} = 1$  (variable torque) is an effective setting for the load on such equipment as fans and pumps.  $\Rightarrow$  see 5.11

E6581158

### 5.3 Specifying an operation mode, using parameters

## **RUY**: Automatic function setting

Function

Automatically programs all parameters (parameters described below) related to the functions by selecting the inverter's operating method.

The major functions can be programmed simply.

[Parameter setting]

Farameter	settingj		
Title	Function	Adjustment range	Default setting
ЯШЧ	Automatic function setting	0: Disabled 1: Coast stop 2: 3-wire operation 3: External input UP/DOWN setting 4: 4-20mA current input operation	0:

#### Automatically programmed functions and parameter set values

	Default setting	1: Coast stop	2:3-wire opera- tion	3: External input UP/DOWN set- ting	4: 4-20mA current input operation	
6009	1: Operation panel	0: Terminal board	0: Terminal board	0: Terminal board	0: Terminal board	
FNDa	0: Potentiometer	entiometer 0: Potentiometer 0: Potentiometer 5: UP/D0 from e		5: UP/DOWN from external contact	1: VIA	
F 1 1 🖸 (Always)	1: ST	0: Disabled	1: ST	1: ST	1: ST	
<i>F ¦ ¦ ¦</i> (F)	2:F	2:F	2:F	2:F	2:F	
<i>F ¦ ¦ ⋛</i> (R)	3:R	3	3:R	3:R	3:R	
<i>F ¦ ¦∃</i> (RES)	10: RES	10: RES	10: RES	10: RES	10: RES	
F     4 (S1)	6: SS1	6: SS1	6: SS1	41:UP	6: SS1	
F 1 15 (S2)	7: SS2	7: SS2	7: SS2	42: DOWN	7: SS2	
F 1 1 5 (S3)	8: SS3	1: ST	49: HD	43: CLR	38: FCHG	
F201	0 (%)	-	-	-	20 (%)	

Note) See K-15 for input terminal functions.

Disabled  $(R \sqcup H = \overline{U})$ 

Input terminals and parameters are standards programmed at the factory.

Coast stop (셔냅냄 = 1)

Setting for coast stopping. In sink logic mode, closing the circuit between the S3 and CC terminals places

the inverter in standby mode and opening the circuit places it in coast stop mode, because ST (standby signal) is assigned to the S3 terminal.

E6581158

3-wire operation  $(\underline{R} \sqcup \underline{U} = \underline{z})$ 

Can be operated by a momentary push-button. HD (operation holding) is assigned to the terminal S3. A selfholding of operations is made in the inverter by connecting the stop switch (b-contact) to the S3 terminal and connecting the running switch (a-contact) to the F terminal or the R terminal.

Refer to 7.2(3) for details.

External input UP/DOWN setting  $(R \sqcup Y = 3)$ 

Allows setting of frequency with the input from an external contact. Can be applied to changes of frequencies from several locations.

UP (frequency up signal input from external contact) is assigned to the S1 terminal, and DOWN (frequency down signal input from external contact) are assigned to the S2 and CLR (frequency up/down clear signal input from external contact) are assigned to the S3 terminals respectively. Frequencies can be changed by input to the S1 and S2 terminals.

Refer to 6.5.2(3) for details.

4-20 mA current input(취납식=식)

Used for setting frequencies with 4-20mA current input. Switching between remote control and manual control (different frequency commands) can be made by turning on or off the S3 terminal, because FCHG (forced change of frequency commands) is assigned to the S3 terminal with priority to current input.

### 5.4 Selection of operation mode

Command mode selection

FIII .: Frequency setting mode selection 1

Function

These parameters are used to specify which input device (operation panel or terminal board) takes priority in entering an operation stop command or a frequency setting command (internal potentiometer, VIA, VIB, operation panel, serial communication device, external contact up/down, VIA+VIB).

#### <Command mode selection>

Terminal board


operation

Title	Function	Adjustment range	Default setting
6003	Command mode selection	0: Terminal board 1: Operation panel	1

Programmed value

0

ON and OFF of an external signal Runs and stops operation.

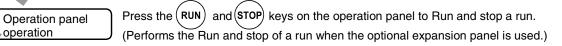

1 n n

E6581158

- \* There are two types of function: the function that conforms to commands selected by [ ]] ], and the function that conforms only to commands from the terminal board. See the table of input terminal function selection in Chapter 11.
- \* When priority is given to commands from a linked computer or terminal board, they have priority over the setting of []] d.


<u><i requei<="" u=""></i></u>			
Title	Function	Adjustment range	Default setting
FNDa	Frequency setting mode selection 1	0: Built-in potentiometer 1: VIA 2: VIB 3: Operation panel 4: Serial communication 5: UP/DOWN from external contact 6: VIA+VIB (Override)	0
	•		-

#### <Frequency setting mode selection>

[Programmed value]

Li rogi		-
<i>[</i> ]:	Potentiometer	The internal potentiometer to the inverter is used for setting frequencies. Turning
		the notches clockwise raises the frequency.
<i>\</i> :	VIA input	A frequency command is set by means of a signal from an external input device
••		(VIA terminal: 0-10Vdc or 4-20mAdc).
7.		An external signal (VIB terminal: 0-10Vdc) is used to specify a frequency com-
2:	VIB input	mand.
3:	Operation panel	Press the key or the key on either the operation panel or the expan- sion panel (optional) to set frequency.
4:	Communication	Frequencies are set by commands from an external control unit.
5:	UP/DOWN frequency	Terminale are used to enseif, on un/down frequency command
<u>_</u> .	UT/DOWN meduency	Terminals are used to specify an up/down frequency command.
-		The sum of the values entered through the VIA and VIB terminals is used as a
<i>Б</i> :	VIA+VIB (Override)	frequency command value.
☆ No	matter what value the co	ommand mode selection [ $\Pi \square d$ and the frequency setting mode selection
F (		ol input terminal functions described below are always in operative state.
		setting: RES, valid only for tripping)
•	* .	programmed by programmable input terminal functions). top terminal command (when so set using the programmable input terminal func-
•	tion)	top terminal command (when so set using the programmable input terminal lunc-

E6581158

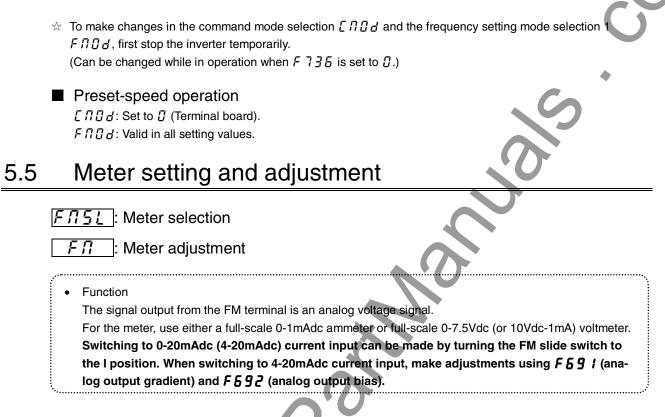

[Connected meter selection parameters]

Title	Function	Adjustment range	Default setting
FNSL	Meter selection	0: Output frequency 1: Output current 2: Set frequency 3: DC voltage 4: Output voltage command value 5: Input power 6: Output power 7: Torque 8: Torque current 9: Motor cumulative load factor 10: Inverter cumulative load factor 11: PBR (braking reactor) cumulative load factor 12: Frequency setting value (after PID) 13: VIA/II Input value 14: VIB Input value 15: Fixed output 1 (Output current: 100%) 16: Fixed output 2 (Output current: 50%) 17: Fixed output 3 (Other than the output current: 100%) 18: Serial communication data 19: For adjustments ( $F \Pi$ set value is displayed.)	0
F 🖪	Meter adjustment	-	-


E-10

E6581158

#### Resolution

All FM terminals have a maximum of 1/256.


Example of 4-20mA programmed output (for details, see 6.20.2)

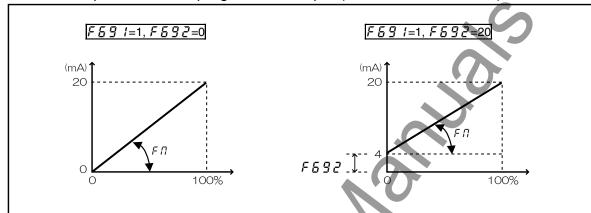

Note) Note that, if F [15] is set to 7 (torque), data will be updated at intervals of more than 40 ms.

### Adjustment scale with meter adjustment $\mathcal{F}\mathcal{R}$ parameter

Connect meters as shown below.

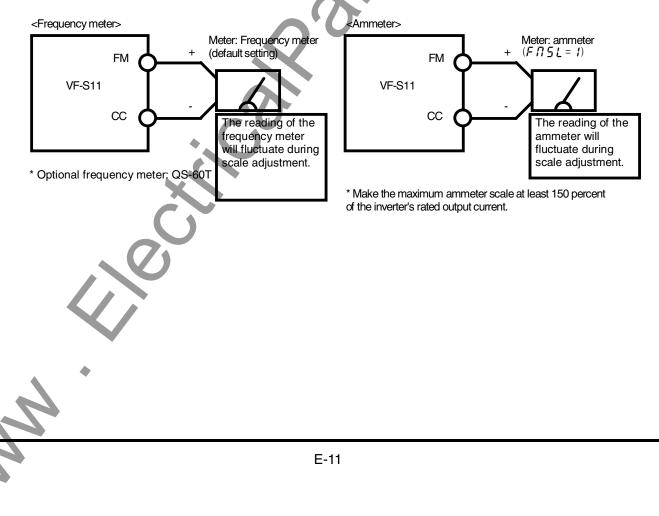

E6581158

[Example of how to adjustment the FM terminal frequency meter]

* Use the meter's adjustment screw to pre-adjust zero-poir	pro-point.	pre-adjust	screw to	adjustment	meter's	Use the	*
--	------------	------------	----------	------------	---------	---------	---

Key operated	LED display	Operation
-	60.0	Displays the operation frequency. (When standard monitor display selection <i>F</i> 7 <i>I</i> 1 is set to 1 [Operation frequency])
MODE	RUH	The first basic parameter " $\mathcal{H} \sqcup \mathcal{H}$ " (history function) is displayed.
<u></u> <b>Г</b> Г П		Press either the $\triangle$ or the $\nabla$ key to select " $F I$ ".
ENT	60.0	Press the ENTER key to display the operation frequency
	60.0	Press either the∆ key or the⊽ key to adjust the meter. The meter reading will change at this time but be careful because there will be no change in the inverter's digital LED (monitor) indication. [Hint] It's easier to make the adjustment if you push and hold for several seconds.
ENT	60.0 FN	The adjustment is complete. F $\Pi$ and the frequency are displayed alternately.
(MODE) + (MODE)	60.0	The display returns to its original indications. (When standard monitor display selection $F \ 7 \ 1 \ 1$ is set to $\ 1 \ 1$ [Operation frequency])

#### Adjusting the meter in inverter stop state

If, when adjusting the meter for output current, there are large fluctuations in data during adjustment, making adjustment difficult, the meter can be adjusted in inverter stop state.

When setting F75L to 15 for fixed output 1 (100% output current), a signal of absolute values will be output (inverter's rated current = 100%). In this state, adjust the meter with the F II (Meter adjustment) parameter.

Similarly, if you set F 1512 to 15 for fixed output 2 (output current at 50%), a signal that is sent out when half the inverter's rated current is flowing will be output through the FM terminal.

After meter adjustment is ended, set F 751 to 1 (output current).



E6581158

### 5.6 Standard default setting

### <u> Ł Ч Р</u>: Default setting

#### Function

Allows setting of all parameters to the standard default setting, etc. at one time. Note that  $F\Pi$ ,  $F\Pi$ , SL, F,  $I\Pi$ , FEE, and  $FBB\Pi$  will not be reset to their factory default settings.

Title	Function	Adjustment range	Default setting
ŁУP	Default setting	0: - 1: 50Hz default setting 2: 60Hz default setting 3: Standard default setting (Initializa- tion) 4: Trip record clear 5: Cumulative operation time clear 6: Initialization of type information 7: Save user-defined parameters 8: Call user-defined parameters 9: Cumulative fan operation time rec- ord clear	0

★ This function will be displayed as 0 during reading on the right. This previous setting is displayed. Example: 3

★ *E YP* cannot be set during the inverter operating. Always stop the inverter first and then program.

#### Programmed value

Default setting  $(\underline{F} \ \underline{J} \ \underline{P} = \underline{J})$ 

Setting E YP to 3 will return all parameters to the standard values that were programmed at the factory.

 $\Rightarrow$  When 3 is programmed,  $< \frac{ln}{k}$  will be displayed for a short time after setting and will then be erased and displayed the original indication 0.0. Trip history data will be cleared at this time.

Trip clear ( $\underline{F} \stackrel{\mathcal{L}}{\rightarrow} \stackrel{\mathcal{P}}{=} \stackrel{\mathcal{L}}{\rightarrow}$ )

Setting  $E \mathcal{L} \mathcal{P}$  to  $\mathcal{H}$  initializes the past four sets of recorded error history data.

 $\Rightarrow$  The parameter does not change.

Setting E 4P to 5 resets the cumulative operation time to the initial value (zero).

Setting  $\not\vdash \not\subseteq P$  to  $\not\sqsubseteq$  clears the trips when an  $\not \in \not\vdash \not\subseteq P$  format error occurs. But if the  $\not\in \not\vdash \not\subseteq P$  displayed, call us,

E6581158

Setting <u>E G P</u> to 7 saves the current settings of all parameters.

Call user-defined parameters  $(E \ \exists P = B)$ 

Setting E YP to B resets parameter settings to (calls up) those saved by setting E YP to

 $\frac{1}{2}$  By setting <u>L</u>  $\frac{1}{2}$  P to 7 or  $\frac{1}{2}$ , you can use parameters as your own default parameters.

Cumulative fan operation time record clear ( $\xi \forall P = 9$ )

Setting  $\underline{E} \underline{A} P$  to  $\underline{B}$  resets the cumulative operation time to the initial value (zero). Set this parameter when replacing the cooling fan, and so on.

# 5.7 Forward/reverse run selection (Operation panel operation)



Function

Program the direction of rotation of the motor when the running and stopping are made using the RUN key and STOP key on the operation panel.

Valid when  $[ \Pi \square \square ]$  (command mode) is set to f (operation panel).

#### Parameter setting

Title	Function	Adjustment range	Default setting
Fr	Forward/reverse run selection (Opera- tion panel operation)	0: Forward run 1: Reverse run 2: Forward run (F/R switching possible) 3: Reverse run (F/R switching possible)	0

- ★ When  $F_r$  is set to  $F_r$  or  $F_r$  and an operating status is displayed, pressing the (▲) key with the (ENT) key held down changes the direction of rotation from reverse to forward after displaying the message " $F_r - F$ ." Pressing the (▲) key again with the (ENT) key held down changes the direction of rotation from forward to reverse after displaying the message " $F_r - r$ ."
- $\star$  Check the direction of rotation on the status monitor. For monitoring, see8.1

Fr-F: Forward run

- - - : Reverse run

★ When the F and R terminals are used for switching between forward and reverse rotation from the terminal board, the F r forward/reverse run selection parameter is rendered invalid.
 Short across the F-CC terminals: forward rotation

Short across the R-CC terminals: reverse rotation.

- ★ The inverter was factory-configured by default so that shorting terminals F-CC and terminals R-CC simultaneously would cause the motor to slow down to a stop. Using parameter *F 1*, *1*, *5*, however, you can choose between stop and reverse run.
  - Using the parameter F 125, however, you can select between forward run and reverse run.
- ★ This function is valid only when  $\begin{bmatrix} \Pi & \Pi & \Pi \\ \blacksquare & \Pi & \Pi \end{bmatrix}$  is set to I (operation panel).

#### 5.8 Maximum frequency FH : Maximum frequency Function Programs the range of frequencies output by the inverter (maximum output values). 2) This frequency is used as the reference for acceleration/deceleration time. Output frequency When <u>F H</u>=80Hz (Hz) This function determines the value 80Hz in line with the ratings of the motor and load. Maximum frequency cannot be 60Hz Vhen *F H*⊧ adjusted during operation.To adjust, first stop the inverter. Frequency setting signal (%) 0 $\star$ If F H is increased, adjust the upper limit frequency $U_L$ as necessary. Parameter setting Title Function Default setting Adjustment range

### 5.9 Upper limit and lower limit frequencies

Upper limit frequency

Maximum frequency

FΗ

Function

LL: Lower limit frequency


Programs the lower limit frequency that determines the lower limit of the output frequency and the upper limit frequency that determines the upper limit of that frequency.

30.0-500.0 (Hz)

80.0

E658115

E6581158

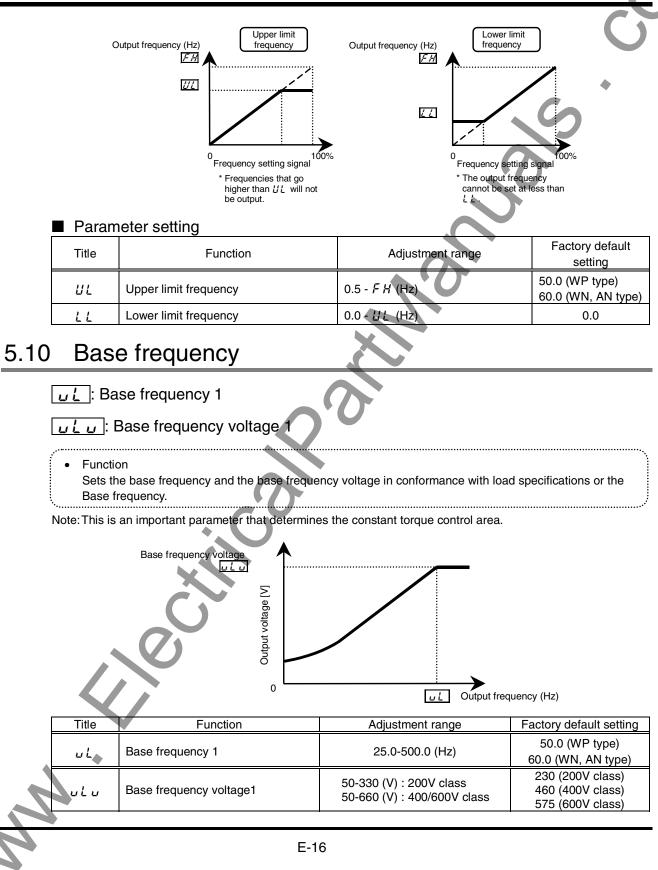

E6581158

### 5.11 Selecting control mode

#### PE: V/F control mode selection

.....

#### Function

With VF-S11, the V/F controls shown below can be selected.

OV/F constant

OVariable torque

OAutomatic torque boost control \*1

OSensorless vector control \*1

OAutomatic energy saving \*1

ODynamic automatic energy-saving (for fans and pumps)

OPM motor control

(\*1) "Automatic torque boost": RU2 parameter can automatically set this parameter and auto-tuning at a time.

#### Parameter setting

Title	Function	Adjustment range	Default setting
PĿ	V/F control mode selection 1	<ul> <li>0: V/F constant</li> <li>1: Variable torque</li> <li>2: Automatic torque boost control</li> <li>3: Sensorless Vector control</li> <li>4: Automatic energy-saving</li> <li>5: Dynamic automatic energy- saving (for fans and pumps)</li> <li>6: PM motor control</li> </ul>	2


Steps in setting are as follows

(In this example, the V/F control mode selection parameter P L is set to 3 (sensorless vector control).

#### [Setting V/F control mode selection to 3 (sensorless vector control)]

	Key operated	LED display	Operation			
	X	0. 0	Displays the operation frequency. (Perform during operation stopped.) (When standard monitor display selection <i>F</i> 7 1 1 is set to 1 [Operation frequency])			
	MODE	RUH	The first basic parameter " $R \amalg H$ " (history function) is displayed.			
	PE PE	PĿ	Press the $\triangle$ key to change the parameter to $P \ge (V/F \text{ control mode selection}).$			
	ENT	2	Press the ENTER key to display the parameter setting. (Standard default setting: $2$ (automatic torque boost control)).			
		З	Press the $\Delta$ key to change the parameter to $\exists$ (vector control).			
•	ENT	3 ⇔ <i>P</i> Ł	Press the ENTER key to save the changed parameter. $P \ge$ and parameter set value " $\exists$ " are displayed alternately.			

E6581158

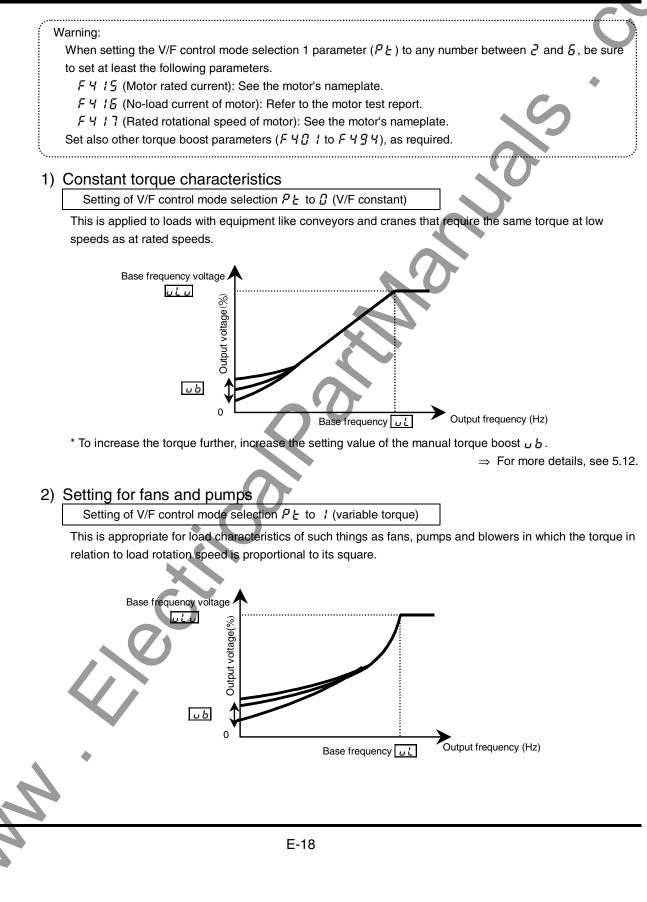


E6581158

#### 3) Increasing starting torque

Setting of V/F control mode selection  $P \vdash$  to 2 (automatic torque boost control)

Detects load current in all speed ranges and automatically adjusts voltage output (torque boost) from inverter. This gives steady torque for stable runs.

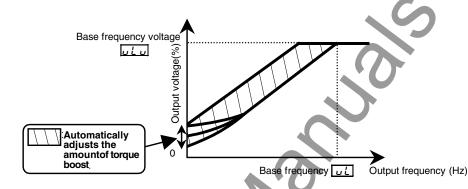

Note: This control system can oscillate and destabilize runs depending on the load. If that should happen, set V/F control mode selection PE to D (V/F constant) and increase torque manually.

#### ★ Motor constant must be set

If the motor you are using is a 4P Toshiba standard motor and if it has the same capacity as the inverter, there is basically no need to set the motor constant. In any other case, be sure to set the parameters F + 15 to F + 17 properly.

Be sure to set  $F \neq 15$  (rated current of motor) and  $F \neq 17$  (rated speed of motor) correctly, as specified on the motor's nameplate. For the setting of  $F \neq 15$  (no-load current of motor), refer to the motor test report. There are three procedures for setting the other motor constants.

- 1) Auto torque boost and a motor constant (auto-tuning) can be set at once. To do so, set the basic parameter RU2 to 1. For details, see 1 in 5.2.
- 2) The motor constant can be automatically set (auto-tuning). Set the extended parameter F 4 [] [] to 2.
  - For details, see selection 2 in 6.17.

3) Each motor constant can be set individually. For details, see selection 3 in 6.17.

4) Vector control - increasing starting torque and achieving high-precision operation. Setting of V/F control P Ł to 3 (Vector control)

Using sensor-less vector control with a Toshiba standard motor will provide the highest torque at the low speed ranges.

(1) Provides large starting torque.

(2) Effective when stable operation is required to move smoothly up from the low speeds.

(3) Effective in elimination of load fluctuations caused by motor slippage.

#### ★ Motor constant must be set

If the motor you are using is a 4P Toshiba standard motor and if it has the same capacity as the inverter, there is basically no need to set the motor constant. In any other case, be sure to set the parameters F 4 15 to F 4 17 properly.

Be sure to set  $F \lor I5$  (rated current of motor) and  $F \lor I7$  (rated speed of motor) correctly, as specified on the motor's nameplate. For the setting of  $F \lor I5$  (no-load current of motor), refer to the motor test report. There are three procedures for setting the other motor constants.

- The sensorless vector control and motor constants (auto-tuning) can be set at a time Set the basic parameter RU2 to 2.
   For details, see 1 in 5.2.
- The motor constant can be automatically set (auto-tuning). Set the extended parameter *F Y* <sup>*C*</sup> <sup>*C*</sup> it to <sup>*C*</sup>. For deta

3) Each motor constant can be set individually.

For details, see selection 2 in 6.17. For details, see selection 3 in 6.17.

#### 5) Energy-saving

Setting of V/F control mode selection P L to 4 (automatic energy-saving)

Energy can be saved in all speed areas by detecting load current and flowing the optimum current that fits the load.

#### ★ Motor constant must be set

If the motor you are using is a 4P Toshiba standard motor and if it has the same capacity as the inverter, there is no need to set the motor constant. In any other case, be sure to set the parameters F 4 15 to F 4 17 properly.

Be sure to set  $F \not\in I$  (rated current of motor) and  $F \not\in I$  (rated speed of motor) correctly, as specified on the motor's nameplate. For the setting of  $F \not\in I$  (no-load current of motor), refer to the motor test report. There are three procedures for setting the other motor constants.

1) Automatic energy-saving operation and a motor constant can be set at once. Set the basic parameter  $R \sqcup 2$  to 3.

For details, see 1 in 5.2.

2) The motor constant can be automatically set (auto-tuning). Set the extended parameter F 4 [] [] to 2.

For details, see selection 2 in 6.17. For details, see selection 3 in 6.17.

3) Each motor constant can be set individually.

#### 6) Achieving further energy savings

Setting of V/F control mode selection  $P_{E}$  to 5 (dynamic automatic energy-saving)

More substantial energy savings than those provided by setting  $P \ge to Y$  can be achieved in any speed range by keeping track of the load current and passing a current appropriate to the load. The inverter cannot respond to rapid load fluctuations, so that this feature should be used only for loads, such as fans and pumps, that are free of violent load fluctuations.



#### ★ Motor constant must be set

If the motor you are using is a 4P Toshiba standard motor and if it has the same capacity as the inverter, there is no need to set the motor constant. In any other case, be sure to set the parameters F 4 15 to F 4 17 properly.

Be sure to set  $F \not\in I \subseteq$  (rated current of motor) and  $F \not\in I \supseteq$  (rated speed of motor) correctly, as specified on the motor's nameplate. For the setting of  $F \not\in I \subseteq$  (no-load current of motor), refer to the motor test report. For other types of motors, there are two ways to set a motor constant.

- 1) The motor constant can be set automatically (auto-tuning). Set the extended parameter F 400 to 2.
  - $\Rightarrow$  For details, see selection 2 in 6.17.
- 2) Each motor constant can be set individually
- $\Rightarrow$  For details, see selection 3 in 6.17.

#### 7) Operating a permanent magnet motor

Setting of V/F control mode selection  $P_{E}$  to E (PM motor control)

Permanent magnet motors (PM motors) that are light, small in size and highly efficient, as compared to induction motors, can be operated in sensor-less operation mode.

Note that this feature can be used only for specific motors. For more information, contact your Toshiba dealer.

#### 8) Precautions on vector control

- When exercising vector control, be sure to set the extended parameters F 4 15 to F 4 17 properly. Be sure to set F 4 15 (rated current of motor) and F 4 17 (rated speed of motor) correctly, as specified on the motor's nameplate. For the setting of F 4 15 (no-load current of motor), refer to the motor test report.
- The sensorless vector control exerts its characteristics effectively in frequency areas below the base frequency (u L). The same characteristics will not be obtained in areas above the base frequency.
- 3) Set the base frequency to anywhere from 40 to 120Hz during vector control ( $P \downarrow = 3$ ).
- 4) Use a general purpose squirrel-cage motor with a capacity that is the same as the inverter's rated capacity or one rank below.
  - The minimum applicable motor capacity is 0.1kW.
- 5) Use a motor that has 2-8 P.
- 6) Always operate the motor in single operation (one inverter to one motor). Sensorless vector control cannot be used when one inverter is operated with more than one motor.
- 7) The maximum length of wires between the inverter and motor is 30 meters. If the wires are longer than 30 meters, set standard auto-tuning with the wires connected to improve low-speed torque during sensorless vector control.


However the effects of voltage drop cause motor-generated torque in the vicinity of rated frequency to be somewhat lower.

B) Connecting a reactor or surge voltage suppression filter between the inverter and the motor may reduce motor-generated torque. Setting auto-tuning may also cause a trip (E + n l) rendering sensorless vector control unusable.



E6581158

# 5.12 Manual torque boost - increasing torque boost at low speeds

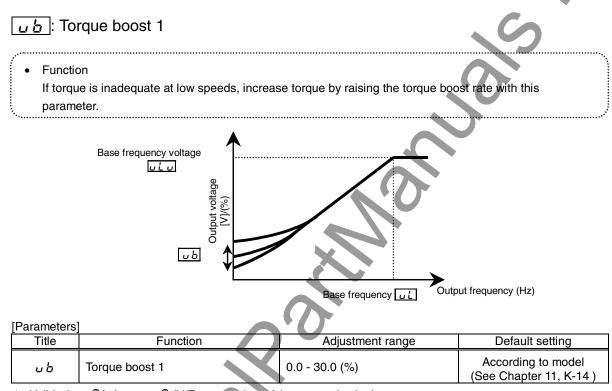

★ Valid when P Ł is set to  $\square$  (V/F constant) or J (square reduction)

Note 1: The optimum value is programmed for each inverter capacity. Be careful not to increase the torque boost rate too much because it could cause an overcurrent trip at startup.

### 5.13 Setting the electronic thermal

Function

EHr: Motor electronic-thermal protection level 1

**<u>[]</u> <u>[</u>] Electronic thermal protection characteristic selection** 

This parameter allows selection of the appropriate electronic thermal protection characteristics according to the particular rating and characteristics of the motor.

E6581158

#### Parameter setting

Title	Function		Adjustn	nent range		Defa	ault setting
EHr	Motor electronic thermal pro- tection level 1		10 - 1	00 ( % )	-	٠	100
0L N	Electronic-thermal protection characteristic selection	Setting value 0 1 2 3 4 5 6 7	Standard motor VF motor (special motor)	Overload protection O X X X O O O X X X	Overload stall × O × O × O × O		0
		,			* • • • • • • • • •		

\* O : valid, × : invalid

1) Setting the electronic thermal protection characteristics selection **III** and motor electronic thermal protection level **1 E H r** 

The electronic thermal protection characteristics selection  $\mathcal{GL} \mathcal{A}$  is used to enable or disable the motor overload trip function ( $\mathcal{GL} \mathcal{A}$ ) and the overload stall function.

While the inverter overload trip ( $\square L$  *l*) will be in constant detect operation, the motor overload trip ( $\square L$  *l*) can be selected using the parameter  $\square L \square$ .

### Explanation of terms

Overload stall: This is an optimum function for equipment such as fans, pumps and blowers with variable torque characteristics that the load current decreases as the operating speed decreases.
When the inverter detects an overload, this function automatically lowers the output frequency before the motor overload trip *DL 2* is activated. This function operates a motor at frequencies that allow the load current to keep its balance so that the inverter can continue operation without being tripped.
Note: Do not use the overload stall function with loads having constant torque characteristics (such as conveyor belts in which load current is fixed with no relation to speed).

#### [Using standard motors (other than motors intended for use with inverters)]

When a motor is used in the lower frequency range than the rated frequency, that will decrease the cooling effects for the motor. This speeds up the start of overload detection operations when a standard motor is used in order to prevent overheating.

E6581158


Setting of electronic thermal protection characteristics selection	ΟL	Π
--	----	---

Setting value	Overload protection	Overload stall
0	0	×
1	0	0
2	×	×
Э	×	0

O : valid,  $\times$  : invalid

#### Setting of motor electronic thermal protection level 1 E H

If the capacity of the motor is smaller than the capacity of the inverter, or the rated current of the motor is smaller than the rated current of the inverter, adjust the electronic thermal protection level 1  $EH_{r}$  so that it fits the motor's rated current.

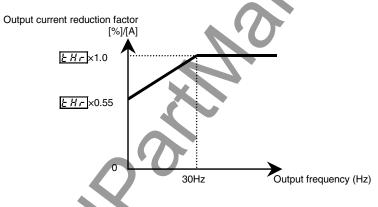

Note: The motor overload protection start level is fixed at 30Hz.

	[Example of sett	ing: When the VFS	S11-2007PM is running with a 0.4kW motor having 2A rated current]
	Key operated	LED display	Operation
		8.0	Displays the operation frequency. (Perform during operation stopped.) (When standard monitor display selection <i>F</i> 7 / [] is set to [] [Operation frequency])
	MODE	RUH	The first basic parameter " $\mathcal{R} \sqcup \mathcal{H}$ " (history function) is displayed.
		EHr	Press either the $\Delta$ key or the $\nabla$ key to change the parameter to $\pounds$ $H_r$ .
	ENT	100	Press the ENTER key to display the parameter setting. (Standard default setting: 100%)
<		42	Press the∆ key to change the parameter to 4 2 % (=motor rated current/inverter output rated current x 100=2.0//4.8×100).
	ENT	42 EHr	Press the ENTER key to save the changed parameter. $EH_{r}$ and the parameter are displayed alternately.

. .

Note: The rated output current of the inverter should be calculated from the rated current for frequencies below 4kHz, regardless of the setting of the PWM carrier frequency parameter ( $F \exists \square \square$ ).

E6581158



	Setting of	electronic	thermal	protection	characteristics	selection	ΟL	П
--	------------	------------	---------	------------	-----------------	-----------	----	---

Setting value	Overload protection	Overload stall
Ч	0	×
5	0	0
6	×	×
٦	×	0


 $\mathsf{O}: \textbf{valid}, \times: \textbf{invalid}$ 

VF motors (motors designed for use with inverters) can be used in frequency ranges lower than those for standard motors, but their cooling efficiency decreases at frequencies below 6Hz.

#### Setting of motor electronic thermal protection level 1 <u>*L H r*</u>

If the capacity of the motor is smaller than the capacity of the inverter, or the rated current of the motor is smaller than the rated current of the inverter, adjust the electronic thermal protection level 1  $EH_{r}$  so that it fits the motor's rated current.


\* If the indications are in percentages (%), then 100% equals the inverter's rated output current (A).

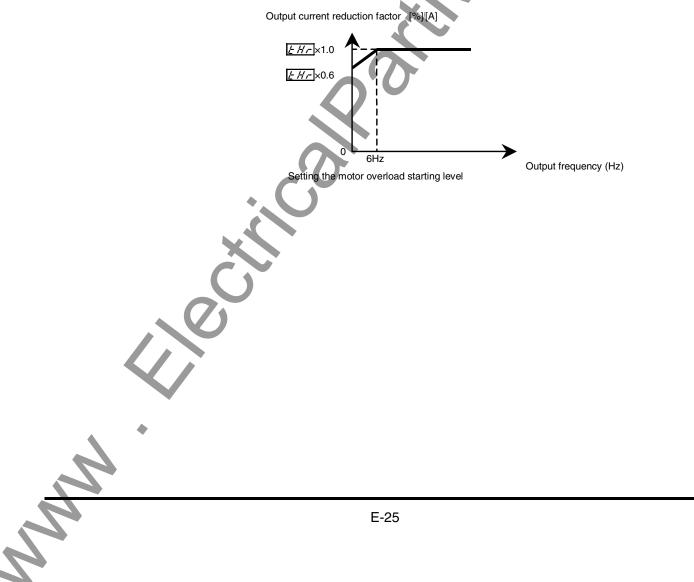

E6581158

#### 2) Inverter over load characteristics

Set to protect the inverter unit. Cannot be changed or turned off by parameter setting. To prevent the inverter overload trip function  $(\square \downarrow I)$  from being activated too easily, lower the stall prevention level ( $F \sqsubseteq \square I$ ) or increase the acceleration time ( $\square \downarrow \Box I$ ) or deceleration time ( $\square \downarrow \Box I$ ).

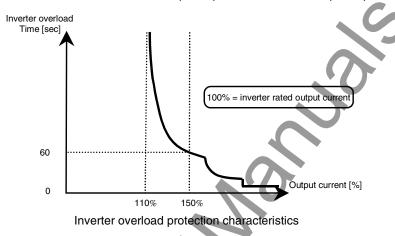

<u>\* To protect the inverter, overload trip activates in a short period of time when output current reaches 150% or higher.</u>

.....

### 5.14 Preset-speed operation (speeds in 15 steps)

5-1-5-7: Preset-speed operation frequencies 1-7

F287 - F294: Preset-speed operation frequencies 8-15

Function

A maximum of 15 speed steps can be selected just by switching an external contact signal. Multi-speed frequencies can be programmed anywhere from the lower limit frequency LL to the upper limit frequency LL.

When fire-speed control is assigned to the terminal board, the function of setting fire-speed operation frequencies is assigned to *F 2 9 4*.

See 6.11.2, "Fire-speed control.

[Setting method]

1) Run/stop

The starting and stopping control is done from the terminal board.

Title	Function	Adjustment range	Setting value
6003	Command mode selection	0: Terminal board 1: Operation panel	0

Note: If speed commands (analog signal or digital input) are switched in line with preset-speed operations, select the terminal board using the frequency setting mode selection *F Π □ d*. See 3) or 5.4

E6581158

#### 2) Preset-speed frequency setting

Set the speed (frequency) of the number of steps necessary.

Setting from speed 1 to speed 7

Title	Funtion	Adjustment range		Setting value
5r 1- 5r 7	Preset-speed operation frequencies 1-7	<i>LL - UL</i> (Hz)	S	0.0

Setting from speed 8 to speed 15

eetting nem epeed e			
Title	Function	Adjustment range	Setting value
F287-F294	Preset-speed operation frequencies 8-15	LL-UL(Hz)	0.0

Examples of preset-speed contact input signals: Slide switch SW1 set to sink logic

#### O: ON -: OFF (Speed commands other than preset-speed commands are valid when all are OFF)

cc	- · ·		Preset-speed													
\$1	Terminal	1	2	3	4	5	6	٢	8	9	10	11	12	13	14	15
S2	S1-CC	0	-	0	-	0	1	0	-	0	-	0	-	0	-	0
	S2-CC	-	0	0	-	4	0	0	-	-	0	0	-	-	0	0
S3	S3-CC	-	-	-	0	0	0	0	-	-	-	-	0	0	0	0
RES	RES-CC	-	-	-	-			-	0	0	0	0	0	0	0	0

☆ Terminal functions are as follows.

Terminal S1..... Input terminal function selection 4 (S1)

F 1 14=5 (Preset-speed command 1: SS1)

Terminal S2..... Input terminal function selection 5 (S2)

F 115=7 (Preset-speed command 2: SS2)

Terminal S3..... Input terminal function selection 6 (S3)

F : F = B (Preset-speed command 3: SS3)

Terminal RST....... Input terminal function selection 3 (RES)


F :  $I \exists = \exists$  (Preset-speed command 5: SS4)

☆ SS4 is not allocated to standard default setting. Use the input terminal function selection to allocate SS4 an idle terminal. In the above example the RES terminal is used for SS4.



E6581158

[Example of a connection diagram] (SW1 set to sink logic)

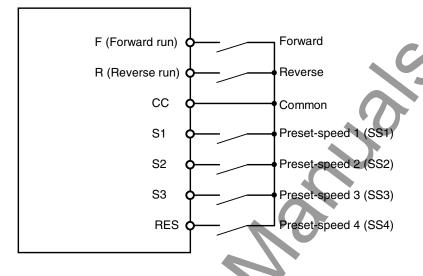


3) Using other speed commands with preset-speed command

Command mode s	selection		0: Terminal	board			1: Operation panel			
Frequency set mode selection F /	Frequency setting 0: Built-in		1: VIA 2: VIB 5: UP/DOWN or 6: VIA + VIB	3: Operation panel	4:Comm unicati on	0: Built-in potentio meter	1: VIA 2: VIB 5: UP/DOWN or 6: VIA + VIB	3: Operation panel	4:Commu nication	
Preset-speed	Entered	Ρ	reset-speed comma	and valid Note)		Potenti- ometer command valid	Terminal com- mand valid	Operation panel com- mand valid	Communic ation command valid	
command	Not entered	Potenti- ometer command valid	Terminal com- mand valid	Operation panel com- mand valid	Communi cation command valid		ter doesn't accept F	Preset-speed co	mmand.)	

Note) The preset-speed command is always given priority when other speed commands are input at the same time.

Below is an example of 7-step speed operation with standard default setting.

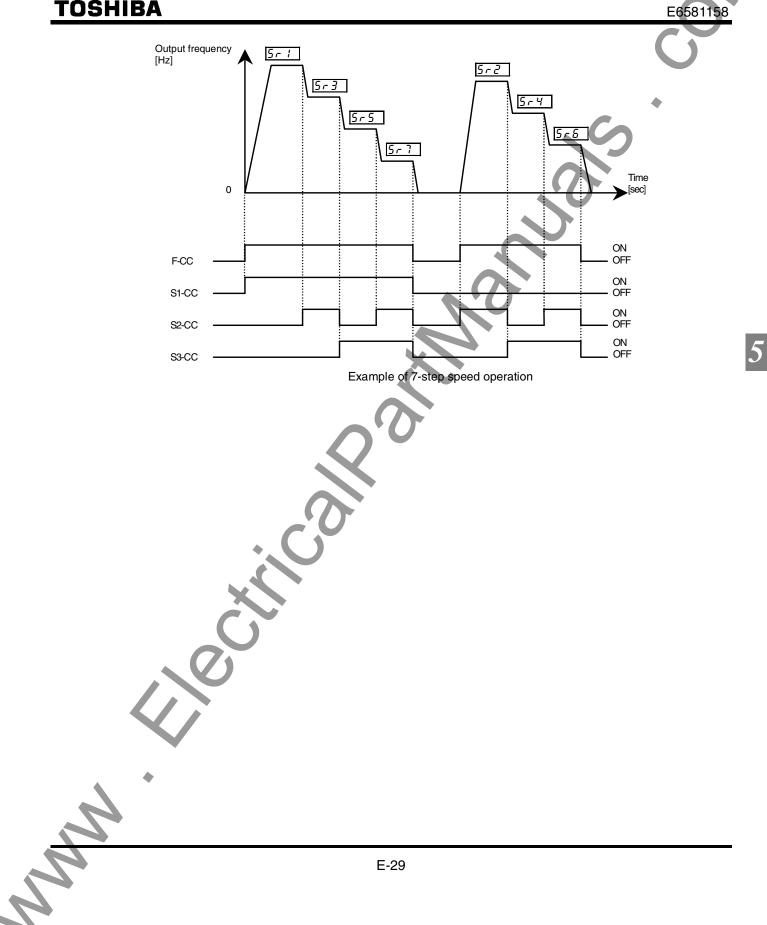




# 6. Extended parameters

Extended parameters are provided for sophisticated operation, fine adjustment and other special purposes. Modify parameter settings as required. See Section 11, Table of extended parameters.

### 6.1 Input/output parameters

### 6.1.1 Low-speed signal



#### Function

When the output frequency exceeds the setting of F I B B an ON signal will be generated. This signal can be used as an electromagnetic brake excitation/release signal.

This signal can also be used as an operation signal when  $F I \square \square$  is set to 0.01, because an ON signal is put out if the output frequency exceeds 0.0Hz.

- ★ Relay output (250Vac-1A (cosφ=1), 30Vdc-0.5A, 250Vac-0.5A (cosφ=0.4) at RY-RC, FLA-FLC-FLB terminals (Default setting: RY-RC).
- ★ If the inverter is so set, the signal will be put out through the open collector OUT and NO output terminals (24 Vdc-Max. 50 mA).

#### [Parameter setting] Title Function

Title	Function	Adjustment range	Default setting
F 100	Low-speed signal output frequency	0.0 ~ <i>F H</i> (Hz)	0.0
	Output frequency [Hz] Set frequency		


 Image: Set mequency

 F 1000


 0

 0

E6581158

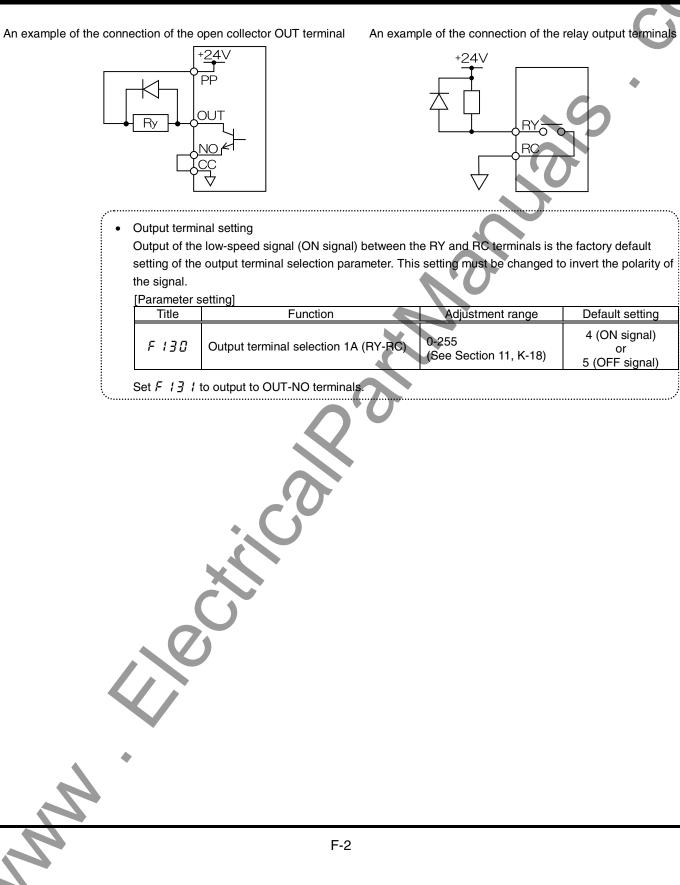

E6581158

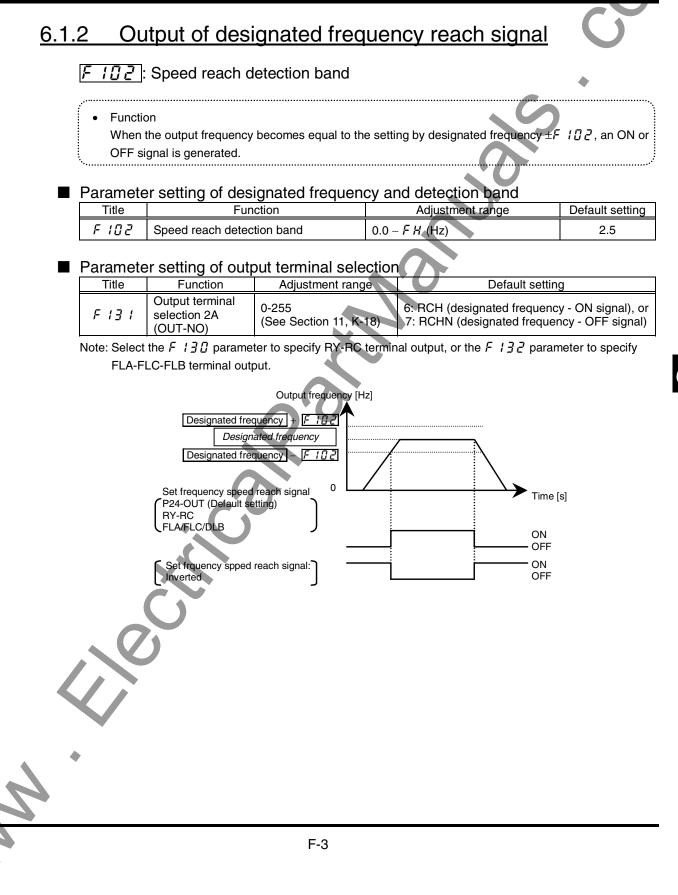

E6581158

### 6.1.3 Output of set frequency speed reach signal

F I : Speed reach setting frequency

F I ] Z : Speed reach detection band

Function

When the output frequency becomes equal to the frequency set by F I I I F I I F, an ON or OFF signal is generated.

#### Parameter setting of frequency and detection band


Title	Function	Adjustment range	Default setting
F 10 I	Speed reach setting frequency	0.0 ~ <i>F H</i> (Hz)	0.0
F 102	Speed reach detection band	0.0~ <i>F H</i> (Hz)	2.5

#### Parameter setting of output terminal selection


[	Title	Function	Adjustment range	Default setting
	F 13 I	Output terminal selection 2A (OUT-NO)	0-255 (See Section 11, K-18)	8: RCHF (designated frequency - ON signal), or 9: RCHFN (designated frequency - OFF signal)

Note: Select the *F I* **]** *D* parameter to specify **RY-RC** terminal output, or set the *F I* **]** *D* parameter function No. to 8 or 9 to specify FLA-FLC-FLB terminal output.


If the detection band value + the set frequency is less than the designated frequency

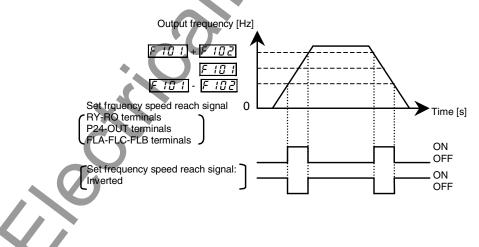


E6581158

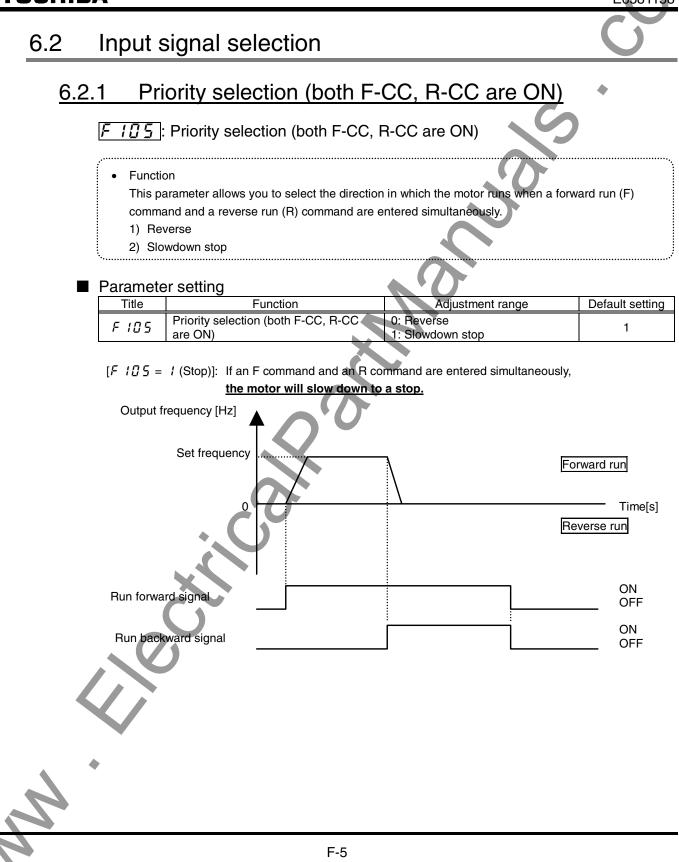

E6581158



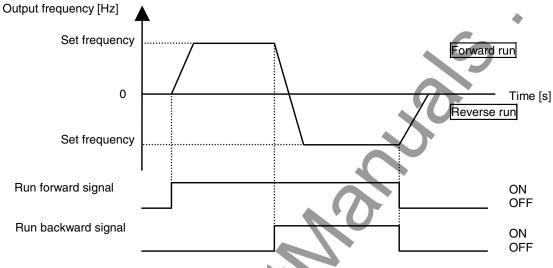

### 6.2.2 Changing the functions of VIA and VIB terminals

#### F 109: VIA/VIB terminal function selection

 Function This parameter allows you to choose between signal input and contact signal input for the VIA and VIB terminals.

#### Parameter setting

Title	Function	Adjustment range	Default setting		
F 109	Analog/contact input function selection (VIA/VIB terminal)	<ol> <li>VIA - analog input VIB - anolog input</li> <li>VIA - anolog input VIB - contact input (Sink)</li> <li>VIA - analog input VIB - contact input (Source)</li> <li>VIA - contact input (Sink) VIB - contact input (Sink)</li> <li>VIA - contact input (Source) VIB - contact input (Source)</li> </ol>	0		

- When using the VIA and VIB terminals as contact input terminals in sink logic connection, be sure to insert a resistor between the P24 terminal and the VIA/VIB terminals. (Recommended resistance: 4.7kΩ-1/2W)
- Note: When using the VIA terminal as a contact input terminal, be sure to turn the VIA slide switch to the V position.

E6581158

# 6.3 Terminal function selection

# 6.3.1 Keeping an input terminal function always active (ON)

#### F I II: Always-active function selection

- Function
  - This parameter specifies an input terminal function that is always to be kept active (ON). (Only one function selectable)
- Parameter setting

Title	Function	Adjustment range	Default setting
F I 10	Always-active function selection	0-64 (See section 11, K-15)	1 (Standby)

#### 6.3.2 Modifying input terminal functions

- F [] []: Input terminal selection 1 (F)
- Fil2: Input terminal selection 2 (R)
- F []]: Input terminal selection 3 (RES)
- F 114: Input terminal selection 4 (S1)
- F115: Input terminal selection 5 (S2)
- $F + H_{E}$ : Input terminal selection 6 (S3)
- F [ ] ]: Input terminal selection 7 (VIB)
- F | IB: Input terminal selection 8 (VIA)

E6581158

#### Function

Use the above parameters to send signals from an external programmable controller to various control input terminals to operate and/or set the inverter.

The desired contact input terminal functions can be selected from 65 types (0-64). This gives system design flexibility. (Note, however, for F / / 7 and F / / B, a function can be selected from among 13 functions (5 - 17).)

Note that the setting 52 (forced operation) can be enabled only when the inverter is so configured at the factory. For more information, contact your local Toshiba dealer.

The functions of the VIB and VIA terminals can be selected between analog input and contact input by changing parameter settings  $F \mid \square \square$ .

To use the VIA and VIB terminals as contact input terminals, you need to set F  $I \square \square$  to the number (1 to 4) that suits your needs, since analog input (voltage signal input) is assigned to the terminals by default.


<u></u>				
Terminal symbol	Title	Function	Adjustment range	Default setting
-	F I 10	Always-active function selection		1 (ST)
F	F	Input terminal selection 1((F)		2 (F)
R	F I 12	Input terminal selection 2 (R)	0-64	3 (R)
RES	F I I 3	Input terminal selection 3 (RES)	(See section 11, K-	10 (RES)
S1	F    4	Input terminal selection 4 (S1)	15-17)	6 (SS1)
S2	F I I 5	Input terminal selection 5 (S2)		7 (SS2)
S3	F I 15	Input terminal selection 6 (S3)		8 (SS3)
Only when $F$ $I \square \square$ is set to 1-4, the following terminals are valid.		-	-	
VIB	F I I 7	Input terminal selection 7 (VIB)	5-17 (Note 2)	9 (SS4)
VIA	F I 18	Input terminal selection 8 (VIA)	5-17 (NOLE 2)	5 (AD2)

#### Setting of contact input terminal function

Note 1: The function that has been selected using *F 1 1* (always-active function selection parameter) is always activated.


Note 2: When using the VIA and VIB terminals as contact input terminals in sink logic connection, be sure to insert a resistor between the P24 terminal and the VIA/VIB terminals. (Recommended resistance: 4.7kΩ-1/2W)

Be sure to turn the VIA slide switch to the V position.

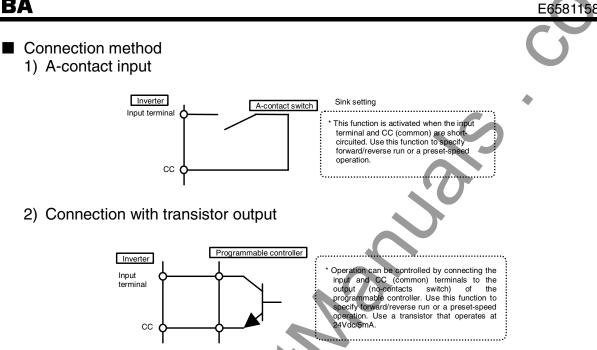


- \* Interface between programmable controller and inverter
- Note 1: When using a programmable controller with open collector outputs for control, connect it to the PCL terminal, as shown in the figure below, to prevent the inverter from malfunctioning because of a current that flows in.

#### Also, be sure to turn the SW1 slide switch to the PLC position.

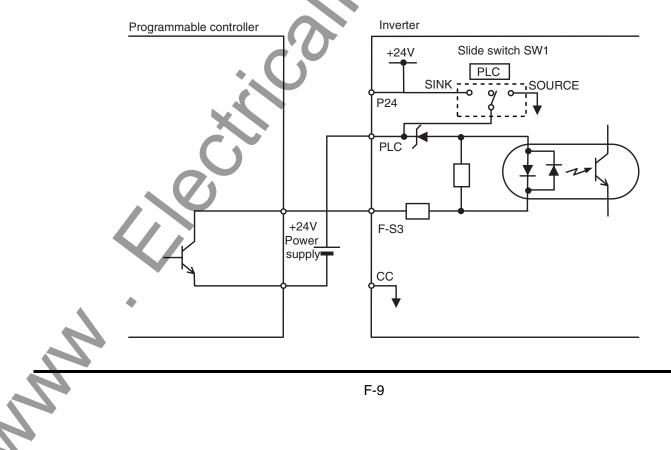

6


E6581158

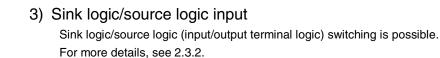

#### 6.3.3 Modifying output terminal functions

- F 1312: Output terminal selection 1A (RY-RC)
- F [] : Output terminal selection 2A (OUT-NO)
- F132: Output terminal selection 3 (FLA, FLB, FLC)
- F137: Output terminal selection 1B (RY-RC)
- F 138: Output terminal selection 2B (OUT-NO)
- F 139: Output terminal logic selection (RY-RC, OUT-NO)
  - Function

Use the above parameters to send various signals from the inverter to external equipment. By setting parameters for the RY-RC, OUT-NO and FL (FLA, FLB and FLC) terminals on the terminal board, you can use 58 functions and functions obtained by combining them. To assign only one function to output terminals, assign the function to F  $I \exists \Box$  and F  $I \exists I$  while leaving F  $I \exists T$  to F  $I \exists \Box$  as they are set by default.

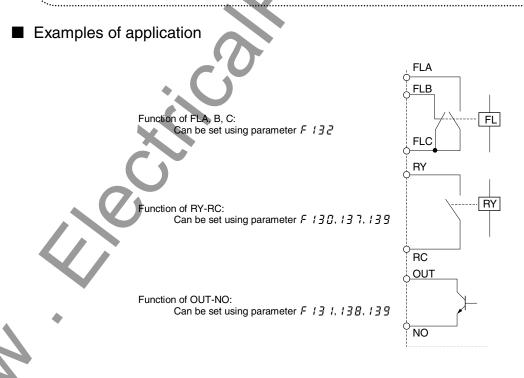

E6581158

#### (1) Assigning one function to an output terminal

Terminal symbol	Title	Function	Adjustment range	Default setting
RY - RC	F 130	Output terminal selection 1A	.0	4 (Low-speed de- tection signal)
OUT - NO	F 13 1	Output terminal selection 2A	0-255 (See section 11.)	6 (Designated fre- quency reach)
FL (A, B, C )	F 132	Output terminal selection 3		10(Failure FL)

☆ When assigning one function to each output terminal, set parameters F 130 to F 132 only Do not change but leave parameters F 137 to F 139 as they were set by default.
 (Standard default setting: F 137=255, F 138=255, F 139=0)

#### (2) Assigning two functions to a group of terminals


A signal is sent out when the two functions assigned are activated simultaneously.

Terminal symbolTitleFunctionAdjustment rangeDefault settingRY-RCF 130Output terminal selection 1A4 (Low-speed de- tection signal)OUT-NOF 131Output terminal selection 2A0-255 (See section 11.)6 (Designated fre- quency reach)RY-RCF 137Output terminal selection 1B255 (Always ON)					
RY-RC       F [] []       tection signal)         OUT-NO       F [] []       Output terminal selection 2A       0-255       6 (Designated frequency reach)         RY-RC       F [] []       Output terminal selection 1B       0       0-255       9		Title	Function	Adjustment range	Default setting
OUT-NO     F / J /     quency reach)       RY-RC     F / J /     Output terminal selection 1B	RY-RC	F 130	Output terminal selection 1A		· ·
RY-RC F 137 Output terminal selection 1B 255 (Always ON)	OUT-NO	F 13 1	Output terminal selection 2A		
	RY-RC	F 137	Output terminal selection 1B		
OUT-NO     F 13B     Output terminal selection 2B	OUT-NO	F 138	Output terminal selection 2B		255 (Always ON)

- $\Rightarrow$  Two different functions can be assigned to terminals RY-RC and terminals OUT-NO.
- ☆ If parameter *F i* ∃ ∃ is set to ∃ (default), a signal will be sent out when the two functions assigned are activated simultaneously.

Terminals RY-RC: Send out a signal when the functions assigned with  $F \mid \exists \exists$  and  $F \mid \exists \exists$  are activated simultaneously.

Terminals OUT-NO: Send out a signal when the functions assigned with  $F \downarrow \exists \downarrow$  and  $F \downarrow \exists B$  are activated simultaneously.

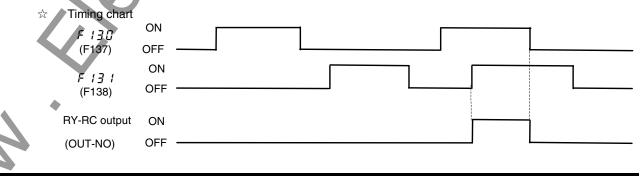

E6581158

☆ Only one function can be assigned to terminals FLA-FLB-FLC at a time.

#### (3) Assigning two functions to a group of terminals

A signal is sent out when either of the two functions assigned is activated.

Terminal symbol	Title	Function	Adjustment range	Default setting
RY - RC	F 130	Output terminal selection 1A	S.	4 (Low-speed de- tection signal)
OUT - NO	F 13 1	Output terminal selection 2A	0 ~ 255 (See section 11.)	6 (Designated fre- quency reach)
RY - RC	F 137	Output terminal selection 1B		255 (Always ON)
OUT - NO	F 138	Output terminal selection 2B		255 (Always ON)
RY - RC/ OUT - NO	F 139	Output terminal logic selection	0: F 13 ] and F 13 7 F 13 1 and F 138 1: F 13 [] or F 13 7 F 13 1 and F 138 2: F 13 [] and F 137 F 13 1 or F 138 3: F 13 [] or F 13 7 F 13 1 or F 138	0


 $\Rightarrow$  Two different functions can be assigned to terminals RY-RC and terminals OUT-NO.

If parameter F  $I \exists \exists$  is set to  $\exists$ , a signal will be sent out when either of the two functions assigned is activated.

Terminals RY-RC: Send out a signal when either of the functions set with  $F \mid \exists \exists \exists and F \mid \exists \exists activated$ . Terminals OUT-NO: Send out a signal when either of the functions set with  $F \mid \exists and F \mid \exists \exists activated$  is activated.

☆ Timing chart

 $\overset{}{\approx}$ 

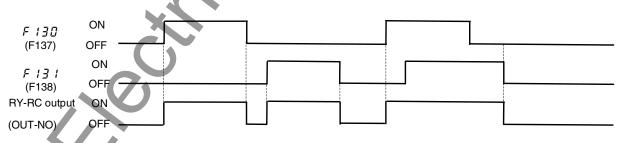

 $\Rightarrow$  Only one function can be assigned to terminals FLA-FLB-FLC at a time.

#### (4) Assigning two functions to a group of terminals

The logical product (AND) or logical sum (OR) of the two functions assigned is put out as a signal.

Setting of output terminal function						
Terminal symbol	Title	Function	Adjustment range	Default setting		
RY-RC	F 130	Output terminal selection 1A		4 (Low-speed detection signal)		
OUT-NO	F 13 1	Output terminal selection 2A	C	6 (Designated frequency reach)		
FL (A,B,C)	F 132	Output terminal selection 3	0-255 (See Section 11)	10 (Failure FL)		
RY-RC	F 13 7	Output terminal selection 1B		255 (Always active)		
OUT-NO	F 138	Output terminal selection 2B		255 (Always active)		
RY-RC/ OUT-NO	F 139	Output terminal logic selection	0: F [3] and F [3] F [3] and F [3] 1: F [3] or F [3] F [3] and F [3] 2: F [3] and F [3] F [3] or F [3] 3: F [3] or F [3] F [3] or F [3]	0		

Two different functions can be assigned to the output terminals (RY-RC and OUT-NO), and two logics with different functions can be selected using F 139.

The logical product (AND) or logical sum (OR) of the two functions assigned is put out as a signal, depending on the setting of parameter F  $I \exists B$ .

- If  $F \mid \exists \exists \exists = \exists$ , the logical sum (AND) of  $F \mid \exists \exists \exists$  and  $F \mid \exists \exists$  will be output to RY-RC.
  - The logical product (OR) of  $F \mid \exists \mid$  and  $F \mid \exists B$  will be output to OUT-NO.
- If  $F \mid \exists \exists = 1$ , the logical product (OR) of  $F \mid \exists \exists and F \mid \exists \exists average av$
- If  $F \mid \exists \exists \exists = 2$ , the logical sum (AND) of  $F \mid \exists \exists \exists$  and  $F \mid \exists \exists$  will be output to RY-RC.
  - The logical product (OR) of F 13 1 and F 138 will be output to OUT-NO.
- If  $F \mid \exists \exists = \exists$ , the logical product (OR) of  $F \mid \exists \exists \exists$  and  $F \mid \exists \exists$  will be output to RY-RC.
  - The logical product (OR) of  $F \downarrow \exists \downarrow$  and  $F \downarrow \exists B$  will be output to OUT-NO.
- To assign only one function to output terminals, assign the function to F  $I \exists I$  and F  $I \exists I$  while leaving F  $I \exists I$  to F  $I \exists J$  as they are set by default.

6

E658115

E6581158

#### 6.3.4 Comparing the frequency command values

F 157: Frequency command agreement detection range

FIIId: Frequency setting mode selection 1

F207: Frequency setting mode selection 2


#### Function

If the frequency command value specified using  $F \Pi \square d$  (or  $F \supseteq \square 7$ ) almost agrees with the frequency command value from the VA terminal with an accuracy of ± the setting of  $F I \square 7$ , an ON or OFF signal will be sent out.

#### Frequency command value and agreement detection range parameter setting

Title	Function	Adjustment range	Default setting
F 167	Frequency command agreement detection range	0.0 ~ <i>두 片</i> (Hz)	2.5
FNOd	Frequency setting mode selection 1	0-6 (See Section 11, K-1,	0
F207	Frequency setting mode selection 2	(See Section 11, K-1, 5)	1

Note: To put out signals to RY-RC, OUT or FLA-FLB-FLC, set *F* 130, *F* 131, or *F* 132 respectively to 52 or 53.

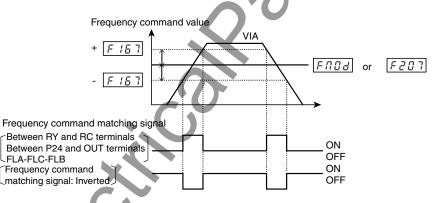

Note: This function can be used, for example, to send out a signal indicating whether the amount of processing and the amount of feedback agree with each other when the PID function is in use.

For an explanation of the PID function, see 6.16.

E6581158

#### 6.4 Basic parameters 2

#### 6.4.1 Switching motor characteristics via terminal input

- F 17D: Base frequency 2
- F 171: Base frequency voltage 2

FITE: Torque boost 2

**F 173**: Motor electronic-thermal protection level

**185**: Stall prevention level 2

#### • Function

Use the above parameters to switch the operation of two motors with a single inverter and to select motor V/F characteristics (two types) according to the particular needs or operation mode.

Note: The *P E* (V/F control mode selection) parameter is enabled only for motor1. If motor 2 is selected, V/F control will be given constant torque characteristics.

#### Parameter setting

Ś

i alamete	alameter setting					
Title	Function	Adjustment range	Default setting			
סרו א	Base frequency 2	25.0-500.0 (Hz)	50.0 (WP type) 60.0 (WN, AN type)			
F 17 1	Base frequency voltage 2	50-660 (V)	200 (200V class) / 400 (400V class)			
F 172	Torque boost 2	0.0-30.0 (%)	According to model (See Section 11, K-14)			
F 173	Motor electronic-thermal protection level 2	10-100 (%)	100			
F 185	Stall prevention level 2	10-199 (%) 200 : Disabled	150			

E6581158

#### Setting of switching terminals

The terminal for switching to motor 2 needs to be set, since this function is not assigned under the default setting. Assign this function to an idle terminal.

The parameters to be switched depend on the particular identification number of the input terminal selection function. (Refer to K-15.)

	Input term	ninal functio	on number		
5	39	40	58	61	Parameters used and applicable parameters
AD2	VF2	MOT2	AD3	OCS2	
OFF	OFF	OFF	OFF	OFF	Default setting:
					Pt, uL, uĽu, ub, tHr, REE, dEE,
					F 5 0 2, F 6 0 1
ON	OFF	OFF	OFF	OFF	$AEC \to FSOO, dEC \to FSOI : FSO2 \to I$
					F503
-	OFF	OFF	ON	OFF	$R[C \to FS IS I S I S I S I S I I I I S FS FS I I I S F S FS I I I S F S FS F S F S F S I I I S S F S S F S S S F S S F S S F S F S F S F S S S S S S S S$
					→F517
OFF	OFF	OFF	OFF	ON	F = B + F + B = B = B + B +
OFF	ON	OFF	OFF	OFF	Pt→0.uL→F170.uLu→
				4	
					$ab \rightarrow F \mid 12, EHr \rightarrow F \mid 13$
-	-	ON	OFF	- 3	Pt → O . uL → F 170 . uLu →
					F171. ub → F172, EHr →
					F 173 . F60 I → F 185, REE →
					⊊ŞQQ . dĒC → FSOI . FSO2 →
		l	1		

# 6.5 Frequency priority selection

# 6.5.1 Using a frequency command according to the particular situation

FIId: Frequency setting mode selection 1

F200: Frequency priority selection

F207: Speed setting mode selection 2

Function

These parameters are used to switch between two types of frequency command signals.

Setting by parameters

Switching by frequency

Switching via terminal board input

E6581158

#### Parameter setting

Paramete	er setting		
Title	Function	Adjustment range	Default setting
FNDA	Frequency setting mode selection 1	0: Built-in potentiometer 1: VIA/II 2: VIB 3: Operation panel 4: Serial communication 5: UP/DOWN from external contact 6: VIA + VIB (Override)	•
F200	Frequency priority selection	<ul> <li>0: F ∏ ☐ d (Switchable to F ⊉ ☐ 7 by the input terminal)</li> <li>1: F ∏ ☐ d (F ⊉ ☐ 7 for output frequencies equal to or lower than 1.0 Hz)</li> </ul>	0
R207	Speed setting mode selection 2	0: Built-in potentiometer 1: VIA 2: VIB 3: Operation panel 4: Serial communication 5: UP/DOWN from external contact 6: VIA + VIB (Override)	1

#### 1) External switching (Input terminal function 38 : FCHG enabled) Frequency priority selection parameter F200 = 0

Switching between the command specified with  $F \prod \square d$  and  $F \supseteq \square 7$  can be made by entering a command from a terminal board.

To do so, however, the frequency command forced switching function (input terminal function selection: 38) needs to be set beforehand to an input terminal board.

If an OFF command is entered to the input terminal board: The command specified with  $F \Pi \square d$  will be selected.

If an ON command is entered to the input terminal board: The command specified with  $F \ge 0$  7 will be selected.

#### 2) Automatic switching by frequency command

Frequency priority selection parameter  $F \ge \square \square = 1$ 

The switching between the command specified with  $F \Pi \square d$  and  $F \supseteq \square \exists$  is done automatically according to the frequency command entered.

If the frequency set with F II I d is above 1Hz: The command specified with F II I d will be selected.

If the frequency set with F II I d is 1Hz or less: The command specified with F 2 I 7 will be selected.



E6581158

#### 6.5.2 Setting frequency command characteristics


- F201: VIA input point 1 setting
- F202: VIA input point 1 frequency
- F203: VIA input point 2 setting
- FZGY: VIA input point 2 frequency
- F2 ID: VIB input point 1 setting
- F211: VIB input point 1 frequency
- F212: VIB input point 2 setting
- F213: VIB input point 2 frequency
- F8 ; ; Point 1 setting
- FB12: Point 1 frequency
- FBII: Point 2 setting
- FBIH: Point 2 frequency
  - Function

These parameters adjust the output frequency according to the externally applied analog signal (0-10Vdc voltage, 4-20mAdc current) and the entered command for setting an external contact frequency.


Paramete	er setting		$\mathbf{G}$
Title	Function	Adjustment range	Default setting
F201	VIA input point 1 setting	0-100 (%)	0
F202	VIA input point 1 frequency	0.0-500.0 (Hz)	0.0
F203	VIA input point 2 setting	0-100 (%)	100
F204	VIA input point 2 frequency	0.0-500.0 (Hz)	50.0 (WP type) 60.0 (WN, AN type)
F2 10	VIB input point 1 setting	0-100 (%)	0
F211	VIIB input point 1 frequency	0.0-500.0 (Hz)	0.0
F2 12	VIB input point 2 setting	0-100 (%)	100
F2 13	VIB input point 2 frequency	0.0-500.0 (Hz)	50.0 (WP type) 60.0 (WN, AN type)
F8	Point 1 setting	0-100 (%)	0
F812	Point 1 frequency	0.0-500.0 (Hz)	0.0
F8 13	Point 2 setting	0-100 (%)	100
F8  4	Point 2 frequency	0.0-500.0 (Hz)	60.0

Note 1: Don't set the same value between point 1 and point 2. If set the same falue, the *Err l* is displayed.

#### 1) 0-10Vdc voltage input adjustment (VIA, VIB)

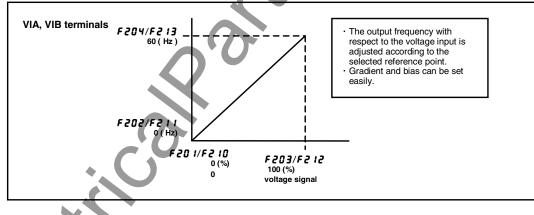

2) 4-20mAdc current input adjustment (VIA: VIA slide switch in the I position)

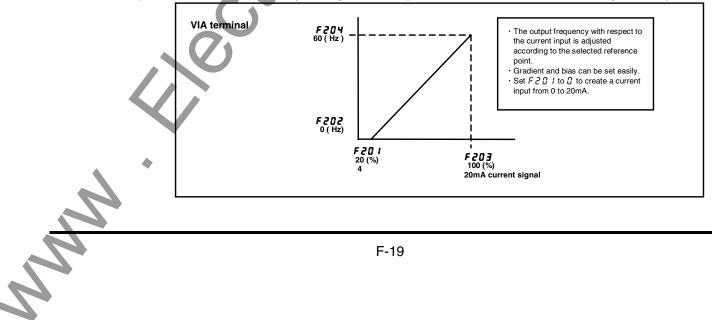

E6581158

# 6.5.3 Setting of frequency with the input from an external contact

- F254: External contact input UP response time
- F255: External contact input Up frequency steps
- F255 : External contact input DOWN response time
- F257: External contact input DOWN frequency steps
- F 2 5 8 : Initial up/down frequency

F Z 5 9 : Change of the initial up/down frequency

Function

These parameters are used to set an output frequency by means of a signal from an external device.

Title	Function	Adjustment range	Default setting
F264	External contact input - UP response time	0.0 - 10.0 (S)	0.1
F265	External contact input - Up frequency steps	0.0 - FH (Hz)	0.1
F266	External contact input - DOWN re- sponse time	0.0 - 10.0 (S)	0.1
F267	External contact input - DOWN fre- quency steps	0.0 - FH (Hz)	0.1
F268	Initial up/down frequency	LL - UL (Hz)	0.0
F269	Change of the initial up/down fre- quency	0: Not changed 1: Setting of <i>F 2 5 8</i> changed when power is turned off	1

\* These functions take effect when parameter  $F \prod \square d$  (frequency setting mode selection 1) is set to 5 or parameter  $F \supseteq \square 7$  (frequency setting mode selection 2) is set to 5 is enabled.

#### Adjustment with continuous signals (Parameter-setting example 1)


Set parameters as follows to adjust the output frequency up or down in proportion to the frequency adjustment signal input time:

- Panel frequency incremental gradient = F 2 5 5/F 2 5 4 setting time
- Panel frequency decremental gradient =  $F \ge 5 \frac{7}{F} \ge 5 \frac{5}{5}$  setting time


Set parameters as follows to adjust the output frequency up or down almost in synchronization with the adjustment by the panel frequency command:

*F264=F266=*1

- $(R [ [ (or F 5 ] ] )/F H) \le (F 2 [ 5 ]/F 2 [ 5 ] H)$  setting time)
  - $(d \in [ (or F \subseteq G ])/F H) \leq (F \supseteq \subseteq Z/F \supseteq \subseteq E$  setting time)

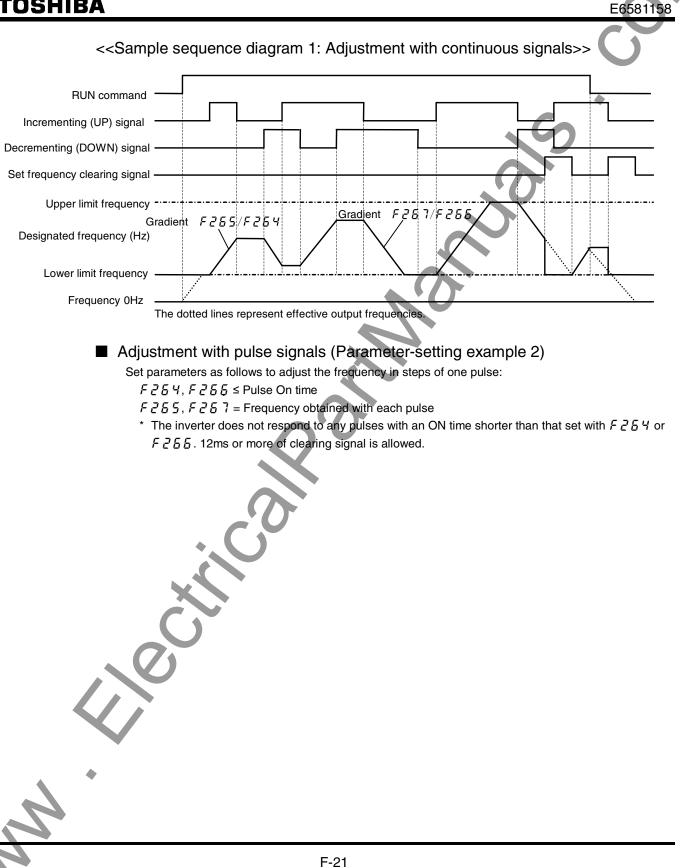

E6581158

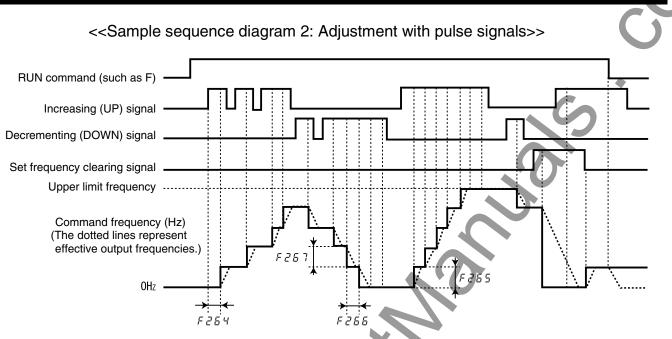

- If two signals are impressed simultaneously
  - If a clear single and an up or down signal are impressed simultaneously, priority will be given to the clear signal.
  - If up and down signals are impressed simultaneously, The frequency will change at the specified up or down rate.

#### About the setting of the initial up/down frequency

To adjust the frequency starting at a specified frequency other than 0.0 Hz (default initial frequency) after turning on the inverter, specify the desired frequency using  $F \ge E B$  (initial up/down frequency).

#### About the change of the initial up/down frequency

To make the inverter automatically save the frequency immediately before it is turned off and start operation at that frequency next time power is turned on, set  $F \ge B = (change of initial up/down frequency)$  to 1 (which changes the setting of  $F \ge B = when power is turned off)$ . Keep in mind that the setting of  $F \ge B = when power is turned off$ .

#### Frequency adjustment range

The trequency can be set from 0.0Hz to FH (Maximum frequency). The lower-limit frequency will be set as soon as the set frequency clearing function (function number 43, 44) is entered from the input terminal.


E6581158

#### Minimum unit of frequency adjustment

If  $F \neg \square \supseteq$  (Frequency free unit magnification) is set to 1.00, the output frequency can be adjusted in steps of 0.11Hz.

# 6.6 Operation frequency


### 6.6.1 Starting frequency




.....

#### • Function


The frequency set with  $F \ge 4 \square$  is put out as soon as operation is started. Use the  $F \ge 4 \square$  parameter when a delay in response of starting torque according to the acceleration/deceleration time is probably affecting operation. Setting the starting frequency to a value from 0.5 to 3Hz is recommended. The occurrence of an overcurrent can be suppressed by setting this frequency below the rated slippage of the motor.

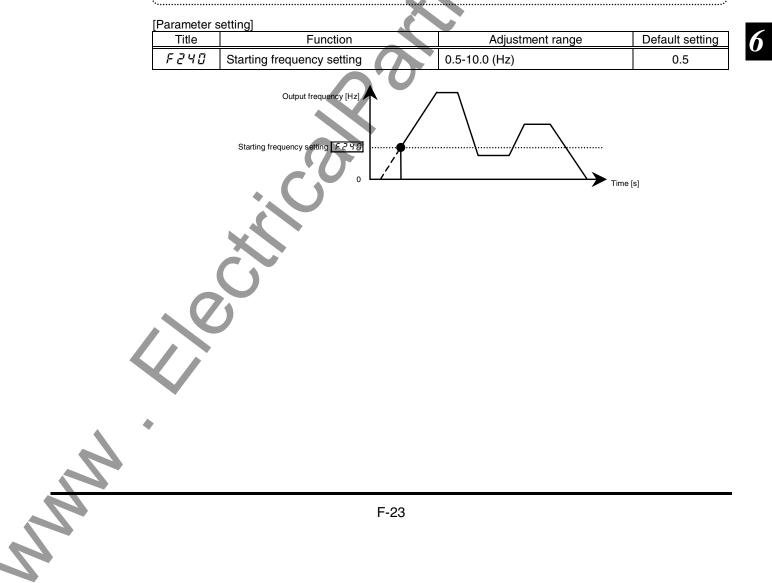

E6581158

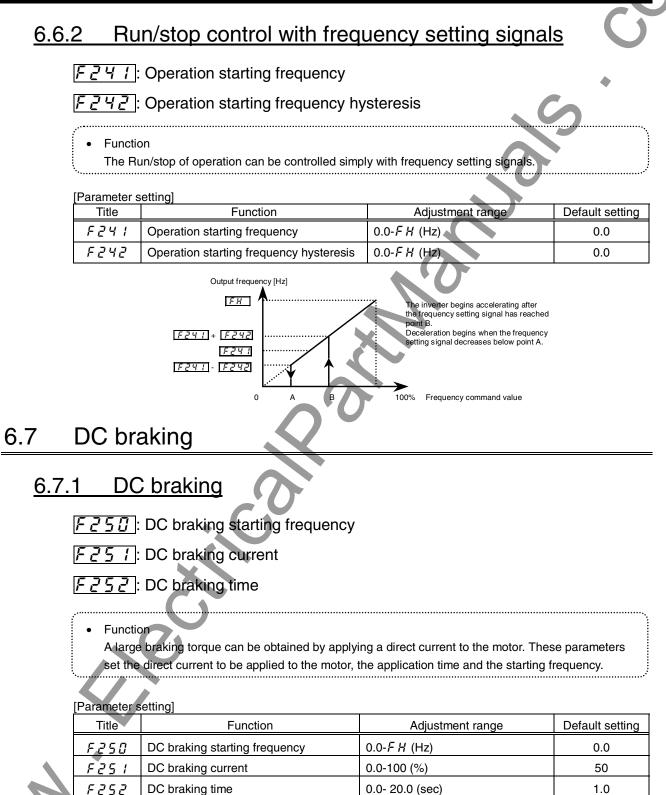

F-24

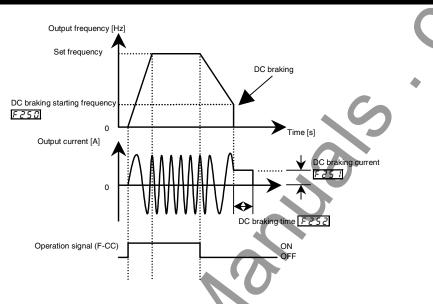

Note: During DC braking, the overload protection sensitivity of the inverter increases. The DC braking current may be adjusted automatically to prevent tripping.

### 6.7.2 Motor shaft fixing control

#### F254 : Motor shaft fixing contro

•	Function	

This function is used to prevent the motor from running unexpectedly because its shaft is not restrained or to preheat the motor.

.....


[Parameter setting]

Title	Function	Adjustment range	Default setting
FZSY	Motor shaft fixing control	0: Disabled, 1: Enabled	0

If the motor shaft fixing control  $F \ge 5$  4 is set to 1, half the braking force set with  $F \ge 5$  1 (DC braking rate) will be applied to the motor to continue DC braking even after the completion of ordinary DC braking. To stop motor shaft fixing control, turn off the standby command (ST signal).



E65811

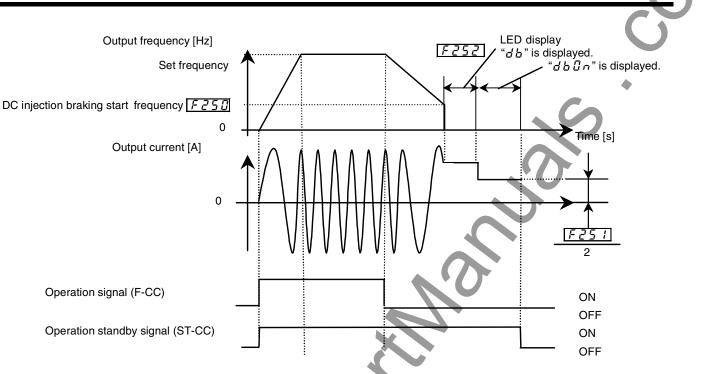

E6581158

- Note1: About the same motor shaft fixing control can be exercised by entering a DC braking command from external contacts.
- Note2: If a power failure occurs during motor shaft fixing control and the motor starts to coast, motor shaft fixing control will be canceled.

Also, if the inverter trips during motor shaft fixing control and is restored to working order by the retry function, motor shaft fixing control will be canceled.

E6581158

# 6.8 Auto-stop in case of lower-limit frequency continuous operation

### 6.8.1 Auto-stop in case of lower-limit frequency continuous operation

F255: Auto-stop in case of lower-limit frequency continuous operation

Function

If operation is carried out continuously at a frequency below the lower-limit frequency (L L) for the period of time set with F = 25E, the inverter will automatically slow down the motor to a stop. At that time, "L 5 L P" is displayed (alternately) on the operation panel.

This function will be canceled if a frequency command above the lower-limit frequency (L L).

[Parameter setting] Title Default setting Function Adjustment range Auto-stop in case of lower-limit fre-0.0: None F256 0.0 0.1-600.0 (sec.) quency continuous operation time Output frequency [Hz] *L L* +0.2Hz LL Time [s] F 2 5 6 ON Operation signal (F-CC) OFF

Note: This function is enabled even at the start of operation and during switching between forward and reverse run.

E658115

# 6.9 Jog run mode

F250: Jog run frequency

F25 /: Jog run stopping pattern

.....

#### F252: Panel jog run mode

#### • Function

Use the jog run parameters to operate the motor in jog mode. Input of a jog run signal fenerates a jog run frequency output at once, irrespective of the designated acceleration time.

Also, you can choose an operation panel start/stop mode between the ordinary start/stop mode and the jog run start/stop mode.

The jog run function needs to be assigned to an input terminal. When assigning it to the RES terminal, set  $F \mid I \mid 3$  to Y.

The motor can be operated in jog mode while the jog run setting terminals are connected (RES-CC ON). (Setting  $F \mid I \mid J$  to 4.)

#### [Parameter setting]

Title	Function		Adjustment range	Default setting
F260	Jog run frequency		<i>F74日</i> -20.0 (Hz)	5.0
F26 I	Jog run stopping pattern	X	0: Slowdown stop 1: Coast stop 2: DC braking	0
F262	Panel jug run mode		0: Disabled 1: Panel jog run mode enabled	0

[Setting of jog run setting terminal (RES-CC)]

Assign control terminal RES ([4: reset signal] in default setting) as the jog run setting terminal.

I	Title	Function	Adjustment range	Default setting
	F     ]	Input terminal selection (RES)	0-64	4 (jog run setting terminal)

Note 1: During the jog run mode, there is LOW (low speed detection signal) output but no RCH (designated frequency reach signal) output, and PID control does not work.

Note 2: When the operation panel only is used for operation in jog run mode, the jog run function does not need to be assigned to any input terminal.

F-28


E6581158

#### <Examples of jog run>

RES-CC (JOG) ON + F-CC ON: Forward jog run

RES-CC (JOG) ON + R-CC ON: Reverse jog run

(Normal operation frequency signal input + F-CC ON: Forward run, Normal operation frequency signal input + R-CC ON: Reverse run)

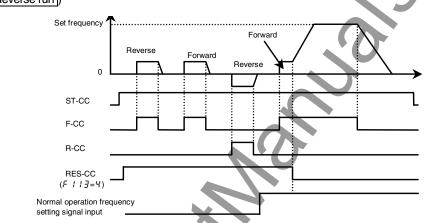


• The jog run setting terminal (RES-CC) is enabled when the pperation frequency is below the jog run frequency.

This connection does not function at an operation frequency exceeding the jog run frequency.

- The motor can be operated in jog mode while the jog run setting terminals are connnected (RES-CC).
- Jog run has priority, even when a new operation command is given during operation.
- Even for  $F \supseteq B$  I = G or I, an emergency DC braking becomes enabled when setting  $F B G \exists I = 2$ .
- No limits are imposed to the jog run frequency by the upper-limit frequency (parameter UL).
- Panel jog mode (if F 2 5 2 is set to 1)
  - When the inverter is in panel jog mode, pressing the ▲ key displays *F* J □ □, while pressing the 
     ★ key displays *r* J □ □.
  - When  $F \int B L$  is displayed, the inverter will be placed in forward jog run mode as long as the RUN key is held down.
  - When  $r \downarrow \square \square$  is displayed, the inverter will be placed in reverse jog run mode as long as the (RUN key is held down.
  - During jog run, the direction of rotation can be changed using the (  $\blacktriangle$  ) and (  $\checkmark$  ) keys. Press the (  $\blacktriangle$
  - key to run the motor in the forward direction, or press the (  $\checkmark$  ) key to run it in the reverse direction.

• If you press and hold down the (RUN) key for 20 seconds or more, the key failure alarm "E - 17" will be displayed.

E6581158

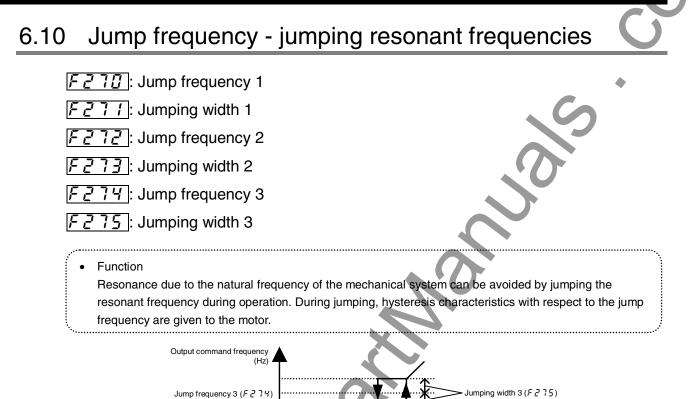



[Parameter setting]

Jump frequency 2 (F 2 7 2)

Jump frequency 1 (F 2 7 2

Title	Function	Adjustment range	Default setting
F270	Jump frequency 1	0.0- <i>F H</i> (Hz)	0.0
F271	Jumping width 1	0.0-30.0 (Hz)	0.0
F272	Jump frequency 2	0.0- <i>F H</i> (Hz)	0.0
F273	Jumping width 2	0.0-30.0 (Hz)	0.0
FZ74	Jump frequency 3	0.0- <i>F H</i> (Hz)	0.0
F275	Jumping width 3	0.0-30.0 (Hz)	0.0

Frequency setting signal

Jumping width 2 (F 2 7 3)

Jumping width 1 (F 2 7 1)

 $\Rightarrow$  During acceleration or deceleration, the jumping function is disabled for the operation frequency.

E6581158

# 6.11 Preset-speed operation frequencies

#### 6.11.1 Preset-speed operation frequency 8 to 15

F287 - F294: Preset-speed operation frequency 8 to 15

See Section 5.14 for details.

# 6.11.2 Fire-speed control

F294: Preset-speed operation frequency 15 (fire-speed)

Function

Fire-speed control is used when operating the motor at the specified frequency in case of an emergency. If fire-speed control is assigned to the terminal board selection parameter and a fire-speed control signal is given, the motor will be operated at the frequency specified with  $F \ge g + 4$  (preset-speed operation frequency 15). (When the terminal board selection parameter is set to 52 or 53).

# 6.12 PWM carrier frequency

F 3 0 0 : PWM carrier frequency

F 3 12 : Random mode

315: Carrier frequency control mode selection

#### • Function

- 1) The *F* **3 D D** parameter allows the tone of the magnetic noise from the motor to be changed by switching the PWM carrier frequency. This parameter is also effective in preventing the motor from resonating with its load machine or its fan cover.
- 2) In addition, the F 3 0 0 parameter reduces the electromagnetic noise generated by the inverter. Reduce the carrier frequency to reduce electromagnetic noise. Note: Although the electromagnetic noise level is reduced, the magnetic noise of the motor is increased.
- The random mode reduces motor electromagnetic noise by changing the pattern of the reduced carrier frequency.

E6581158

[Parameter s	setting]		
Title	Function	Adjustment range	Default setting
F 3 0 0	PWM carrier frequency	2.0-16.0 (kHz) (*)	12.0
F3 12	Random mode	0: Disabled, 1: Enabled	0
F 3 16	Carrier frequency control mode selection	<ul> <li>0: Carrier frequency not reduced automatically</li> <li>1: Carrier frequency reduced automatically</li> <li>2: Carrier frequency not reduced automatically</li> <li>Support for 400V models</li> <li>3: Carrier frequency reduced automatically</li> <li>Support for 400V models.</li> </ul>	1

\* Load reduction will be required if the PWM carrier frequency is modified for each applicable motor model. Refer to the following table.

Load reduction ratios required.

[200V Class]			
VFS11S-		Carrier frequency	
VFS11-	4kHz or less	12kHz or less	16kHz or less
2002PL/M	1.5A	1.5A	1.5A
2004PL/M	3.3A	3.3A	3.3A
2005PM	3.7A	3.3A	3.2A
2007PL/M	4.8A	4.4A	4.2A
2015PL/M	8.0A	7.9A	7.1A
2022PL/M	11.0A	10.0A	9.1A
2037PM	17.5A	16.4A	14.6A
2055PM	27.5A	25.0A	25.0A
2075PM	33.0A	33.0A	29.8A
2110PM	54.0A	49.0A	49.0A
2150PM	66.0A	60.0A	54.0A

	[400V Class]						
	Input voltage	$\mathbf{G}$	480V or less			more than 480V	
	VFS11-		Carrier frequency	/	(	Carrier frequency	/
	VF3H-	4kHz or less	12 kHz or less	16kHz or less	4kHz or less	12kHz or less	16kHz or less
	4004PL	1.5A	1.5A	1.5A	1.5A	1.5A	1.2A
	4007PL	2.3A	2.1A	2.1A	2.1A	1.9A	1.9A
	4015PL	4.1A	3.7A	3.3A	3.8A	3.4A	3.1A
	4022PL	5.5A	5.0A	4.5A	5.1A	4.6A	4.2A
	4037PL	9.5A	8.6A	7.5A	8.7A	7.9A	6.9A
	4055PL	14.3A	13.0A	13.0A	13.2A	12.0A	12.0A
	4075PL	17.0A	17.0A	14.8A	15.6A	14.2A	12.4A
	4110PL	27.7A	25.0A	25.0A	25.5A	23.0A	23.0A
	4150PL	33.0A	30.0A	26.0A	30.4A	27.6A	24.0A
1							
m			F	-32			

Ø

Default setting of PWM carrier frequency is 12kHz, but rated output current of rating label display at 4kHz. If  $F \ni I \oplus I$  is set to I or  $\exists$ , however, the carrier frequency will decrease automatically with increase in current in order to secure the rated current at frequencies of 4 kHz or less. If  $F \ni I \oplus I$  is set to  $\square$  or  $\square$ , OCP trip will occur when the current increases and reaches the level above which

If  $F \ni I \models$  is set to  $\square$  or ⊇, OCP trip will occur when the current increases and reaches the level above which the carrier frequency is decreased automatically.

\* Random control is exercised when the motor is operated in a low-frequency range where it produces annoying magnetic noise.


If the carrier frequency ( $F \exists \square \square$ ) is set above 7.1 kHz, the random control function will not be performed, because the level of motor magnetic noise is low at high frequencies.

\* When the carrier frequency control mode selection (*F* **3** *I* **6**) is set to **2** or **3**, the carrier frequency (*F* **3 0 0**) should be set preferably below 4 kHz. Otherwise the output voltage may drop.

# 6.13 Trip-less intensification

# 6.13.1 Auto-restart (Restart of coasting motor)

F3D1: Auto-restart control selection

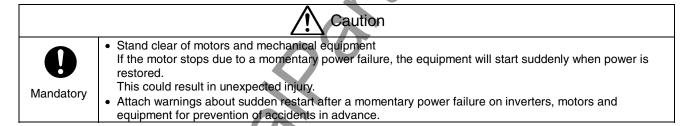

Function

The  $F \exists \square$  *i* parameter detects the rotating speed and rotational direction of the motor during coasting ing the event of momentary power failure, and then after power haas been restored, restarts the motor smoothly (motor speed search function). This parameter also allows commercial power operation to be switched to inverter operation without stopping the motor. During operation, " $r \not r \not g$ " is displayed.


Title	Function	Adjustment range	Default setting
F 30 I	Auto-restart control selection	0: Disabled 1: At auto-restart after momentary stop 2: When turning ST-CC on or off 3: At auto-restart or when turning ST-CC on or off 4: At start-up	0

\* If the motor is restarted in retry mode, this function will operate, regardless of the setting of this parameter.


E658115

E6581158

#### 1) Auto-restart after momentary power failure (Auto-restart function)

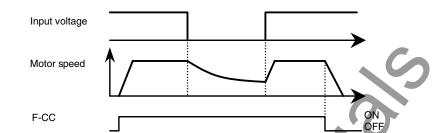

- ★ Setting *F* ∃ ☐ *I* to *I*, (∃): This function operates after power has been restored following detection of an undervoltage by the main circuits and control power.
- 2) Restarting motor during coasting (Motor speed search function)

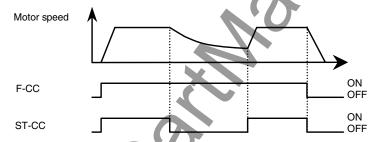

- ★ Setting *F* ∃ ☐ *I* to *2* or ∃: This function operates after the ST-CC terminal connection has been opened first and then connected again.
- Note: The terminal function ST needs to be assigned to an input terminal, using the parameters F / / to F / B.

E6581158

#### 3) DC braking during restart

When  $F \exists \Box$  *i* is set to *4*, a motor speed search is performed each time operation is started. This function is useful especially when the motor is not operated by the inverter but it is running because of external force.

#### Warning!!

 At restart, it takes about 300 ms for the inverter to check to see the number of revolutions of the motor.

For this reason, the start-up takes more time than usual.

.....

Use this function when operating a system with one motor connected to one inverter.
 This function may not operate properly in a system configuration with multiple motors connected to one inverter.

#### Application to a crane or hoist

The crane or hoist may have its load moved downward during the above waiting time from input of the operation starting command to the restart of the motor. To apply the inverter to such machines, therefore, set the auto-restart control mode selection parameter to " $F \exists \square$   $l=\square$ " (Disabled), Do not use the retry function, either.

E6581158

# 6.13.2 Regenerative power ride-through control/Deceleration stop

F302: Regenerative power ride-through control/Deceleration stop

.....


#### Function

- 1) Regenerative power ride-through control continues the operation of the motor by utilizing motor regenerative energy in the event of momentary power failure.
- 2) Slowdown stop in the event of momentary power failure: If a momentary power failure occurs during operation, the inverter stops forcibly. (Deceleration time varies with control.) When operation is stopped, the message "5 Ł ũ P" is displayed (alternately) on the operation panel. After the forced stop, the inverter remains static until you put off the operation command momentarily.

F 3 0 2     Regenerative power ride-through control / 1: Enabled     0: Disabled       1: Enabled     0	[Parameter s	setting]		
F 3 0 2     Regenerative power ride-through control / 1: Enabled     0	Title	Function	Adjustment range	Default setting
	F 3 0 2			0

Note: Even when this parameter is set, the particular load conditions may cause the motor to coast. In this case, use the auto-restart function  $F \exists \square I$  along with this parameter function.


#### [When power is interrupted]

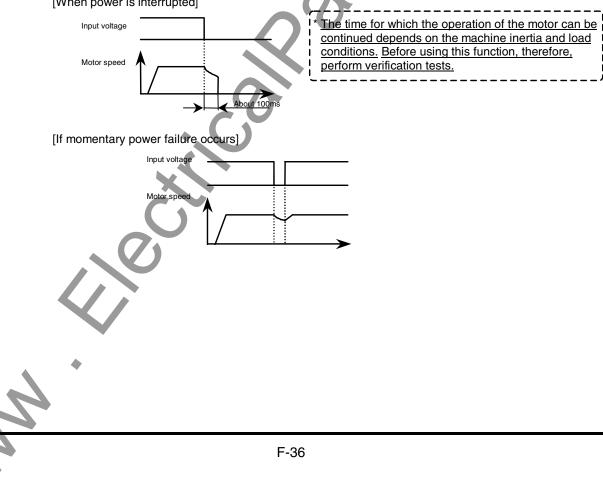

E6581158

### 6.13.3 Retry function

F303: Retry selection (Selecting the number of times)

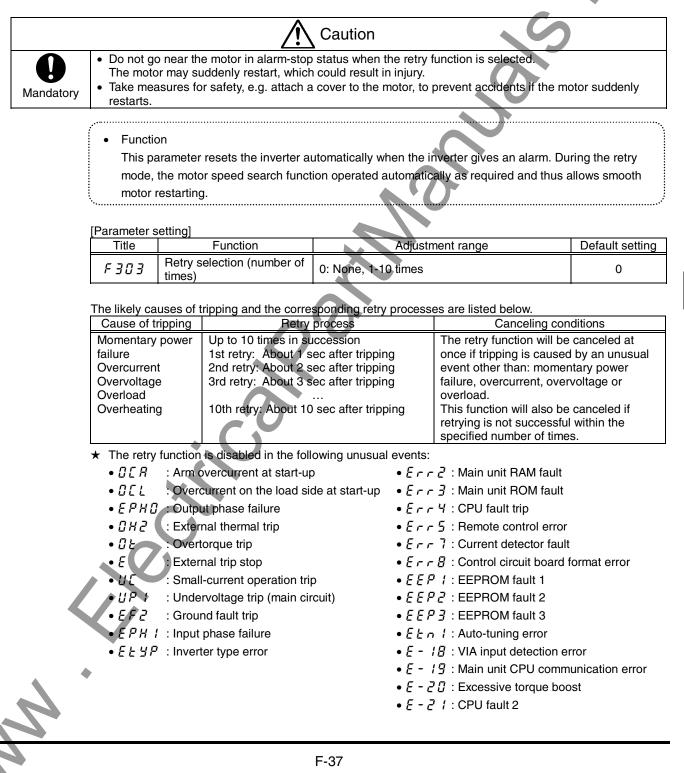

★ Protective operation detection relay signals (FLA, FLB, FLC terminal signals) are not sent during use of the retry function. (Default setting)

E6581158

- ★ To allow a signal to be sent to the protective action detection relay (FLA, B and C terminals) even during the retry process, assign the function 36 or 37 to F 132.
- ★ A virtual cooling time is provided for overload tripping (@L 1,@L 2, @L r). In this case, the retry function operates after the virtual cooling time and retry time.
- ★ In the event of tripping caused by an overvoltage (□P 1 □P 3), the retry function will not be activated until the voltage in the DC section comes down to a normal level.
- ★ In the event of tripping caused by overheating (□H), the retry function will not be activated until the temperature in the inverter comes down low enough for it to restart operation.
- ★ Keep in mind that when *F* \[ \[ \] \[ \] is set to *l* (trip retained), the retry function will not be performed, regardless of the setting of *F* \] \[ \] \[ \] .
- ★ During retrying, the blinking display will alternate between *r E r Y* and the monitor display specified by status monitor display mode selection parameter *F* 7 *I* .
- ★ The number of retries will be cleared if the inverter is not tripped for the specified period of time after a successful retry.

"A successful retry" means that the inverter output frequency reaches the command frequency without causing the inverter to re-trip.

#### 6.13.4 Dynamic (regenerative) braking - For abrupt motor stop

F304: Dynamic braking selection

F 3 🛛 🛛 : Dynamic braking resistance

F 3 🛛 9 : Dynamic braking resistor capacity

• Function

The VFS11 does not contain a braking resistor. Connect an external braking resistor in the following cases to enable dynamic braking function:

.....

- 1) when decelerating the motor abruptly or if overvoltage tripping (OP) occurs during deceleration stop
- 2) when a continuous regenerative status occurs during downward movement of a lift or the winding-out operation of a tension control machine
- 3) when the load fluctuates and a continuous regenerative status results even during constant speed operation of a machine such as a press




1 N N

[Parameter s	setting]		$\mathbf{G}$
Title	Function	Adjustment range	Default setting
F 3 0 4	Dynamic braking selection	<ul> <li>0: Dynamic braking disabled</li> <li>1: Dynamic braking enabled, over-load protection enabled</li> </ul>	• 0
F308	Dynamic braking resistance	1-1000 (Ω)	According to model
F 3 0 9	Dynamic braking resistor capacity	0.01-30.00 (kW)	(See Section 11, K-14)

### 1) Connecting an external braking resistor (optional)

Separate-optional resistor (with thermal fuse)

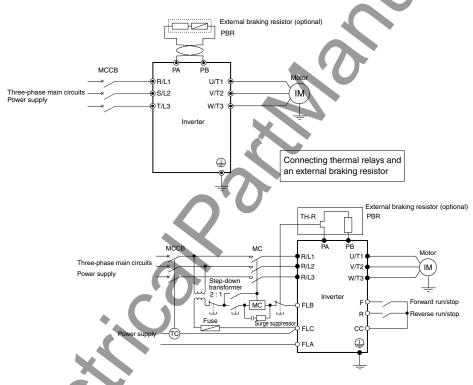

Note 1: A TC is connected, as shown in this figure, when an MCCB with a trip coil is used instead of an MC. A step-down transformer is needed for every 400V-class inverter, but not for any 200V-class inverter. Note 2: As a last resort to prevent fire, be sure to connect a thermal relay (THR). Although the inverter has a means of preventing overload and overcurrent to protect the braking resistor, the thermal relay is activated in case the protection function fails to work. Select and connect a thermal relay (THR) appropriate to the capacity (wattage) of the braking resistor. 6

E658115

E658115

#### [Parameter setting]

Title	Function	Default setting
F 3 0 4	Dynamic braking selection	1
F305	Overvoltage limit operation	1
F308	Braking resistor operation rate	Any value
F309	Dynamic braking resistor capacity	Any value

- To connect a dynamic braking resistor, set the overvoltage limit operation parameter  $F \exists \Box 5$  to "1" (Disabled).
- To use this inverter in applications that create a continuously regenerative status (such as downward movement of a lift, a press or a tension control machine), or in applications that require slowdown stopping of a machine with a significant load inertial moment, increase the dynamic braking resistor capacity according to the operation rate required.
- To connect an external dynamic braking resistor, select one with a resultant resistance value greater than the minimum allowable resistance value. Be sure to set the appropriate operation rate in  $F \exists \square B$  and  $F \exists \square B$  to ensure overload protection.
- When using a braking resistor with no thermal fuse, connect and use a thermal relay as a control circuit for cutting power off.

#### 2) Optional dynamic braking resistors

Optional dynamic braking resistors are listed below. All these resistors are 3%ED in operation rate

Inverter type	Braking resistor/Braking unit		
Inverter type	Model number	Rating	
VFA11S-2002PL-2007PL VFS11-2002PM-2007PM	PBR-2007	120W-200Ω	
VFS11S-2015PL-2022PL VFS11-2015PM-2022PM	PBR-2022	120W-75Ω	
VFS11-2037PM	PBR-2037	120W-40Ω	
VFS11-2055PM	PBR3-2055	240W-20Ω (120W-40Ωx2P)	
VFS11-2075PM	PBR3-2075	440W-15Ω (220W-30Ωx2P)	
VFS11-2110PM	PBR3-2110	660W-10Ω (220W-30Ωx3P)	
VFS11-2150PM	PBR3-2150	880W-7.5Ω (220W-30Ωx4P)	
VFS11-4004PL-4022PL	PBR-2007	120W-200Ω	
VFS11-4037PL	PBR-4037	120W-160Ω	
VFS11-4055PL	PBR3-4055	240W-80Ω (120W-160Ωx2P)	
VFS11-4075PL	PBR3-4075	440W-60Ω (220W-120Ωx2P)	
VFS11-4110PL	PBR3-4110	660W-40Ω (220W-120Ωx3P)	
VFS11-4150PL	PBR3-4150	880W-30Ω (220W-120Ωx4P)	

Note 1: The data in Rating above refer to the resultant resistance capacities (watts) and resultant resistance values ( $\Omega$ ).

The numeric values inside parentheses refer to the internal compositions of resistors.

Note 2: Braking resistors for frequent regenerative braking are optionally available. For more information, contact your Toshiba dealer.

F-40



#### 3) Minimum resistances of connectable braking resistors

The minimum allowable resistance values of the externally connectable braking resistors are listed in the table below.

Do not connect braking resistors with smaller resultant resistances than the listed minimum allowable resistance values.

Inverter rated	[200V Class]		[400V Class]	
output capacity	Resistance of	Minimum allowable	Resistance of	Minimum allowable
(kW)	standard option	resistance	standard option	resistance
0.2	200Ω	55Ω		-
0.4	200Ω	55Ω	200Ω	114Ω
0.55	200Ω	55Ω	-	-
0.75	200Ω	55Ω	200Ω	114Ω
1.5	$75\Omega$	44Ω	200Ω	67Ω
2.2	$75\Omega$	33Ω	200Ω	67Ω
3.7	40Ω	16Ω	160Ω	54Ω
5.5	20Ω	12Ω	80Ω	43Ω
7.5	15Ω	12Ω	60Ω	28Ω
11	10Ω	5Ω	40Ω	16Ω
15	7.5Ω	5Ω	30Ω	16Ω

### 6.13.5 Avoiding overvoltage tripping


F305: Overvoltage limit operation

.....

F525: Overvoltage stall protection level

Function

These parameters are used to keep the output frequency constant or increase it to prevent overvoltage tripping in case the voltage in the DC section rises during deceleration or varying speed operation. The deceleration time during overvoltage limit operation may increase above the designated time.



· <u>F 5 2 5</u>: Over-voltage stall protection level

.....



DC Voltage

E6581158

[Parameter s	setting]		Ci
Title	Function	Adjustment range	Default setting
F 3 0 S	Overvoltage limit operation (Slowdown stop mode selection)	<ul> <li>0: Enabled</li> <li>1: Prohibited</li> <li>2: Enabled (forced quick deceleration)</li> <li>3: Enabled (dynamic quick deceleration)</li> </ul>	<b>S</b> <sup>2</sup>
F626	Overvoltage limit operation level	100-150%	200V models: 134% 400V models: 140%

☆ If F ∃ □ 5 is set to 2 (quick deceleration), the inverter will increase the voltage to the motor (overexcitation control) to increase the amount of energy consumed by the motor when the voltage reaches the overvoltage protection level, and therefore the motor can be decelerated more quickly than normal deceleration.

☆ If F ∃ □ 5 is set to ∃ (dynamic quick deceleration), the inverter will increase the voltage to the motor (over-excitation control) to increase the amount of energy consumed by the motor as soon as the motor begins to slow down, and therefore the motor can be decelerated still more quickly than quick deceleration.

# 6.13.6 Output voltage adjustment/Supply voltage correction

u ב ש: Base frequency voltage 1

F307: Supply voltage correction (output voltage adjustment)

Function

Base frequency voltage1

The  $F \exists \square$  7 parameter adjusts the voltage corresponding to the base frequency 1  $\__{L}$  so that no voltage exceeding the  $\__{L}$  set value is put out. (This function is enabled only when  $F \exists \square$  7 is set to either "0" or "1".)

Supply voltage correction

The  $F \exists \square 7$  parameter maintains a constant V/F ratio, even when the input voltage decreases. The torque during low-speed operation is prevented from decreasing.


Maintains a constant V/F ratio, even when the input voltage fluctuates.

Output voltage adjustment ...... Limits the voltage at frequencies exceeding the base frequency. Applied when operating a special motor with low induced voltage.

Title	Function	Adjustment range	Default setting			
ut u	Base frequency voltage1	200V models: 50 - 330 (V) 400V models: 50 - 660 (V)	200V models: 200V 400V models: 400V			
F301	Supply voltage correction (output voltage limited)	<ul> <li>0: Supply voltage uncorrected, output voltage limited</li> <li>1: Supply voltage corrected, output voltage limited</li> <li>2: Supply voltage uncorrected, output voltage unlimited</li> <li>3: Supply voltage corrected, output voltage unlimited</li> </ul>	2 (WP, WN) 3 (AN)			

[Parameter setting]

- $\Rightarrow$  If  $F \exists G \exists$  is set to "G" or "C", the output voltage will change in proportion to the input voltage
- Even if the base frequency voltage ( U L U parameter ) is set above the input voltage, the output voltage will not exceed the input voltage.
- ☆ The rate of voltage to frequency can be adjusted according to the rated motor capacity. For example, setting F ∃ □ 7 to "□" or " 1" prevents the output voltage from increasing, even if the input voltage changes when operation frequency exceeds the base frequency.
- When the V/F control mode selection parameter ( $P_L$ ) is set to any number between  $L^2$  and  $\underline{b}$ , the supply voltage is corrected regardless of the setting of  $F \exists \square \exists$ .

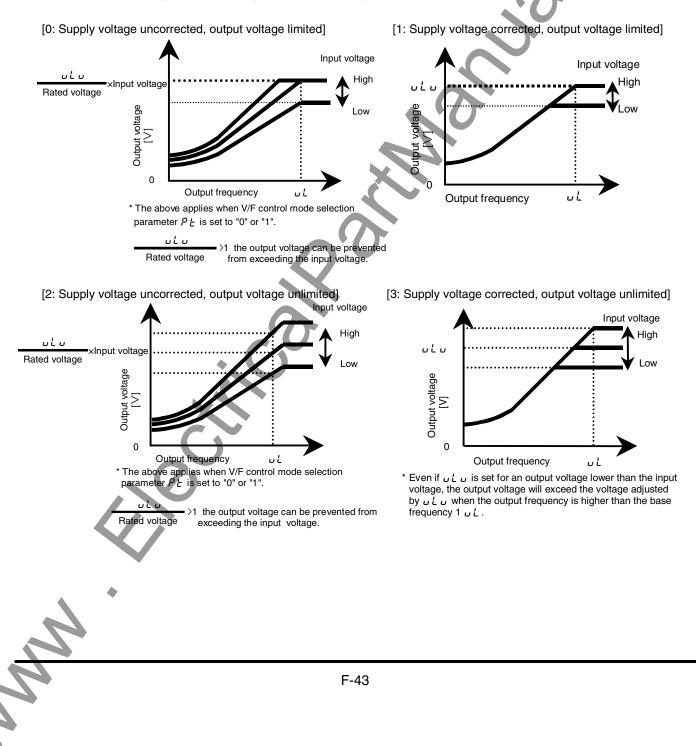

E6581158

E6581158

### 6.13.7 Canceling the operation command

#### F 3 1 1 : Reverse-run prohibition

Function

This function prevents the motor from running in the forward or reverse direction when it receives the wrong operation signal.

.....

#### [Parameter setting]

Title	Function	Adjustment range	Default setting		
F311	Reverse-run prohibition	0: Forward/reverse run permitted 1: Reverse run prohibited 2: Forward run prohibited	0		

### 6.14 Drooping control


F 3 2 [] : Drooping gain

.....

 Image: State Stat

Function

These parameters are used to allow the motor to "slip" according to the load torque current. Using these parameters, the dead zone torque and the gain can be adjusted.

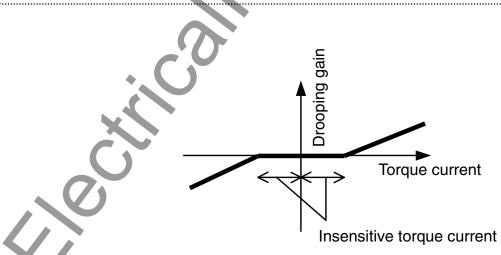

#### [Parameter setting]

Title	Function	Adjustment range	Default setting
F 3 2 0	Drooping gain	0-100%	0%
F323	Drooping insensitive torque band	0-100%	10%

## • When the torque current is above the specified dead zone torque current, the frequency is reduced (during operation) or increased (during DC braking).

- The drooping function is activated above the torque current set with F 323.
- The amount of drooping varies depending on the amount of torque current.

The difference of the frequency after drooping can be calculated as follows.

#### Drooping speed

Drooping speed = Base frequency  $u \downarrow$  Note xF  $\exists 2 \exists x$  (Torque current-F  $\exists 2 \exists x$ )

Note: If the base frequency exceeds 100Hz, count it as 100Hz.  $\ensuremath{\mathbf{a}}$ 

Control is exercised between the starting frequency ( $F \neq 4D$ ) and the maximum frequency (F H).

### 6.15 Braking setting functions


- F342: Braking mode selection
- F343: Release frequency
- F ] 4 4 : Release time

F345 : Creeping frequency

F345 : Creeping time

### 6.16 Conducting PID control

- F359: PID control wait time
- F360 : PID control
- F362: Proportional gain
- F363: Integral gain



### Function


Using feedback signals (4 to 20mA, 0 to 10V) from a detector, process control can be exercised, for example, to keep the airflow, amount of flow or pressure constant.

E658115

E6581158

[Parameter s	setting]		
Title	Function	Adjustment range	Default setting
F359	PID control wait time	0-2400 [sec]	0
F360	PID control	0: Disabled, 1: Enabled	0
F362	Proportional gain	0.01-100.0	0.30
F363	Integral gain	0.01-100.0	0.20
F366	Differential (D) gain	0.00-2.55	0.00

#### 1) External connection

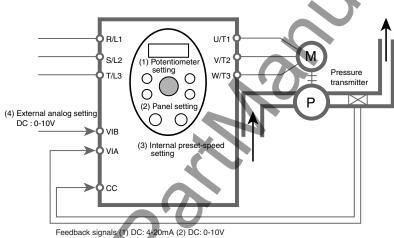

### 2) Types of PID control interfaces

Process quantity input data (frequency) and feedback input data can be combined as follows for the PID control of the VF-S11:

Process quantity input data (frequen	Feedback input data	
Setting method	Frequency setting mode selection 1	
(1) Internal potentiometer setting	0	External analog input
(2) Panel input setting	3	VIA (DC:4-20V / DC:0-10V)
(3) Internal preset-speed setting	-([[]]]][]]]][]]]]]]]]]]]]]]]]]]]]]]]]]	
(4) External analog setting VIB (DC: 0-10V)	2	

Note 1: About the setting of *F I I d*, *F Z I I* and *F Z I I*: Do not enable VIA using these parameters, because the VIA terminal is used for feedback signals.

Note 2: To make the inverter send out a signal that indicates whether the amount of feedback agree with (or reaches) the amount of processing, assign the function 52 or 53 to an unassigned output terminal. You can also specify a frequency agreement detection range (*F 15* 7). For more information, see 6.3.4.

E6581158

#### 3) Setting PID control

Set " l" in the extended parameter  $F \exists E \Box$  (PID control).

- (1) Set parameters *R* [ [ (acceleration time), and *d* [ [ (deceleration time) to their minimum values (0.1 sec.).
- (2) To limit the output frequency, set parameters UL (upper limit frequency) and LL (lower limit frequency). If process quantities are set from the operation panel, however, the process quantity setting range will be limited by the settings of UL and LL.

#### 4) Adjusting the PID control gain level

Adjust the PID control gain level according to the process quantities, the feedback signals and the object to be controlled.


The following parameters are	provided for gain adjustment:	

Parameter	Setting range	Default setting
<i>F∃52</i> (P-gain)	0.01-100.0	0.30
F 3 6 3 (I-gain)	0.01-100.0	0.20
F 3 5 5 (D-gain)	0.00-2.55	0.00

#### F 3 5 2 (P-gain adjustment parameter)

This parameter adjusts the proportional gain level during PID control. A correction value proportional to the particular deviation (the difference between the set frequency and the feedback value) is obtained by multiplying this deviation by the parameter setting.

A larger P-gain adjustment value gives faster response. Too large an adjustment value, however, results in an unstable event such as hunting.

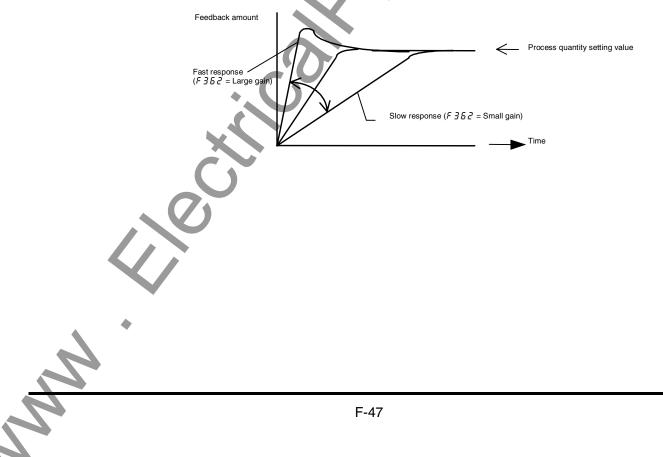


E6581158

#### F 3 5 3 (I-gain adjustment parameter)

This parameter adjusts the integral gain level during PID control. Any deviations remaining unremoved during proportional action are cleared to zero (residual deviation offset function).


A larger I-gain adjustment value reduces residual deviations. Too large an adjustment value, however, results in an unstable event such as hunting.

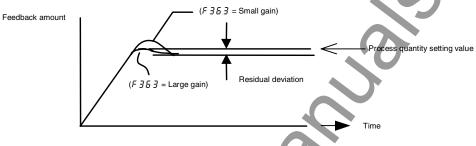

### F 3 5 5 (D-gain adjustment parameter)

This parameter adjusts the differential gain level during PID control. This gain increases the speed of response to a rapid change in deviation (difference between the frequency setting and the amount of feedback).

Note that setting the gain more than necessary may cause great fluctuations in output frequency, and thus operation to become unstable.

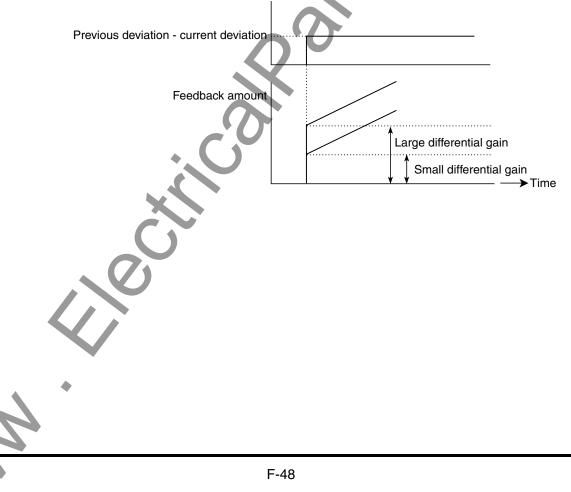


E6581158

#### 5) Adjusting analog command voltages

To use external analog setting (VIB) or feedback input (VIA), perform voltage-scaling adjustments as required. See Section 6.5.2 for further details.

If the feedback input data is too small, voltage-scaling adjustment data can also be used for gain adjustment.

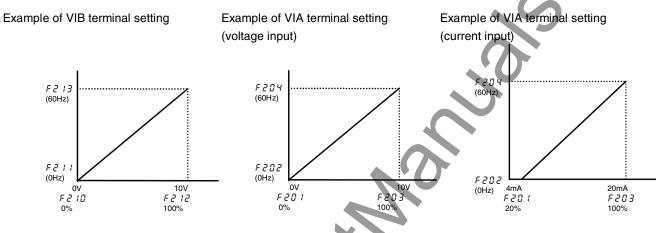

#### 6) Setting the time elapsed before PID control starts

You can specify a waiting time for PID control to prevent the inverter from starting PID control before the control system becomes stable, for example, after start-up.

The inverter ignores feedback input signals, carries out operation at the frequency determined by the amount of processing for the period of time specified with F = 35 and enters the PID control mode after a lapse of the specified time.

E6581158

### 6.17 Setting motor constants

- FYDD: Auto-tuning
- F 4 1 1: Slip frequency gain
- F4D2: Motor constant #1 (primary resistance)
- F415: Motor rated current
- F415: Motor no-load current
- F417: Motor rated speed
- F418: Speed control response coefficient
- FYIS: Speed control stable coefficient
- F480: Exciting strengthening coefficient
- F485: Stall cooperation gain at field weakening zone 1
- F492: Stall cooperation gain at field weakening zone 2
- F494: Motor adjustment factor


To use vector control, automatic torque boost and automatic energy saving, motor constant setting (motor tuning) is required. The following three methods are available to set motor constants (for automatic torque boosting, however, two methods are available):

In case you use the Toshiba 4-terminal standard motor in the same capacity as the inverter, auto-tuning is not necessary.

- 1) Using the automatic torque boost (*RU2*) for setting the V/F control mode selection (*PE*) and auto-tuning (*FUDD*) at the same time
- 2) Setting V/F control mode selection ( $P \ge$ ) and auto-tuning ( $F \lor \square \square$ ) independently
- 3) Combining the V/F control mode selection ( $P_{L}$ ) and manual tuning
- $\Rightarrow$  Check to be sure that the setting of the parameter  $_{u}$  and that of the parameter  $_{u}$  agree with the base frequency (rated rotational speed) and base frequency voltage (rated voltage) of the motor to be operated, respectively. If not, set the parameters correctly.
- $\Rightarrow$  When using the inverter to control the operation of a motor smaller in capacity by one grade or more, be sure to set the motor rated current setting parameter (*F* 4 15) properly.
- Vector control may not operate properly if the motor capacity differs from the applicable rated capacity of the inverter by more than two grades.

If current waveforms oscillate during operation, increase the speed control stability factor (F 4 I 3). This is effective in suppressing oscillation.

E6581158



This is the easiest of the available methods. It conducts vector control and auto-tuning at the same time.

Set the automatic torque boost  $R \sqcup Z$  to Z (Sensorless vector control + auto-tuning).

See Section 5.2 for details of the setting method.

#### [Selection 2: Setting sensorless vector control and auto-tuning independently]

This method sets sensorless vector control or automatic torque boost, and auto-tuning independently.

Specify the control mode selection parameter (PL) and then set auto-tuning.

Set the auto-tuning parameter	F 4 [] [] to 2
(Auto-tuning enabled)	

[Parameter set	tting]		
Title	Function	Adjustment range	Default setting
F400 /	Auto-tuning	<ul> <li>0: Auto-tuning disabled (use of internal parameters)</li> <li>1: Application of individual settings of F ビロン (after execution: 0)</li> <li>2: Auto-tuning enabled (after execution: 0)</li> </ul>	0

Set F 4 🛛 🖓 to ⊋.

E6581158

#### ☆ Precautions on auto-tuning

- (1) Conduct auto-tuning only after the motor has been connected and operation completely stopped. If auto-tuning is conducted immediately after operation stops, the presence of a residual voltage may result in abnormal tuning.
- (2) Voltage is applied to the motor during tuning even though it barely rotates. During tuning,
   "R L n I" is displayed on the operation panel.
- (3) Tuning is usually completed within three seconds. If it is aborted, the motor will trip with the display of  $E \models n$  *I* and no constants will be set for that motor.
- (4) High-speed motors, high-slip motors or other special motors cannot be auto-tuned. For these motors, perform manual tuning using Selection 3 described below.
- (5) Provide cranes and hoists with sufficient circuit protection such as mechanical braking. Without sufficient circuit protection, the resulting insufficient motor torque during tuning could create a risk of machine stalling/falling.
- (6) If auto-tuning is impossible or an "*E Ł n l*" auto-tuning error is displayed, perform manual tuning with Selection 3.
- (7) If the inverter is tripped during auto-tuning because of an output phase failure (E P H D), check if the inverter is connected to the correctly. A check for output phase failures is made during autotuning, regardless of the setting of the output phase failure detection mode selection parameter (F δ D 5).

#### [Selection 3: Setting vector control and manual tuning independently]

If an " $E \not \in n$ " tuning error is displayed during auto-tuning or when vector control characteristics are to be improved, independent motor constants can be set.

	Title	Function	Adjustment range	Default setting
	F400	Auto-tuning	0: Auto-tuning disabled (use of internal parameters) 1: Application of individual settings of F 4 ロ こ (after execution: 0) 2: Auto-tuning enabled (after execution: 0)	0
	F40 I	Slip frequency gain	0-150 (% )	50
	F402	Motor constant #1 (primary resistance)	0.0-30.0 (%)	Depends on the capacity
	F4 15	Motor rated current	0.1-100.0 (A)	(See Section
	F4 16	Motor no-load current	10-90 (%)	11, K-14)
	E417	Motor rated rotational speed	100-32000 (min <sup>-1</sup> )	1410 (WP) 1710 (WN, AN)
4	F4 :8	Speed control response coefficient	1-150	40
	F4 19	Speed control stability coefficient	1-100	20
	F480	Exciting strengthening coeffi- cient	100-130	100
	F485	Stall cooperation gain at field weakening zone 1	10-250	100
	F492	Stall cooperation gain at field weakening zone 2	50-150	100

Title	Function	Adjustment range	Default setting
F494	Motor adjustment factor	0-200	Depends on the capacity
ŁHr	Motor electronic thermal protection level 1	10-100 (%)	<b>•</b> 100

Setting procedure Adjust the following parameters:

- F 4 [] []: Select " /" to set the motor constant independently using the F 4 [] /-F 4 [] 5 parameters.
- FYD 1: Set the compensation gain for the slipping of the motor. A higher slip frequency reduces motor slipping correspondingly. After setting FYT7, set FYD 1 to adjust in detail.
- F 4 1 2: Adjust the primary resistive component of the motor. Decreases in torque due to a possible voltage drop during low-speed operation can be suppressed by setting a large value in this parameter. (Perform adjustments according to the actual operation.)
- F415: Set the rated current of the motor. For the rated current, see the motor's nameplate or test report.
- *F 4 15*: Set the ratio of the no-load current of the motor to the rated current. Enter the value in % that is obtained by dividing the no-load current specified in the motor's test report by the rated current.
- *F 4 17*: Set the rated rotational speed of the motor. For the rated current, see the motor's nameplate or test report.
- F 4 18: Using this parameter along with F 4,19, adjust the speed of response to the frequency command.
- F 4 19: Using this parameter along with F 4 18, adjust the speed of response to the frequency command.

\* How to make adjustments according to the moment of inertia of the load The moment of inertia of the load (including that of the motor shaft) was set at the factory on the assumption that it would be three times as large as that of the motor shaft.

If this assumption does not hold, calculate the values to be entered in F 418 and F 419, using the following equations.

Where a is the times by which the moment of inertia of the load is larger than that of the motor. After the above adjustments, if necessary, make fine adjustments as described below.

• To increase the response speed: Increase the setting of  $F \lor IB$ .

• To reduce the response speed: Decrease the setting of F 4 18.

- If overshooting or hunting occurs: Increase the setting of F 4 19.
- If reduction gears or the like squeak: Increase the setting of F + I.

• If an over-voltage trip occurs on completion of acceleration: Increase the setting of  $F \ 4 \ 1 \ 3$ . When making the above adjustments, increase or decrease settings in steps of 10% or so while checking how things change.

Note also that, depending on the settings of *F* 4 18 and *F* 4 19, the frequency may exceed the upper-limit frequency if the inverter is set so as to accelerate the load in the shortest possible time.

*F* 485: Using this parameter along with *F* 492 adjust characteristics in areas in which the frequency is above the base frequency (areas where the field is weak).

- *F Y G Z*: Using this parameter along with *F Y B S* adjust characteristics in areas in which the frequency is above the base frequency (areas where the field is weak).
  - How to make adjustments where the frequency is above the base frequency (where the field is weak).

If a heavy load is applied instantaneously (or transiently), the motor may stall before the load current reaches the current set with the stall prevention level 1 parameter  $F \subseteq I$ . In many cases, this kind of stall can be avoided by gradually reducing the setting of F 485. A drop in supply voltage may cause fluctuations of the load current or vibration of the motor. In some cases, such phenomena can be eliminated by changing the setting of F 432 to between 80 and 90. However, this may cause an increase in load current, so that it is also necessary to adjust the setting of the electronic thermal protective level 1 parameter (E H r) properly according to the motor capacity.

- F 4 9 4: No need to adjust (Do not change the setting, unless otherwise instructed by Toshiba technical staff)
- *EHr* : If the rated capacity of the motor is one size smaller than that of the inverter, lower the thermal protective level according to the rated current of the motor.
  - \* Sensorless vector control may not operate properly if the motor capacity differs from the applicable rated capacity of the inverter by more than two grades.

### 6.18 Acceleration/deceleration patterns 2 and 3

### 6.18.1 Selecting an acceleration/deceleration pattern

F502: Acceleration/deceleration 1 pattern

Function


•

- F505: S-pattern lower-limit adjustment amount
- F507: S-pattern upper-limit adjustment amount
  - These parameters allow you to select an acceleration/deceleration pattern that suits the intended use.

Title	Function	Adjustment range	Default setting
FS02	Acceleration/ deceleration 1 pattern	0: Linear, 1: S-pattern 1, 2: S-pattern 2	0
F 5 0 6	S-pattern lower-limit adjustment amount	0-50%	10%
F 5 0 7	S-pattern upper-limit adjustment amount	0-50%	10%

E6581158

6

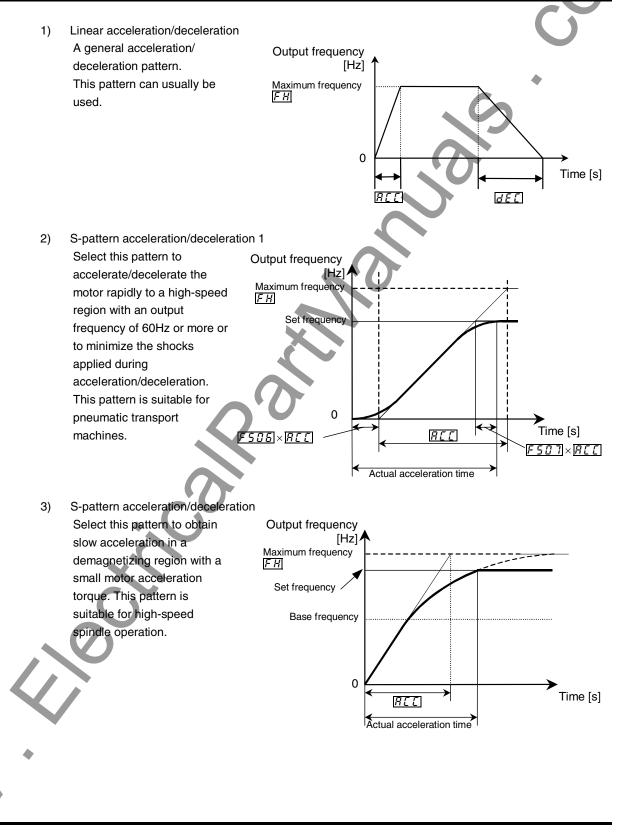

F-55

E6581158

### 6.18.2 Selecting an acceleration/deceleration pattern

- F500: Acceleration time 2
- F501: Deceleration time 2
- F503: Acceleration/deceleration 2 pattern
- F504: Selecting an acceleration/deceleration pattern
- F505: Acceleration/deceleration 1 and 2 switching frequency
- F 5 10 : Acceleration time 3
- F511: Deceleration time 3
- F512: Acceleration/deceleration 3 pattern
- F513: Acceleration/deceleration 2 and 3 switching frequency
  - Function


Three acceleration times and three deceleration times can be specified individually. A method of selection or switching can be selected from among the following:

- 1) Selection by means of parameters
- 2) Switching by changing frequencies
- 3) Switching by means of terminals

Title	Function	Adjustment range	Default setting
F500	Acceleration time 2	0.0-3200 [sec]	10.0
F50 I	Deceleration time 2	0.0-3200 [sec]	10.0
F 5 0 4	Selecting an acceleration/deceleration pattern	<i>l</i> : Acceleration/deceleration 1 pattern, <i>2</i> : Acceleration/deceleration 2 pattern, <i>3</i> :Acceleration/deceleration 3 pattern	1
F5 10	Acceleration time 3	0.0-3200 [sec]	10.0
F5	Deceleration time 3	0.0-3200 [sec]	10.0

E6581158

1) Selection using parameters

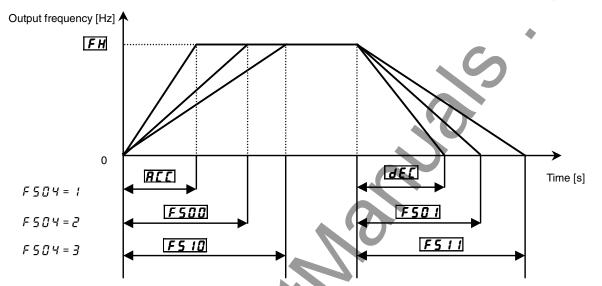


Acceleration/deceleration time 1 is initially set as the default. Acceleration/deceleration time 2 and 3 can be selected by changing the setting of the F 5 G 4. Enabled if [ f G G d = 1 (panel input enabled)

2) Switching by frequencies - Switching the acceleration/deceleration time automatically at the frequency setting of *F* 5 0 5.

Title	Function	Adjustment range	Default setting
F 5 0 5	Acceleration/deceleration 1 and 2 switching frequency	0.0- <i>UL</i>	0.0
F5 / 3	Acceleration/deceleration 2 and 3 switching frequency	0.0- <i>UL</i>	0.0

Note: Acceleration/deceleration patterns are changed from pattern 1 to pattern 2 and from pattern 2 to pattern 3 in increasing order of frequency, regardless of the order in which frequencies are changed. (For example, if  $F \leq 0 \leq$  is larger than  $F \leq 1 \leq$ ,  $F \leq 1 \leq$  pattern 1 is selected in the frequency range below the frequency set with  $F \leq 0 \leq$ .)

E6581158

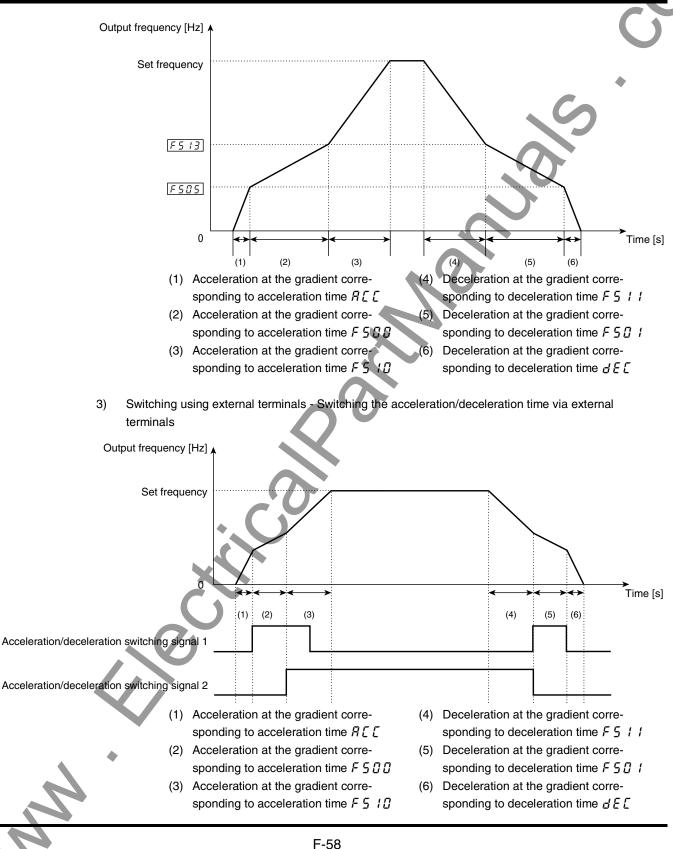

#### ■ How to set parameters

- a) Operating method: Terminal input Set the operation control mode selection [ ] ] d to ].
- b) Use the S2 and S3 terminals for switching. (Instead, other terminals may be used.)

S2: Acceleration/deceleration switching signal 1 S3: Acceleration/deceleration switching signal 2

Title	Function	Adjustment range	Setting value
F I 15	Input terminal selection #5 (S2)	0-64	5 (the second acceleration/de celeration mode selection)
F I 15	Input terminal selection #6 (S3)	0-64	58 (the third acceleration/de celeration mode selection)

Acceleration/ deceleration pattern Acceleration/deceleration patterns can be selected individually, using the acceleration/deceleration 1, 2 and 3 parameters.

- 1) Linear acceleration/deceleration
- 2) S-pattern acceleration/deceleration 1
- 3) S-pattern acceleration/deceleration 2

Title	Function	Adjustment range	Setting value
F 5 0 2	Acceleration/ deceleration 1 pattern	☐: Linear, 1: S-pattern 1, 2: S- pattern 2	0
F 5 0 3	Acceleration/ deceleration 2 pattern	☐: Linear, 1: S-pattern 1, 2: S- pattern 2	0
F5 12	Acceleration/ deceleration 3 pattern	☐: Linear, 1: S-pattern 1, 2: S- pattern 2	0

★ For an explanation of acceleration/deceleration patterns, see 6.18.1.

★ Both the settings of the S-pattern lower-limit and upper-limit adjustment parameters (*F* 5 ☐ *B* and *F* 5 ☐ 7) are applied to any acceleration/deceleration S-pattern.

E6581

E6581158

### 6.19 Protection functions

### 6.19.1 Setting motor electronic thermal protection

*<u>L</u>H-*: Motor electronic thermal protection level 1

FEIT: Motor 150%-overload time limit

Function

This parameter allows selection of the appropriate electronic thermal protection characteristics according to the particular rating and characteristics of the motor.

Parameter s	setting		
Title	Function	Adjustment range	Default setting
E H r	Motor electronic thermal protection level 1	10-100 (%)	100
F607	Motor 150%-overload time limit	10-2400 [sec]	300
Ear mara datail	a coo 5 12		

For more details, see 5.13.

### 6.19.2 Setting current stall

F 5 0 1: Stall prevention level 1

FIB5: Stall prevention level 2

Caution		
Prohibited	<ul> <li>Do not set the stall prevention level (<i>F</i> § [] 1) extremely low.</li> <li>If the stall prevention level parameter (<i>F</i> § [] 1) is set at or below the no-load current of the motor, the stall preventive function will be always active and increase the frequency when it judges that regenerative braking is taking place.</li> <li>Do not set the stall prevention level parameter (<i>F</i> § [] 1) below 30% under normal use conditions.</li> </ul>	

Function

This parameter adjusts the output frequency by activating a current stall prevention function against a current exceeding the  $F \subseteq \square$  *i*-specified level.

#### Parameter setting

Title	Function	Adjustment range	Default setting
F 6 0 V	Stall prevention level 1	10-199 (%),	150
F 185	Stall prevention level 2	200: Deactivated	150

E6581158

[Display during operation of the stall prevention]

During an *D L* alarm status, (that is , when there is a current flow in excess of the stall prevention level), the output frequency changes. At the same time, to the left of this value, "*L*" is displayed flashing on and off.

Example of display

★ The switching from *F* <u>6</u> <u>0</u> *i* to *F i* <u>8</u> <u>5</u> can be performed by entering a command through terminals. For more details, see 6.4.1.

### 6.19.3 Inverter trip retention

### F E C Z : Inverter trip retention selection


Function

If the inverter trips, this parameter will retain the corresponding trip information. Trip information that has thus been stored into memory can be displayed, even after power has been reset.

#### [Parameter setting]

Title	Function	Adjustment range	Default setting
F602	Inverter trip retention selection	0: Cleared if power is turned off 1: Retained even if power is turned off	0

- ★ The causes of up to four trips that occurred in the past can be displayed in status monitor mode.
- ★ Data (current, voltage, etc) displayed in status monitor mode when the inverter is tripped is cleared when power is turned off. (Past trip records can be displayed.)

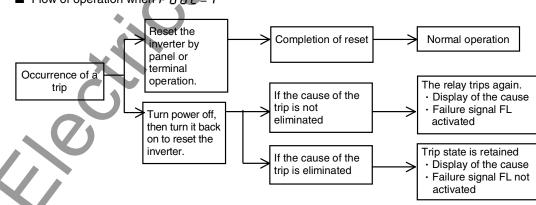

■ Flow of operation when F 5 0 2 = 1

E658115

### 6.19.4 Emergency stop

F 5 7 3: Emergency stop

F 등 급 석 : Emergency DC braking time

#### Function

These parameters allow you to specify how to stop operation using an external control device when an external trip occurs. When operation is stopped, the trip E and the FL relay also are activated. When setting  $F \subseteq \square \exists$  to  $\exists$  (emergency DC braking), set also  $F \not{\exists} \exists$  1 (DC braking rate) and  $F \subseteq \square \exists$  (emergency braking time)

#### 1) External trip stop via terminals

The external trip stop function can be executed via the a-contact. Proceed as follows to assign an external stopping terminal and select the stopping method:

[Parameter	setting]

li arameter e	Jetting		
Title	Function	Adjustment range	Default setting
F603	Emergency stop selection	0: Coast stop 1: Slowdown stop 2: Emergency DC braking	0
F 6 0 4	Emergency DC braking time	0.0 ~ 20.0 [sec]	1.0
F251	DC braking current	0-100 (%)	50

(Example of terminal assignment): Assigning the trip stop function to the RES terminal

Title	Function	Adjustment range	Setting
F I I 3	Input terminal selection 3 (RES)	0-64	11 (External trip stop)

Note 1) Emergency stopping via the specified terminal is possible, even during panel operation.

Note 2) If DC braking is not needed to bring the motor to a stop under normal conditions, although *F* **5 1 3** is set to 2 (emergency DC braking), set the DC braking starting frequency (*F* **2 5 1**) at 0.0 Hz.

#### 2) Emergency stopping from the operation panel

Emergency stopping from the operation panel is possible

by pressing the STOP key on the panel twice while the inverter is not in the panel control mode.

(1) Press the STOP key..... "E DFF" will blink.

(2) Press the STOP key once again ...... Operation will come to a trip stop in accordance with the setting

of the F & C 3 parameter.

After this, "E" will be displayed and a failure detection signal generated (FL relay deactivated).

NAN

E6581158

## 6.19.5 Output phase failure detection

F 5 5 : Output phase failure detection	mode selection	•	
<ul> <li>Function         This parameter detects inverter output Phase fails second or more, the tripping function and the FL information <i>E P H D</i> will also be displayed.     </li> <li>Set <i>F E D 5</i> to 5 to open the motor-inverter con inverter operation.</li> <li>Detection errors may occur for special motors succession.</li> </ul>	relay will be activated. At the same ti nection by switching commercial powe	me, a trip	
<ul> <li>F 5 0 5 = 0: No tripping (FL relay deactivated).</li> <li>F 5 0 5 = 1: With the power on, the phase failure detection is enabled only at the start of the first operation. The inverter will trip if the Phase failure status persists for one second or more.</li> <li>F 5 0 5 = 2: The inverter checks for output phase failures each time it starts operation. The inverter will trip if the Phase failure status persists for one second or more.</li> <li>F 5 0 5 = 3: The inverter checks for output phase failures during operation. The inverter will trip if the Phase failure status persists for one second or more.</li> <li>F 5 0 5 = 3: The inverter checks for output phase failures during operation. The inverter will trip if the Phase failure status persists for one second or more.</li> <li>F 5 0 5 = 4: The inverter checks for output phase failures at the start of and during operation. The inverter will trip if the Phase failure status persists for one second or more.</li> <li>F 5 0 5 = 4: The inverter checks for output phase failures at the start of and during operation. The inverter will trip if the Phase failure status persists for one second or more.</li> <li>F 5 0 5 = 5: If it detects an all-phase failure, it will restart on completion of reconnection. The inverter does not check for output phase failures when restarting after a momentary power failure.</li> </ul>			
Note: A check for output phase failures is made duri rameter.			
Title Function	Adjustment range	Default setting	
FED5 Output phase failure detection mode selection	<ol> <li>Disabled</li> <li>At start-up (Only one time after power is turned on)</li> <li>At start-up (each time)</li> <li>During operation</li> <li>At start-up + during operation</li> <li>Detection of cutoff on output side</li> </ol>	0	

6

E6581158

### 6.19.6 Input phase failure detection

F508: Input phase failure detection mode selection

• Function

This parameter detects inverter input Phase failure. If the abnormal voltage status of main circuit capacitor persists for few minutes or more, the tripping function and the FL relay will be activated. Therefore, input phase failures cannot always be detected. A trip information EPH i will be displayed.

If the power capacity is larger than the inverter capacity (more than 200kVA or more than 10 times), detection errors may occur. If this actually happens, install an AC or DC reactor .

- $F \subseteq G \equiv B = G$ : No tripping (Failure signal FL not activated)
- *F* **G B** = *I*: Phase failure detection is enabled during operation. The inverter will trip if the abnormal voltage status of main circuit capacitor persists for ten minutes or more. (Failure signal FL activated)

Title	Function	Adjustment range	Default setting
F608	Input phase failure detection mode selection	0: Disabled, 1: Enabled	1

Note: Setting *F* **6 1 B** to **1** (input phase failure detection: disabled) may result in a breakage of the capacitor in the inverter main circuit if operation is continued under a heavy load in spite of the occurrence of an input phase failure.

E6581158

### 6.19.7 Control mode for small current

F 5 11 : Small current trip/alarm selection

F 5 1 1: Small current detection current

F512: Small current detection time

Function

The  $F \subseteq I \subseteq$  parameter allows the inverter to be tripped if a current smaller than the  $F \subseteq I$  -specified value flows for more than the  $F \subseteq I \supseteq$ -specified time. When tripping is selected, enter the detection time to tripping. Trip information is displayed as " $\Box \subseteq$ ".

#### $F \subseteq I \square = \square$ : No tripping (Failure signal FL not activated).

3

A small current alarm can be put out by setting the output terminal function selection parameter.

F & I = 1: The inverter will trip (Failure signal FL activated) if a current below the current set with F & 1 I flows for the period of time specified with F & 12.

Title	Function	Adjustment range	Default setting
F6 10	Small current trip/alarm selection	0: Alarm only 1: Tripping	0
F6	Small current detection current	0-100 (%)	0
F612	Small current detection time	0-255 [sec]	0

E6581158

### 6.19.8 Detection of output short-circuit

F 5 13: Detection of output short-circuit during start-up

#### Function

This parameter detects inverter output short-circuit. It can be usually detected in the length of the standard pulse. When operating low-impedance motor such as high-speed motor, however, the short-time pulse should be selected.


- $F \subseteq I = \Box$ : Detection is executed in the length of the standard pulse every time you start up the inverter.
- F E I = I: Detection is executed in the length of standard pulse only during the first start-up after putting on the power or after resetting.
- $F \in \{1\} = 2$ : Detection is executed with the short-time pulse every time you start up the inverter.
- $F \in I = \exists$ : Detection is executed with the short-time pulse only for the first time after putting power on or after resetting.

Title	Function	Adjustment range	Default setting
F6 (3	Detection of output short-circuit during start-up	<ol> <li>Carb time (standard pulse)</li> <li>Only one time after power is turned on (standard pulse)</li> <li>Each time (short-time pulse)</li> <li>Only one time after power is turned on (short-time pulse)</li> </ol>	0
	F-66		

1 N N N

E6581158


í)

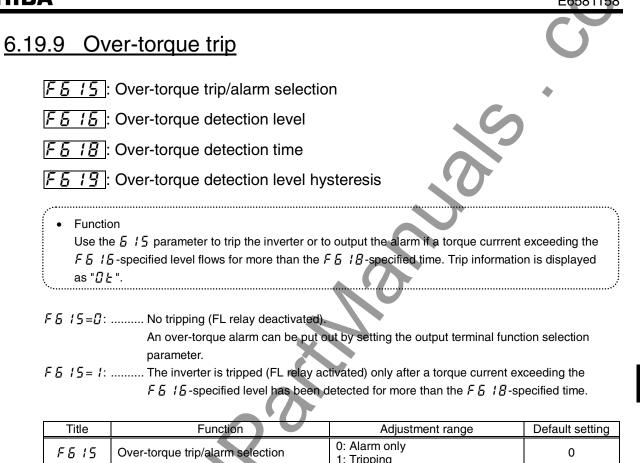

F6 /5	Over-torque trip/alarm selection	0: Alarm only 1: Tripping	0
F6 /6	Over-torque detection level	0-250 (%)	150
F6 18	Over-torque detection time	0.0-10.0 [sec]	0.5
F6 /9	Over-torque detection level hysteresis	0-100 (%)	10


F-67

E6581158

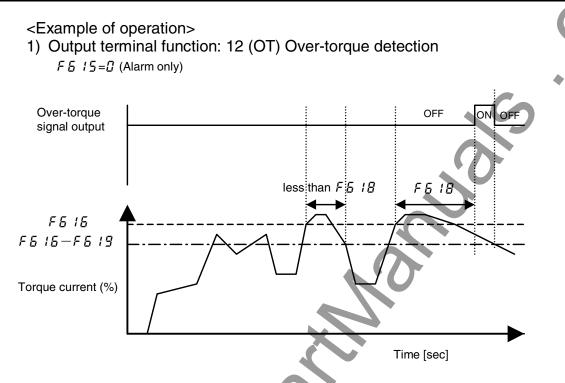

When F = 1 (tripping), the inverter will trip if over-torque lasts for the period of time set with F 5 18. In such a case, the over-torque signal remains ON.

2) Output terminal function: 20 (POT) Over-torque detection pre-alarm

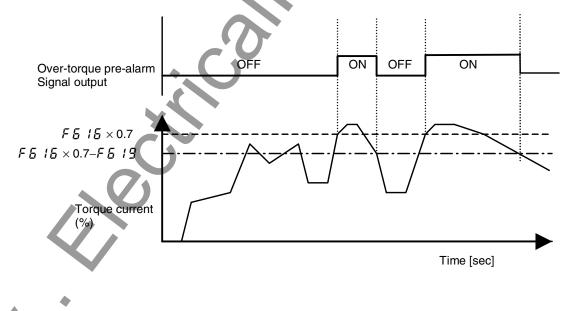

E6581158

### 6.19.10 Cumulative operation time alarm setting

FEZI: Cumulative operation time alarm setting

Function

This parameter allows you to set the inverter so that it will put out an alarm signal after a lapse of the cumulative operation time set with  $F \sqsubseteq 2$  1.

"0.1" displayed on the monitor refers to 10 hours, and therefore "1" denotes 100 hours.

.....

Ex.: 38.5 displayed on the monitor = 3850 (hours)

Title	Function	Adjustment range	Default setting
F621	Cumulative operation time alarm setting	0.0-9.999	610.0

Setting of output signal I

Ex.: When assigning the cumulative operation alarm signal output function to the OUT terminal

Title	Function	Adjustment range	Setting
F 13 1	Output terminal selection 2A (OUT-NO)	0-255	42 (negative logic 43)

### 6.19.11 Over-voltage stall protection level

F525: Over-voltage stall protection level

\* For more details, see 6.13.5.

E6581158

<u>6.19.12 L</u>	6.19.12 Undervoltage trip			
F62	F 5 2 7 : Undervoltage trip/alarm selection			
<ul> <li>Function         This parameter is used for selecting the control mode when an undervoltage is detected. Trip information is displayed as "UP 1".     </li> </ul>				
F627=	<ul> <li>F § 2 7=0: The inverter is stopped. However, it is not tripped (Failure signal FL not activated). The inverter is stopped when the voltage does not exceed 60 % or less of its rating.</li> <li>F § 2 7=1: Inverter is stopped. It is also tripped (Failure signal FL activated), only after detection of a voltage not exceeding 60% or less of its rating.</li> <li>F § 2 7=2: Inverter is stopped. However, it is not tripped (Failure signal FL not activated). The inverter stop (Failure signal FL not activated)., only after detection of a voltage not exceeding 50% of its rating. Be sure to connect the DC reactor specified in 10.4.</li> </ul>			
Title	Function	Adjustment range	Default setting	
F 6 2 7	Undervoltage trip/alarm se- lection	<ul> <li>0: Alarm only (detection level below 60%)</li> <li>1: Tripping (detection level below 60%)</li> <li>2: Alarm only (detection level below 50%, DC reactor needed)</li> </ul>	0	

F-70

e co

E6581158

### 6.19.13 Trip at VI/II low level input mode

F 5 3 3 : Trip at VI/II low level input mode

Function

The inverter will trip if the VIA value remains below the specified value for about 0.3 seconds. In such a case, " $\xi - IB$ " is displayed.

#### $F \subseteq J \exists = 0$ : Disabled ...... The detection function is disabled.

*F* **§ 3 3**=1-100 ..... The inverter will trip if the VIA value remains below the specified value for about 0.3 seconds.

Title	Function	Adjustment range	Default setting
F633	Trip at VI/II low level input mode	0: Disabled 1-100%	0

Note : The VIA input value may be judged earlier to be abnormal, depending on the degree of deviation of the analog data detected.

### 6.19.14 Calculation for life alarms

 $F \overline{5} \overline{3} \overline{4}$ : Annual average ambient temperature (calculation for life alarms)

Function

You can set the inverter so that it will calculate the remaining useful lives of the cooling fan, main circuit capacitor and on-board capacitor from the ON time of the inverter, the operating time of the motor, the output current (load factor) and the setting of  $F \sqsubseteq \exists \forall$ , and that it will display and send out an alarm through output terminals when each component is approaching the end of its useful life.

\_\_\_\_\_

Title Function	Adjustment range	Default setting
F534 Annual average ambient temperature (calculation for life alarms)	1: -10 to +10°C 2: 11-20°C 3: 21-30°C 4: 31-40°C 5: 41-50°C 6: 51-60°C	3

Note 1: Using *F* **b d d** enter the annual average temperature around the inverter. Be careful not to enter the annual highest temperature.

Note 2: Set *F* **5 3** *4* at the time of installation of the inverter, and do not change its setting after the start of use. Changing the setting may cause a life alarm calculation error.

E6581158

### 6.20 Adjustment parameters

### 6.20.1 Pulse train output for meters

- F555: Logic output/pulse train output selection (OUT-NO)
- F575: Pulse train output function selection (OUT-NO)
- FE77: Maximum nembers of pulse train
- Function
  - Pulse trains can be sent out through the OUT-NO output terminals.
  - To do so, it is necessary to select a pulse output mode and specify the number of pulses.
- Ex.: When operations frequencies (0 to 60Hz) are put out by means of 0 to 600 pulses F H=60.0, F E E B=1, F E 7 E=0, F E 7 7=600

Title	Function	Adjustment range	Default setting
F669	Logic output/pulse train output selection (OUT-NO)	0: Logic output 1: Pulse train output	0
F 6 7 5	Pulse train output function selection (OUT-NO)	<ul> <li>0: Output frequency</li> <li>1: Output current</li> <li>2: Set frequency</li> <li>3: DC voltage</li> <li>4: Output voltage command value</li> <li>5: Input power</li> <li>6: Output power</li> <li>7: Torque</li> <li>8: Torque current</li> <li>9: Motor cumulative load factor</li> <li>10:Inverter cumulative load factor</li> <li>10:Inverter cumulative load factor</li> <li>11: PBR (braking reactor) cumulative load factor</li> <li>12: Frequency setting value (after PID)</li> <li>13: VIA/II Input value</li> <li>14: VIB Input value</li> <li>15: Fixed output 1 (Output current: 100%)</li> <li>16: Fixed output 2 (Output current: 50%)</li> <li>17: Fixed output 3 (Other than the output current: 100%)</li> </ul>	0
F 5 7 7	Maximum nembers of pulse train	500-1600 (pps)	800

Note 1: The pulse length is fixed. Therefore, the duty is variable.

Note 2: The minimum pulse output rate is 38 PPS. Keep in mind that no pulses can be put out at any rate smaller than 38 PPS.

E658115

#### Calibration of analog outputs 6.20.2

F591: Inclination characteristic of analog output

F E E E : Bias of analog output


#### Function

Output signals from FM terminals are analog voltage signals. Their standard setting range is from 0 to 7.5Vdc.

Using the FM slide switch in the inverter, you can switch to 0-20mA output. Also, using these parameters, you can calibrate the output to 4-20mAdc or 20-4mAdc.

Title	Function	Adjustment range	Default setting
F691	Inclination characteristic of analog output	0: Negative inclination (downward slope) 1: Positive inclination (upward slope)	1
F692	Bias of analog output	0-100%	0

Note: To switch to 0-20mAdc (4-20mAdc), turn the FM slide switch to the I position.

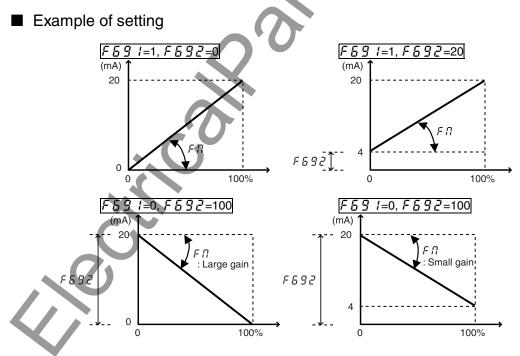

The analog output inclination can be adjusted using the parameter  $F \Pi$ .  $\overset{}{\sim}$ 

E6581158

#### 6.21 Operation panel parameter

#### Prohibition of key operations and parameter settings 6.21.1

- F 7 [] []: Prohibition of change of parameter setting
- **73**[]: Prohibition of panel operation (FC)
- 733: Prohibition of panel operation (RUN/STOP keys
- 734: Prohibition of panel emergency stop operation
- 735 : Prohibition of panel reset operation

735 : Prohibition of change of [ 70 d/F 80 d during operation

#### Function


These parameters allow you to prohibit the operation of the RUN and STOP keys on the operation panel and the change of parameters. Using these parameters, you can also prohibit various key operations.

[Parameter	setting]		
Title	Function	Adjustment range	Default setting
F 700	Prohibition of change of parameter setting	0: Permitted, 1: Prohibited	0
F 7 3 0	Panel operation prohibition (FC)	0: Permitted, 1: Prohibited	0
F 7 3 3	Prohibition of panel operation (RUN/STOP keys)	0: Permitted, 1: Prohibited	0
F 7 3 Y	Prohibition of panel emergency stop operation	0: Permitted, 1: Prohibited	0
F735	Prohibition of panel reset operation	0: Permitted, 1: Prohibited	0
F736	Prohibition of change of	0: Permitted, 1: Prohibited	1


### Resetting method)

Only the F 700 parameter is designed so that its setting can be modified even if 1 (prohibited) is selected.

E6581158

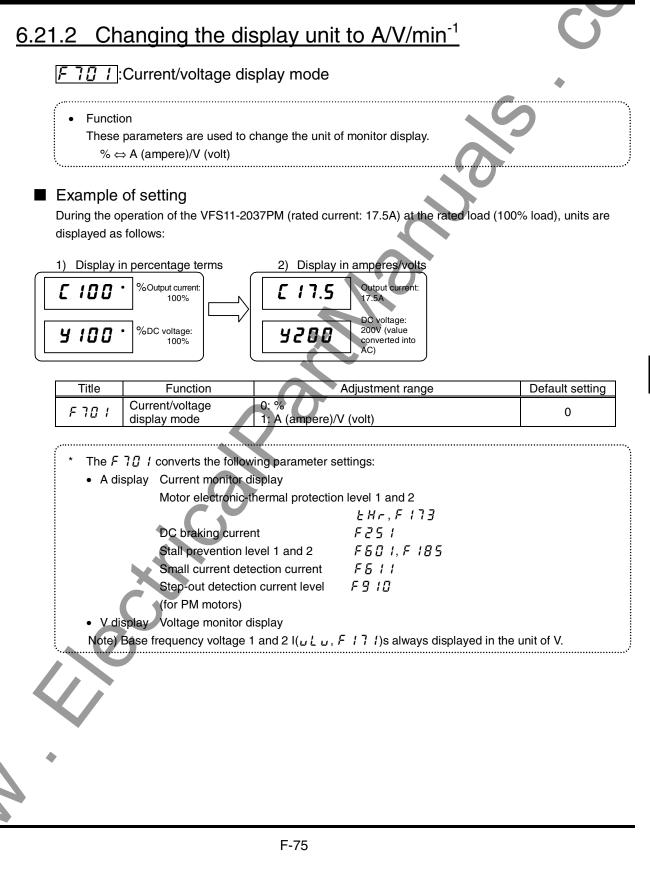


E6581158

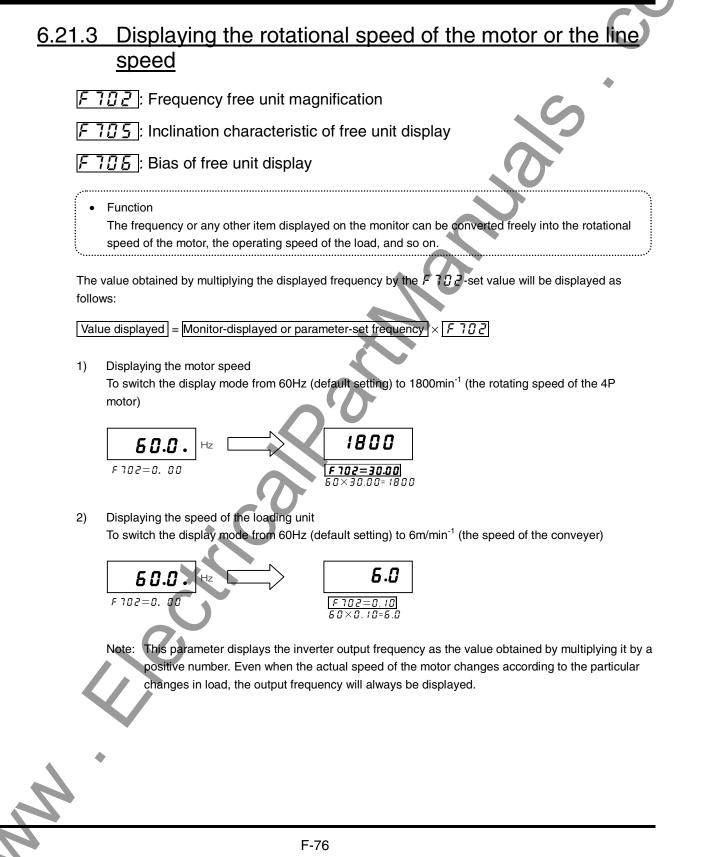

#### Default setting Title Function Adjustment range 0.00: Free unit display disabled (display of Frequency free unit F 702 frequency) 0.00 magnification 0.01-200.0 Inclination 0: Negative inclination (downward slope) F 705 characteristic of free 1 1: Positive inclination (upward slope) unit display Bias of free unit F 705 0.00-FH 0.00 display

-	<b>702</b> converts the following parameter s e unit Frequency monitor display	settings:
	Frequency-related parameters	FH, UL, LL, Sr, 1-5r7,
		F 100, F 10 1, F 102, F 167,
		F202,F204,F211,
		F2 V3, F240, F24 I, F242,
		R250,F260,F265,F267,
		F 2 6 8, F 2 1 0 - F 2 1 5, F 2 8 1 - F 2 9 4,
		E343,F345,F505,F513,
		F8 12, F8 14

An example of setting when FH is 80 and  $F \boxed{22}$  is 10.00

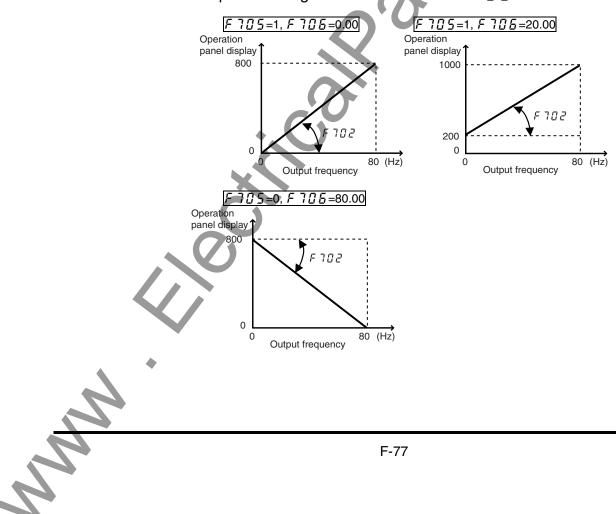

E6581158

. . . . .

E6581158

# 6.21.4 Changing the steps in which the value displayed changes

FTDT: Free step 1 (pressing a panel key once)

F 708: Free step 2 (panel display)

#### • Function

These parameters are used to specify steps in which the command value or standard monitor output frequency displayed on the panel changes each time you press the up or down key to set a frequency on the operation panel.

Note 1: The settings of these parameters have no effect when the free unit selection (*F* 7 [] 2) is enabled. Note 2: If you press the Up key on the panel repeatedly to increase the frequency while *F* 7 [] 7 is set to any value other than 0, the "HI" alarm will appear immediately before the frequency exceeds the *F H* (maximum frequency) and the frequency will stop increasing. Similarly, if you press the Down key on the panel repeatedly to decrease the frequency, the "LO" alarm will appear immediately before the frequency will stop decreases below the *L* (lower-limit frequency) and the frequency will stop decreasing.

#### ■ When F 7 B 7 is not 0.00, and F 7 B is not 0 (disabled)

Under normal conditions, the frequency command value from the operation panel increases in steps of 0.1 Hz each time you press the  $\bigcirc$  key. If F 7D 7 is not 0.00, the frequency command value will increase by the value with F 7D 7 each time you press the  $\bigcirc$  key. Similarly, it will decrease by the value set with F 7D 7 each time you press the  $\bigcirc$  key.

In this case, the output frequency displayed in standard monitor mode changes in steps of 0.1 Hz, as usual.

### ■ When *F* 7 *G* 7 is not 0.00, and *F* 7 *G B* is not 0 (disabled)

The value displayed on the panel also can also be changed in steps.

Output frequency of	displayed in	standard	monitor	mode	=[	Internal	output	frequency	$\times$	<u>F 708</u>	
										FOCT	

Title	Function	Adjustment range	Default setting	
רסרא	Free step 1 (pressing a panel key once)	0.00: Disabled 0.01- <i>F H</i> (Hz)	0.00	
F 108	Free step 2 (panel display)	0: Disabled 1-255	0	

#### Example of setting 1

When F 7 17 7=10.00 (Hz):

The frequency ( $F \zeta$ ) set on the operation panel changes in steps of 10.0 Hz:  $0.0 \rightarrow 20.0 \rightarrow ... 60.0$  (Hz), each time you press the  $\bigcirc$  key. This function comes in very handy when operating the load at limited frequencies that change in steps of 1Hz, 5Hz, 10Hz, and so on.

E6581158

#### Example of setting 2

When F 70 7=1.00 (Hz), and F 708=1:

Each time you press the  $\bigcirc$  key, the frequency setting  $F \not\subseteq$  changes in steps of 1Hz:  $0 \rightarrow 1 \rightarrow 2 \rightarrow ... \rightarrow 60$  (Hz) and also the value displayed on the operation panel changes in steps of 1. Use these settings to hide decimal fractions and also the value displayed on the operation panel changes in steps of 1. Use these settings to hide decimal fractions.

## 6.21.5 Changing the item displayed by default

F 7 11 : Standard monitor display selection

#### • Function

This parameter specifies display format while power is on.

#### Changing the display format while power is on

When the power is on, the standard monitor mode displays the operation frequency (default setting) in the format of " $\square$ . $\square$ " or " $\square$  *F F*". This format can be changed to any other monitor display format by setting *F T I* $\square$ . This new format, however, will not display an assigned prefix such as *E* or *E*.

Paramet	er setting		
Title	Function	Adjustment range	Default setting
F 7 10	Standard monitor display selection	<ul> <li>0: Operation frequency (Hz/free unit/step)</li> <li>1: Frequency command (Hz/free unit/step)</li> <li>2: Output current (%/A)</li> <li>3: Inverter rated current (A)</li> <li>4: Inverter load factor (%)</li> <li>5: Output power (kW)</li> <li>6: Frequency command after PID control (Hz/free unit/step)</li> <li>7: Optional item specified from an external control unit</li> </ul>	0

☆ For more information on the F 7 1 i option "7," refer to "Communications Function Instruction Manual."

E6581158

#### 6.21.6 Canceling the operation command

F 7 19: Canceling of operation command when standby terminal (ST) is turned off

#### Function

When the standby (ST) terminal is turned off during panel operation, the inverter will restart operation if the ST terminal is turned back on. Using this parameter, you can also set the inverter so that, even if the ST is turned back on, it will not restart operation until you press the RUN key.

Title	Function	Adjustment range	Default setting
F 7 / 9	Canceling of operation command when standby terminal (ST) is turned off	0: Operation command canceled (cleared) 1: Operation command retained	1

### 6.21.7 Selection of operation panel stop pattern

F721: Selection of operation panel stop pattern

• Function

This parameter are used to select a mode in which the motor started by pressing the (RUN) key on the operation panel is stopped when the (STOP) key is pressed.

#### 1) Slowdown stop

The motor slows down to a stop in the deceleration time set with  $d \in \mathcal{L}$  (or  $F \subseteq \mathcal{L}$  | or  $F \subseteq \mathcal{L}$  | ).

2) Coast stop

The inverter cuts off power supply to the motor. The motor comes to a stop after coasting for a while by inertia. Depending on the load, the motor may keep running for a good long time.

Doromotor	a offinal
[Parameter	semnor
[	

Title	Function	Adjustment range	Default setting
F 72 I	Selection of operation panel stop pattern	0: Slowdown stop 1: Coast stop	0
	<b>S</b>		

E6581158

6

# 6.22 Communication function (Common serial)

### 6.22.1 Setting of common function

- FBDD: Data transfer speed
- FBC / : Parity
- FBDZ: Inverter number
- FBDJ: Communication error trip time
- FBD5 : Communication waiting time
- F805: Inter-drive communication
- **F 8 1 1**: Point # 1 setting
- F 8 12 : Point # 1 frequency
- F 8 1 3 : Point # 2 setting
- FB14: Point # 2 frequency
- FB29: Selection of communication protocol
- FB7D: Block write data 1
- F871: Block write data 2
- F875 Block read data 1
- F875 : Block read data 2
- F877: Block read data 3
- F878 : Block read data 4
- F879: Block read data 5
- F880 : Free notes

E6581158

Refer to the COMMUNICATIONS EQUIPMENT USER'S MANUAL for details

#### Function

Function The VFS11 Series allows a data communication network to be constructed for exchanging data between a host computer or controller (referred to collectively as the computer) and the inverter by connecting an optional RS232C or RS485 communication conversion unit.

- The following functions are enabled by data communication between the computer and inverter
- (1) Monitoring inverter status (such as the output frequency, current, and voltage)
- (2) Sending RUN, STOP and other control commands to the inverter
- (3) Reading, editing and writing inverter parameter settings

<RS232C communication>

- Data can be exchanged between one computer and one inverter.
- <RS485 communication>
  - Data can be exchanged between the computer and each of the inverters connected.

 $\Rightarrow$  The following are available as common serial optional units:

- RS232C communications conversion cable (Model: RS20035)
- RS485 communication conversion unit with terminal board (Model: RS4001Z, RS4002Z)
   Communication cable (Model: CAB0011, 1m long; CAB0013, 3m long; or CAB0015, 5m long)
- Internal RS485 conversion circuit board (Model: RS4003Z)
   This product requires no interconnect cables, because it is of a built-in type.
- Note 1.: Limit the distance between the common serial optional units and the inverter to 5m.
  - 2.: Set Data transfer speed to 9600 bps or less if data exchange between RS4001Z and the inverter.

#### Communication function parameters (Common serial options)

The data transfer speed, parity type, inverter number, and communication error trip time can be set/edited by operation panel operation or communication function.

Title	Function	Adjustment range	Default setting
F800	Communication band speed	0: 1200bps 1: 2400bps 2: 4800bps 3: 9600bps 4: 19200bps	3
F80 (	Parity (Common serial)	0: NON (No parity) 1: EVEN (Even parity) 2: ODD (Odd parity)	1
F802	Inverter number	0-255	0
FBOJ	Communication error trip time	0: Desabled (*) 1-100 (s)	0
F805	Communication waiting time	0.00: Regular communication 0.01-2.00 (s)	0.00

Title	Function	Adjustment range	Default setting
F 8 0 6	Setting of master and slave inverters for communications between inverters	<ol> <li>Slave inverter (0 Hz command issued in case the master inverter fails)</li> <li>Slave inverter (Operation con- tinued in case the master inverter fails)</li> <li>Slave inverter (Emergency stop tripping in case the master inverter fails)</li> <li>Master inverter (transmission of frequency commands)</li> <li>Master inverter (transmission of output frequency signals)</li> </ol>	<b>)</b> 0
F8	Point # 1 setting	0-100 (%)	0
F8 12	Point # 1 frequency	0-500.0 (Hz)	0.0
F813	Point # 2 setting	0-100 (%)	100
F8 (4	Point # 2 frequency	0-500.0 (Hz)	50.0 (WP type) 60.0 (WN, AN type)
F829	Selection of communication protocol	0: Toshiba inverter protocol 1: ModbusRTU protocol	0
F810	Block write data 1	0: No selection 1: Command 1 2: Command 2	0
F871	Block write data 2	<ol> <li>Frequency command</li> <li>Output data on the terminal board</li> <li>Analog output for communica- tions</li> </ol>	0
F875	Block read data 1	0: No selection 1: Status information	0
F876	Block read data 2	2: Output frequency 3: Output current	0
F877	Block read data 3	4: Output voltage 5: Alarm information 6: PID feedback value	0
F878	Block read data 4	7: Input terminal board monitor 8: Output terminal board monitor	0
F879	Block read data 5	9: VIA terminal board monitor 10: VIB terminal board monitor	0
F880	Free notes	0-65535	0
* Disables		wethe tripped even if a seven principality	

Disabled ......... Indicates that the inverter will not be tripped even if a communication error occurs.

The inverter trips when a communication time-over occurs.

Trip...

nn nn In this case a trip information E - 5 flashes on and off on the operation panel.

E6581158

#### 6.22.2 Using the RS232C/RS485

#### Setting the communication functions


Setting commands and frequencies by communications has priority over sending commands from the operation panel or the terminal board. Command/frequency setting by communications can therefore be enabled, irrespective of the setting in the command mode ( $\begin{bmatrix} \Pi & \Pi & d \end{bmatrix}$ ) or the frequency setting mode ( $F \Pi & \Pi & d$ ). When inverters are connected to each others, however, in order for slave inverters to recognize frequency signals from the master inverter as frequency commands, the frequency setting mode selection 1 parameter ( $F \Pi & \Pi & d$ ) provided for each slave inverter needs to be set to 4 (serial communications). Refer to the COMMUNICATIONS EQUIPMENT USER'S MANUAL for details.


However, when the input terminal function selection parameter is set to 48: SC/LC (Serial/Local selection), the inverter can be operated with the settings of the command mode ( $\Box \Pi \Box d$ ) or the frequency setting mode ( $F \Pi \Box d$ ) by external input.


Item	Specifications
Transmission scheme	Half-duplex
Connection scheme	Centralized control
Synchronization scheme	Asynchronous
Transmission rate	Default: 9600 baud (parameter setting)
	Option: Either 1200, 2400, 4800, 9600, or 19200baud
Character transmission	ASCII code: JIS X 0201 8, 8-bit (fixed)
	Binary code: Binary, 8-bit (fixed)
Stop bit length	Inverter receiving: 1 bit, Inverter sending: 2 bits
Error detection	Parity: Even, Odd, or None selectable by parameter setting;
	check sum method
Character transmission format	Receiving: 11-bit, Sending: 12-bit
Order of bit transmission	Least significant bit first
Frame length	Variable to a maximum of 17 bytes

#### Transmission specifications

E658115






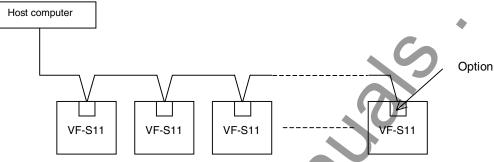

<Independent communication>

Perform computer-inverter connection as follows to send operation frequency commands from the host computer to inverter No. 3:

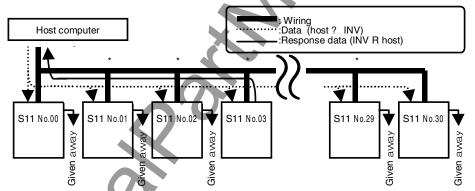

- "Given away": Only the inverter with the selected inverter number conducts data processing. All other inverters, even if they have received the data, give it away and stand by to receive the next data.
- \* : Use the terminal board to branch the cable.
- (1) Data is sent from the host computer.
- (2) Data from the computer is received at each inverter and the inverter numbers are checked.
- (3) The command is decoded and processed only by the inverter with the selected inverter number.
- (4) The selected inverter responds by sending the processing results, together with its own inverter number, to the host computer.
- (5) As a result, only the selected inverter starts operating in accordance with the operation frequency command by communicating independently.



6

E6581158

#### 6.23 Parameters for options

FB90 : Parameter for option 1

F 8 9 1: Parameter for option 2

FB92: Parameter for option 3

FBJJ: Parameter for option 4

FBJY: Parameter for option 5

These parameters can be used only when specific optional parts are installed. Do not use these parameters unless such parts are installed.

### 6.24 Permanent magnetic motors

F 9 10 : Step-out detection current level (for PM motors)

**9 1 1**: Step-out detection time (for PM motors)

#### Function

If the permanent magnet motor (PM motor) steps out and if the exciting current increases (it increases in such a case) and remains above the value set with  $F = I \square$  for the period of time set with F = I I, the inverter will judge the motor to be stepping out and trip it. At that time, the trip message " $5 \square \square L$ " is displayed.

Title	Function	Adjustment range	Default setting
F9 10	Step-out detection current level (for PM motors)	10 ~ 150(%)	100
F9	Step-out detection time (for PM motors)	0.0 ~ 25.0 [sec]	1.0

Note 1: When using an PM motor, consult your Toshiba dealer, since the inverter is not compatible with all types of PM motors.


Note 2: The inverter may fail to detect step-out in some cases, because it uses an electrical method to detect step-out. To avoid detection failures, you are recommended to install a mechanical step-out detector.

E6581158


# 7. Applied operation


# 7.1 Setting the operation frequency


Applied operation can be performed by selecting the inverter frequency setting. To make settings for applied operation, use the basic parameter  $F \sqcap \square \square d$  (selection of frequency setting mode 1), and the extended parameters  $F \supseteq \square \square$  (frequency priority selection) and  $F \supseteq \square \square$  (selection of frequency setting mode 2).

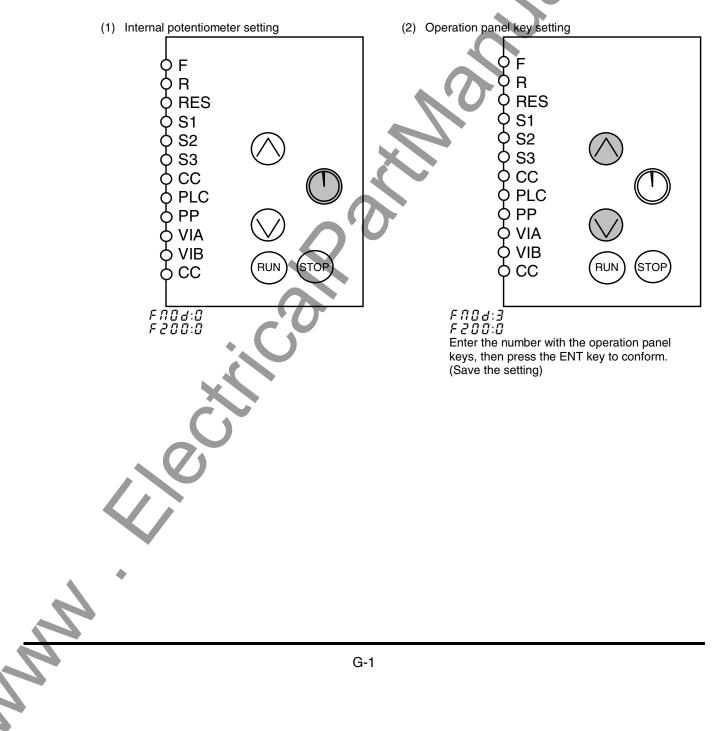

7

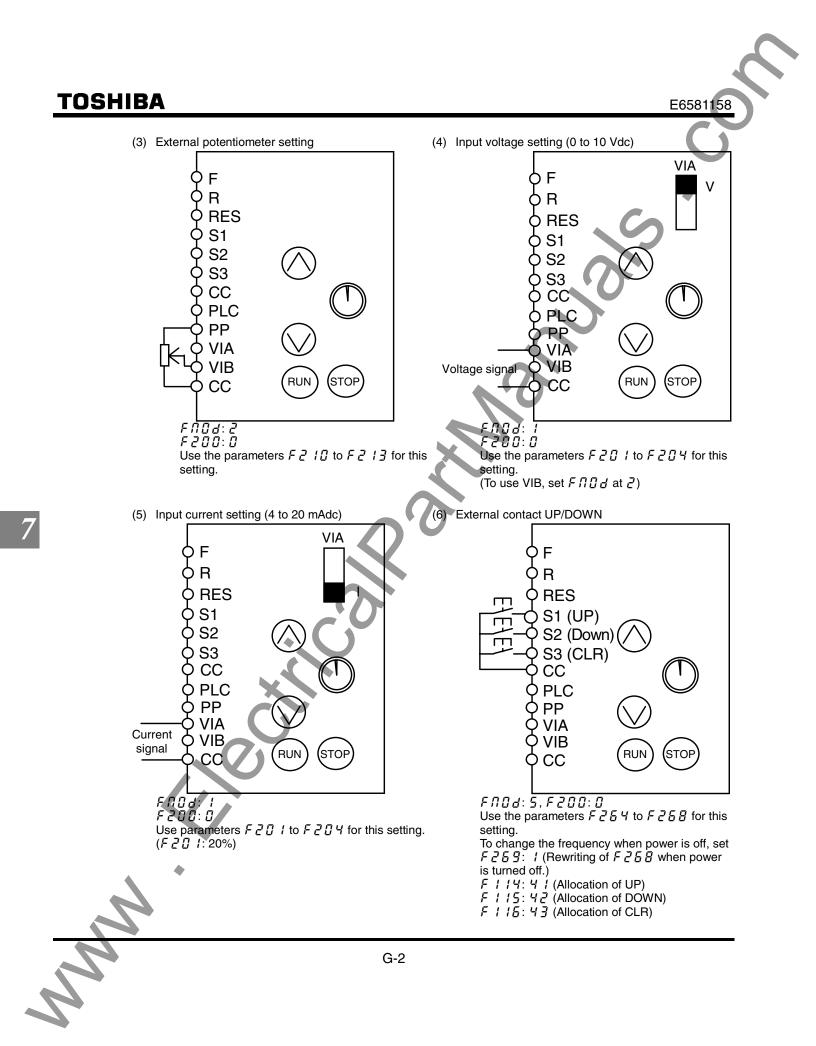

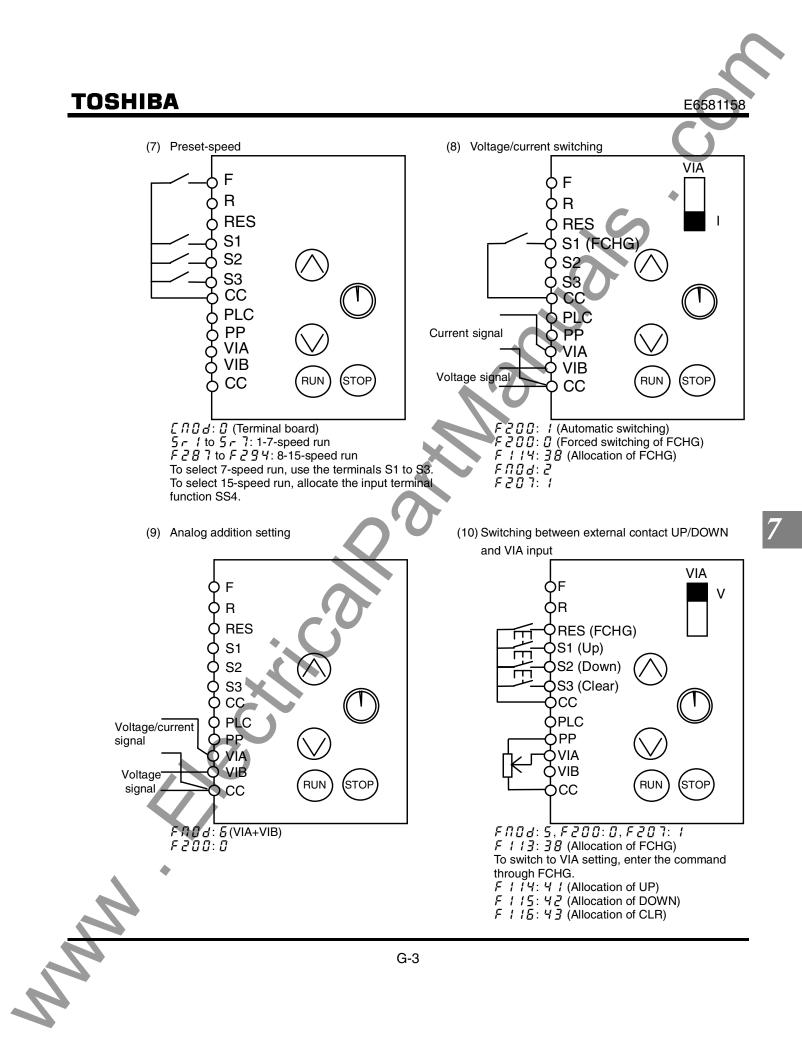


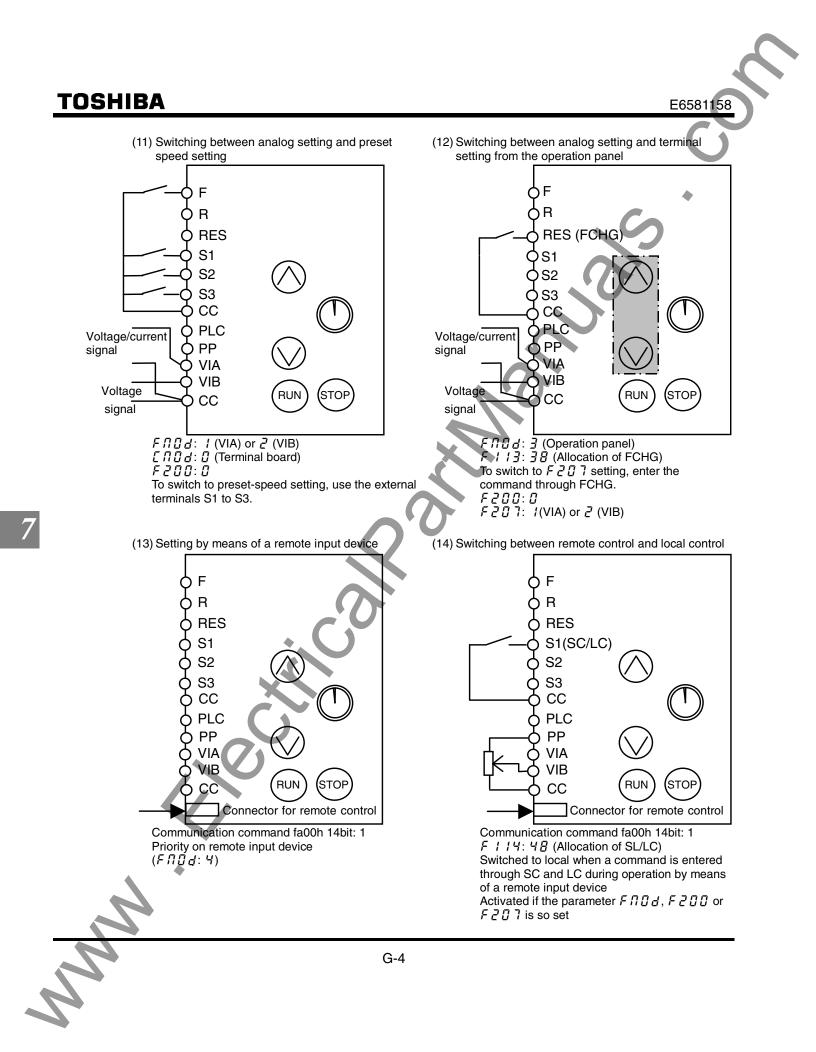

E6581158


# 7.2 Setting the operation mode

Applied operation can be performed by selecting the operation mode. To set the operation mode, use the basic parameter  $\begin{bmatrix} n & n \\ n & n \end{bmatrix} d$  (command mode selection) and the input terminal selection parameter.

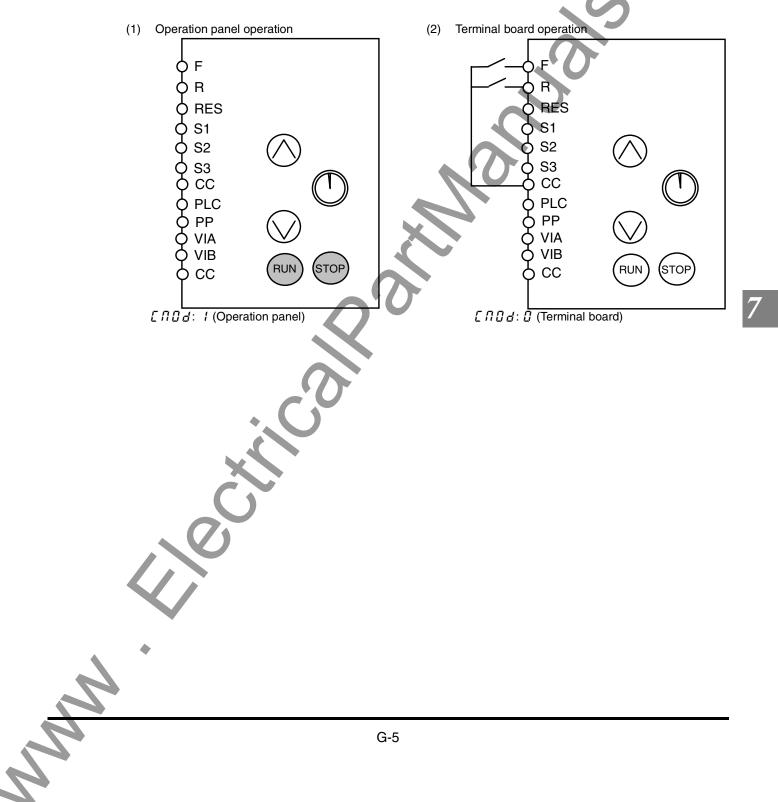

E6581158


(3) Three-wire operation (one-touch operation)You can carry out operation by simply pressing the ON/OFF button.

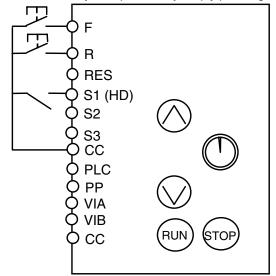

Selecting HD (operation holding) with the input terminal selection parameter

Select HD (operation holding) using the input terminal selection parameter, and turn HD on to get the inverter ready for operation or turn HD off to stop operation.


- Note 1 : To carry out three-wire operation, set *F* 1 1 to 1 (ST) and *F* 1 1 d to 0 (terminal board). Select one input terminal, and set to HD (operation holding). For example, set *F* 1 1 4 to 4 9 (operation holding) to assign HD to the S1 terminal.
- Note 2 : Even if each terminal is ON, any command entered through a terminal is ignored when power is turned on (to prevent the load from starting to move unexpectedly). Enable to turn the input terminal on at power on.
- Note 3 : When HD is OFF, any attempt to turn on F or R is ignored. When R is ON, you cannot start operation by turning on HD. Even when both R and HD are ON, you cannot start operation by turning on F. To start operation, turn off F and R temporarily, then turn them back on.
- Note 4: If select Jog run command during three-wire operation, inverter stops.
- Note 5 : Sending out a RUN signal during DC braking has no effect in stopping DC braking.

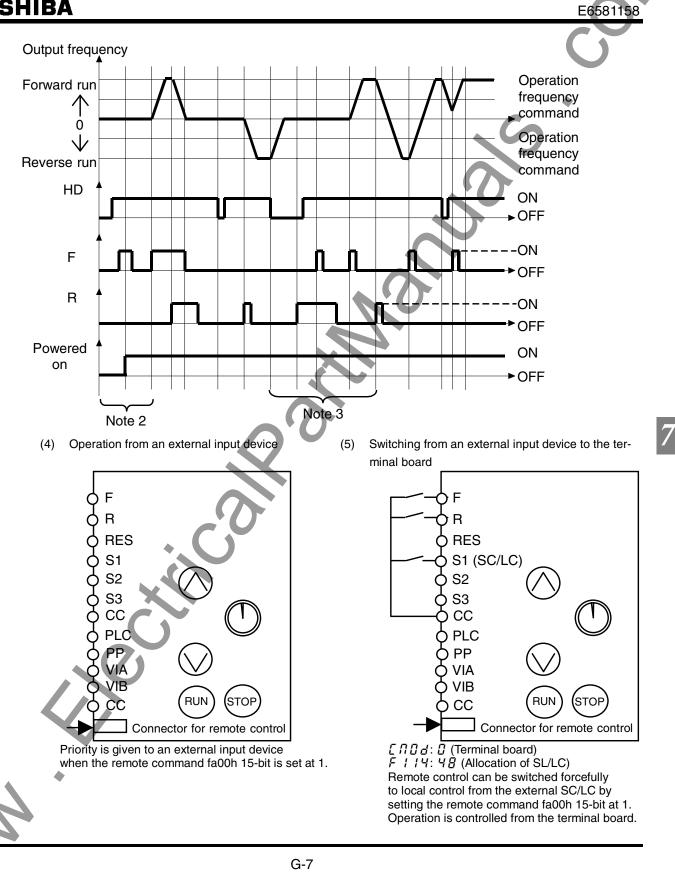

7

E6581158

(6) Switching from the operation panel to the terminal

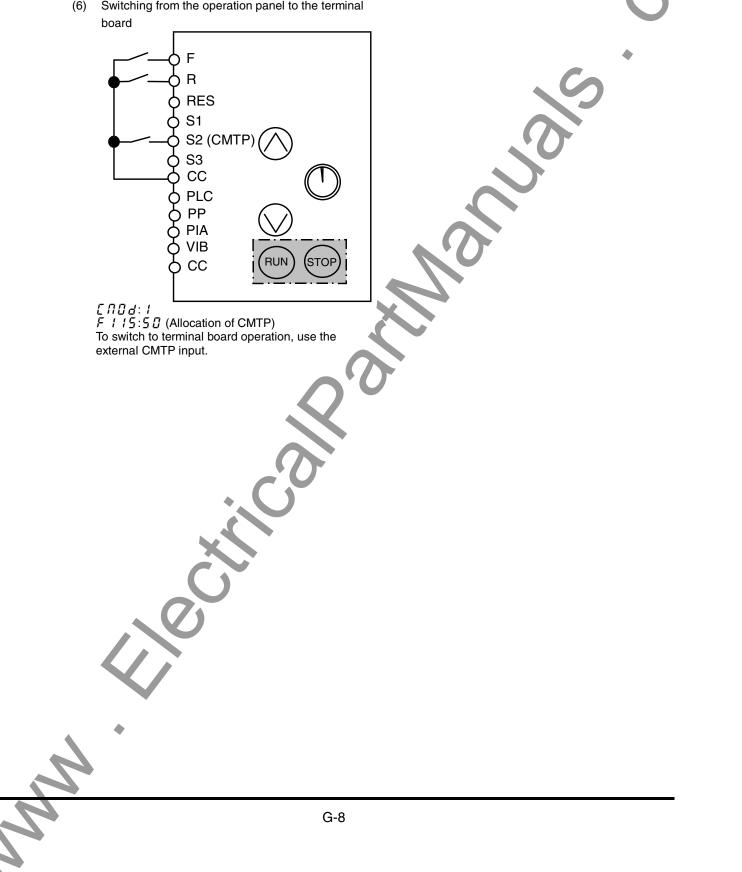

E6581158

8. M	onitorin	g the	opei	ration	n status					
8.1	8.1 Status monitor mode									
8.	8.1.1 Status monitor under normal conditions									
	In this mode, you can monitor the operation status of the inverter. To display the operation status during normal operation:									
	Press the MODE key twice. Setting procedure (eg. operation at 60Hz)									
	Item displayed	Key operated	LED display	Communi- cation No.	Description					
			600		The operation frequency is displayed (Operation at 60Hz). (When standard monitor display selection $F = 1 \prod$ is set at 0 [operation frequency])					
	Parameter setting mode	MODE	<i><b>RUH</b></i>		The first basic parameter "유답H" (history function) is displayed.					
	Direction of rota- tion	MODE	Fr-F	FE01	The direction of rotation is displayed. ( $F = -F$ : forward run, $F = -F$ : reverse run)					
Note 1	Operation fre- quency command		F 6 0.0	FE02	The operation frequency command value (Hz/free unit) is displayed.					
Note 2	Load current		C 80	FE03	The inverter output current (load current) (%/A) is displayed.					
Note 3	Input voltage		00 צ	FE04	The inverter input (DC) voltage (%/V) is displayed.					
	Output voltage		P 100	FE05	The inverter output voltage (%/V) is displayed.					
	Torque		9 68	FE18	The torque (%) is displayed.					
	Torque current		e 90	FE20	The torque current (%/A) is displayed.					
	Inverter load factor		םר ב	FE27	The inverter load factor (%) is displayed.					
	PBR cumulative load factor		r 50	FE25	The cumulative load factor of the braking resistor (%) is displayed.					
	Input power		h 80	FE29	The inverter input power (kW) is displayed.					
	Output power		H 75	FE30	The inverter output power (kW) is displayed.					
	Operation fre- quency		o 6 0.0	FD00	The operation frequency (Hz/free unit) is displayed.					

(Continued overleaf)

٠

And the second s

8

E6581158

	(Continued)				
	Item displayed	Key operated	LED display	Communi- cation No.	Description
Note 4	Input terminal			FE06	The ON/OFF status of each of the control signal input terminals (F, R, RES, S1, S2, S3, VIB and VIA) is displayed in bits. ON: / OFF: , VIA VIA S3 S2 S1
Note 5	Output terminal		0,11	FE07	The ON/OFF status of each of the control signal output terminals (RY, OUT and FL) is displayed in bits. ON: /
	CPU1 version		u 10 1	FE08	The version of the CPU1 is displayed.
	CPU2 version		u c 0 1	FE73	The version of the CPU2 is displayed.
8	Memory version		uEØ I	FE09	The version of the memory mounted is displayed.
	PID feedback		d 50	FE22	The PID feedback value is displayed. (Default set- ting: unit Hz)
	Frequency com- mand value (PID- computed)		B 10	FE15	The PID-computed frequency command value is displayed. (Default setting: unit Hz)
Note 6	Integral input power		h 85	FE76	The integrated amount of power (kWh) supplied to the inverter is displayed. (0.01=1kWh, 1.00=100kWh)
Note 6	Integral output power		H 75	FE77	The integrated amount of power (kWh) supplied from the inverter is displayed. (0.01=1kWh, 1.00=100kWh)
	Rated current		A 16.5	FE70	The rated current of the inverter (A) is displayed.
Note 7	Past trip 1		0[3⇔I	FE10	Past trip 1 (displayed alternately)
Note 7	Past trip 2		0 H ⇔2	FE11	Past trip 2 (displayed alternately)
Note 7	Past trip 3		0₽3⇔3	FE12	Past trip 3 (displayed alternately)
	(Continued overleaf)				
h	~			H-2	

Note 8	Item displayed Past trip 4 Life alarm nformation Cumulative operation time Default display		LED display nErr⇔4	Communi- cation No. FE13 FE79	Description          Past trip 4 (displayed alternately)         The ON/OFF status of each of the cooling fan, circuit board capacitor, main circuit capacitor or life alarm of cumulative operation time is displayed in bits.         ON: /         OFF: ,         Image: Cooling fan
Note 8 L i Note 9 C C I r	Life alarm nformation Cumulative operation time				The ON/OFF status of each of the cooling fan, cir- cuit board capacitor, main circuit capacitor or life alarm of cumulative operation time is displayed in bits. ON: { OFF: , Cumulative Cooling fan
Note 9	nformation Cumulative operation time		Π	FE79	cuit board capacitor, main circuit capacitor or life alarm of cumulative operation time is displayed in bits. ON: / OFF: , Cumulative Cooling fan
Note 9	operation time	( )			operation time Control circuit board capacitor Main circuit capacitor
[ r			E0.10	FE14	The cumulative operation time is displayed. (0.01=1 hour, 1.00=100 hours)
	mode	MODE	60.0	$\left  \right $	The operation frequency is displayed (Operation at 60Hz).
Ni Ni Ni Ni	ote 4: The number tion selection signed to the If $F I \square g =$ If $F I \square g =$ If $F I \square g =$ If $F I \square g =$ ote 5: The number selection) Th signed to it. If $F S S G =$ If $F S G G =$ If	of bars displ ). The bar re VIA or VIB J: Neither th i or $Z:$ The J or $V:$ Bot of bars displ be bar repredimentation J: The bar re cal amounts of r 3 seconds tion: 51) is the rds are displayed to occurred int an be displayed the and load of stimation.	layed varies of epresenting V terminal, resp he bar represent bar represent bar represent he bar represent he bar represent ayed varies of senting the O representing O of input and of or more when urned on or d layed in the for the past, the yed by pressing d based on the current specific in time increment	depending on r (IA or VIB is a pectively. enting VIA is n nting VIB is d resenting VIB is d resenting VIB depending on UT-NO termin OUT-NO is n power is off isplayed. power is off isplayed. plowing seque e message "r ing the ENT ne value calc ied using F E	isplayed. and VIB are displayed. the setting of $F \subseteq G \subseteq$ (logic output/pulse train output inal is displayed only when logic output function is as- isplayed.

E6581158

E6581158

## 8.1.2 Display of detailed information on a past trip

Details on a past trip (of trips 1 to 4) can be displayed, as shown in the table below, by pressing the **(ENT)** key when the trip record is selected in the status monitor mode.

Unlike the "Display of detailed trip information at the occurrence of a trip" in 8.2.2, details on a past trip can be displayed, even after the inverter is turned off or reset.

	Item displayed	Key operated	LED display	Description
Note 7	Past trip 1		0[  ⇔	Past trip 1 (displayed alternately)
	Continuous trips	ENT	n 2	The number of time the same trip occurred in succession is displayed. (Unit: times)
Note 1	Operation frequency		. 60.0	The operation frequency when the trip occurred is displayed.
	Direction of rotation		Fr-F	The direction of rotation when the trip occurred is displayed. (F - F : F) Forward run, $F - F : F)$ Reverse run
	Operation fre- quency command		F 8 0.0	The operation command value when the trip occurred is displayed.
Note 2	Load current		C 150	The inverter output current when the trip occurred is displayed. (%/A)
Note 3	Input voltage		A 150	The inverter input voltage (DC) when the trip occurred is displayed. (%/V).
	Output voltage		P 100	The inverter output voltage when the trip occurred is displayed. (%/V)
Note 4	Input terminal			The ON/OFF statuses of the control input terminals (F, R, RES, S1, S2, S3, VIB and VIA) are displayed in bits. ON: / OFF: / VIA - VIA - VIB - S3 - S2 - S1
Note 5	Output terminal		0 , 1 1	The ON/OFF statuses of the control output terminals (RY, OUT and FL) are displayed in bits. ON: { OFF: , FL
Note 9	Cumulative operation time		£ 8.5 6	The cumulative operation time when the trip occurred is displayed. (0.01=1 hour, 1.00=100 hours)
	Past trip 1	MODE	0[   ⇔	Press this key to return to past trip 1.

7

- E6581158
- Note 1: Press the  $(\blacktriangle)$  or  $(\blacktriangledown)$  key to change items displayed in the status monitor mode.
- Note 2: You can switch between % and A (ampere)/V (volt), using the parameter *F* 7 [] / (current/voltage unit selection).
- Note 3: The input (DC) voltage displayed is  $1\sqrt{2}$  times as large as the rectified d.c. input voltage.
- Note 4: The number of bars displayed varies depending on the setting of *F* 109 (analog input/logic input function selection). The bar representing VIA or VIB is displayed only when the logic input function is assigned to the VIA or VIB terminal, respectively.
  - If  $F : \square \square \square = \square$ : Neither the bar representing VIA nor the bar representing VIB is displayed.
  - If  $F I \square \square \square = I$  or 2: The bar representing VIA is not displayed.
    - The bar representing VIB is displayed.
  - If  $F : I \subseteq G = 3$  or Y: Both the bar representing VIA and VIB are displayed.
- Note 5: The number of bars displayed varies depending on the setting of *F* **5 5 9** (logic output/pulse train output selection). The bar representing the OUT-NO terminal is displayed only when logic output function is assigned to it.
  - If  $F \subseteq G \subseteq G$ : The bar representing OUT-NO is displayed.
  - If F & B B = I: The bar representing OUT-NO is not displayed.
- Note 6: The integrated amounts of input and output power will be reset to zero, if you press and hold down the (ENT) key for 3 seconds or more when power is off or when the input terminal function CKWH (input terminal function: 51) is turned on or displayed.
- Note 7: If there is no trip record, n E r is displayed.
- Note 9: The cumulative operation time increments only when the machine is in operation.

E6581158

# 8.2 Display of trip information

# 8.2.1 Trip code display

If the inverter trips, an error code is displayed to suggest the cause. Since trip records are retained, information on each trip can be displayed anytime in the status monitor mode.

#### Display of trip information

Display of trip		
Error code	Failure code	Description
n E r r (*)	0000	No error
0C I	0001	Overcurrent during acceleration
952	0002	Overcurrent during deceleration
053	0003	Overcurrent during constant speed operation
0 C L	0004	Load-side overcurrent during start-up
0 C R	0005	Armature-side overcurrent during start-up
ЕРНІ	0008	Input phase failure or exhaustion of main circuit capacitor
ЕРНО	0009	Output phase failure
0P (	000A	Overvoltage during acceleration
0 P 2	000B	Overvoltage during deceleration
0 P 3	000C	Overvoltage during constant-speed operation
OL I	000D	Inverter overload trip
012	000E	Motor overload trip
0Lr	000F	Dynamic braking register overload trip
0 H	0010	Overheating trip or thermal detector failure
Ε	0011	Emergency stop
EEPI	0012	E <sup>2</sup> PROM fault 1 (writing error)
EEP2	0013	FPROM fault 2 (initialization error) or power-off during the setting of とソア
ЕЕРЭ	0014	E <sup>2</sup> PROM fault 3 (reading error)
Err2	0015	Inverter RAM fault
Err3	0016	Inverter ROM fault
Erry	0017	CPU fault trip 1
Err5	0018	Communication error
Errl	001A	Current defector fault
ErrB	001B	Optional circuit board format error
UΕ	001D	Small-current trip
UP I	001E	Undervoltage trip
0E 🔶	0020	Over-torque trip
EF2	0022	Ground fault

(Continued overleaf)

(Continued)		
Error code	Failure code	Description
0C IP	0025	Overcurrent flowing in element during acceleration
0 <i>C 2 P</i>	0026	Overcurrent flowing in element during deceleration
0[3P	0027	Overcurrent flowing in element during constant-speed operation
Etni	0054	Auto-tuning error
ЕЕУР	0029	Inverter type error
0 H 2	002E	External thermal input
E - 18	0032	VIA cable break
E - 19	0033	Communication error between CPUs
6-20	0034	V/F control error
E-21	0035	CPU fault 2
SOUE	002F	Step-out (for PM motors only)

(Note) Past trip records (trip records retained or trips that occurred in the past) can be called up. (Refer to 8.1 "Status monitor mode" for the call-up procedure.)

- (Refer to 8.1 Status monitor mode for the call-up procedure.)
- (\*) Strictly speaking, this code is not an error code; this code is displayed to show the absence of error when the past trip monitor mode is selected.

#### 8.2.2 Display of trip information at the occurrence of a trip

At the occurrence of a trip, the same information as that displayed in the mode described in 8.1.1, "Status monitor under normal conditions," can be displayed, as shown in the table below, if the inverter is not turned off or reset. To display trip information after turning off or resetting the inverter, follow the steps described in 8.1.2, "Display of detailed information on a past trip,"

	Item displayed	Key operated	LED display	Communi- cation No.	Description
	Cause of trip	2	0 P 2		Status monitor mode (The code blinks if a trip oc- curs.) The motor coasts and comes to a stop (coast stop).
	Parameter setting mode	MODE	MODE RUH		The first basic parameter "유니서" (history function) is displayed.
	Direction of rotation	MODE	Fr-F	FE01	The direction of rotation at the occurence of a trip is displayed. ( $F - F$ : forward run, $F - r$ : reverser run).
Note 1	Operation fre- quency command		F60.0	FE02	The operation frequency command value (Hz/free unit) at the occurrence of a trip is displayed.
Note 2	Load current		[ 130	FE03	The output power of the inverter at the occurrence of a trip $(\%/A)$ is displayed.
Note 3	Input voltage		9141	FE04	The inverter input (DC) voltage (%/V) at the occurrence of a trip is displayed.
	Output voltage		P 100	FE05	The output voltage of the inverter at the occurrence of a trip (%/V) is displayed.

#### Example of call-up of trip information

(Continued overleaf)

E6581158

		(Continued)				$\mathbf{C}$
		Item displayed	Key operated	LED display	Communi- cation No.	Description
		Torque		960	FE18	The torque at the occurrence of a trip (%) is displayed.
		Torque current		c 90	FE20	The torque current (%/A) at the occurrence of a trip is displayed.
		Inverter load factor		L 70	FE27	The inverter load factor (%) at the occurrence of a trip is displayed.
		PBR cumulative load factor		r 50	FE25	The cumulative load factor (%) of the resistor at the occurrence of a trip is displayed.
		Input power		h 80	FE29	The inverter input power (kW) at the occurrence of a trip is displayed.
		Output power		H 75	FE30	The inverter output power (kW) at the occurrence of a trip is displayed.
		Operation fre- quency		o 6 0.0	FE00	The inverter output frequency (Hz/free unit) at the occurrence of a trip is displayed.
0	Note 4	Input terminal			FE06	The ON/OFF statuses of the control input termi- nals (F, R, RES, S1, S2, S3, VIB and VIA) are dis- played in bits.
ð	Note 5	Output terminal			FE07	The ON/OFF status of each of the control signal output terminals (RY, OUT and FL) at the occur- rence of a trip is displayed in bits.
		CPU1 version		J 10 1	FE08	The version of the CPU1 is displayed.
		CPU2 version		uc ()	FE73	The version of the CPU2 is displayed.
		Memory version		u E O I	FE09	The version of the memory mounted is displayed.
		PID feedback		d 50	FE22	The PID feedback value at the occurrence of a trip is displayed. (Default setting: unit Hz)
		Frequency com- mand value (PID- computed)		6 70	FE15	The PID-computed frequency command value at the occurrence of a trip is displayed. (Default setting: unit Hz)
h.	nn N	(Continued overleaf)			H-8	

A l

	Item displayed	Key operated	LED display	Communi- cation No.	Description
	Integral input power		h 85	FE76	The integrated amount of power (kWh) supplied to the inverter is displayed. (0.01=1kWh, 1.00=100kWh)
	Integral output power		H 75	FE77	The integrated amount of power (kWh) supplied from the inverter is displayed. (0.01=1kWh, 1.00=100kWh)
	Rated current		R 16.5	FE70	The inverter rated current (A) at the occurrence of a trip is displayed.
ote 7	Past trip 1		0P2⇔I	FE10	Past trip 1 (displayed alternately)
ote 7	Past trip 2		0 H ⇔2	FE11	Past trip 2 (displayed alternately)
ote 7	Past trip 3		[]₽]⇔3	FE12	Past trip 3 (displayed alternately)
ote 7	Past trip 4		nErr⇔4	FE13	Past trip 4 (displayed alternately)
ote 8	Life alarm infor- mation		Π	E E	The ON/OFF status of each of the cooling fan, cir- cuit board capacitor, main circuit capacitor or life alarm of cumulative operation time is displayed in bits. ON: { OFF: , CumulativeCooling fan operation timeControl circuit board capacitor
ote 9	Cumulative opera- tion time		EØ.10	FE14	The cumulative operation time is displayed. (0.01=1 hour, 1.00=100 hours)
	Default display mode	MODE	OP2		The cause of the trip is displayed.
	Note 1: Items displa	yed when a	trip occurs ca	n be changed	d by pressing 🔺 or 🛡 key.
	Note 2: You can swit selection).	tch between	% and A (am	pere)/V (volt)	), using the parameter $F \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $

- tion selection). The bar representing VIA or VIB is displayed only when the logic input function is as-
- signed to the VIA or VIB terminal, respectively.
- If  $F = I \square B = I$ : Neither the bar representing VIA nor the bar representing VIB is displayed. If  $F = I \square B = I$  or P: The bar representing VIA is not displayed.
  - - The bar representing VIB is displayed.
- If F : [] g = 3 or H: Both the bar representing VIA and VIB are displayed.
- Note 5: The number of bars displayed varies depending on the setting of F E E = G (logic output/pulse train output) selection). The bar representing the OUT-NO terminal is displayed only when logic output function is assigned to it.

E6

E6581158

- If  $F \subseteq G \subseteq G$ : The bar representing OUT-NO is displayed.
- If F = 5 = 1: The bar representing OUT-NO is not displayed.
- Note 6: The integrated amounts of input and output power will be reset to zero, if you press and hold down the ENT key for 3 seconds or more when power is off or when the input terminal function CKWH (input terminal function: 51) is turned on or displayed.
- Note 7: Past rip records are displayed in the following sequence: 1 (latest trip record) ⇔2⇔3⇔4 (oldest trip record). If no trip occurred in the past, the message "*n E r r*" will be displayed. Details on past trip record 1, 2, 3 or 4 can be displayed by pressing the ENT key when past trip 1, 2, 3 or 4 is displayed. For more information, see 8.1.2.
- Note 8: The life alarm is displayed based on the value calculated from the annual average ambient temperature, operation time and load current specified using *F* **5 3 4**. Use this alarm as a guide only, since it is based on a rough estimation.
- Note 9: The cumulative operation time increments only when the machine is in operation.
- Note 10: At the occurrence of a trip, maximum values are not always recorded and displayed for reasons of detecting time.

E6581158

# 9. Taking measures to satisfy the CE directive

### 9.1 How to cope with the CE directive

In Europe, the EMC directive and the low-voltage directive, which took effect in 1996 and 1997, respectively, make it obligatory to put the CE mark on every applicable product to prove that it complies with the directives. Inverters do not work alone but are designed to be installed in a control panel and always used in combination with other machines or systems which control them, so they themselves are not considered to be subject to the EMC directive. However, the CE mark must be put on all inverters because they are subject to the low-voltage directive.

The CE mark must be put on all machines and systems with built-in inverters because such machines and systems are subject to the above directives. It is the responsibility of the manufacturers of such final products to put the CE mark on each one. If they are "final" products, they might also be subject to machine-related directives. It is the responsibility of the manufacturers of such final products to put the CE mark on each one. In order to make machines and systems with built-in inverters compliant with the EMC directive and the low-voltage directive, this section explains how to install inverters and what measures should be taken to satisfy the EMC directive.

We have tested representative models with them installed as described later in this manual to check for conformity with the EMC directive. However, we cannot check all inverters for conformity because whether or not they conform to the EMC direction depends on how they are installed and connected. In other words, the application of the EMC directive varies depending on the composition of the control panel with a built-in inverter(s), the relationship with other built-in electrical components, the wiring condition, the layout condition, and so on. Therefore, please verify yourself whether your machine or system conforms to the EMC directive.

# 9.1.1 About the EMC directive

Inverters themselves are not subject to approval for CE marking.

The CE mark must be put on every final product that includes an inverter(s) and a motor(s). The VF-S11 series of inverters <u>complies with the EMC directive</u> if an EMI filter recommended by Toshiba is connected to it and wiring is carried out correctly.

■ EMC directive 89/336/EEC

The EMC standards are broadly divided into two categories; immunity- and emission-related standards, each of which is further categorized according to the operating environment of each individual machine. Since inverters are intended for use with industrial systems under industrial environments, they fall within the EMC categories listed in Table 1 below. The tests required for machines and systems as final products are almost the same as those required for inverters.

E6581158

#### Table 1 EMC standards

Category	Subcategory	Product stan- dards	Test standard and level
Emission	Radiation noise		CISPR/B/276/DC Class A Group 1
Emission	Transmission noise		CISPR/B/276/DC Class A Group 1
	Static discharge		IEC61000-4-2
	Radioactive radio-frequency mag-		IEC61000-4-3
	netic contactor field		
Immunity	First transient burst	IEC 61800-3	IEC61000-4-4
minumity	Lightning surge		IEC61000-4-5
	Radio-frequency induc-		IEC61000-4-6
	tion/transmission interference		
	Voltage dip/Interruption of power		JEC61000-4-11

Emission standards other than the above are applied to inverters when used in a commercial environment but not an industrial environment.

Category	Subcategory	Product stan- dards	Test standard and level
Emission	Radiation noise		CISPR/B/276/DC Class B Group 1
	Transmission noise	IEC 61800-3	CISPR/B/276/DC Class B Group 1

# 9.1.2 Measures to satisfy the EMC directive

This subsection explains what measures must be taken to satisfy the EMC directive.

- (1) Insert a recommended EMI filter (Table 2) on the input side of the inverter to reduce and transmission noise and radiation noise from input cables.
  - In the combinations listed in Table 2, Inverters are tested in these combination to see if they comply with transmission noise standards. For inverters used in Japan, it is recommended to use the NF series of noise filters.

Table 2 lists noise filters recommended for the inverters.

9

E658115

#### Table 2 Combinations of inverter and EMI filter

Three-phase 200V class

Three-phase 20	10 V CI833				
	Combination of inverter an	d filter			
Inverter	Transmission noise CISPR/B/276/DC Class A Group 1 Applicable filters	Transmission noise EN55011 Class B Group 1 Applicable filters			
	(Length of motor connecting cable: Max. 5 m)	(Length of motor connecting cable: Max. 1 m)			
VFS11-2002PM	EMFS11	-2007AZ			
VFS11-2004PM	EMFS11	-2007AZ			
VFS11-2005PM	EMFS11	-2007AZ			
VFS11-2007PM	EMFS11	-2007AZ			
VFS11-2015PM	EMFS11	-4015BZ			
VFS11-2022PM	EMFS11	-4015BZ			
VFS11-2037PM	EMFS11	-4025CZ			
VFS11-2055PM	EMFS11-4047DZ				
VFS11-2075PM	EMFS11-4047DZ				
VFS11-2110PM	EMFS11-2083EZ				
VFS11-2150PM	EMFS11	-2083EZ			

#### Three-phase 400V class

	Combination of inverter and filter					
Inverter	Transmission noise	Transmission noise	Transmission noise			
	CISPR/B/276/DC Class A Group 1	EN55011 Class B Group 1	EN55011 Class A Group 1			
	Applicable filters	Applicable filters	Applicable filters			
	(Length of motor connecting cable:	(Length of motor connecting cable:	(Length of motor connecting cable:			
	Max. 5 m)	Max. 20 m)	Max. 50 m)			
VFS11-4004PL	With a built-in filter	EMFS11	-4015BZ			
VFS11-4007PL	With a built-in filter	EMFS11-4015BZ				
VFS11-4015PL	With a built-in filter	EMFS11-4015BZ				
VFS11-4022PL	With a built-in filter	EMFS11	-4025CZ			
VFS11-4037PL	With a built-in filter	EMFS11	-4025CZ			
VFS11-4055PL	With a built-in filter	EMFS11	-4047DZ			
VFS11-4075PL	With a built-in filter	EMFS11	-4047DZ			
VFS11-4110PL	With a built-in filter	EMFS11-4049EZ				
VFS11-4150PL	With a built-in filter	EMFS11-4049EZ				
Single-phase 2	Single-phase 200V class					


#### Single-phase 200V class

٠

	Combination of inverter and filter						
Inverter	Transmission noise	Transmission noise	Transmission noise				
	CISPR/B/276/DC Class A Group 1	EN55011 Class B Group 1	EN55011 Class A Group 1				
	Applicable filters	Applicable filters	Applicable filters				
	(Length of motor connecting cable:	(Length of motor connecting cable:	(Length of motor connecting cable:				
	Max. 5 m)	Max. 20 m)	Max. 50 m)				
VFS11S-2002PL	With a built-in filter	EMFS115	S-2009AZ				
VFS11S-2004PL	With a built-in filter	EMFS115	S-2009AZ				
VFS11S-2007PL	With a built-in filter	EMFS11	EMFS11S-2009AZ				
VFS11S-2015PL	With a built-in filter	EMFS11S	S-2016BZ				
VFS11S-2022PL	S-2022PL With a built-in filter EMFS11S-2022CZ						
THOMO EXELLE		Enil erit					

Use shielded power cables, such as inverter output cables, and shielded control cables. Route the cables and wires so as to minimize their lengths. Keep a distance between the power cable and the control cable and between the input and output wires of the power cable. Do not route them in parallel or bind them together, instead cross at right angle.

- (3) Install the inverter and the filter on the same metal plate. It is more effective in limiting the radiation noise to install the inverter in a sealed steel cabinet. Using wires as thick and short as possible, earth the metal plate and the control panel securely with a distance kept between the earth cable and the power cable.
- (4) Route the EMI filter input and output wires apart from each other.
- (5) To suppress radiation noise from cables, ground all shielded cables through a noise cut plate. It is effective to earth shielded cables in the vicinity of the inverter, cabinet and filter (within a radius of 10cm from each of them). Inserting a ferrite core in a shielded cable is even more effective in limiting the radiation noise.
- (6) To further limit the radiation noise, insert a zero-phase reactor in the inverter output line and insert ferrite cores in the earth cables of the metal plate and cabinet.

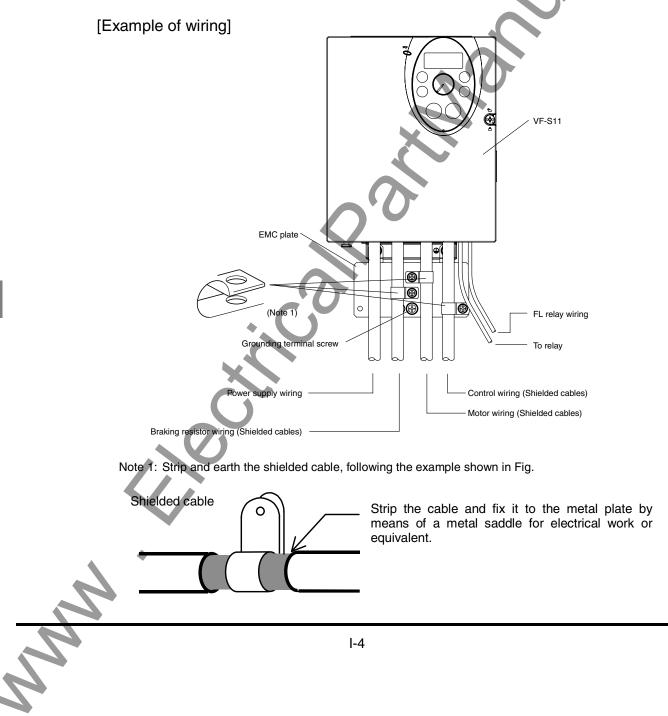

E6581158

### 9.1.3 About the low-voltage directive

The low-voltage directive provides for the safety of machines and systems. All Toshiba inverters are CE-marked in accordance with the standard EN 50178 specified by the low-voltage directive, and can therefore be installed in machines or systems and imported without problem to European countries.

Applicable standard: EN50178

Electronic equipment for use in power installations Electronic equipment for use in power installations

Pollution level: 2 (5.2.15.2)

Overvoltage category: 3


200V class - 3.0mm (5.2.16.1) 400V class - 5.5mm (5.2.16.1)

EN 50178 applies to electrical equipment intended specially for use in power installations, and sets out the conditions to be observed for electric shock prevention when designing, testing, manufacturing and installing electronic equipment for use in power installations.

### 9.1.4 Measures to satisfy the low-voltage directive

When incorporating the inverter into a machine or system, it is necessary to take the following measures so that the inverter satisfies the low-voltage directive.

- (1) <u>Install the inverter in a cabinet and ground the inverter enclosure.</u> When doing maintenance, be extremely careful not to put your fingers into the inverter through a wiring hole and touch a charged part, which may occur depending on the model and capacity of the inverter used.
- (2) Do not connect two or more wires to the main circuit earth terminal of the inverter. If necessary, install an additional earth terminal on the metal plate on which the inverter is installed and connect another cable to it. Or install the EMC plate (attached as standard) and another cable connect to earth terminal on the EMC plate. Refer to the table 10.1 for earth cable sizes.
- (3) Install a non-fuse circuit breaker or a fuse on the input side of the inverter.



# 10. Peripheral devices

	Danger
0	<ul> <li>When using switchgear for the inverter, it must be installed in a cabinet.</li> <li>Failure to do so can lead to risk of electric shock and can result in death or serious injury.</li> </ul>
Mandatory	
Ð	Connect earth cables securely.     Failure to do so can lead to risk of electric shock or fire in case of a failure or short-circuit or electric leak.
Prohibited	

# 10.1 Selection of wiring materials and devices

	Capacity of			Wire size (See I	Note 4)	
Voltage class	applicable motor (kW)	Inverter model	Main circuit (mm²) (See Note 1.)	DC reactor (optional) (mm <sup>2</sup> )	Braking resistor/ Braking unit (optional) (mm <sup>2</sup> )	Earth cable (mm <sup>2</sup> )
	0.2	VFS11S-2002PL	2.0	2.0	2.0	3.5
Ola al a a b a a a	0.4	VFS11S-2004PL	2.0	2.0	2.0	3.5
Single-phase 200V class	0.75	VFS11S-2007PL	2.0	2.0	2.0	3.5
2000 Class	1.5	VFS11S-2015PL	2.0	2.0	2.0	3.5
	2.2	VFS11S-2022PL	2.0	3.5	2.0	3.5
	0.2	VFS11-2002PM	2.0	1.25	2.0	3.5
	0.4	VFS11-2004PM	2.0	1.25	2.0	3.5
	0.55	VFS11-2005PM	2.0	2.0	2.0	3.5
	0.75	VFS11-2007PM	2.0	2.0	2.0	3.5
Three-phase	1.5	VFS11-2015PM	2.0	2.0	2.0	3.5
200V class	2.2	VFS11-2022PM	2.0	2.0	2.0	3.5
2000 01233	3.7	VFS11-2037PM	5.5	5.5	2.0	3.5
	5.5	VFS11-2055PM	5.5	8.0	5.5	5.5
	7.5	VFS11-2075PM	8.0	14	5.5	8.0
	11	VFS11-2110PM	14	14	5.5	14
	15	VFS11-2150PM	14×2	14×2	5.5	22
	0.4	VFS11-4004PL	2.0	2.0	2.0	3.5
	0.75	VFS11-4007PL	2.0	2.0	2.0	3.5
	1.5	VFS11-4015PL	2.0	2.0	2.0	3.5
Three-phase	2.2	VFS11-4022PL	2.0	2.0	2.0	3.5
400V class	3.7	VFS11-4037PL	2.0	2.0	2.0	3.5
	5.5	VFS11-4055PL	2.0	3.5	2.0	3.5
	7.5	VFS11-4075PL	3.5	5.5	2.0	3.5
	11	VFS11-4110PL	5.5	8.0	2.0	5.5
	15	VFS11-4150PL	8.0	14	2.0	8.0


Note 1: Sizes of the wires connected to the input terminals R, S and T and the output terminals U, V and W when the length of each wire does not exceed 30m.

Note 2: For the control circuit, use shielded wires 0.75 mm<sup>2</sup> or more in diameter.

Note 3: For grounding, use a cable with a size equal to or larger than the above.

Note 4: The wire sizes specified in the above table apply to HIV wires (cupper wires shielded with an insulator

with a maximum allowable temperature of 75°C) used at an ambient temperature of 50°C or less.

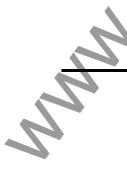

E6581

■ Selection of wiring devices										
Voltage class	Capacity of applicable motor (kW)	Inverter model	Non-fuse circuit breaker (MCCB) Note 4)		Magnetic contactor (MC)		Overload relay (THR)		Earth leakage breaker (ECLB)	
			Rated current (A)	Type Note1)	Rated current (A)	Type Note1)	Adjusted current (A) (For reference)	Type Note1)	Rated current (A)	Type Note1)
Single-phase 200V class	0.2	VFS11S-2002PL	10	NJ30N	11	LC1D096	1.3	LR3D066	. 10	NJV50E
	0.4	VFS11S-2004PL	15	NJ30N	11	LC1D096	2.3	LR3D076	15	NJV50E
	0.75	VFS11S-2007PL	20	NJ30N	11	LC1D096	3.6	LR3D086	20	NJV50E
	1.5	VFS11S-2015PL	30	NJ30N	18	LC1D186	6.8	LR3D126	30	NJV50E
	2.2	VFS11S-2022PL	40	NJ50E	35	LC1D326	9.3	LR3D146	40	NJV50E
Three-phase 200V class	0.2	VFS11-2002PM	5	NJ30N	11	LC1D096	1.3	LR3D066	5	NJV50E
	0.4	VFS11-2004PM	5	NJ30N	11	LC1D096	2.3	LR3D076	5	NJV50E
	0.55	VFS11-2005PM	10	NJ30N	11	LC1D096	2.7	LR3D086	10	NJV50E
	0.75	VFS11-2007PM	10	NJ30N	11	LC1D096	3.6	LR3D086	10	NJV50E
	1.5	VFS11-2015PM	15	NJ30N	11	LC1D096	6.8	LR3D126	15	NJV50E
	2.2	VFS11-2022PM	20	NJ30N	13	LC1D126	9.3	LR3D146	20	NJV50E
	3.7	VFS11-2037PM	30	NJ30N	26	LC1D256	15	LR3D216	30	NJV50E
	5.5	VFS11-2055PM	50	NJ50E	35	LC1D326	22	LR3D226	50	NJV50E
	7.5	VFS11-2075PM	60	NJ100F	50	C50J	28	LR3D326	60	NJV60F
	11	VFS11-2110PM	100	NJ100F	65	C65J	44	T65J	100	NJV100F
	15	VFS11-2150PM	125	NJ225F	80	C80A	57	T65J	125	NJV225F
Three-phase 400V class (Note 5)	0.4	VFS11-4004PL	5	NJ30N	9	LC1D096	1.0	LR3D066	5	NJV50E
	0.75	VFS11-4007PL	5	NJ30N	9	LC1D096	1.6	LR3D076	5	NJV50E
	1.5	VFS11-4015PL	10	NJ30N	9	LC1D096	3.6	LR3D086	10	NJV50E
	2.2	VFS11-4022PL	15	NJ30N	9	LC1D096	5.0	LR3D106	15	NJV50E
	3.7	VFS11-4037PL	20	NJ30N	13	LC1D126	6.8	LR3D126	20	NJV50E
	5.5	VFS11-4055PL	30	NJ30N	17	LC1D186	11	LR3D166	30	NJV50E
	7.5	VFS11-4075PL	30	NJ30N	25	LC1D256	15	LR3D216	30	NJV50E
	11	VFS11-4110PL	50	NJ50E	-33	LC1D326	22	LR3D226	50	NJV50E
	15	VFS11-4150PL	60	NJ100F	48	C50J	28	LR3D326	60	NJV100F

Note 1: Produced by Schneider Toshiba electric corporation.

Note 2: Be sure to attach a surge killer to the exciting coil of the relay and the magnetic contactor.

- Note 3: When using the auxiliary contacts 2a of the magnetic contactor MC for the control circuit, connect the contacts 2a in parallel to increase reliability.
- Note 4: Select an MCCB with a current breaking rating appropriate to the capacity of the power supply, because short-circuit currents vary greatly depending on the capacity of the power supply and the condition of the wiring system. The MCCB, MC, THR and ECLM in this table were selected, on the assumption that a power supply with a normal capacity would be used.
- Note 5: 400V class: For the operation and control circuits, regulate the voltage at 200V or less with a step-down transformer.





# 10.2 Installation of a magnetic contactor


If using the inverter without installing a magnetic contactor (MC) in the primary circuit, use an MCCB (with a power cutoff device) to open the primary circuit when the inverter protective circuit is activated. If using a braking resistor or braking resistor unit, install a magnetic contactor (MC) or non-fuse circuit breaker with a power cutoff device to the power supply of the inverter, so that the power circuit opens when the failure detection relay (FL) in the inverter or the external overload relay is activated.

#### Magnetic contactor in the primary circuit

To detach the inverter from the power supply in any of the following cases, insert a magnetic contactor (primary-side magnetic contactor) between the inverter and the power supply.

- (1) If the motor overload relay is tripped
- (2) If the protective detector (FL) built into the inverter is activated
- (3) In the event of a power failure (for prevention of auto-restart)
- (4) If the resistor protective relay is tripped when a braking resistor or braking resistor unit is used


When using the inverter with no magnetic contactor (MC) on the primary side, install a non-fuse circuit breaker with a voltage tripping coil instead of an MC and adjust the circuit breaker so that it will be tripped if the protective relay referred to above is activated. To detect a power failure, use an undervoltage relay or the like.

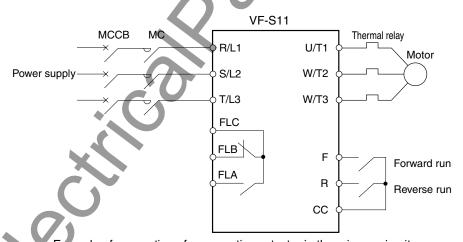

Example of connection of a magnetic contactor in the primary circuit

#### Notes on wiring

- When frequently switching between start and stop, do not use the magnetic contactor on the primary side as an on-off switch for the inverter.
  - Instead, stop and start the inverter by using terminals F and CC (forward run) or R and CC (reverse run).
- Be sure to attach a surge killer to the exciting coil of the magnetic contactor (MC).

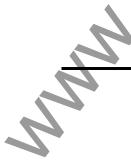

E6581158

#### Magnetic contactor in the secondary circuit

A magnetic contactor may be installed on the secondary side to switch controlled motors or supply commercial power to the load when the inverter is out of operation.

#### Notes on wiring

- Be sure to interlock the magnetic contactor on the secondary side with the power supply to prevent commercial power from being applied to the inverter output terminals.
- When installing a magnetic contactor (MC) between the inverter and the motor, avoid turning the magnetic contactor on or off during operation. Turning the magnetic contactor on or off during operation causes a current to rush into the inverter which could lead to malfunction.


## 10.3 Installation of an overload relay

- The VF-S11 inverter has an electronic-thermal overload protective function. In the following cases, however, an overload relay suitable for the adjustment of the motor electronic thermal protection level (*L H r*) and appropriate to the motor used should be installed between the inverter and the motor.
  - When using a motor with a current rating different to that of the corresponding Toshiba general-purpose
    motor
  - When operating a single motor with an output smaller than that of the applicable standard motor or more than one motor simultaneously.
- 2) When using the VF-S11 inverter to operate a constant-torque motor, such as the Toshiba VF motor, adjust the protection characteristic of the electronic thermal protection unit ( $\mathcal{D} \downarrow \mathcal{R}$ ) to the VF motor use.
- 3) It is recommended to use a motor with a thermal relay embedded in the motor coil to give sufficient protection to the motor, especially when it runs in a low-speed range.

<u>E6581158</u>

# 10.4 Optional external devices

The following external devices are optionally available for the VF-S11 series of inverters.

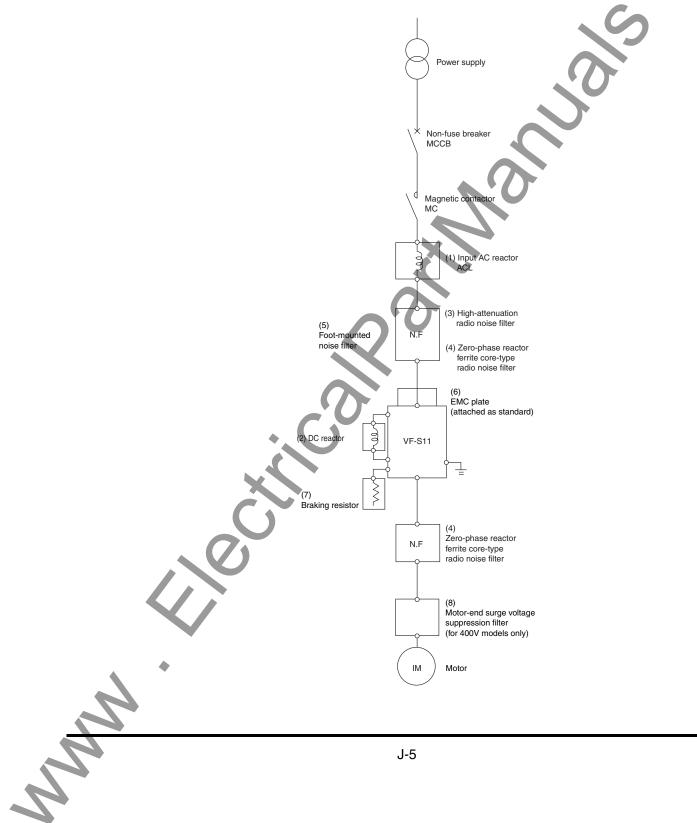

INO		Device			Funct	ion and purpos	se	
No.	Inp	ut AC reactor	sur mo	ge on the inverter re and 10 times o	input power factor, power source side r more than the invo uch as a thyristor ur	reduce the har . Install when t erter capacity of	monics, and su he power capac or when a distor	ted wave
				ne distribution sys				
(1)						Eff	ect of harmonic	
				Reactor type	Improvement of power factor	200V-3.7kW or less	Other model	Suppression of external surge
				nput AC reactor	0	0	0	0
				C reactor	O Large fective. O : effective	O e. x : ineffective	O Large	×
(2)	DC	reactor	Imp inve rea * A to ir E	proves the power erter requires high ctor effective for e on inverter unit of conform "Guide overter having an Electrical Manufac	factor more than the reliability, it is reco external surge supp 200V-3.7kW or less s of limits for harmo input current up to sturers' Association.	e input reactor. ommended to u ression. s is connected onics current er and including 2	When the facili ise the DC reac to a reactor sele nissions on ger 20A per phase"	tor with an input ected on page J-8 neral purpose by the Japan
(3)	tion filter	High-attenuation filter (LC filter) NF type manufactured by Soshin Electric Co., Ltd.	mo the: • E • Ir • F 1 • L	dels have a built- se filters if necess iffective to prever hstall on the input Provided with wide 0MHz. Jse when equipm	are not necessary in EMI noise filter, c sarily of noise reduc at interference in au side of the inverter e-range attenuation ent readily affected	onforming to C tion move and dio equipment characteristics by noise is ins	Class A, as stand more. used near the in from AM radio talled in the per	dard. But install nverter. bands to near ipheral area.
(4)	Radio noise reduction	Zero-phase reactor (inductive filter) ferrite core-type by Soshin Electric Co., Ltd.	• E • F b	ffective in noise rovided with atte ands to 10MHz.	it interference in au reduction on both in nuation characterist neasures, insert on	put and output ics of several o	sides of the inv dB in frequencie	erter. es from AM radio
(5)	Radio	Foot-mounted noise filter	Hig the qui 3-p	h-attenuation EM inverter. The inst	I noise filter requirir allation of this filter to comply with the I	ng only small s reduces transr following stan : CISPR/B/27 (Length of m : EN55011 Cl	pace; mounted nission noise be Idard. 6/DC Class A G Iotor connecting ass B Group 1	on the rear side o elow the level re-
(6)		C plate ached as standard)			connect shielded e from external device	arth wires from		
(7)		king resistor	Use the pov	e when rapid deco deceleration time ver generation bra	eleration or stop is f with large load. Th aking.	requently requ is resistor con	sumes regenera	s desired to reduc ative energy durin
(8)		rge suppression filter OV class only)	Use deg	e an insulation-reir rading motor insu	<u>With (resistor + prot</u> nforced motor or inst lation caused by sur r use of a 400V class	all the surge vo ge voltage gen	ltage restraint fil eration dependir	
(9)	Co kit	nduit pipe attachment			for conformance to			
(10)		l rail kit	Ava	ilable for 1.5kW	models and lower. (	Model: DIN003	3Z, DIN005Z)	
(		7						
1	J				J-6			
					- •			

No.	Device	Function and purpose
(11)	Parameter writer Note 1)	Use this unit for batch read, batch copy, and batch writing of setting parameters. (Model: PWU001Z)
(12)	Extension panel Note 1)	Extended operation panel kit provided with LED indication section, RUN/STOP key, UP/DOWN key, Monitor key, and Enter key. (Model: RKP001Z)
(13)	Internal RS485 communication circuit board	This unit allows you to connect a personal computer to multiple inverters for data transfer. (Model: RS4003Z)
(14)	RS485 communication converter unit Note 1)	This unit allows you to connect a personal computer to multiple inverters for data transfer. (Models: RS4001Z, RS4002Z)
(15)	RS232C communication converter unit	This unit allows you to connect a personal computer to inverters for data communications. (Model: RS20035)
(16)	Remote panel	This panel includes a frequency meter, a frequency regulator and RUN/STOP (forward/reverse run)switches. (Model: CBVR-7B1)
(17)	Application control unit	The AP series of control units is available for the inverter to allow it to perform various kinds of applied control. Contact your Toshiba representative for further information.

Note 1: Dedicated cables are needed to connect inverters to a personal computer.

Cable models: CAB0011 (1m)

CAB0013 (3m)

CAB0015 (5m)

Table for selection of optional external devices

Voltage class	Capacity of applicable motor (kW)	Inverter model	Input AC reactor (Note 2)	DC reactor (Note 2)		eduction filter Core type (See Note 1.)	Braking resistor	Motor-end surge voltage suppression filter	EMC plate (Note 3)	Foot-mounted filter	DIN adapter
0. 1	0.2	VFS11S-2002PL	PFL-2002S	DCLS-2002		RC5078	PBR-2007	-	EMP003Z	EMFS11S-2009AZ	DIN003Z
Single-	0.4	VFS11S-2004PL	PFL-2005S	DCL-2007		RC5078	PBR-2007	-	EMP003Z	EMFS11S-2009AZ	DIN003Z
phase 200V	0.75	VFS11S-2007PL	PFL-2011S	DCL-2022		RC5078	PBR-2007	-	EMP003Z	EMFS11S-2009AZ	DIN003Z
class	1.5	VFS11S-2015PL	PFL-2018S	DCL-2037	ŀ	RC5078	PBR-2022	-	EMP004Z	EMFS11S-2016BZ	DIN005Z
01000	2.2	VFS11S-2022PL	PFL-2018S	DCL-2037		RC5078	PBR-2022	-	EMP004Z	EMFS11S-2022CZ	-
	0.2	VFS11-2002PM	PFL-2001S	DCL-2002	NF3005A-MJ	RC5078	PBR-2007		EMP003Z	EMFS11-2007AZ	DIN003Z
	0.4	VFS11-2004PM	PFL-2005S	DCL-2007	NF3005A-MJ	RC5078	PBR-2007	-	EMP003Z	EMFS11-2007AZ	DIN003Z
	0.55	VFS11-2005PM	PFL-2005S	DCL-2007	NF3005A-MJ	RC5078	PBR-2007	-	EMP003Z	EMFS11-2007AZ	DIN003Z
	0.75	VFS11-2007PM	PFL-2005S	DCL-2007	NF3005A-MJ	RC5078	PBR-2007	-	EMP003Z	EMFS11-2007AZ	DIN003Z
Single-	1.5	VFS11-2015PM	PFL-2011S	DCL-2022	NF3015A-MJ	RC5078	PBR-2022	-	EMP004Z	EMFS11-4015BZ	DIN005Z
Phase 200V	2.2	VFS11-2022PM	PFL-2011S	DCL-2022	NF3015A-MJ	RC5078	PBR-2022	-	EMP004Z	EMFS11-4015BZ	DIN005Z
class	3.7	VFS11-2037PM	PFL-2018S	DCL-2037	NF3020A-MJ	RC5078	PBR-2037	-	EMP004Z	EMFS11-4025CZ	-
01000	5.5	VFS11-2055PM	PFL-2025S	DCL-2055	NF3030A-MJ	RC9129	PBR3-2055	-	EMP005Z	EMFS11-4047DZ	-
	7.5	VFS11-2075PM	PFL-2050S	DCL-2110	NF3040A-MJ	RC9129	PBR3-2075	-	EMP005Z	EMFS11-4047DZ	-
	11	VFS11-2110PM	PFL-2050S	DCL-2110	NF3050A-MJ	RC9129	PBR3-2110	-	EMP006Z	EMFS11-2083EZ	-
	15	VFS11-2150PM	PFL-2100S	DCL-2220	NF3080A-MJ	RC9129	PBR3-2150		EMP006Z	EMFS11-2083EZ	-
	0.4	VFS11-4004PL	PFL-4012S	DCL-2007	NF3010C-MJ	RC5078	PBR-2007	MSF-4015Z	EMP004Z	EMFS11-4015BZ	DIN005Z
	0.75	VFS11-4007PL	PFL-4012S	DCL-2007	NF3010C-MJ	RC5078	PBR-2007	MSF-4015Z	EMP004Z	EMFS11-4015BZ	DIN005Z
	1.5	VFS11-4015PL	PFL-4012S	DCL-2007	NF3010C-MJ	RC5078	PBR-2007	MSF-4015Z	EMP004Z	EMFS11-4015BZ	DIN005Z
Single-	2.2	VFS11-4022PL	PFL-4012S	DCL-2022	NF3010C-MJ	RC5078	PBR-2007	MSF-4037Z	EMP004Z	EMFS11-4025CZ	-
Phase 400V	3.7	VFS11-4037PL	PFL-4012S	DCL-2022	NF3010C-MJ	RC5078	PBR-4037	MSF-4037Z	EMP004Z	EMFS11-4025CZ	-
400V class	5.5	VFS11-4055PL	PFL-4025S	DCL-4110	NF3015C-MJ	RC9129	PBR3-4055	MSF-4075Z	EMP005Z	EMFS11-4047DZ	-
01055	7.5	VFS11-4075PL	PFL-4025S	DCL-4110	NF3020C-MJ	RC9129	PBR3-4075	MSF-4075Z	EMP005Z	EMFS11-4047DZ	-
1	11	VFS11-4110PL	PFL-4025S	DCL-4110	NF3030C-MJ	RC9129	PBR3-4110	MSF-4150Z	EMP006Z	EMFS11-4049EZ	-
	15	VFS11-4150PL	PFL-4050S	DCL-4220	NF3040C-MJ	RC9129	PBR3-4150	MSF-4150Z	EMP006Z	EMFS11-4049EZ	-


#### Note 1:

1. This filter is used wound around the input-side power line. (Number of turns: 4 or more) This filter can be installed on the output side, as well.


Note 2: Connecting this reactor to the inverter makes it compliant with the standard "General Inverter (input current of 20A or less) Harmonic Suppression Measures Execution Guidelines" set by the Japan Elec-

tric Industry Association.

Note 3: EMC plate is attached as standard.

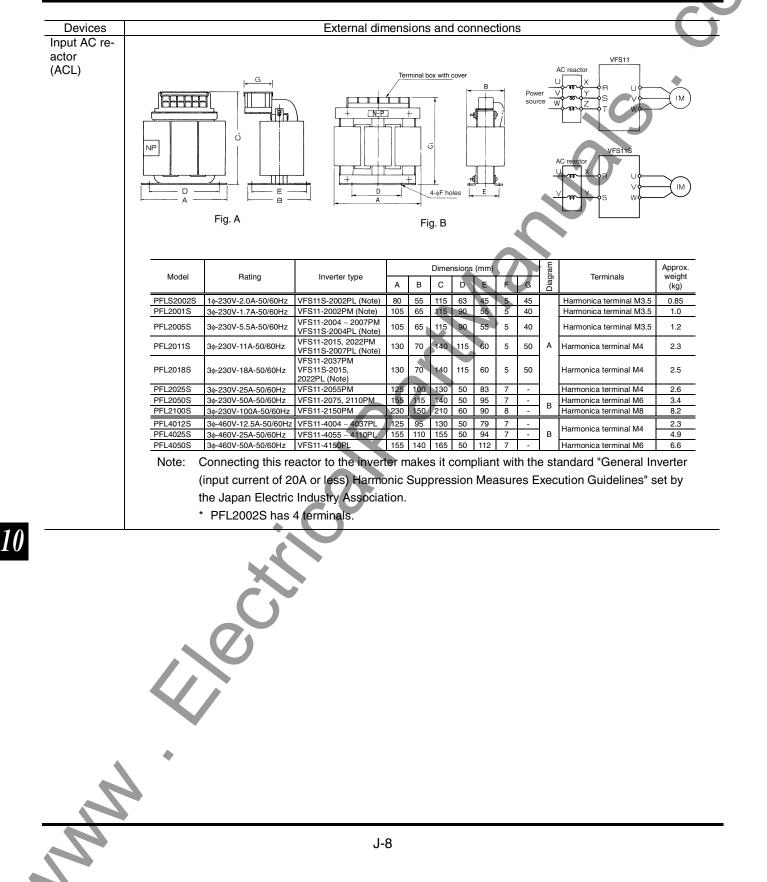


1 mm

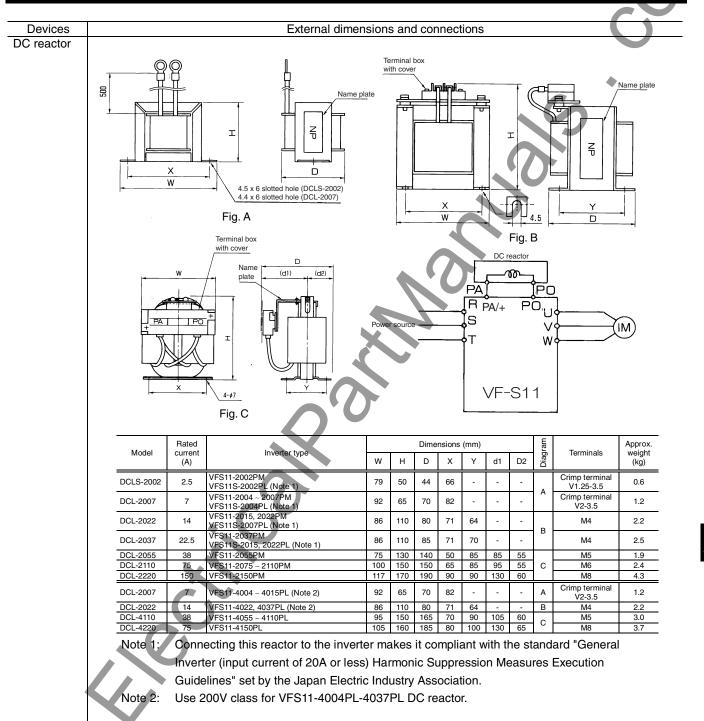

10

#### TOSHIBA E6581158 Devices External dimensions and connections Highattenuation 3-N 2-N radio noise 3-N P (Earth terminal) 2 LC filter æ reduction Power source filter <u>ଚ</u> ଚ G±1.0 ⊕ĭ Notes: (1) Noise filter should be connected to the J±1.5 κ±ι inverter main circuit and the C±1.0 B±1.5 H±1.5 control circuit primary-side. A±2.0 (2) Output cable should be kept away from the input cable. Rated Approx. weight Dimensions (mm) Reactor model current Inverter type в С F. н М Ν Р А Е G J Κ (A) (kg) NF3005A-MJ VFS11-2002PM ~ VFS11-2007PM 5 1.0 NF3015A-MJ VFS11-2015PM, VFS11-2022PM 15 174.5 160 145 80 32 45 M4 20 φ5.5 NF3020A-MJ 20 VFS11-2037PM 70 1.6 М4 NF3030A-MJ 30 VFS11-2055PM NF3040A-MJ 40 VFS11-2075PM 217.5 200 185 120 90 43 M5 2.7 44 NF3050A-MJ 50 VFS11-2110PM 267.5 250 235 170 140 44 294.5 280 260 170 150 37 90 60 4.6 30 φ6.5 M6 NF3080A-MJ 80 VFS11-2150PM 100 65 M6 70 NF3010C-MJ 10 VFS11-4004 ~ 4037PL 1.4 160 NF3015C-MJ 15 VFS11-4055PL 174.5 145 110 80 32 45 M4 20 NF3020C-MJ VFS11-4075PL 70 φ5.5 M4 1.6 20 NF3030C-MJ 30 VFS11-4110PL 177.5 200 185 120 90 44 43 NF3040C-MJ M5 27 40 VFS11-4150PI 217.5 Every inverter with a model number ending in -PL comes standard with a built-in noise filter Note: almost equal in size and performance to this filter. Zero-phase 180±2 -160±1 ferrite coreφ7 type radio noise Zero-phase reactor reduction filter 7 X14 slotted hole VF-S11 R U (IM) S Power source ١. 14 Т W R3.5 φ7 Motor <u> 1231</u> 150 $\pm$ Input or output cable should be coiled over Model: RC5078 Model: RC9129 4-times. RC5078 is recommended for the models 3.7kW or less. Unit :mm J-10

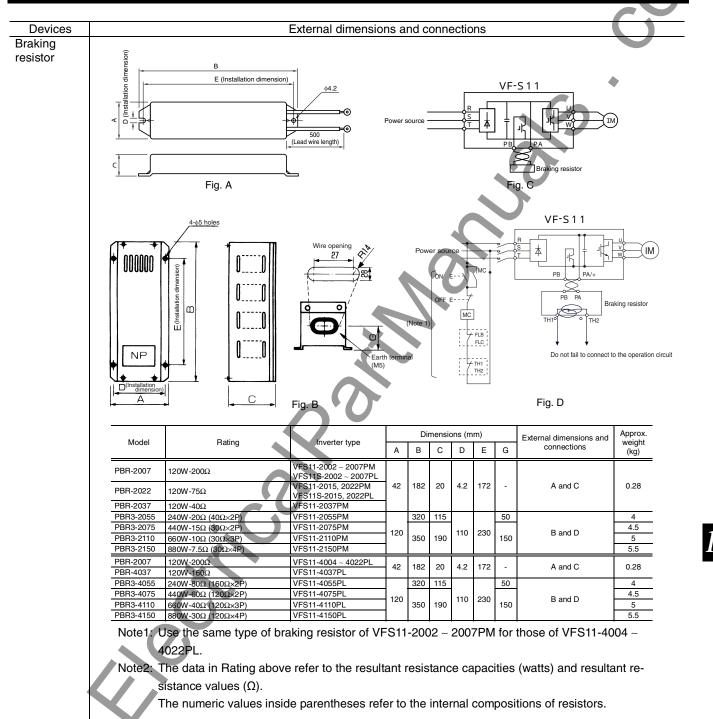


The resistances in the Rating column are combined resistances. The numeric values inside parentheses refer to the compositions of resistors (resistance of each resistor x number of resistors).


J-11





10

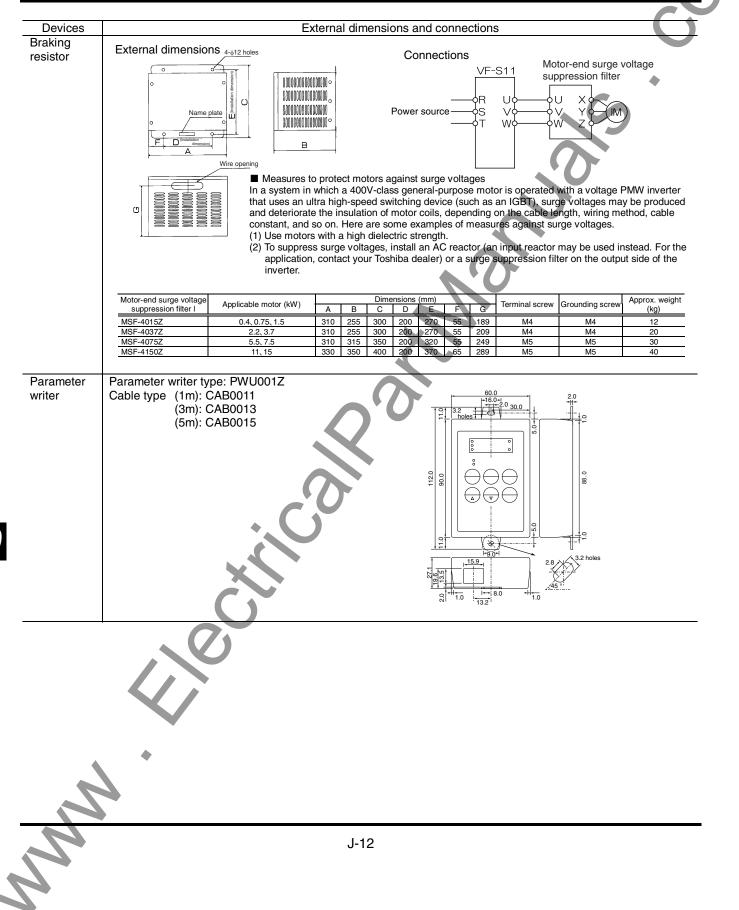

E6581158

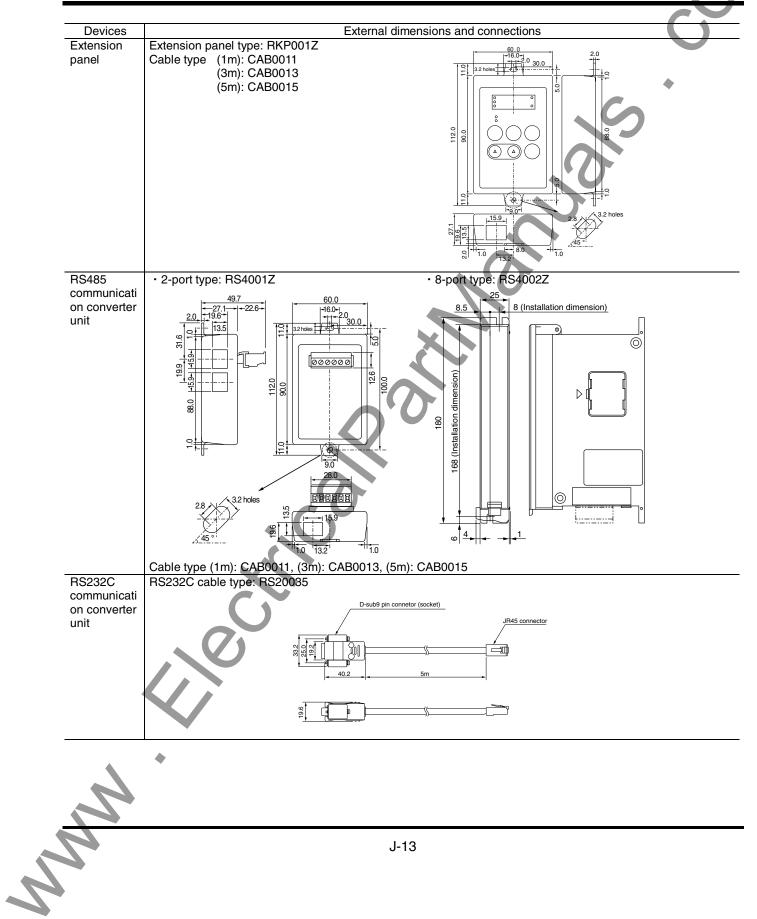

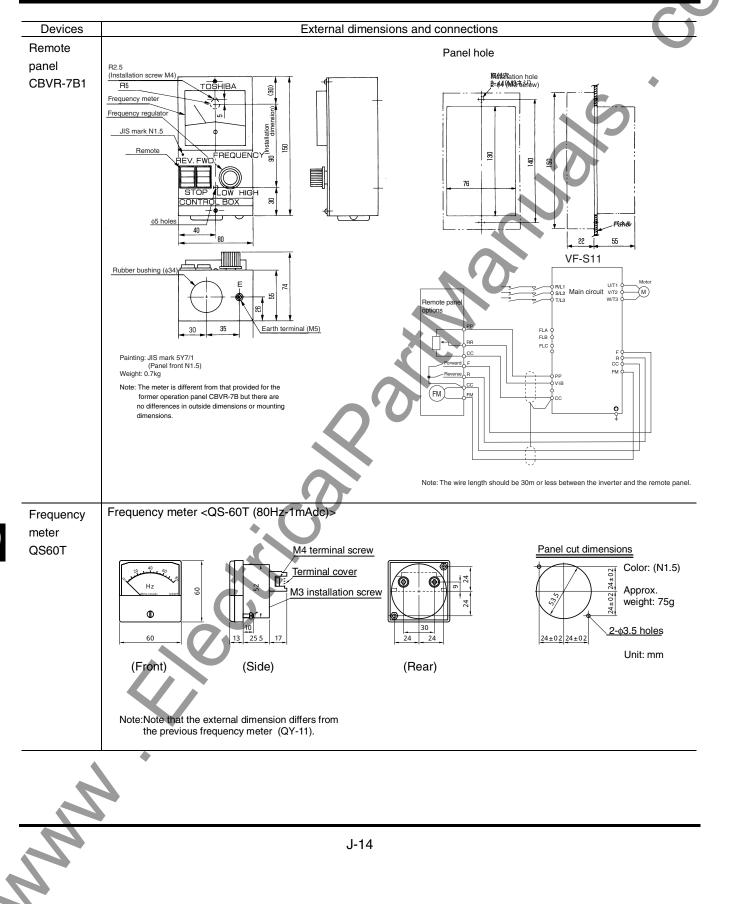

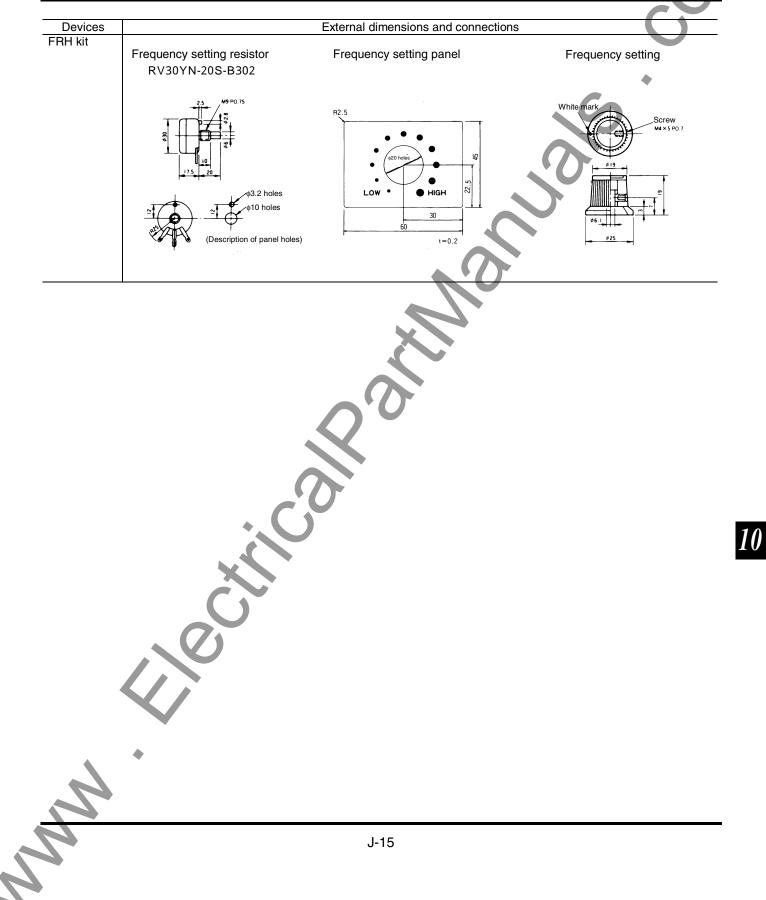

E6581158

# 11. Table of parameters and data

## 11.1 User parameters

							_
Title	Function	Unit	Minimum setting unit Panel/Comm unication	Adjustment range	Default setting	User setting	Refer- ence
FE	Operation fre- quency of opera- tion panel	Hz	0.1/0.01	LL-UL	0.0		3.2

### 11.2 Basic parameters

- Man

		0	er baele p	barameters			
Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
-	History function	-	-	Displays parameters in groups of five in the reverse order to that in which their settings were changed. * (Possible to edit)	-		4.1.4
0000	Automatic acceleration/decel eration	-	·	0: Disabled (manual) 1: Automatic 2: Automatic (only at acceleration)	0		5.1.1
0001	Automatic torque boost	-	$\mathbf{X}$	0: Disabled 1: Automatic torque boost + auto- tuning 2: Vector control + auto-tuning 3: Energy saving + auto-tuning	0		5.2
0040	Automatic function setting		0	0: Disabled 1: Coast stop 2: 3-wire operation 3: External input UP/DOWN setting 4: 4-20 mA current input operation	0		5.3
0003	Command mode selection		-	0: Terminal board 1: Operation panel	1		5.4
0004	Frequency setting mode selection 1	-	-	0: Built-in potentiometer 1: VIA 2: VIB 3: Operation panel 4: Serial communication 5: UP/DOWN from external contact 6: VIA + VIB (Override)	0		5.4 6.5.1
	No. - 0000 0001 0040 0040	No.     Function       -     History function       0000     Automatic acceleration/decel eration       0001     Automatic torque boost       0040     Automatic function setting       0003     Command mode selection       0004     Frequency setting	No.     Function     Unit       -     History function     -       0000     Automatic acceleration/decel eration     -       0001     Automatic torque boost     -       0040     Automatic function setting     -       0003     Command mode selection     -       0004     Frequency setting     -	Communication No.       Function       Unit       setting unit Panel/Communication         -       History function       -       -         0000       Automatic acceleration/decel eration       -       -         0001       Automatic torque boost       -       -         0040       Automatic function setting       -       -         0003       Command mode selection       -       -         0004       Frequency setting       -       -	Communication No.         Function         Unit         setting unit Panel/Communication         Adjustment range           -         History function         -         -         Displays parameters in groups of five in the reverse order to that in which their settings were changed. * (Possible to edit)           0000         Automatic acceleration/decel eration         -         -         0 Displays parameters in groups of five in the reverse order to that in which their settings were changed. * (Possible to edit)           0000         Automatic acceleration/decel eration         -         -         0 Displays parameters in groups of five in the reverse order to that in which their settings were changed. * (Possible to edit)           0001         Automatic acceleration/decel eration         -         -         0 Displays parameters in groups of five in the reverse order to that in which their settings were changed. * (Possible to edit)           0001         Automatic torque boost         -         -         0 Displays parameters in groups of five in the reverse order to that in which their settings were changed. * (Possible to edit)           0040         Automatic torque boost         -         -         0 Displays parameters in their setting           0040         Automatic function setting         -         -         0 Displays parameters in their setting           0003         Command mode selection 1         -         -         0 Display their potentiometer<	Communication No.         Function         Unit         setting unit Panel/Communication         Adjustment range         Default setting           -         History function         -         -         Displays parameters in groups of five in the reverse order to that in which their settings were changed. - * (Possible to edit)         -         -           0000         Automatic acceleration/decel eration         -         -         0:Disabled (manual)         0           0001         Automatic torque boost         -         -         0:Disabled 1: Automatic torque boost + auto- tuning 2: Vector control + auto-tuning 3: Energy saving + auto-tuning 3: Energy saving + auto-tuning 3: Energy saving + auto-tuning 4: 4-20 mA current input UP/DOWN setting 4: 4-20 mA current input operation         0           0003         Command mode selection         -         -         0: Disabled 1: Coast stop 2: 3-wire operation 3: External input UP/DOWN setting 4: 4-20 mA current input operation         1           0004         Frequency setting mode selection 1         -         -         0: Digration panel 4: Serial communication 5: UP/DOWN from external contact         1	Communication No.         Function         Unit         setting unit Panel/Communication         Adjustment range         Default setting         User setting           -         History function         -         -         Displays parameters in groups of five in the reverse order to that in which their settings were changed. - (Possible to edit)         -         -           0000         Automatic eration         -         -         0isplays parameters in groups of five in the reverse order to that in which their settings were changed. - (Possible to edit)         0           0000         Automatic eration         -         -         0isplays parameters in groups of five in the reverse order to that in which their settings were changed. - (Possible to edit)         0           0001         Automatic eration         -         -         0isplays parameters in groups of five in the reverse order to that in which their settings were changed. - (Possible to edit)         0           0001         Automatic torque boost         -         -         0isplays parameters in groups of five in the reverse order to that in which their setting         0           0040         Automatic function setting         -         -         0         Disabled 1: Coast stop 2: 3-wire operation 3: External input UP/DOWN setting 4: 4-20 mA current input operation 4: Serial communication 5: UP/DOWN from external contact

#### Four automatic functions or basic parameters

E6581158

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
FNSL	0005	Meter selection	-	-	<ul> <li>Output frequency</li> <li>Output current</li> <li>Set frequency</li> <li>DC voltage</li> <li>Output voltage command value</li> <li>Input power</li> <li>Output power</li> <li>Output power</li> <li>Torque</li> <li>Torque current</li> <li>Motor cumulative load factor</li> <li>Inverter cumulative load factor</li> <li>Inverter cumulative load factor</li> <li>Inverter cumulative load factor</li> <li>Inverter cumulative load factor</li> <li>Is PBR (braking reactor) cumulative load factor</li> <li>Frequency setting value (after PID)</li> <li>VIA/II Input value</li> <li>Fixed output 1 (Output current: 100%)</li> <li>Fixed output 2 (Output current: 50%)</li> <li>Fixed output 3 (Other than the output current: 100%)</li> <li>Serial communication data</li> <li>For adjustments (<i>F Π</i> set value is displayed.)</li> </ul>			5.5
FΠ	0006	Meter adjustment	-	-	-	-		5.5
FAb	0007	Default setting		S S S	<ul> <li>0: -</li> <li>1: 50Hz default setting</li> <li>2: 60Hz default setting</li> <li>3: Default setting (Initialization)</li> <li>4: Trip record clear</li> <li>5: Cumulative operation time clear</li> <li>6: Initialization of type information</li> <li>7: Save user-defined parameters</li> <li>8. Call user-defined parameters</li> <li>9. Cumulative fan operation time record clears</li> </ul>	0		5.6
Fr	0008	Forward/reverse run selection (Operation panel)			<ol> <li>Forward run</li> <li>Reverse run</li> <li>Forward run (F/R switching possible)</li> <li>Reverse run (F/R switching possible)</li> </ol>	0		5.7
<i><i><b>Я</b>ЕЕ</i></i>	0009	Acceleration time	S	0.1/0.1	0.0-3200	10.0		5.1.2
d E C	0010	Deceleration time	S	0.1/0.1	0.0-3200	10.0		5.1.2
FH	0011	Maximum frequency	Hz	0.1/0.01	30.0-500.0	80.0		5.8
UL	0012	Upper limit frequency	Hz	0.1/0.01	0.5- <i>F H</i>	50.0 (WP) 60.0 (WN, AN)		5.9
LL	0013	Lower limit frequency	Hz	0.1/0.01	0.0- <i>111</i>	0.0		5.9
υL	0014	Base frequency 1	Hz	0.1/0.01	25-500.0	50.0 (WP) 60.0 (WN, AN)		5.10
υίυ	0409	Base frequency voltage 1	V	1/0.1	50-330 (200V class) 50-660 (400/600V class)	*3		5.10 6.13.6

\*3 : 230 (200V class), 460 (400V class), 575V (600V class)

h

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication		Default setting	User setting	Reference
PĿ	0015	V/F control mode selection 1	-	-	0: V/F constant 1: Variable torque 2: Automatic torque boost control 3: Vector control 4: Automatic energy-saving 5: Dynamic automatic energy-saving (for fans and pumps) 6: PM motor control	2	*	5.11
υb	0016	Torque boost 1	%	0.1/0.1	0.0-30.0	*1		5.12
£Hr	0600	Motor electronic- thermal protection level 1	% (A)	1/1	10-100	100		5.13 6.19.1
OLN	0017	Electronic-thermal protection char- acteristic selection *2	-	-	Setting         Overload protection         OL stall           0         Xandard         O         ×           1         Standard         O         O           2         motor         ×         O           3         V         ×         O           4         VF motor         O         ×           5         VF motor         ×         ×           7         ×         O         ×	0		5.13
Sr I	0018	Preset-speed operation frequency 1	Hz	0.1/0.01		0.0		5.14
5-2	0019	Preset-speed operation frequency 2	Hz	0.1/0.01	(1-01	0.0		
5-3	0020	Preset-speed operation frequency 3	Hz	0.1/0.01	11-01	0.0		
5-4	0021	Preset-speed operation frequency 4	Hz	0.1/0.01	<u> </u>	0.0		
5-5	0022	Preset-speed operation frequency 5	Hz	0.1/0.01	LL-UL	0.0		
5-6	0023	Preset-speed operation frequency 6	Hz	0.1/0.01	LL-UL	0.0		
5-7	0024	Preset-speed operation frequency 7	Hz	0.1/0.01	LL-UL	0.0		
ç	-	Extended parameters	-	-	-	-	-	4.1.2
G r .U	-	Automatic edit function	-	-	-	-	-	4.1.3

E6581158

11

\*1 : Default values vary depending on the capacity. See the table of the page K-14.

\*2 : O : valid,  $\times$  : invalid

NN

K-3

E6581158

## 11.3 Extended parameters

			eters				•
Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default User setting setting	Reference
F 100	0100	Low-speed signal output frequency	Hz	0.1/0.01	0.0-F H	0.0	6.1.1
F 10 I	0101	Speed reach setting frequency	Hz	0.1/0.01	0.0- <i>F H</i>	0.0	6.1.3
F 102	0102	Speed reach detection band	Hz	0.1/0.01	0.0-F H	2.5	6.1.2
F 105	0105	Priority selection (Both F-CC and R-CC are ON)	-	-	0: Reverse 1: Slowdown Stop	1	6.2.1
F 109	0109	Analog/contact in- put function selec- tion (VIA/VIB ter- minal)	-	-	0: Analog input for communications VIB - analog input 1: VIA - analog input VIB - contact input (Sink) 2: VIA - analog input VIB - contact input (Source) 3: VIA - contact input (Sink) VIB - contact input (Source) VIB - contact input (Source) VIB - contact input (Source) VIB - contact input (Source)	0	6.2.2
F I 10	0110	Always-active function selection	-	-	0-64 (ST)	1	6.3.1
F	0111	Input terminal selection 1 (F)	-		0-64 (F)	2	6.3.2
F I 12	0112	Input terminal selection 2 (R)	-		0-64 (R)	3	
F I I 3	0113	Input terminal selection 3 (RES)	-	-	0-64 (RES)	10	
F    4	0114	Input terminal selection 4 (S1)	-	Ċ.	0-64 (SS1)	6	
F I IS	0115	Input terminal selection 5 (S2)	-		0-64 (SS2)	7	
F I 16	0116	Input terminal selection 6 (S3)	- (	5	0-64 (SS3)	8	
F I I 7	0117	Input terminal selection 7 (VIB)			5-17 (SS4)	9	
F I 18	0118	Input terminal selection 8 (VIA)		-	5-17 (AD2)	5	
F 130	0130	Output terminal selection 1A (RY-RC)		-	0-255 (RCH)	4	6.3.3
F 13 1	0131	Output terminal selection 2A (OUT-NO)	-	-	0-255 (LOW)	6	1
F 132	0132	Output terminal selection 3 (FL)	-	-	0-255 (FL)	10	1
F 137	0137	Output terminal selection 1B (RY-RC)	-	-	0-255 (always ON)	255	1
F 138	0138	Output terminal selection 2B (OUT-NO)	-	-	0-255 (always ON)	255	

#### Input/output parameters

1 n n

							C	
Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
F 139	0139	Output terminal logic selection (RY-RC, OUT- NO)	-	-	0: F 130 and F 137 F 131 and F 138 1: F 130 or F 137 F 131 and F 138 2: F 130 and F 137 F 131 or F 138 3: F 130 or F 137 F 131 or F 138	0	*	6.3.3
F 167	0167	Frequency command agreement detection range	Hz	0.1/0.01	0.0-F H	2.5		6.3.4
F 170	0170	Base frequency 2	Hz	0.1/0.01	25.0-500.0	50.0 (WP) 60.0 (WN, AN)		6.4.1
F   7	0170	Base frequency voltage 2	Hz	1/0.1	50-330 (200V class) 50-660 (400/600V class)	* 3		
F 172	0172	Torque boost 2	%	0.1/0.1	0.0-30.0	* 1		
F 173	0173	Motor electronic- thermal protection level 2	% (A)	1/1	10-100	100		
F 185	0185	Stall prevention level 2	% (A)	1/1	10-199 200 (disabled)	150		

\*1 : Default values vary depending on the capacity. See the table of page K-14.

\*3 : 230 (200V class), 460 (400V class), 575 (600V class)

#### • Frequency parameters

	* 11040	lency parame						
Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
F200	0200	Frequency priority selection		0	0: F ごじょ (Switchable to F 2 ごう by terminal input) 1: F ごじょ (Switchable to F 2 ごう at less than 1.0Hz of designated frequency)	0		6.5.1
F20 I	0201	VIA input point 1 setting	%	1/1	0-100	0		6.5.2
F202	0202	VIA input point 1 frequency	Hz	0.1/0.01	0.0-500.0	0.0		
F203	0203	VIA input point 2 setting	%	1/1	0-100	100		
F 2 0 4	0204	VIA input point 2 frequency	Hz	0.1/0.01	0.0-500.0	50.0 (WP) 60.0 (WN, AN)		
F2D7	0207	Frequency setting mode selection 2	-	-	0: Built-in potentiometer 1: VIA 2: VIB 3: Operation panel 4: Serial communication 5: UP/DOWN from external contact 6: VIA + VIB (Override)	1		6.5.1

E6581158

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun	Adjustment range	Default setting	User setting	Reference
F2 10	0210	VIB input point 1	%	ication 1/1	0-100	0		6.5.2
F211	0211	setting VIB input point 1	Hz	0.1/0.01	0.0-500.0	0.0		
F2 12	0212	frequency VIB input point 2	%	1/1	0-100	100	2	_
F2 13	0213	setting VIB input point 2 frequency	Hz	0.1/0.01	0.0-500.0	50.0 (WP) 60.0 (WN, AN)		
F240	0240	Starting frequency setting	Hz	0.1/0.01	0.5-10.0	0.5		6.6.1
F241	0241	Operation starting frequency	Hz	0.1/0.01	0.0- <i>F H</i>	0.0		6.6.2
F242	0242	Operation starting frequency hysteresis	Hz	0.1/0.01	0.0-F H	0.0		6.6.2
F250	0250	DC braking starting frequency	Hz	0.1/0.01	0.0-Ғ Н	0.0		6.7.1
F 2 5 1	0251	DC braking current	%(A)	1/1	0-100	50		-
F 2 5 2	0252	DC braking time	S	0.1/0.1	0.0-20.0	1.0		-
F 2 5 4	0254	Motor shaft fixing control	-	-	0: Disabled 1: Enabled (after DC braking)	0		6.7.2
F256	0256	Time limit for lower-limit frequency	S	0.1/0.1	0: None 0.1-600.0	0.0		6.8
F260	0260	operation Jog run frequency	Hz	0.1/0.01	F Z H [] + 20.0	5.0		6.9
F26 I	0261	Jog run stopping pattern	-		0: Slowdown stop 1: Coast stop 2: DC braking	0		
F262	0262	Panel jog run operation mode	-		0: Disabled 1: Panel jog run operation mode enabled	0		
F264	0264	Input from external contacts - UP response time	S	0.1/0.1	0.0-10.0	0.1		6.5.2
F265	0265	Input from external contacts - UP frequency step width	Hz	0.1/0.01	0.0- <i>F H</i>	0.1		
F266	0266	Input from external contacts - DOWN response time	S	0.1/0.1	0.0-10.0	0.1		
F267	0267	Input from external contacts - DOWN frequency step width	Hz	0.1/0.01	0.0- <i>F H</i>	0.1		
F268	0268	Initial value of UP/DOWN frequency	Hz	0.1/0.01	LL-UL	0.0		
F269	0269	Saving of changed value of UP/DOWN frequency	-	-	0: Not changed 1: Setting of <i>F 2 6 8</i> changed when power is turned off	1		
F 2 7 0	0270	Jump frequency 1	Hz	0.1/0.01	0.0-F H	0.0		6.10
F271		Jumping width 1	Hz	0.1/0.01	0.0-30.0	0.0		
F 2 7 2	0272	Jump frequency 2	Hz	0.1/0.01	0.0-F H	0.0		
Z				K-(	6			

K-6

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
F 2 7 3	0273	Jumping width 2	Hz	0.1/0.01	0.0-30.0	0.0	•	
FZTY	0274	Jump frequency 3	Hz	0.1/0.01	0.0- <i>F H</i>	0.0		6.10
F 2 7 5	0275	Jumping width 3	Hz	0.1/0.01	0.0-30.0	0.0		
F287	0287	Preset-speed operation frequency 8	Hz	0.1	LL-UL	0.0		5.14
F288	0288	Preset-speed operation frequency 9	Hz	0.1	LL-UL	0.0		
F289	0289	Preset-speed operation frequency 10	Hz	0.1		0.0		
F290	0290	Preset-speed operation frequency 11	Hz	0.1	LL-UL	0.0		
F291	0291	Preset-speed operation frequency 12	Hz	0.1		0.0		
F292	0292	Preset-speed operation frequency 13	Hz	0.1	L L -UL	0.0		
F293	0293	Preset-speed operation frequency 14	Hz	0.1	EL-UL	0.0		
F294		Preset-speed operation frequency 15 (Fire-speed)	Hz	0.1	N-UL	0.0		6.11.2

### Operation mode parameters

	Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
-	F 300	0300	PWM carrier frequency	kĤz	0.1/0.01	2.0 - 16.0	12.0		61.2
	F 3 O I	0301	Auto-restart control selection	$\mathbf{D}_{\mathbf{r}}$	-	0: Disabled 1: At auto-restart after momentary stop 2: ST terminal on or off 3: At auto-restart or when turning ST- CC on or off 4: At start-up	0		6.13.1
	F 3 0 2	0302	Regenerative power ride- through control (Deceleration stop)	-	-	0: Disabled 1: Automatic setting 2: Slowdown stop	0		6.13.2
	F 3 0 3	0303	Retry selection (number of times)	Times	1/1	0: Disabled 1-10	0		6.13.3
	F 3 0 4		Dynamic braking selection	-	-	0: Dynamic braking disabled 1: Dynamic braking enabled, overload protection enabled	0		6.13.4
	F 3 0 5	0305	Overvoltage limit operation (Slowdown stop mode selection)	-	-	0: Automatic setting 1: Disabled 2: Enabled (Quick deceleration) 3: Enabled (Dynamic quick deceleration)	2		6.13.5
- May	2				K-7	7			
27									

E6581	1	58
-------	---	----

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
F 3 0 1	0307	Supply voltage correction (limitation of output voltage)	-	-	Supply voltage uncorrected, output voltage limited     Supply voltage corrected, output voltage limited     Supply voltage uncorrected, output voltage unlimited     Supply voltage corrected, output voltage unlimited	2 (WP, WN) 3 (AN)	0	6.13.6
F 3 0 8	0308	Dynamic braking resistance	Ω	0.1/0.1	1.0-1000			6.13.4
F309	0309	Dynamic braking resistor capacity	kW	0.01/0.01	0.01-30.00	*1		6.13.4
F∃II	0311	Reverse-run prohibition	-	-	0: Forward/reverse run permitted 1: Reverse run prohibited 2: Forward run prohibited	0		6.13.7
F 3 1 2	0312	Random mode	-	-	0: Disabled 1: Automatic setting	0		6.12
F 3 16	0316	Carrier frequency control mode selection	-	-	<ul> <li>0: Carrier frequency not reduced automatically</li> <li>1: Carrier frequency reduced automatically</li> <li>2: Carrier frequency not reduced automatically</li> <li>Support for 400V models</li> <li>3: Carrier frequency reduced automatically</li> <li>Support for 400V models</li> </ul>			
F 3 2 0	0320	Drooping gain	%	1/1	0-100	0		6.14
F323	0323	Drooping insensitive torque band	%	1/1	0-100	10		6.14
F342	0342	Braking mode selection	-		0: Disabled 1: Enabled (forward run) 2: Enabled (reverse run) 3: Enabled (operating direction)	0		6.15
F343	0343	Release frequency	Hz	0.1/0.01	F Z H U-20.0	3.0		
FЗЧЧ	0344	Release time	S	0.01/0.01	0.00-2.50	0.05		
F345	0345	Creeping frequency	Hz	0.1/0.01	F Z H 🖞-20.0	3.0		
F 3 4 6	0346	Creeping time	S	0.01/0.01	0.00-2.50	0.10		
F359	0359	PID control waiting time	S	1/1	0-2400	0		6.16
F360	0360	PID control	-	-	0: Disabled, 1: Enabled	0		
F362	0362	Proportional gain	-	0.01/0.01	0.01-100.0	0.30		
F363	0363	Integral gain	-	0.01/0.01	0.01-100.0	0.20		
F366	0366	Differential gain	-	0.01/0.01	0.00-2.5	0.00		

\*1 : Default values vary depending on the capacity. See the table of K-14.

٠

n n n

	Torqu	e boost parar	neters	3				)
Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
F400	0400	Auto-tuning	-	-	0: Auto-tuning disabled	0		6.17
					1: Initialization of $F \lor \square \supseteq$ (reset to 0)			
					2: Auto-tuning enabled (after execution: 0)			
F401	0401	Slip frequency gain	%	1/1	0-150	50		
F402	0402	Motor constant #1 (primary resistance)	%	0.1/0.1	0.0-30.0	* 1		
F4 15	0415	Motor rated current	A	0.1/0.1	0.1-100.0	* 1		
F4 16	0416	Motor no-load current	%	1/1	10-90	* 1		
F417	0417	Motor rated speed	min-1	1/1	100-32000	1410(WP) 1710 (WN, AN)		
F4 18	0418	Speed control response coefficient	-	1/1	1-150	40		
F4 19	0419	Speed control stability coefficient	-	1/1	1-100	20		
F480	0480	Exciting strength- ening coefficient	%	1/1	100-130	100		
F485	0485	Stall cooperation gain at field weakening zone 1	-	1/1	10-250	100		
F492	0492	Stall cooperation gain at field weakening zone 2	-	1/1	50-150	100		
F494	0494	Motor adjustment factor	-	1/1	0-200	* 1		

\*1 : Default values vary depending on the capacity. See the table of page K-14.

### • Acceleration/deceleration time parameters

Ті	ītle	Communication No.	Function	Linit	Minimum setting unit Panel/Commun ication	Adjustment renge	Default setting	User setting	Reference
F 5	500	0500	Acceleration time	S	0.1/0.1	0.0-3200	10.0		6.18
F 5	501	0501	Deceleration time	S	0.1/0.1	0.0-3200	10.0		
F 5	502	0502	Acceleration/decel eration 1 pattern	-	-	0: Linear 1: S-pattern 1	0		
FS	503	0503	Acceleration/decel eration 2 pattern	-	-	2: S-pattern 2	0		
F S	5 <i>0</i> 4	0504	Acceleration/decel eration selection (1, 2, 3)	-	-	1: Acceleration/deceleration 1 2: Acceleration/deceleration 2 3: Acceleration/deceleration 3	1		
F 5	505	0505	Acceleration/decel eration 1 and 2 switching frequency	Hz	0.1/0.01	0.0- <i>11 L</i>	0.0		
F 5	586	0506	S-pattern lower- limit adjustment amount	%	1/1	0-50	10		
	5								
N					K-{	9			

11

#### E6581158

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
FSOT	0507	S-pattern upper- limit adjustment amount	%	1/1	0-50	10		♦ <sup>6.18</sup>
F5 10	0510	Acceleration time 3	S	0.1/0.1	0.0-3200	10.0		
F511	0511	Deceleration time 3	S	0.1/0.1	0.0-3200	10.0		
FS 12	0512	Accelera- tion/deceleration 3 pattern	-	-	0: Linear 1: S-pattern 1 2: S-pattern 2	65	7	
F5 13	0513	Accelera- tion/deceleration 2 and 3 switching frequency	Hz	0.1/0.01	0.0- <i>LI L</i>	0.0		

#### • Protection parameters

	Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
	F 6 0 1	0601	Stall prevention level 1	% (A)	1/1	10-199 , 200 (disabled)	150		6.19.2
	F602	0602	Inverter trip retention selection	-	-	0: Canceled with the power off 1: Still retained with the power off	0		6.19.3
	F603	0603	Emergency stop selection	-	-	0: Coast stop 1: Slowdown stop 2: Emergency DC braking	0		6.19.4
	F604	0604	Emergency DC braking time	S	0.1/0.1	0.0-20.0	1.0		6.19.4
	F 6 0 5	0605	Output phase failure detection mode selection	-		<ul> <li>0: Disabled</li> <li>1: At start-up (only one time after power is turned on)</li> <li>2: At start-up (each time)</li> <li>3: During operation</li> <li>4: At start-up + during operation</li> <li>5: Detection of cutoff on output side</li> </ul>	0		6.19.5
	F607	0607	Motor 150%- overload time limit	S	1/1	10-2400	300		6.19.1
	F608	0608	Input phase failure detection mode selection	-	<b>D</b> .	0: Disabled, 1: Enabled	1		6.19.6
11	F6 10	0610	Low current trip/alarm	·	-	0: Alarm only 1: Tripping	0		6.19.7
	F6	0611	Small current detection current	%	1/1	0-100	0		
	F6 12	0612	Small current detection time	s	1/1	0-255	0		
	F 6 13	0613	Detection of output short-circuit during start-up	-	-	<ul> <li>0: Each time (standard pulse)</li> <li>1: At start-up (only one time after power is turned on) (standard pulse)</li> <li>2: Each time (short-time pulse)</li> <li>3: At start-up (only one time after power is turned on) (short-time pulse)</li> </ul>	0		6.19.8
	F 6 15	0615	Over-torque trip/alarm selection	-	-	0: Alarm only 1: Tripping	0		6.19.9
	F6 16	0616	Over-torque detection level	%	1/1	0-250	150		
	F6 18	0618	Over-torque detection time	S	0.1/0.1	0.0-10.0	0.5		
		7							
	7				K-1	0			

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
F 6 19	0619	Over-torque detection level hysteresis	%	1/1	0-100	10	•	6.19.9
F621	0621	Cumulative operation time alarm setting	100 Time	0.1/0.1 (=10 hours)	0.0-999.9	610		6.19.10
F 6 2 6	0626	Over-voltage stall protection level	%	1/1	100-150	*		6.13.5
F 6 2 7	0627	Undervoltage trip/alarm selection	-	-	0: Alarm only (detection level below 60%) 1: Tripping (detection level below 60%) 2: Alarm only (detection level below 50%, DC reactor necessary)	0		6.19.12
F633	0633	Trip at VIA low level input mode	%	1/1	0: Disabled, 1-100	0		6.19.13
F634	0634	Annual average ambient temperature (calculation for life alarms)	-	-	1: -10 to +10° C 2: 11-20° C 3: 21-30° C 4: 31-40° C 5: 41-50° C 6: 51-60° C	3		6.19.14

E6581158

11

#### Output parameters

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
F669	0669	Logic output/pulse train output selection (OUT- NO)	-	0.0	0: Logic output 1: Pulse train output	0		6.20.1
F 6 7 6	0676	Pulse train output function selection (OUT-NO)			<ul> <li>Output frequency</li> <li>Output current</li> <li>Set frequency</li> <li>DC voltage</li> <li>Output voltage command value</li> <li>Input power</li> <li>Output power</li> <li>Output power</li> <li>Torque</li> <li>Torque current</li> <li>Motor cumulative load factor</li> <li>Inverter cumulative load factor</li> <li>IPBR (braking reactor) cumulative load factor</li> <li>Frequency setting value (after PID)</li> <li>VIA/II Input value</li> <li>VIA/II Input value</li> <li>Fixed output 1 (Output current: 100%)</li> <li>Fixed output 2 (Output current: 50%)</li> <li>Fixed output 3 (Other than the output current: 100%)</li> </ul>	0		6.20.1
F 6 7 7	0677	Maximum nembers of pulse train	pps	1/1	500-1600	800		6.20.1
F 6 9 1	0691	Inclination characteristic of analog output	-	-	0: Negative inclination (downward slope) 1: Positive inclination (upward slope)	1		6.20.2
F 6 9 2	0692	Meter bias	%	1/1	0 - 100	0		6.20.2

A MA

E6581158

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Referenc
- 100	0700	Prohibition of change of parameter settings	-	-	0: Permitted 1: Prohibited	0	5	6.21.1
ו סר י	0701	Unit selection	-	-	0: % 1: A (ampere)/V (volt)	0		6.21.2
502	0702	Free unit selection	Times	0.01/0.01	0.00: Free unit display disabled (display of frequency) 0.01-200.0	0.00		6.21.3
- 705	0705	Inclination characteristic of free unit display	-	-	0: Negative inclination (downward slope) 1: Positive inclination (upward slope)			
- 706	0706	Free unit display bias	Hz	0.01/0.01	0.00-F H	0.00		
רסר	0707	Free step 1 (pressing a panel key once)	Hz	0.01/0.01	0.00: Disabled 0.01-F H	0.00		6.21.4
- 108	0708	Free step 2 (panel display)	-	1/1	0: Disabled 1-255	0		6.21.4
		Standard monitor display selection	-		<ul> <li>0: Operation frequency (HZ/free unit)</li> <li>1: Frequency command (HZ/free unit)</li> <li>2: Output current (%/A)</li> <li>3: Inverter rated current (A)</li> <li>4: Inverter load factor (%)</li> <li>5: Output power (%)</li> <li>6: Frequency command after PID control (HZ/free unit)</li> <li>7: Optional item specified from an external control unit</li> </ul>	0		6.21.5
פור =	0719	Canceling of operation command when standby terminal (ST) is turned off	-	$\mathbf{X}$	<ul><li>0: Operation command canceled (cleared)</li><li>1: Operation command retained</li></ul>	1		6.21.6
1 57	0721	Panel stop pattern	-		0: Slowdown stop 1: Coast stop	0		6.21.7
- 730	0730	Prohibition of frequency setting on the operation anel ( <i>F</i> (		5	0: Permitted 1: Prohibited	0		6.21.1
: 33		Panel operation prohibition (RUN/STOP keys)		-	0: Permitted 1: Prohibited	0		
- 734	0734	Prohibition of panel emergency stop operation		-	0: Permitted 1: Prohibited	0		
:735	0735	Prohibition of panel reset operation	-	-	0: Permitted 1: Prohibited	0		
355	0736	Prohibition of change of [ ]]] []F]]]] during operation	-	-	0: Permitted 1: Prohibited	1		

11

-N N N N

•

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Refere
F800	0800	Communication band speed	-	-	0: 1200bps 1: 2400bps 2: 4800bps 3: 9600bps 4: 19200bps	Č		6.22
F80 I	0801	Parity	-	-	0: NON (No parity) 1: EVEN (Even parity) 2: ODD (Odd parity)			
F802	0802	Inverter number	-	1/1	0-255	0		
F803	0803	Communication error trip time	S	1/1	0: (disabled) 1-100	0		1
F805	0805	Communication waiting time	s	0.01/0.01	0.00-2.00	0.00		
F806	0806	Setting of master and slave inverters for communication between inverters (setting of master and slave)	-		<ol> <li>Slave inverter (0 Hz command issued in case the master inverter fails)</li> <li>Slave inverter (Operation continued in case the master inverter fails)</li> <li>Slave inverter (Emergency stop tripping in case the master inverter fails)</li> <li>Master inverter (transmission of frequency commands)</li> <li>Master inverter (transmission of output frequency signals)</li> </ol>	0		
F8	0811	Point 1 setting	%	1/1	0-100	0		6.5.
F8 12	0812	Point 1 frequency	Hz	0.1/0.01	0.0-500.0	0.0		1
F813	0813	Point 2 setting	%	1/1	0-100	100		1
F8 14	0814	Point 2 frequency	Hz	0.1/0.01	0.0-500.0	50.0 (WP) 60.0 (WN, AN)		
F829	0829	Selection of communication protocol			0: Toshiba inverter protocol 1: Modbus RTU protocol	0		6.2
F 8 7 0	0870	Block write data 1		-	0: No selection 1: Command information 1	0		
F871	0871	Block write data 2	-	-	2: Command information 2 3: Frequency command 4: Output data on the terminal board 5: Analog output for communications	0		
F 8 7 5	0875	Block read data 1	-	-	0: No selection 1: Status information	0		
F 8 7 6	0876	Block read data 2	-	-	2: Output frequency	0		
F 8 7 7	0877	Block read data 3	-	-	3: Output current 4: Output voltage	0		1
F 8 7 8	0878	Block read data 4	-	-	5: Alarm information 6: PID feedback value	0		1
F879	0879	Block read data 5	-	-	7: Input terminal board monitor 8: Output terminal board monitor 9: VIA terminal board monitor 10: VIB terminal board monitor	0		
F880	0880	Free notes	-	1/1	0-65535	0		1
F890	0890	Parameter for op- tion 1	-	1/1	0-65535	0		6.2
F89 I	0891	Parameter for op- tion 2	-	1/1	0-65535	0		
	•			K-1	3			

11

E6581158

E658115

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	Default setting	User setting	Reference
F892	0892	Parameter for op- tion 3	-	1/1	0-65535	0		♦ <sup>6.23</sup>
F893	0893	Parameter for op- tion 4	-	1/1	0-65535	0	2	6.23
F894	0894	Parameter for op- tion 5	-	1/1	0-65535	0	2	

#### • Reservation area parameters

Title	Communication No.	Function	Unit	Minimum setting unit Panel/Commun ication	Adjustment range	)	Default setting	User setting	Reference
F9 10	0910	Step-out detection current level (for PM motors)	% (A)	1/1	10-150		100		6.24
F9	0911	Step-out detection time (for PM motors)	S	1/1	0.0: No detection 0.1-25.0	5	0.0		6.24
	Defau	It settings by							14

### Default settings by inverter rating

Inverter type	Torque boost	Dynamic braking resistance	Dynamic braking resistor capacity	Motor constant #1 (primary resistance)	Motor rated current	Motor no-load current	Motor adjustment factor	Over-voltage stall protection level
	ub/F172 (%)	F 308 (Ω)	F 309 (kW)	F402 (%)	F 4 15 (A)	F415 (%)	F494	F 6 2 6 (%)
VFS11S-2002PL	6.0	200.0	0.12	8.3	1.2	70	90	134
VFS11S-2004PL	6.0	200.0	0.12	6.2	2.0	60	90	134
VFS11S-2007PL	6.0	200.0	0.12	5.8	3.4	55	80	134
VFS11S-2015PL	6.0	75.0	0.12	4.3	6.2	46	70	134
VFS11S-2022PL	5.0	75.0	0.12	4.1	8.9	40	70	134
VFS11-2002PM	6.0	200.0	0.12	8.3	1.2	70	90	134
VFS11-2004PM	6.0	200.0	0.12	6.2	2.0	60	90	134
VFS11-2005PM	6.0	200.0	0.12	6.0	2.7	57	90	134
VFS11-2007PM	6.0	200.0	0.12	5.8	3.4	55	80	134
VFS11-2015PM	6.0	75.0	0.12	4.3	6.2	46	70	134
VFS11-2022PM	5.0	75.0 🔷	0.12	4.1	8.9	40	70	134
VFS11-2037PM	5.0	40.0	0.12	3.4	14.8	35	70	134
VFS11-2055PM	4.0	20.0	0.24	3.0	21.0	31	70	134
VFS11-2075PM	3.0	15.0	0.44	2.5	28.2	30	60	134
VFS11-2110PM	2.0	10.0	0.66	2.3	40.6	26	60	134
VFS11-2150PM	2.0	7.5	0.88	2.0	54.6	26	50	134
VFS11-4004PL	6.0	200.0	0.12	6.2	1.0	60	90	140
VFS11-4007PL	6.0	200.0	0.12	5.8	1.7	54	80	140
VFS11-4015PL	6.0	200.0	0.12	4.3	3.1	47	70	140
VFS11-4022PL	5.0	200.0	0.12	4.1	4.5	40	70	140
VFS11-4037PL	5.0	160.0	0.12	3.4	7.4	32	70	140
VFS11-4055PL	4.0	80.0	0.24	2.6	10.5	32	70	140
VFS11-4075PL	3.0	60.0	0.44	2.3	14.1	29	60	140
VFS11-4110PL	2.0	40.0	0.66	2.2	20.3	25	60	140
VFS11-4150PL	2.0	30.0	0.88	1.9	27.3	25	50	140

NNN

unction	Code	Function	Action
No.	Code		
0	-	No function is assigned	Disabled
1	ST	Standby terminal	ON: Ready for operation, OFF: Coast stop (gate off)
2	F	Forward run command	ON: Forward run OFF: Slowdown stop
3	R	Reverse run command	ON: Reverse run OFF: Slowdown stop
4	JOG	Jog run mode	ON: Jog run, OFF: Jog run canceled
5	AD2	Acceleration/deceleration 2 pattern selection	ON: Acceleration/deceleration 2 OFF: Acceleration/deceleration 1 or 3
6	SS1	Preset-speed command 1	Selection of 15-speed with SS1 to SS4 (4 bits)
7	SS2	Preset-speed command 2	
8	SS3	Preset-speed command 3	
9	SS4	Preset-speed command 4	
10	RES	Reset command	ON: Acceptance of reset command
	EVT	This star and from a town of issue days	$ON \rightarrow OFF$ : Trip reset
11	EXT	Trip stop command from external input device	ON: E Trip stop
12	CFMOD	Switching of command mode and frequency setting mode	ON: Forced switching from command mode to terminal input mode, forced switching from frequency setting mode to the mode commanded between $F \Pi \square d$ and $F \supseteq \square T$ . (If $F \supseteq \square \square = \square$ )
13	DB	DC braking command	ON: DC braking
14	PID	PID control prohibited	ON: PID control prohibited
			OFF: PID control permitted
15	PWENE	Permission of parameter editing	ON: Parameter editing permitted OFF: Parameter editing prohibited (If $F \neg \square \square =$
16	ST+RES	Combination of standby and reset commands	ON: Simultaneous input from ST and RES
17	ST+CFMOD	Combination of standby and command/frequency setting mode switching	ON: Simultaneous input from ST and CFMOD
18	F+JOG	Combination of forward run and jog run	ON: Simultaneous input from F and JOG
10			
20	R+JOG F+AD2	Combination of reverse run and jog run Combination of forward run and	ON: Simultaneous input from R and JOG ON: Simultaneous input from F and AD2
21	R+AD2	acceleration/deceleration 2 Combination of reverse run and	ON: Simultaneous input from R and AD2
		acceleration/deceleration 2	·
22	F+SS1	Combination of forward run and preset-speed command 1	ON: Simultaneous input from F and SS1
23	R+SS1	Combination of reverse run and preset-speed command 1	ON: Simultaneous input from R and SS1
24	F+SS2	Combination of forward run and preset-speed command 2	ON: Simultaneous input from F and SS2
25	R+SS2	Combination of reverse run and preset-speed command 2	ON: Simultaneous input from R and SS2
26	F+SS3	Combination of forward run and preset-speed	ON: Simultaneous input from F and SS3
27	R+SS3	Combination of reverse run and preset-speed	ON: Simultaneous input from R and SS3
28	F+SS4	Combination of forward run and preset-speed	ON: Simultaneous input from F and SS4
29	R+SS4	command 4 Combination of reverse run and preset-speed	ON: Simultaneous input from R and SS4
30	F+SS1+AD2	command 4 Combination of forward run, preset-speed	ON: Simultaneous input from F, SS1 and AD2
00		command 1 and acceleration/deceleration 2	
31	R+SS1+AD2	Combination of reverse run, preset-speed command 1 and acceleration/deceleration 2	ON: Simultaneous input from R, SS1 and AD2
32	F+SS2+AD2	Combination of forward run, preset-speed	ON: Simultaneous input from F, SS2 and AD2
		command 2 and acceleration/deceleration 2	

E6581158

E6581158

	Tabl	e of input t	terminal functions 2	$\mathbf{C}$
	Function No.	Code	Function	Action
	34	F+SS3+AD2	Combination of forward run, preset-speed command 3 and acceleration/deceleration 2	ON: Simultaneous input from F, SS3 and AD2
	35	R+SS3+AD2	Combination of reverse run, preset-speed command 3 and acceleration/deceleration 2	ON: Simultaneous input from R, SS3 and AD2
	36	F+SS4+AD2	Combination of forward run, preset-speed command 4 and acceleration/deceleration 2	ON: Simultaneous input from F, SS4 and AD2
	37	R+SS4+AD2	Combination of reverse run, preset-speed command 4 and acceleration/deceleration 2	ON: Simultaneous input from R, SS4 and AD2
-	38	FCHG	Frequency command forced switching	ON: F 2 0 기 (If F 2 0 0 = 0) OFF: F በ 0 권
	39	VF2	No.2 Switching of V/F setting	ON: No.2 V/F setting (P E=0, F, 170, F, 171, F, 172, F, 173) OFF: No.1 V/F setting (Set value of P E, U E, U E, U E, U E, E H F)
	40	MOT2	No.2 motor switching (VF2 + AD2 + OCS2)	ON: No.2 motor (PE=0, F 170, F 171, F 172, F 173, F 185, F 500, F 501, F 503) OFF: No.1 motor (Set value of PE, uL, uLu, ub, EHr, REE, dEE, F 502, F 501)
-	41	UP DOWN	Frequency UP signal input from external contacts Frequency DOWN signal input from external	ON: Increase in frequency ON: Reduction in frequency
-			contacts	
	43	CLR	Frequency UP/DOWN cancellation signal input from external contacts	OFF ON: Resetting of UP/DOWN frequency by means of external contacts
	44	CLR+RES	Combination of frequency UP/DOWN cancellation and reset by means of external contacts	ON: Simultaneous input from CLR and RES
	45	EXTN	Inversion of trip stop command from external device	OFF: E Trip stop
	46 47	OH OHN	Thermal trip stop signal input from external device Inversion of thermal trip stop command from	ON: $[]H_2$ Trip stop OFF: $[]H_2$ Trip stop
		-	external device	
	48	SC/LC	Forced switching from remote to local control	Enabled when remote control is exercised ON: Local control (setting of F II II and F Z II 7) OFF: Remote control
	49	HD	Operation holding (stop of 3-wire operation)	ON: F (forward run)/R: (reverse run) held, 3-wire operation OFF: Slowdown stop
	50	CMTP	Forced switching of command mode and terminal board command	ON: Terminal board operation OFF: Setting of [개집님
	51	СКМН	Display cancellation of the cumulative power amount (kWh)	ON: Monitor display cancellation of the cumulative power amount (kWh)
11	52	FORCE	Forced operation (factory configuration required)	<ul> <li>ON: Forced operation mode in which operation is not stopped in the event of the occurrence of a soft fault (preset speed operation frequency 15) To use this function, the inverter needs to be so configured at the factory.</li> <li>OFF: Normal operation</li> </ul>
	53	FIRE	Fire-speed control	ON: Fire-speed operation (preset speed operation frequency 15)
l			J	OFF: Normal operation
	<			
			K-16	
N			N-10	

NA

Tabl	e of input	terminal functions 3	6
Function No.	Code	Function	Action
54	STN	Inversion of ST (coasting)	ON: Coast stop (gate off) OFF: Ready for operation
55	RESN	Inversion of RES	ON: Acceptance of reset command OFF→ ON: Trip reset
56	F+ST	Combination of forward run and standby	ON: Simultaneous input from F and ST
57	R+ST	Combination of reverse run and standby	ON: Simultaneous input from R and ST
58	AD3	Acceleration/deceleration 3 selection	ON: Acceleration/deceleration 3 OFF: Acceleration/deceleration 1 or 2
59	F+AD3	Combination of forward run and acceleration/deceleration 3	ON: Simultaneous input from F and AD3
60	R+AD3	Combination of reverse run and acceleration/deceleration 3	ON: Simultaneous input from R and AD3
61	OCS2	Forced switching of stall prevention level 2	ON: Enabled at the value of F 185 OFF: Enabled at the value of F 5 11
62	HDRY	Holding of RY-RC terminal output	ON: Once turned on, RY-RC are held on. OFF: The status of RY-RC changes in real time according to conditions.
63	HDOUT	Holding of OUT-NO terminal output	ON: Once turned on, OUT-NO are held on. OFF: The status of OUT-NO changes in real time according to conditions.
64	PRUN	Cancellation (clearing) of operation command from panel	0: Operation command canceled (cleared) 1: Operation command retained

#### ■ Table of output terminal functions 1

Function No.	Code	Function	Action
0	LL	Frequency lower limit	ON: The output frequency is above the <u>L</u> set value. OFF: The output frequency is equal to or less than the <u>L</u> set value.
1	LLN	Inversion of frequency lower limit	Inversion of LL setting
2	UL	Frequency upper limit	ON: Output frequency is equal to or higher than <i>UL</i> value. OFF: Output frequency is lower than <i>UL</i> value.
3	ULN	Inversion of frequency upper limit	Inversion of UL setting
4	LOW	Low-speed detection signal	ON: Output frequency is equal to or higher than <i>F</i> 100 value. OFF: Output frequency is lower than <i>F</i> 100 value.
5	LOWN	Inversion of low-speed detection signal	Inversion of LOW setting
6	RCH	Designated frequency attainment signal (completion of acceleration/deceleration)	<ul> <li>ON: The output frequency is equal to or less than the specified frequency ± frequency set with <i>F</i> 102.</li> <li>OFF: The output frequency is above the specified frequency ± frequency set with <i>F</i> 102.</li> </ul>
7	RCHN	Inversion of designated frequency attainment signal (inversion of completion of acceleration/deceleration)	Inversion of RCH setting
8	RCHF	Set frequency attainment signal	<ul> <li>ON: The output frequency is equal to or less than the frequency set with <i>F</i> / [] / ± frequency set with <i>F</i> / [] <i>Z</i>.</li> <li>OFF: The output frequency is above the frequency set with <i>F</i> / [] / ± frequency set with <i>F</i> / [] <i>Z</i>.</li> </ul>
9	RCHFN	Inversion of set frequency attainment signal	Inversion of RCHF setting
10	FL	Failure signal (trip output)	ON: When inverter is tripped OFF: When inverter is not tripped
<b>1</b> 1	FLN	Inversion of failure signal (inversion of trip output)	Inversion of FL setting

	<u> </u>	it terminal functions 2	
Function No.	Code	Function	Action
12	от	Over-torque detection	<ul> <li>ON: Torque current is equal to or larger than <i>F</i> § <i>1</i> § set value and longer than <i>F</i> § <i>1</i> 8 set time.</li> <li>OFF: The torque current is equal to or less than (<i>F</i> § <i>1</i> § set value - <i>F</i> § <i>1</i> g set value).</li> </ul>
13	OTN	Inversion of over-torque detection	Inversion of OT
14	RUN	Start/Stop	ON: When operation frequency is output or during $\begin{pmatrix} d & b \end{pmatrix}$ OFF: Operation stopped
15	RUNN	Inversion of RUN/STOP	Inversion of RUN setting
16	POL	OL pre-alarm	ON: 50% or more of calculated value of overload protection level OFF: Less than 50% of calculated value of overload protection level
17	POLN	Inversion of OL pre-alarm	Inversion of POL setting
18	POHR	Braking resistor overload pre-alarm	ON: 50% or more of calculated value of $F \exists \square B$ set overload protection level OFF: Less than 50% of calculated value of $F \exists \square B$ set overload protection level
19	POHRN	Inversion of braking resistor overload pre-alarm	Inversion of RCHR setting
20	POT	Over-torque detection pre-alarm	<ul> <li>ON: Torque current is equal to or larger than 70% of <i>F</i> <u>5</u> 15 set value.</li> <li>OFF: The torque current is below (<i>F</i> <u>5</u> 15 set value x 70% - <i>F</i> <u>5</u> 19 set value).</li> </ul>
21	POTN	Inversion of over-torque detection pre-alarm	Inversion of POT setting
22	PAL	Pre-alarm	<ul> <li>One of the following is turned on: ON POL, POHR, POT, MOFF, UC, OT, LL stop, CCT, and momentary power failure slowdown stop. or [, P, Dr H issues an alarm</li> <li>All the following are turned off: OFF POL, POHR, POT, MOFF, UC, OT, LL stop, CCT, and momentary power failure slowdown stop.</li> <li>or [, P, D, L]</li> </ul>
00	PALN	Inversion of pre-alarm	or [, P, ] r H issues no alarm Inversion of PAL setting
<u>23</u> 24	UC	Small-current detection	ONE The output current is equal to or less than $F \stackrel{\frown}{E} I I$ set value for $F \stackrel{\frown}{E} I \stackrel{\frown}{Z}$ set time. OFF: The output current is equal to or larger than $F \stackrel{\frown}{E} I I$ set value + 10%.
25	UCN	Inversion of small-current detection	Inversion of UC setting
25 26	HFL	Significant failure	ON: DER, DEL, DE, E, EEPI, EEN, EPHD, Err2- 5, DH2, UPI, EF2, UE, EEYP, Dr EPHI) OFF: Failure other than the above
27	HFLN	Inversion of significant failure	Inversion of HFL setting
28		Insignificant failure	ON: (@[ 1-3, @P 1-3, @H, @L 1-2, @L r) OFF: Failure other than the above
29	LFLN	Inversion of insignificant failure	Inversion of LFL setting
30	RDY1	Ready for operation (including ST/RUN)	ON: Ready for operation (ST and RUN are also ON) OFF: Others
31	RDY1N	Inversion of ready for operation (including ST/RUN)	Inversion of RDY1 setting
32	RDY2	Ready for operation (excluding ST/RUN)	ON: Ready for operation (ST and RUN are not ON) OFF: Others
33	RDY2N	Inversion of ready for operation (excluding ST/RUN)	Inversion of RDY2
34	FCVIB	Frequency VIB selection	ON: VIB selected as frequency command OFF: Terminal other than VIB selected as frequency command
6		K-18	

Function	Code	Function	Action
No. 35	FCVIBN	Inversion of frequency VIB selection	Inversion of FCVIB
36	FLR	Fault signal (put out also at the time of a retry)	ON: When inverter trips or retries
30	FLN	Fault signal (put out also at the time of a retry)	OFF: When inverter does not trip or retry
37	FLRN	Inversion of failure signal (put out also at the time of a retry)	Inversion of FLR
38	OUT0	Specified data output 1	ON: Specified data from remote control FA50: BIT0= 1 OFF: Specified data from remote control FA50: BIT0= 0
39	OUTON	Inversion of specified data output 1	Inversion of OUT0 setting
40	OUT1	Specified data output 2	ON: Specified data from remote control FA50: BIT1= 1 OFF: Specified data from remote control FA50: BIT1= 0
41	OUT1N	Inversion of specified data output 2	Inversion of OUT1 setting
42	СОТ	Cumulative operation time alarm	ON: Cumulative operation time is equal to or longer than F ら さ 1 OFF: Cumulative operation time is shorter than F ら さ 1
43	COTN	Inversion of cumulative operation time alarm	Inversion of COT
44	LTA	Calculation for life alarm	ON: Calculation for life time is equal to or longer than the preset time ON: Calculation for life time is shorter than the preset time
45	LTAN	Inversion of calculation for life alarm	Inversion of LTA
46	BR	Braking sequence output	ON: Braking retention signal OFF: Braking release signal
47	BRN	Inversion of braking sequence output	Inversion of BR
48	LI1	F terminal input signal	ON: The signal input to F terminal is ON OFF: The signal input to F terminal is OFF
49	LI1N	Inversion of F terminal input signal	Inversion of LI1
50	LI2	R terminal input signal	ON: The signal input to R terminal is ON OFF: The signal input to R terminal is OFF
51	LI2N	Inversion of R terminal input signal	Inversion of LI2
52	PIDF	Signal in accordance of frequency command	<ul> <li>ON: Frequency commanded by F ∩ □ d or F 2 □ 7 and that by VIA show the same value.</li> <li>OFF: Frequency commanded by F ∩ □ d or F 2 □ 7 and that by VIA show different values.</li> </ul>
53	PIDFN	Inversion of signal in accordance of frequency command	Inversion of PIDF setting
54	MOFF	Undervoltage detection	ON: Undervoltage detected OFF: Other than undervoltage
55	MOFFN	Inversion of undervoltage detection	Inversion of MOFF
56-253	Disabled	Invalid settings, always OFF (ignored)	Invalid settings, always OFF (ignored)
254	AOFF	Always OFF	Always OFF
255	AON	Always ON	Always ON

11

E6581158

E6581158

#### Order of precedence of combined functions

XX: Impossible combination, X: Invalid, + : Valid under some conditions, O: Valid, @: Priority

																						-	
F	unction No. / Function	1	2	3	4	5⁄ 58	6/9	10	11	50	13	14	15	46	48	41 /42	43	49	38	39	40	52	53
1	Standby	$\backslash$	@	@	@	@	@	0	0	0	@	0	0	0	0	0	0	@	0	0	0	0	х
2	Forward run command	+	$\backslash$	х	+	0	0	0	х	0	х	0	0	х	0	0	0	0	σ	0	0	0	х
3	Reverse run command	+	@	$\overline{\ }$	+	0	0	0	х	0	х	0	0	х	0	0	0	0	0	0	0	0	х
4	Jug run command	+	+	+	$\setminus$	@	+	0	х	0	х	@	0	х	0	0	0	xx	0	0	0	0	х
5/58	Acceleration/deceleratio n 2 or 3 selection	+	0	0	х		0	0	х	0	х	0	0	x	0	0	0	0	0	0	х	0	0
6~9	Preset-speed run commands 1 to 4	+	0	0	х	0	$\Big/$	0	х	0	х	0	0	x	0	0	0	0	0	0	0	0	х
10	Reset command	0	0	0	0	0	0		х	0	0	0	0	x	0	0	0	0	0	0	0	0	0
11	Trip stop command from external input device	+	@	@	@	@	@	@	$\nearrow$	0	0	0	0	x	0	@	0	@	0	0	0	@	@
50	Forced switching of command mode and	0	0	0	0	0	0	0	0		0	0	0	0	0	0	0	0	0	0	0	0	0
13	DC braking command	+	@	@	@	@	@	0	х	0	$\mathbb{N}$	@	0	х	0	@	0	@	0	0	0	0	х
14	PID control prohibited	0	0	0	х	0	0	0	x	0	X		0	х	0	0	0	0	0	0	0	0	х
15	Permission of parameter editing	0	0	0	0	0	0	0	0	0	0	0		0	0	0	0	0	0	0	0	0	0
46	Thermal trip stop command from external	0	@	@	@	@	0	0	@	0	@	@	0		0	@	0	@	0	0	0	х	0
48	Remote/local control forced switching	0	0	0	0	0	0	0	0	0	0	0	0	0	$\backslash$	0	0	0	0	0	0	0	0
41/4 2	Frequency UP/DOWN signal input from	0	0	0	0	0	0	0	х	0	х	0	0	х	0		0	0	0	0	0	0	х
43	Clearing of UP/DOWN frequency with external	0	0	Q	0	0	0	0	0	0	0	0	0	0	0	0		0	0	0	0	0	х
49	Operation holding (cancellation of 3-wire	+	ó	0	xx	0	0	0	х	0	х	0	0	х	0	0	0		0	0	0	0	х
38	Frequency commands forced switching	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		0	0	0	х
39	No.2 Switching of V/F setting	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		х	0	0
40	No.2 motor switching	0	0	0	0	@	0	0	0	0	0	0	0	0	0	0	0	0	0	@		0	0
52	Forced operation	0	0	0	0	0	0	0	х	0	0	0	0	@	0	0	0	0	0	0	0		0
53	Fire-speed control	@	@	@	@	0	@	0	х	0	@	@	0	0	0	@	@	@	@	0	0	0	

\* For the functions of combined terminals (combined functions), refer to the table of their respective functions.

E6581158

## **12. Specifications**

### 12.1 Models and their standard specifications

	Standar	d speci	ficatior	าร										
	Item					S	Specificatio	n						
Inpu	t voltage	3-phase 200V												
Арр	licable motor (kW)	0.2	0.4	0.55	0.75	1.5	2.2	3.7	5.5	7.5	11	15		
	Туре	VFS11												
	Form	2002PM	2004PM	2005PM	2007PM	2015PM	2022PM	2037PM	2055PM	2075PM	2110PM	2150PM		
p	Capacity (kVA) Note 1)	0.6	1.3	1.4	1.8	3.0	4.2	6.7	10	13	21	25		
Rating	Rated output/current	1.5	3.3	3.7	4.8	8.0	11.0	17.5	27.5	33	54	66		
ä	(A) Note 2)	(1.5)	(3.3)	(3.3)	(4.4)	(7.9)	(10.0)	(16.4)	(25.0)	(33)	(49)	(60)		
	Output voltage Note 3)	3-phase 200V to 240V												
	Overload current rating	150%-60 seconds, 200%-0.5 second (50%-reduction value)												
Power supply	Voltage-frequency		3-phase 200V to 240V - 50/60Hz											
Pov	Allowable fluctuation	Voltage + 10%, -15% Note 4), frequency ±5%												
Prot	ective method					IP20 Enclo	osed type (	JEM1030)						
Coo	ling method	Self-cooling Forced air-cooled												
Colo	or					Mu	nsel 5Y+8	0.5						
Built	i-in filter						Basic filter							
Buii		I					Dasic Iller							

	Item							Specif	ication							
Inpu	ut voltage	1-phase 200V						3-phase 400V								
Арр	licable motor (kW)	0.2 0.4 0.75 1.5 2.2					0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	
	Туре			VFS11S							VFS11					
	Form	2002PL	2004PL	2007PL	2015PL	2022PL	4004PL	4007PL	4015PL	4022PL	4037PL	4055PL	4075PL	4110PL	4150PL	
5	Capacity (kVA) Note 1)	0.6	1.3	1.8 🔺	3.0	4.2	1.1	1.8	3.1	4.2	7.2	11	13	21	25	
Rating	Rated output current	1.5	3.3	4.8	8.0	11.0	1.5	2.3	4.1	5.5	9.5	14.3	17.0	27.7	33	
Ba	(A) Note 2)	(1.5)	(3.3)	(4.4)	(7.9)	(10.0)	(1.5)	(2.1)	(3.7)	(5.0)	(8.6)	(13.0)	(17.0)	(25.0)	(30)	
_	Rated output voltage Note 3)	3-phase 200V to 240V						3-phase 380V to 500V								
	Overload current rating	150%-60 seconds, 200%-0.5 second (50%-reduction value)						50%-60	second	s, 200%	-0.5 sec	ond (50%	6-reducti	on value	e)	
er oly	Voltage-current	1-phase 200V to 240V – 50/60Hz					3-phase 380V to 500V - 50/60Hz									
Power supply	Allowable fluctuation	Voltage + 10%, -15% Note 4), frequency±5%						Voltage + 10%, -15% Note 4), frequency ±5%								
Prof	tective method,	IP20 Enclosed type (JEM1030)							IP2	20 Enclo	sed type	(JEM10	30)			
Coc	ling method	Self-cooling Forced air- cooled					Forced air-cooled									
Colo	or	Munsel 5Y+8/0.5					Munsel 5Y+8/0.5									
Buil	t-in filter			EMI filter	r						EMI filte	r				

Note 1. Capacity is calculated at 220V for the 200V models and at 440V for the 400V models.

Note 2. Indicates rated output current setting when the PWM carrier frequency (parameter F300) is 4kHz or less. When exceeding 4kHz, the rated output current setting is indicated in the parentheses. It needs to be further reduced for PWM carrier frequencies above 12 kHz.

The rated output current is reduced even further for 400V models with a supply voltage of 480V or more.

The default setting of the PWM carrier frequency is 12kHz.

Note 3. Maximum output voltage is the same as the input voltage.


Note 4.  $\pm 10\%$  when the inverter is used continuously (load of 100%).

E6581158

#### Common specification

<b>–</b>	Common speci	
	Item	Specification
	Control system	Sinusoidal PWM control
	Rated output voltage	Adjustable within the range of 50 to 600V by correcting the supply voltage (not adjustable above the input voltage)
	Output frequency range	0.5 to 500.0Hz, default setting: 0.5 to 80Hz, maximum frequency: 30 to 500Hz
	Minimum setting steps of frequency	0.1Hz: operation panel setting, 0.2Hz: analog input (when the max. frequency is 100Hz).
tions	Frequency accuracy	Digital setting: within ±0.01% of the max. frequency (-10 to +60°C) Analog setting: within ±0.5% of the max. frequency (25°C ±10°C)
Principal control functions	Voltage/frequency char- acteristics	V/f constant, variable torque, automatic torque boost, vector control, automatic energy-saving, dynamic automatic energy-saving control, PM motor control. Auto-tuning. Base frequency (25 - 500Hz) adjusting to 1 or 2, torque boost (0 - 30%) adjusting to 1 or 2, adjusting frequency at start (0.5 - 10Hz)
al con	Frequency setting signal	Potentiometer on the front panel, external frequency potentiometer (connectable to a potentiometer with a rated impedance of 1 - $10k\Omega$ ), 0 - $10Vdc$ (input impedance: VIA/VIB= $30k\Omega$ , 4 - $20mAdc$ (Input impedance: $250\Omega$ ).
incipa	Terminal board base fre- quency	The characteristic can be set arbitrarily by two-point setting. Possible to set individually for three functions: analog input (VIA and VIB) and communication command.
P	Frequency jump	Three frequencies can be set. Setting of the jump frequency and the range.
	Upper- and lower-limit frequencies	Upper-limit frequency: 0 to max. frequency, lower-limit frequency: 0 to upper-limit frequency
	PWM carrier frequency	Adjustable within a range of 2.0 to 16.0Hz (default: 12kHz).
	PID control	Setting of proportional gain, integral gain, differential gain and control wait time. Checking whether the amount of processing amount and the amount of feedback agree.
	Acceleration/deceleration time	Selectable from among acceleration/deceleration times 1, 2 and 3 (0.0 to 3200 sec.). Automatic accelera- tion/deceleration function. S-pattern acceleration/deceleration 1 and 2 and S-pattern adjustable. Control of forced rapid deceleration and dynamic rapid deceleration
	DC braking	Braking start-up frequency: 0 to maximum frequency, braking rate: 0 to 100%, braking time: 0 to 20 seconds, emer- gency DC braking, motor shaft fixing control
	Dynamic braking	Control and drive circuit is built in the inverter with the braking resistor outside (optional).
	Input terminal function (programmable)	Possible to select from among 65 functions, such as forward/reverse run signal input, jog run signal input, operation base signal input and reset signal input, to assign to 8 input terminals. Logic selectable between sink and source.
su	Output terminal functions (programmable)	Possible to select from among 58 functions, such as upper/lower limit frequency signal output, low speed detection signal output, specified speed reach signal output and failure signal output, to assign to FL relay output, open collector output and RY output terminals.
Operation specifications	Forward/reverse run	The RUN and STOP keys on the operation panel are used to start and stop operation, respectively. The switching between forward run and reverse run can be done from one of the three control units: operation panel, terminal board and external control unit.
spe	Jog run	Jog mode, if selected, allows jog operation from the operation panel or the terminal board.
u	Preset speed operation	Base frequency + 15-speed operation possible by changing the combination of 4 contacts on the terminal board.
erati	Retry operation	Capable of restarting automatically after a check of the main circuit elements in case the protective function is activated. 10 times (Max.) (selectable with a parameter)
g	Various prohibition set- tings	Possible to write-protect parameters and to prohibit the change of panel frequency settings and the use of operation panel for operation, emergency stop or resetting.
	Regenerative power ride- through control	Possible to keep the motor running using its regenerative energy in case of a momentary power failure (default: OFF).
	Auto-restart operation	In the event of a momentary power failure, the inverter reads the rotational speed of the coasting motor and outputs a frequency appropriate to the rotational speed in order to restart the motor smoothly. This function can also be used when switching to commercial power.
	Drooping function	When two or more inverters are used to operate a single load, this function prevents load from concentrating on one inverter due to unbalance.
	Override function	The sum of two analog signals (VIA/VIB) can be used as a frequency command value.
	Failure detection signal	1c-contact output: (250Vac-0.5A-cosφ=0.4)
~		

<Continued overleaf>

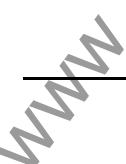

1nt

6581158

<co< th=""><th>ntinued&gt;</th><th></th></co<>	ntinued>	
	Item	Specification
Protective function	Protective function	Stall prevention, current limitation, over-current, output short circuit, over-voltage, over-voltage limitation, undervolt- age, ground fault, power supply phase failure, output phase failure, overload protection by electronic thermal func- tion, armature over-current at start-up, load side over-current at start-up, over-torque, undercurrent, overheating, cumulative operation time, life alarm, emergency stop, braking resistor over-current/overload, various pre-alarms
	Electronic thermal char- acteristic	Switching between standard motor and constant-torque VF motor, switching between motors 1 and 2, setting of overload trip time, adjustment of stall prevention levels 1 and 2, selection of overload stall
	Reset function	Function of resetting by closing contact 1a or by turning off power or the operation panel. This function is also used to save and clear trip records.
Display function	Alarms	Stall prevention, overvoltage, overload, under-voltage, setting error, retry in process, upper/lower limits
	Causes of failures	Over-current, overvoltage, overheating, short-circuit in load, ground fault, overload on inverter, over-current through arm at start-up, over-current through load at start-up, CPU fault, EEPROM fault, RAM fault, ROM fault, communica- tion error. (Selectable: Over-current through braking resistor/overload, emergency stop, under-voltage, low voltage, over-torque, motor overload, output open-phase)
	Monitoring function	Operation frequency, operation frequency command, forward/reverse run, output current, voltage in DC section, output voltage, torque, torque current, load factor of inverter, integral load factor of PBR, input power, output power, information on input terminals, information on output terminals, version of CPU1, version of CPU2, version of memory, PID feedback amount, frequency command (after PID), integral input power, integral output power, rated current, causes of past trips 1 through 4, information on life alarm, cumulative operation time
	Past trip monitoring func- tion	Stores data on the past four trips: number of trips that occurred in succession, operation frequency, direction of ro- tation, load current, input voltage, output voltage, information on input terminals, information on output terminals, and cumulative operation time when each trip occurred.
Displá	Output for frequency me- ter/ output for ammeter	Analog output: (1mAdc full-scale DC ammeter or 7.5Vdc full-scale DC ammeter / Rectifier-type AC voltmeter, 225% current Max. 1mAdc, 7.5Vdc full-scale), 4 to 20mA/0 to 20mA output
	4-digit 7-segments LED	Frequency:       inverter output frequency.         Alarm:       stall alarm "C", overvoltage alarm "P", overload alarm "L", overheat alarm "H".         Status:       inverter status (frequency, cause of activation of protective function, input/output voltage, output current, etc.) and parameter settings.         Free-unit display: arbitrary unit (e.g. rotating speed) corresponding to output frequency.
	Indicator	Lamps indicating the inverter status by lighting, such as RUN lamp, MON lamp, PRG lamp, % lamp, Hz lamp, fre- quency setting potentiometer lamp, UP/DOWN key lamp and RUN key lamp. The charge lamp indicates that the main circuit capacitors are electrically charged.
Environments	Use environments	Indoor, altitude: 1000m (Max.), not exposed to direct sunlight, corrosive gas, explosive gas or vibration (less than 5.9m/s <sup>2</sup> ) (10 to 55Hz)
uuo	Ambient temperature	-10 to +60°C Note)1.2.3
ziv	Storage temperature	-20 to +65°C
ш	Relative humidity	20 to 93% (free from condensation and vapor).

Note 1. Above 40°C : Remove the protective seal from the top of VF-S11.

Note 2. If the ambient temperature is above 50°C. Remove the seal from the top of the inverter and use the inverter with the rated output current reduced.

Note 3. If inverters are installed side by side (with no sufficient space left between them): Remove the seal from the top of each inverter.

When installing the inverter where the ambient temperature will rise above 40°C, remove the seal from the top of the inverter and use the inverter with the rated output current reduced.

E6581158


### 12.2 Outside dimensions and mass

Outside dimensions and mass											
Voltage class	Applicable motor	Inverter type	Dimensions (mm)							Drawing	Approx. weight
Voltage class	(kW)		W	Н	D	W1	H1	H2	D2	Drawing	(kg)
	0.2	VFS11S-2002PL	72	130	130	60	121.5	15		A	1.2
	0.4	VFS11S-2004PL									1.3
1-phase 200V	0.75	VFS11S-2007PL			140				8		1.3
	1.5	VFS11S-2015PL	105	130	150	93		13		В	1.8
	2.2	VFS11S-2022PL	140	170	150	126	157	14 🖣		С	2.8
	0.2	VFS11-2002PM	72	100	120	60	121.5	15	5	A	1.1
	0.4	VFS11-2004PM									1.2
	0.55	VFS11-2005PM		130	130						1.2
	0.75	VFS11-2007PM									1.2
	1.5	VFS11-2015PM	105	130		93		13	8	В	1.4
3-phase 200V	2.2	VFS11-2022PM	105	130	150	93		2			2.3
	3.7	VFS11-2037PM	140	170	150	126	157	14		С	2.5
	5.5	VFS11-2055PM	180	220	170	160	210	12		D	6.2
	7.5	VFS11-2075PM									6.3
	11	VFS11-2110PM	245	310	190	225	295	19.5		E	9.8
	15	VFS11-2150PM									9.9
	0.4	VFS11-4004PL	105	130	150	93	121.5	13	8	В	1.8
	0.75	VFS11-4007PL									1.8
	1.5	VFS11-4015PL									1.9
	2.2	VFS11-4022PL	140	170	150	126	157	14		С	2.7
3-phase 400V	3.7	VFS11-4037PL									2.9
	5.5	VFS11-4055PL	180	220	170	160	210	12		D	6.3
	7.5	VFS11-4075PL									6.3
	11	VFS11-4110PL	245	310	190	225	295	19.5		E	9.8
	15	VFS11-4150PL									9.8


### Outside dimensions and mass

2

E6581158

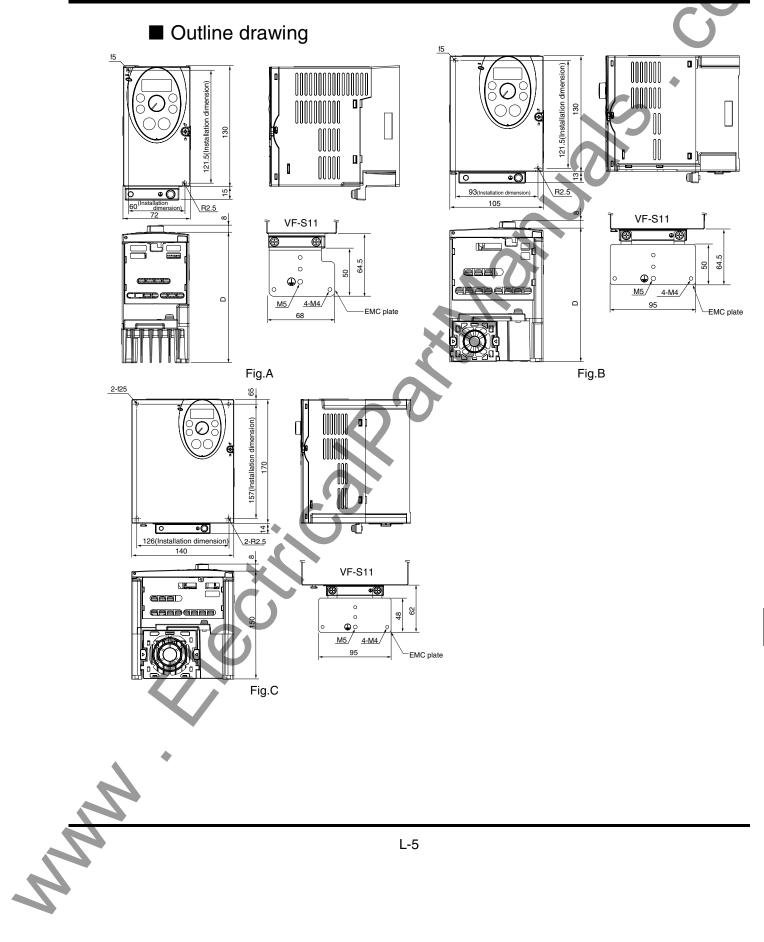

12

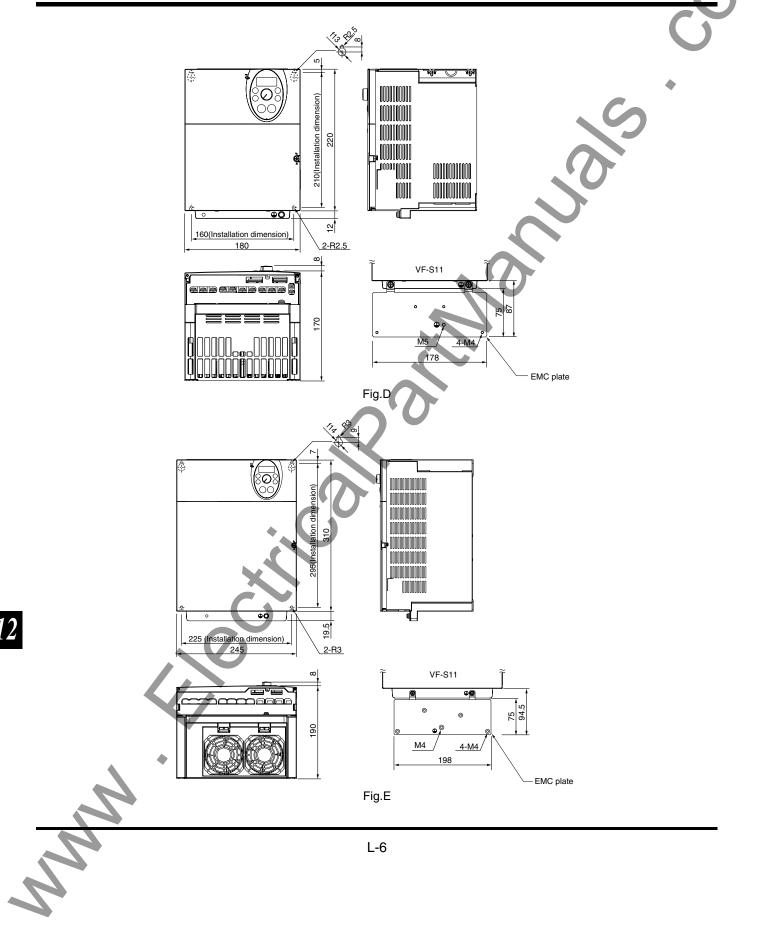

E6581158

# 13. Before making a service callTrip information and remedies

## 13.1 Trip causes/warnings and remedies

When a problem arises, diagnose it in accordance with the following table. If it is found that replacement of parts is required or the problem cannot be solved by any remedy described in the table, contact your Toshiba dealer.

[Trip information]

Trip informatio					
Error code	Failure code	Problem	Possible causes		Remedies
0C I 0C IP	0001 0025	Overcurrent during acceleration Overcurrent flowing in element during acceleration	<ul> <li>The acceleration time <i>REE</i> is too short.</li> <li>The V/F setting is improper.</li> <li>A restart signal is imput to the rotating motor after a momentary stop, etc.</li> <li>A special motor (e.g. motor with a small impedance) is used.</li> </ul>	•	Increase the acceleration time $R \subseteq C$ . Check the V/F parameter. Use $F \exists D i$ (auto-restart) and $F \exists D 2$ (ride-through control). Increase the carrier frequency $F \exists D D$ . Set the carrier frequency control mode selection parameter $F \exists I b$ to 1 or 3 (carrier frequency decreased automati- cally).
0C2 0C2P	0002 0026	Overcurrent during deceleration Overcurrent flowing in element during decelearion	• The deceleration time d E [ is too short.		Increase the deceleration time $d \notin C$ . Set the carrier frequency control mode selection parameter $F \notin J \notin S$ to 1 or 3 (carrier frequency decreased automati- cally).
0[3 0[3P	0003 0027	Overcurrent during constant speed op- eration Overcurrent flowing in element during operation	<ul> <li>The load fluctuates abruptly.</li> <li>The load is in an abnormal condition.</li> </ul>	•	Reduce the load fluctuation. Check the load (operated machine). Set the carrier frequency control mode selection parameter $F \exists I \\bar{s}$ to 1 or 3 (carrier frequency decreased automati- cally).
0C IP 0C2P 0C3P	0025 0026 0027	Ground fault trip Arm overcurrent at start-up (for 11 and 15 kW models only)	<ul> <li>A current leaked from an output cable or the motor to ground.</li> <li>A main circuit elements is defective.</li> </ul>		Check cables, connectors, and so on fo ground faults. Make a service call.
DEL	0004	Overcurrent (An overcurrent on the load side at start-up)	<ul> <li>The insulation of the output main circuit or motor is defective.</li> <li>The motor has too small impedance.</li> <li>A 11 or 15 kW model was started, although a current is leaked from an output cable or the motor to ground.</li> </ul>		Check the cables and wires for defective insulation. When using a 11 or 15 kW model, check cables, connectors, and so on for ground faults.
0E A	0005	Arm overcurrent at start-up	A main circuit elements is defective.	•	Make a service call.
* EPH 1	8000	Input phase failure	<ul> <li>A phase failure occured in the input line of the main circuit.</li> <li>The capacitor in the main circuit lacks ca- pacitance.</li> </ul>	•	Check the main circuit input line for phase failure. Enable $F \subseteq \square B$ (input phase failure de- tection). Check the capacitor in the main circuit for exhaustion.
* ЕРНО	0009	Output phase failure	A phase failure occurred in the output line of the main circuit.		Check the main circuit output line, motor etc. for phase failure. Enable $F \in D \subseteq$ (Output phase failure detection).

(Continued overleaf)

E6581158

Error code	Failure code	Problem	Possible causes	Remedies
OP I	000A	Overvoltage during acceleration	<ul> <li>The imput voltage fluctuates abnormally.</li> <li>(1) The power supply has a capacity of 200kVA or more.</li> <li>(2) A power factor improvement capacitor is opened or closed.</li> <li>(3) A system using a thyrister is connected to the same power distribution line.</li> <li>A restart signal is input to the rotating motor after a momentary stop, etc.</li> </ul>	<ul> <li>Insert a suitable input reactor.</li> <li>Use F 3 D / (auto-restart) and F 3 D 2 (ride-through control).</li> </ul>
OP2	000B	Overvoltage during deceleration	<ul> <li>The deceleration time d E [ is too short. (Regenerative energy is too large.)</li> <li>F 3 [] 4 (dynamic braking resistor) is off.</li> <li>F 3 [] 5 (overvoltage limit operation) is off.</li> <li>The input voltage fluctuates abnormally.</li> <li>(1) The power supply has a capacity of 200kVA or more.</li> <li>(2) A power factor improvement capacitor is opened and closed.</li> <li>(3) A system using a thyrister is connected to the same power distribution line.</li> </ul>	<ul> <li>Increase the deceleration time d E £.</li> <li>Install a dynamic braking resistor.</li> <li>Enable F 3 0 4 (dynamic braking resistor).</li> <li>Enable F 3 0 5 (overvoltage limit operation).</li> <li>Insert a suitable input reactor.</li> </ul>
0P3	000C	Overvoltage during constant-speed op- eration	<ul> <li>The input voltage fluctuates abnormally.</li> <li>(1) The power supply has a capacity of 200kVA or more.</li> <li>(2) A power factor improvement capacitor is opened or closed.</li> <li>(3) A system using a thyrister is connected to the same power distribution line.</li> <li>The motor is in a regenerative state because the load causes the motor to run at a frequency higher than the inverter output frequency.</li> </ul>	<ul> <li>Insert a suitable input reactor.</li> <li>Install a dynamic braking resistor.</li> </ul>
OL I	000D	Inverter overload	<ul> <li>The acceleration time ACC is too short.</li> <li>The DC braking amout is too large.</li> <li>The V/F setting is improper.</li> <li>A restart signal is input to the rotating motor after a momentary stop, etc.</li> <li>The load is too large.</li> </ul>	<ul> <li>Increase the acceleration time R[[.</li> <li>Reduce the DC braking amount F 2 5 and the DC braking time F 2 5 2.</li> <li>Check the V/F parameter setting.</li> <li>Use F 3 [] 1 (auto-restart) and F 3 [] 2 (ride-through control).</li> <li>Use an inverter with a larger rating.</li> </ul>
012	000E	Motor overload	<ul> <li>The V/F setting is improper.</li> <li>The motor is locked up.</li> <li>Low-speed operation is performed continuously.</li> <li>An excessive load is applied to the motor during operation.</li> </ul>	<ul> <li>Check the V/F parameter setting.</li> <li>Check the load (operated machine).</li> <li>Adjust <i>I L R</i> to the overload that the motor can withstand during operation in low speed range.</li> </ul>
0Lr	000F	Dynamic braking re- sistor overload trip	<ul><li>The deceleration time is too short.</li><li>Dynamic braking is too large.</li></ul>	<ul> <li>Increase the deceleration time d E [.</li> <li>Increase the capacity of dynamic brakin resistor (wattage) and adjust PBR capa ity parameter F 3 [] B.</li> </ul>
* 0 E	0020	Over-torque trip	Over-torque reaches to a detection level during operation.	<ul> <li>Enable <i>F E 1 5</i> (over-torque trip selection).</li> <li>Check system error.</li> </ul>
Он	0010	Overheat	<ul> <li>The cooling fan does not rotate.</li> <li>The ambient temperature is too high.</li> <li>The vent is blocked up.</li> <li>A heat generating device is installed close to the inverter.</li> <li>The thermistor in the unit is broken.</li> </ul>	<ul> <li>Restart the operation by resetting the inverter after it has cooled down enougl</li> <li>The fan requires replacement if it does not rotate during operation.</li> <li>Secure sufficient space around the inverter.</li> <li>Do not place any heat generating devic near the inverter.</li> <li>Make a service call.</li> </ul>
	You can se (Continued ov	elect a trip ON/OFF b erleaf)	y parameters.	
1			M-2	

M-2

Error code	Failure code	Problem	Possible causes	Remedies
042	002E	External thermal trip	An external thermal trip is input.	Check the external thermal input.
Ē	0011	Emergency stop	<ul> <li>During automatic operation or remote operation, a stop command is entered from the operation panel or a remote input device.</li> </ul>	Reset the inverter.
EEP 1	0012	EEPROM fault 1	A data writing error occurs.	<ul> <li>Turn off the inverter, then turn it again. does not recover from the error, make service call.</li> </ul>
<i>EEP2</i>	0013	EEPROM fault 2	• Power supply is cut off during <i>Ł Ⅎ P</i> operation and data writing is aborted.	<ul> <li>Turn the power off temporarily and turn back on, and then try <u>E</u> <u>G</u> P operation again.</li> </ul>
ЕЕРЭ	0014	EEPROM fault 3	A data reading error occurred.	Turn off the inverter, then turn it again. does not recover from the error, make service call.
Errd	0015	Main unit RAM fault	The control RAM is defective.	Make a service call.
Ērr3	0016	Main unit ROM fault	The control ROM is defective.	Make a service call.
<u>Erry</u>	0017	CPU fault 1	The control CPU is defective.	Make a service call.
Errs	0018	Remote control error	An error arises during remote operation.	Check the remote control device, cable etc.
<u>Errl</u> Err8	001A 001B	Current detector fault Optional circuit board	<ul><li>The current detector is defective.</li><li>An optional circuit board in a different</li></ul>	<ul><li>Make a service call.</li><li>Check again to be sure that the circuit</li></ul>
crrð		format error	An optional circuit board in a different format is installed.	<ul><li>board is connected correctly, and then set the power supply.</li><li>Replace the circuit board with a correc formatted one.</li></ul>
т U С	001D	Low-current opera- tion Trip	The output current decreased to a low- current detection level during operation.	<ul> <li>Enable F 5 10 (low-current detection)</li> <li>Check the suitable detection level for the system (F 5 1 1, F 5 12).</li> </ul>
				<ul> <li>Make a service call if the setting is correct.</li> </ul>
* UP (	001E	Undervoltage trip (main circuit)	The input voltage (in the main circuit) is too low.	<ul> <li>Check the input voltage.</li> <li>Enable F &amp; Z ? (undervoltage trip seletion).</li> <li>To cope with a momentary stop due to</li> </ul>
		(	2	undervoltage, enable F 3 12 (ride- through control) and F 3 11 (auto- restart).
EF2	0022	Ground fault trip	• A ground fault occurs in the output cable or the motor.	<ul> <li>Check the cable and the motor for group faults.</li> </ul>
EEn 1	0054	Auto-tuning error	<ul> <li>Check the motor parameter F 4 11 to F 4</li> <li>The motor with the capacity of 2 classes or</li> <li>The output cable is too thin.</li> <li>The motor is rotating.</li> <li>The inverter is used for loads other than th</li> </ul>	9 4. I less than the inverter is used.
ЕЕЯЬ	0029	Inverter	Circuit board is changed.	Make a service call.
*	0032	type error Brea in analog signal	<ul> <li>(Or main circuit/drive circuit board)</li> <li>The signal input via VIA is below the</li> </ul>	Check the cables for breaks. And check
E - 18		cable	analog sinal detectio level set with	the setting of input signal or setting val of <i>F</i> <b>6 3 3</b> .
E - 19	0033	CPU communica- tions error	A communications error occurs between control CPUs.	Make a service call.
E - 20	0034	Excessive torque boosted	<ul> <li>The torque boost parameter u b is set too high.</li> <li>The motor has too small impedance.</li> </ul>	<ul> <li>Decrease the setting of the torque boc parameter μ b.</li> <li>If no improvement results, contact To-</li> </ul>
				shiba Techinical Support Center.
<u> </u>	0035	CPU fault 2	The control CPU is defective.	Make a service call.
SOUE	002F	Step-out (For PM motor only)	<ul><li>The motor shaft is locked.</li><li>One output phase is open.</li><li>An impact load is applied.</li></ul>	<ul> <li>Unlock the motor shaft.</li> <li>Check the interconnect cables betwee the inverter and the motor.</li> </ul>
2	* You can se	lect a trip ON/OFF b	y parameters.	
			M-3	

E6581158

E6581158

[Alarm informati	• .	e in the table is displayed to give a war	ning but does not cause the inverter to
Error code	trip. Problem	Possible causes	Remedies
	ST terminal OFF	The ST-CC circuit is opened.	Close the ST-CC circuit.
noff	Undervoltage in main circuit	<ul> <li>The ST-CC circuit is opened.</li> <li>The supply voltage between R, S and T is under voltage.</li> </ul>	<ul> <li>Close the ST-CC circuit.</li> <li>Measure the main circuit supply voltage. If the voltage is at a normal level, the inverter requires repairing.</li> </ul>
rtry	Retry in process	<ul><li>The inverter is n the process of retry.</li><li>A momentary stop occurred.</li></ul>	The inverter is normal if it restarts after several tens of senconds. The inverter restarts automatically. Be careful of the machine because it may suddenly restart.
Err 1	Frequency point set- ting error alarm	• The frequency setting signals at points 1 and 2 are set too close to each other.	• Set the frequency setting signals at points 1 and 2 apart from each other.
Elr	Clear command ac- ceptable	<ul> <li>This message is displayed when pressing the STOP key while an error code is dis- played.</li> </ul>	Press the STOP key again to clear the trip.
EOFF	Emergency stop command accept- able	The operation panel is used to stop the operation in automatic control or remote control mode.	<ul> <li>Press the STOP key for an emergency stop.</li> <li>To cancel the emergency stop, press any other key.</li> </ul>
H 1/ L 0	Setting error alarm / An error code and data are displayed alternately twice each.	An error is found in a setting when data is reading or writing.	<ul> <li>Check whether the setting is made correctly.</li> </ul>
HERd/ End	Display of first/last data items	<ul> <li>The first and last data item in the RUH data group is displayed.</li> </ul>	Press MODE key to exit the data group.
d b	DC braking	DC braking in process	<ul> <li>The message goes off in several tens of seconds if no problem occurs. Note)</li> </ul>
dbon	Shaft fixing control	<ul> <li>Motor shaft fixing control is in process.</li> </ul>	• Normal if the message disappears when a stop command is entered (or the operation command is canceled).
E   E 2 E 3 SE 0 P	Flowing out of ex- cess number of digits	The number of digits such as frequencies is more than 4. (The upper digits have a priority.)	• Lower the fequency free unit magnifica- tion F 702.
	Momentary power failure slowdown stop prohibition func- tion activated.	• The slowdown stop prohibition function set with <i>F</i> 3 1 2 (momentary power fail- ure ride-through operation) is activated.	<ul> <li>To restart operation, reset the inverter or input an operation signal again.</li> </ul>
L 5 E P	Auto-stop because of continuous operation at the lower-limit fre- quency	• The automatic stop function selected with $F \stackrel{?}{_{-}} \stackrel{<}{_{-}} \stackrel{<}{_{-}} \stackrel{<}{_{-}} \stackrel{<}{_{-}} \stackrel{<}{_{-}} was activated.$	<ul> <li>To deactivate the automatic stop function, increase the frequency command above the lower-limit frequency (LL) + 0.2 Hz or turn off the operation command.</li> </ul>
in it	Parameters in the process of initializa- tion	Parameters are being initialized to default values.	<ul> <li>Normal if the message disappears after a while (several seconds to several tens of seconds).</li> </ul>
E-17	Operation panel key fault	<ul> <li>The RUN or STOP key is held down for more than 20 seconds.</li> <li>The RUN or STOP key is faulty.</li> </ul>	Check the operation panel.
Rtn I	Auto-tuning	Auto-tuning in process	Normal if it the message disappears after a few seconds.

[Alarm information] Each message in the table is displayed to give a warning but does not cause the inverter to

Note) When the ON/OFF function is selected for DC braking (DB), using the input terminal selection parameter, you can judge the inverter to be normal if "*d b*" disappears when opening the circuit between the terminal and CC.

<

۵

E658115

[Prealarm c	display]		
Ľ	Overcurrent alarm	Same as $\square \square$ (overcurrent)	
P	Overvoltage alarm	Same as $\square P$ (overvoltage)	
L	Overload alarm	Same as $\square \downarrow I$ and $\square \downarrow ⊇$ (overload)	
Н	Overheat alarm	Same as $\square H$ (overheat)	

If two or more problems arise simultaneously, one of the following alarms appears and blinks. [P, PL, [PL]]The blinking alarms [P, P, L, H are displayed in this order from left to right.

13

E6581158

## 13.2 Restoring the inverter from a trip

Do not reset the inverter when tripped because of a failure or error before eliminating the cause. Resetting the tripped inverter before eliminating the problem causes it to trip again.

The inverter can be restored from a trip by any of the following operations:

- (1) By turning off the power (Keep the inverter off until the LED turns off.) Note) Refer to 6.15.3 (inverter trip retention selection  $F \in \mathcal{G} \supseteq$ ) for details.
- (2) By means of an external signal (Short circuit between RES and CC on terminal board  $\rightarrow$  Open)
- (3) By operation panel operation
- (4) By inputting a trip clear signal from a remote input device
  - (Refer to the remote input device operating manual for details.)

To reset the inverter by operation panel operation, follow these steps.

- 1. Press the STOP key and make sure that  $\begin{bmatrix} L \\ r \end{bmatrix}$  is displayed.
- 2. Pressing the STOP key again will reset the inverter if the cause of the trip has already been eliminated.
- When any overload function [[] L 1: inverter overload, [] L 2: motor overload, [] L r: braking resistor overload] is active, the inverter cannot be reset by inputting a reset signal from an external device or by operation panel operation before the virtual cooling time has passed.

Virtual cooling time ...  $\Box \downarrow I$ : about 30 seconds after the occurrence of a trip  $\Box \downarrow J = about 120$  seconds after a occurrence of a trip

- $\Box L r$  : about 20 seconds after a occurrence of a trip
- In case of a trip due to overheating ( $\square H$ ), the inverter checks the temperature within. Wait until the temperature in the inverter falls sufficiently before resetting the inverter.


#### [Caution]

Turning the inverter off then turning it on again resets the inverter immediately. You can use this mode of resetting if there is a need to reset the inverter immediately. Note, however, that this operation may damage the system or the motor if it is repeated frequently.



E6581158

## 13.3 If the motor does not run while no trip message is displayed ...

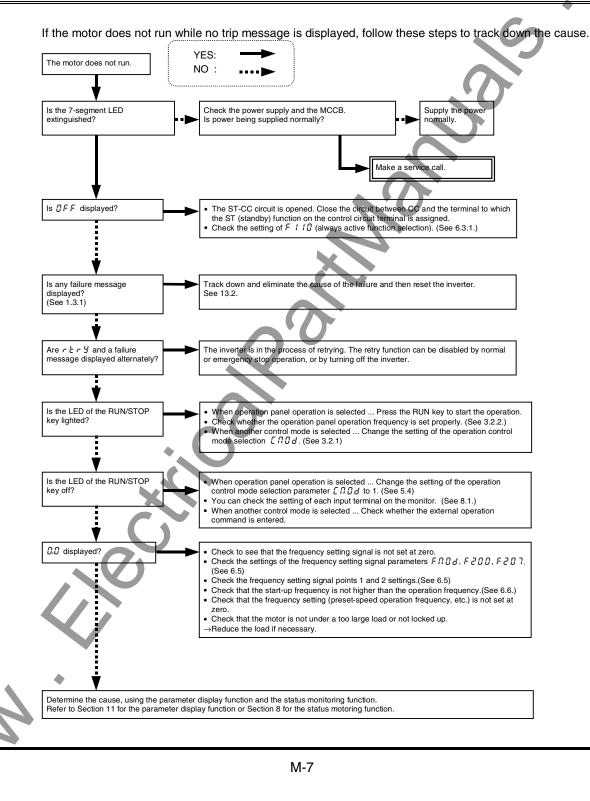

E6581158

## 13.4 How to determine the causes of other problems

The following table provides a listing of other problems, their possible causes and remedies.

Drahlama	
Problems	Causes and remedies
The motor runs in the	<ul> <li>Invert the phases of the output terminals U, V and W.</li> </ul>
wrong direction.	<ul> <li>Invert the forward/reverse run-signal terminals of the external input device.</li> </ul>
	(See 6.3 "Assignment of functions to control terminals".)
	<ul> <li>Change the setting of the parameter F r in the case of panel operation.</li> </ul>
The motor runs but its	The load is too heavy.
speed does not change	Reduce the load.
normally.	The soft stall function is activated.
	Disable the soft stall function. (See 5.14.)
	• The maximum frequency F H and the upper limit frequency UL are set too low.
	Increase the maximum frequency $FH$ and the upper limit frequency $UL$ .
	The frequency setting signal is too low.
	Check the signal set value, circuit, cables, etc.
	Check the setting characteristics (point 1 and point 2 settings) of the frequency setting
	signal parameters. (See 6.5.)
	<ul> <li>If the motor runs at a low speed, check to see that the stall prevention function is</li> </ul>
	activated because the torque boost amount is too large.
	Adjust the torque boost amount ( $\mu b$ ) and the acceleration time ( $R \downarrow L$ ).
	(See 5.12 and 5.1.)
The motor does not ac-	• The acceleration time $(\Re [L])$ or the deceleration time $(d E L)$ is set too short.
celerate or decelerate	Increase the acceleration time ( $R \not \subseteq \zeta$ ) or the deceleration time ( $d \not \in \zeta$ ).
smoothly.	
A too large current flows	The load is too heavy.
into the motor.	Reduce the load.
	• If the motor runs at a low speed, check whether the torque boost amount is too large.
	(See 5.12.)
The motor runs at a higher	<ul> <li>The motor has an improper voltage rating.</li> </ul>
or lower speed than the	Use a motor with a proper voltage rating.
specified one.	<ul> <li>The motor terminal voltage is too low.</li> </ul>
	Check the setting of the base frequency voltage parameter ( $\mu \downarrow \mu$ ). (See 6.13.6.)
	Replace the cable with a cable larger in diameter.
	<ul> <li>The reduction gear ratio, etc., are not set properly.</li> </ul>
	Adjust the reduction gear ratio, etc.
	<ul> <li>The output frequency is not set correctly.</li> </ul>
	Check the output frequency range.
	Adjust the base frequency. (See 5.10.)
The motor speed fluctu-ates	The load is too heavy or too light.
during operation.	Reduce the load fluctuation.
	• he inverter or motor used does not have a rating large enough to drive the load.
	Use an inverter or motor with a rating large enough.
	<ul> <li>Check whether the frequency setting signal changes.</li> </ul>
	• If the V/F control selection parameter $P_{L}$ is set at 3, check the vector control setting,
	operation conditions, etc. (See 5.11.)
Parameter settings cannot	
be changed.	
	* For reasons of safety, some parameters cannot be reprogrammed while the inverter is
	running.
	(see 4.1.5)
	<ul> <li>operation conditions, etc. (See 5.11.)</li> <li>Change the setting of the parameter <i>F</i> 7000 (prohibition of change of parameter setting) to 0 (permitted) if it is set at <i>t</i> (prohibited).</li> <li>* For reasons of safety, some parameters cannot be reprogrammed while the inverter is running.</li> </ul>

R


E6581158

	How to cope with parameter	<ul> <li>You can search for all reset parameters and change their settings.</li> </ul>	
	which have been reset	* Refer to 4.1.3 for details.	
	If you want to return all	You can return all parameters which have been reset to their default settings.	
	reset parameters to their respective default settings	* Refer to 4.1.6 for details.	
5		M-9	

13



## 14. Inspection and maintenance

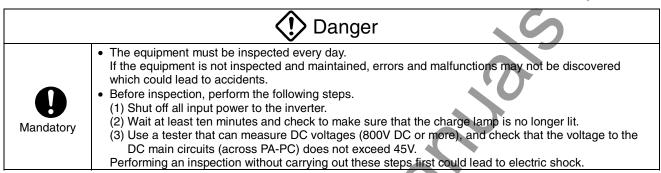

Be sure to inspect the inverter regularly and periodically to prevent it from breaking down because of the environment of use, such as temperature, humidity, dust and vibration, or deterioration of its components with aging.

## 14.1 Regular inspection

Since electronic parts are susceptible to heat, install the inverter in a cool, well-ventilated and dust-free place. This is essential for increasing the service life.

The purpose of regular inspections is to maintain the correct environment of use and to find any sign of failure or malfunction by comparing current operation data with past operation records.

		spection proced	•	
Subject of inspection	Inspection item	Inspection cycle	Inspection method	Criteria for judgement
1. Indoor	1)Dust, temperature and gas	Occasionally	1) Visual check, check by means of a thermometer, smell check	<ol> <li>Improve the environment if it is found to be unfavorable.</li> </ol>
environment	2) Drop of water or other liquid	Occasionally	2) Visual check	<ol> <li>Check for any trace of water condensation.</li> </ol>
	3) Room temperature	Occasionally	3) Check by means of a thermometer	3) Max. temperature: 60°C
2. Units and components	1)Vibration and noise	Occasionally	Tactile check of the cabinet	Is something unusual is found, open the door and check the transformer, reactors, contactors, relays, cooling fan, etc., inside. If necessary, stop the operation.
	1)Load current	Occasionally	Moving-iron type AC ammeter	To be within the rated current, voltage and
3. Operation data	2) Voltage (*)	Occasionally	Rectifier type AC	temperature. No significant difference
(output side)	3) Temperature	Occasionally	Thermometer	from data collected in a normal state.

\*) The voltage measured may slightly vary from voltmeter to voltmeter. When measuring the voltage, always take readings from the same circuit tester or voltmeter.

E6581158

#### Check points

- 1. Something unusual in the installation environment
- 2. Something unusual in the cooling system
- 3. Unusual vibration or noise
- 4. Overheating or discoloration
- 5. Unusual odor
- 6. Unusual motor vibration, noise or overheating
- 7. Adhesion or accumulation of foreign substances (conductive substances)

#### 14.2 Periodical inspection

Make a periodical inspection at intervals of 3 or 6 months depending on the operating conditions

	Danger
Mandatory	<ul> <li>Before inspection, perform the following steps.</li> <li>(1) Shut off all input power to the inverter.</li> <li>(2) Wait at least ten minutes and check to make sure that the charge lamp is no longer lit.</li> <li>(3) Use a tester that can measure DC voltages (800V DC or more), and check that the voltage to the DC main circuits (across PA-PC) does not exceed 45V.</li> <li>Performing an inspection without carrying out these steps first could lead to electric shock.</li> </ul>
Prohibited	<ul> <li>Never replace any part. This could be a cause of electric shock, fire and bodily injury. To replace parts, call the local sales agency.</li> </ul>

#### Check items


- 1. Check to see if all screwed terminals are tightened firmly. If any screw is found loose, tighten it again with a screwdriver.
- 2. Check to see if all caulked terminals are fixed properly. Check them visually to see that there is no trace of overheating around any of them.
- 3. Check all cables and wires for damage. Check them visually.
- 4. Remove dirt and dust. With a vacuum cleaner, remove dirt and dust. When cleaning, clean the vents and the printed circuit boards. Always keep them clean to prevent an accident due to dirt or dust.
- 5. If no power is supplied to the inverter for a long time, the performance of its large-capacity electrolytic capacitor declines.


When leaving the inverter unused for a long time, supply it with electricity once every two years, for 5 hours or more each, to recover the performance of the large-capacity electrolytic capacitor. And also check the function of the inverter. It is advisable not to supply the commercial power directly to the inverter but to gradually increase the power supply voltage with a transformer, etc.

6. If the need arises, conduct an insulation test on the main circuit terminal board only, using a 500V insulation tester. Never conduct an insulation test on control terminals other than terminals on the printed circuit board or on control terminals. When testing the motor for insulation performance, separate it from the inverter in advance by disconnecting the cables from the inverter output terminals U, V and W. When conducting an insulation test on peripheral circuits other than the motor circuit, disconnect all cables from the inverter so that no voltage is applied to the inverter during the test.

N-2



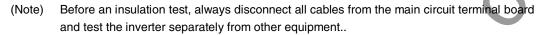

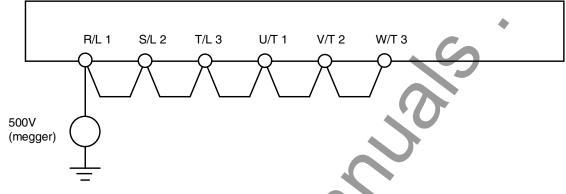

- 7. Never test the inverter for pressure. A pressure test may cause damage to its components.
- 8. Voltage and temperature check Recommended voltmeter

Input side ... Moving-iron type voltmeter (

Output side ... Rectifier type voltmeter

It will be very helpful for detecting a defect if you always measure and record the ambient temperature before, during and after the operation.

#### Replacement of expendable parts

The inverter is composed of a large number of electronic parts including semiconductor devices. The following parts deteriorate with the passage of time because of their composition or physical properties. The use of aged or deteriorated parts leads to degradation in the performance or a breakdown of the inverter. To avoid such trouble, the inverter should be checked periodically.

Note) Generally, the life of a part depends on the ambient temperature and the conditions of use. The life spans listed below are applicable to parts when used under normal environmental conditions.

#### 1) Cooling fan

The fan, which cools down heat-generating parts, has a service life of about 30,000 hours (about 2 or 3 years of continuous operation). The fan also needs to be replaced if it makes a noise or vibrates abnormally.

2) Smoothing capacitor

The smoothing aluminum electrolytic capacitor in the main circuit DC section degrades in performance because of ripple currents, etc. It becomes necessary to replace the capacitor after it is used for about 10 years under normal conditions. Since the smoothing capacitor is mounted on a printed circuit board, it needs to be replaced together with the circuit board.

E6581158

<Criteria for appearance check>

- Absence of liquid leak
- · Safety valve in the depressed position
- Measurement of electrostatic capacitance and insulation resistance
- Note: <u>When it becomes necessary to replace expendable parts, contact Toshiba Electric Service Co., Ltd.</u> or your nearest branch office or sales office of Toshiba Industrial Products Manufacturing Corporation. For safety's sake, never replace any part on your own. (\*: For the address and telephone number of TDS, see the back cover of this manual.)

The operation time is helpful for roughly determining the time of replacement. For the replacement of parts, contact the service network or Toshiba branch office printed on the back cover of this instruction manual.

#### Standard replacement cycles of principal parts

As guides, the table below lists part replacement cycles that were estimated based on the assumption that the inverter would be used in a normal use environment under normal conditions (ambient temperature, ventilation conditions, and energizing time). The replacement cycle of each part does not mean its service life but the number of years over which its failure rate does not increase significantly.

Part name	Standard	Replacement mode and others
	replacement cycle	
Cooling fan	2 to 3 years	Replacement with a new one
Main circuit smooth-	10 years	Replacement with a new one
ing aluminum elec-		
trolytic capacitor		
Relay and contactor	-	Whether to replace or not depends on the check results
Aluminum electrolytic	5 years	Replace with a new circuit board
capacitor mounted on		
a printed circuit board		

Note) The life of a part greatly varies depending on the environment of use.

## 14.3 Making a call for servicing

For the Toshiba service network, refer to the back cover of this instruction manual. If defective conditions are encountered, please contact the Toshiba service section in charge via your Toshiba dealer. When making a call for servicing, please inform us of the contents of the rating label on the right panel of the inverter, the presence or absence of optional devices, etc., in addition to the details of the failure.

## 14.4 Keeping the inverter in storage

Take the following precautions when keeping the inverter in storage temporarily or for a long period of time.

E65811

- 1. Store the inverter in a well-ventilated place away from heat, damp, dust and metal powder.
- 2. If the printed circuit board in your inverter has an anti-static cover (black cover), do not leave it detached from the circuit board during storage. The cover must be detached before turning on the inverter.
- 3. If no power is supplied to the inverter for a long time, the performance of its large-capacity electrolytic capacitor declines.

When leaving the inverter unused for a long time, supply it with electricity once every two years, for 5 hours or more each, to recover the performance of the large-capacity electrolytic capacitor. And also check the function of the inverter. It is advisable not to supply the commercial power directly to the inverter but to gradually increase the power supply voltage with a transformer, etc.

15. Warranty

Any part of the inverter that proves defective will be repaired and adjusted free of charge under the following conditions:

- 1. This warranty applies only to the inverter main unit.
- 2. Any part of the inverter which fails or is damaged under normal use within twelve months from the date of delivery shall be repaired free of charge.

E658115

- 3. For the following kinds of failure or damage, the repair cost shall be borne by the customer even within the warranty period.
  - Failure or damage caused by improper or incorrect use or handling, or unauthorized repair or modification of the inverter
  - Failure or damage caused by the inverter falling or an accident during transportation after the purchase
  - Failure or damage caused by fire, salty water or wind, corrosive gas, earthquake, storm or flood, lightning, abnormal voltage supply, or other natural disasters
  - Failure or damage caused by the use of the inverter for any purpose or application other than the intended one
- 4. All expenses incurred by Toshiba for on-site services shall be charged to the customer, unless a service contract is signed beforehand between the customer and Toshiba, in which case the service contract has priority over this warranty.



16

## 16. Disposal of the inverter

Mandatory

• If you throw away the inverter, have it done by a specialist in industry waste disposal(\*). If you throw away the inverter by yourself, this can result in explosion of capacitor or produce noxious gases, resulting in injury.

(\*) Persons who specialize in the processing of waste and known as "industrial waste product collectors and transporters" or "industrial waste disposal persons. "If the collection, transport and disposal of industrial waste is done by someone who is not licensed for that job, it is a punishable violation of the law. (Laws in regard to cleaning and processing of waste materials)

For safety's sake, do not dispose of the disused inverter yourself but ask an industrial waste disposal agent. Disposing of the inverter improperly could cause its capacitor to explode and emit toxic gas, causing injury to persons.

P-1

## TOSHIBA CORPORATION

#### IUSHIBA CORPORATION

#### INDUSTRIAL EQUIPMENT DEPT.

INTERNATIONAL OPERATION DIV. 1-1, Shibaura 1-chome, Minato-Ku, Tokyo 105-8001, Japan TEL: +81-(0)3-3457-4880 FAX: +81-(0)3-5444-9268

#### **TOSHIBA INTERNATIONAL CORPORATION:** 13131 West Little York RD., Houston, TX 77041, U.S.A TEL: +1-713-466-0277 FAX: +1-713-466-8773

## TOSHIBA ASIA PACIFIC PTE., LTD <Singapore>

152 Beach Rd., #16-00 Gateway East, Singapore 189721 TEL: +65-297-7652 FAX: +65-297-6551 <Bangkok> 946 Dusit Thani Building Room 805A, 8th Floor, Rama4 Rd, Bangkok 10500, Thailand TEL: +66-(0)2-236-6401 ~ 03 FAX: +66-(0)2-237-4682 TOSHIBA INTERNATIONAL CORP. PTY. LTD. 2 Morton Street Parramatta, NSW2150, Australia TEL: +61-(0)2-9768-6600 FAX: +61-(0)2-9890-7542

**TOSHIBA DO BRASIL, S.A.** Estrada dos Alvarengas 5500, São Bernardo do Campo, S.P. 09850-550, Brasil TEL: +55-(0)11-7689-7199 FAX: +55-(0)11-7689-7189

Manufacturer:

#### TOSHIBA SCHNEIDER INVERTER CORPORATION

2121, Nao, Asahi-Cho, Mie-gun, Mie, 510-8521 Japan TEL: +81-(0)593-76-6032 FAX: +81-(0)593-76-6187

For further information, please contact your nearest Toshiba Liaison Representative or International Operations - Producer Goods.
 The data given in this manual are subject to change without notice.
 2003-10